
ALM-06-WF Installation Guide

v1.0, September 2019


This guide provides the procedures and instructions necessary to attach the ALM-06-WF on the panel.

1. Prepare a panel with a maximum thickness of 3 mm, and cut the hole to the specified size

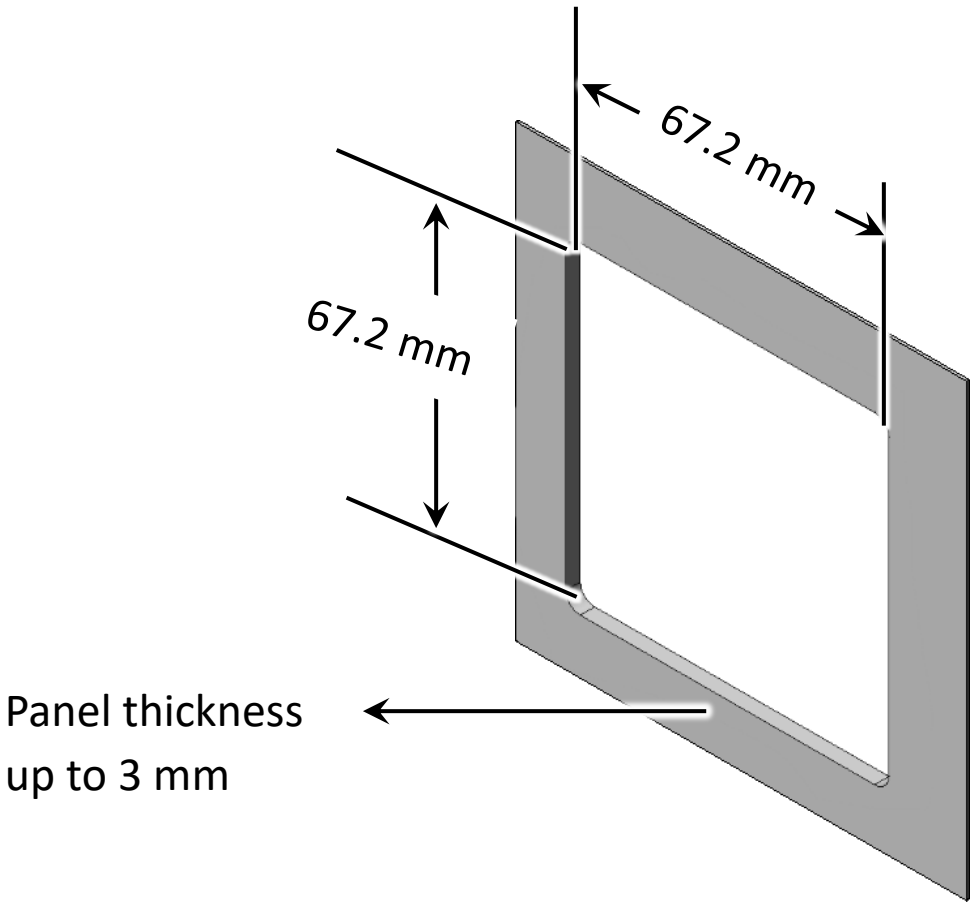


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2. Attach the ALM-06-WF to the cut-out hole

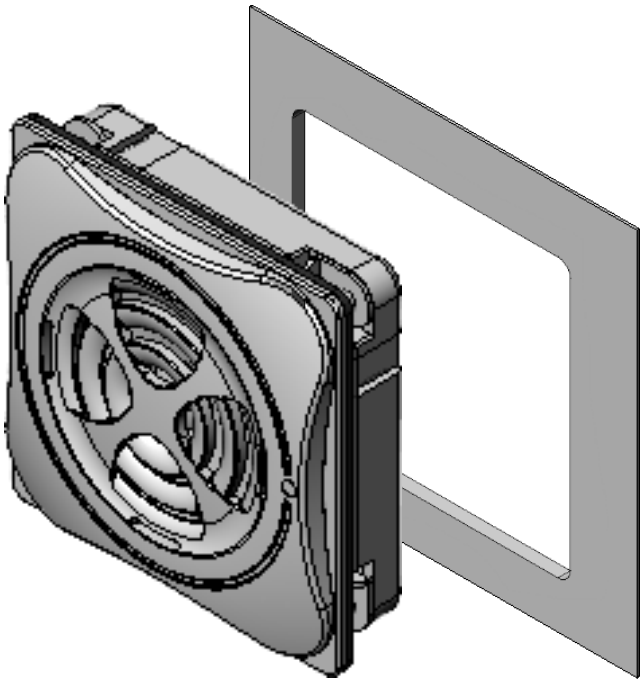


3. Rotate the front cover counterclockwise until the screw hole appears

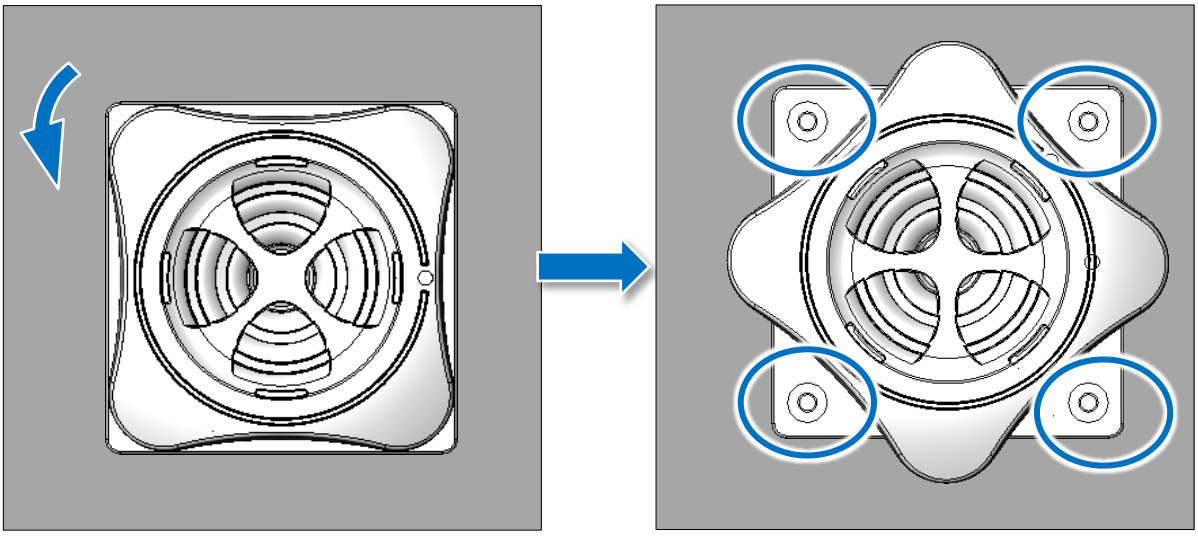


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4. Wrap the **Gasket** around the **M4 screw**

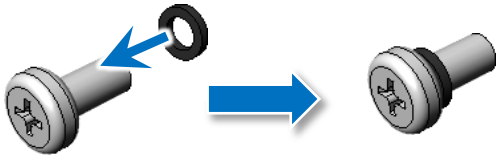


5. Insert the screw into the screw hole

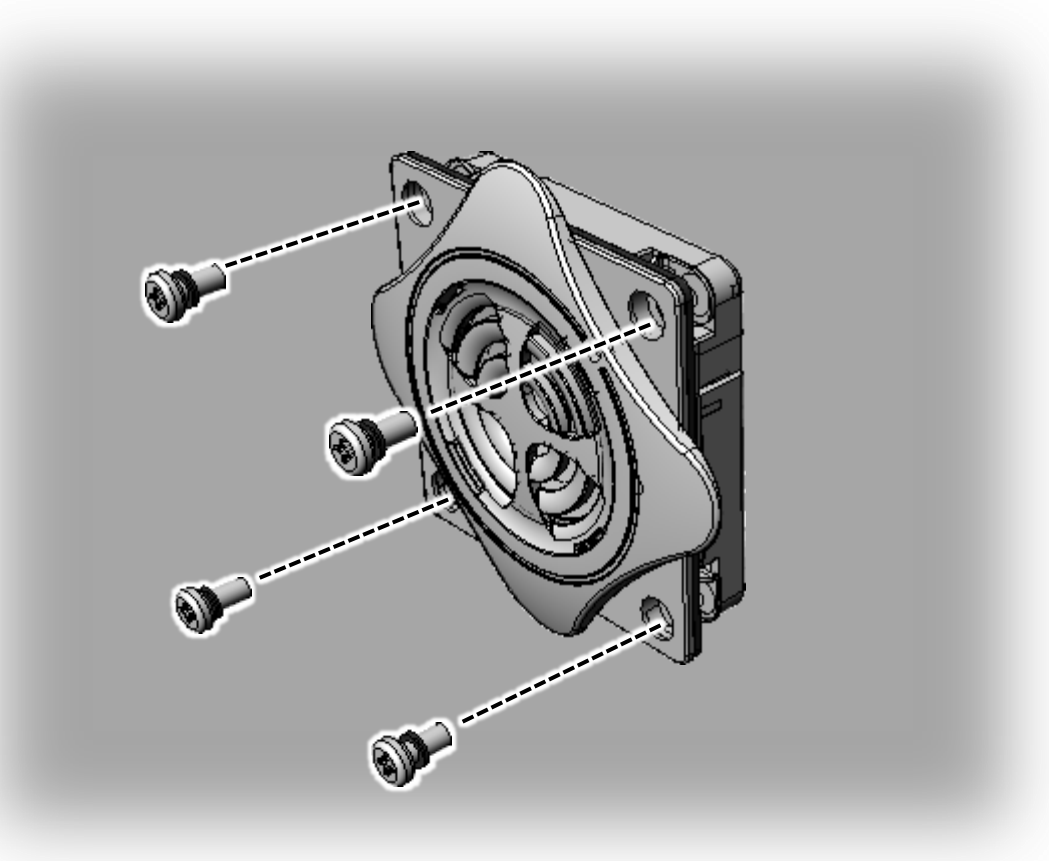

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6. Make sure the panel clip is fitted and locked on the panel

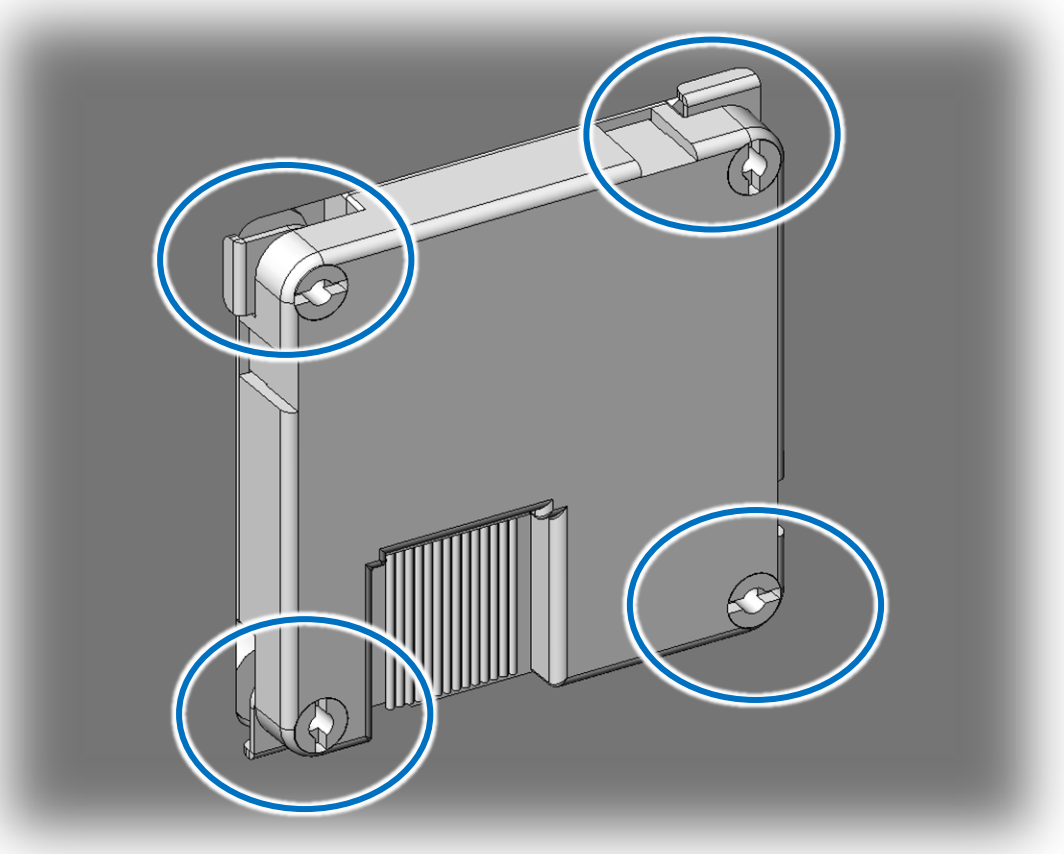

Technical Support

CD:\alm_cd\alm_06_wf\Manual

http://ftp.icpdas.com/pub/cd/alm_cd/alm_06_wf/manual/

service@icpdas.com

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000