ICP DAS

APW77BAM FAQ

FAQ Version 1.00

ICP DAS Co., Ltd.

2019-4-29

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of Contents

Q1: How to export or import the configuration files from APW77BAM? 3
Q2: I forgot the APW77BAM's IP. What should I do? 5
Q3: The Tx power of APW77BAM is too high. What should I do? 5
Q4: How to use WDS function in APW77BAM? 7

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Q1: How to export or import the configuration files from APW77BAM?


A1: APW77BAM can export or import the configuration by WEB UI.

1. Export Configuration

Step1: You can use the browser to connect web UI, and type in the IP Address (http://192.168.123.254). The default password is admin.




Step2: Please going to the “Others” page. System (1) => System Tools (2) => other (3). The configuration of APW77BAM can download by the browser. Please click “Backup” button(4) to download the configuration.

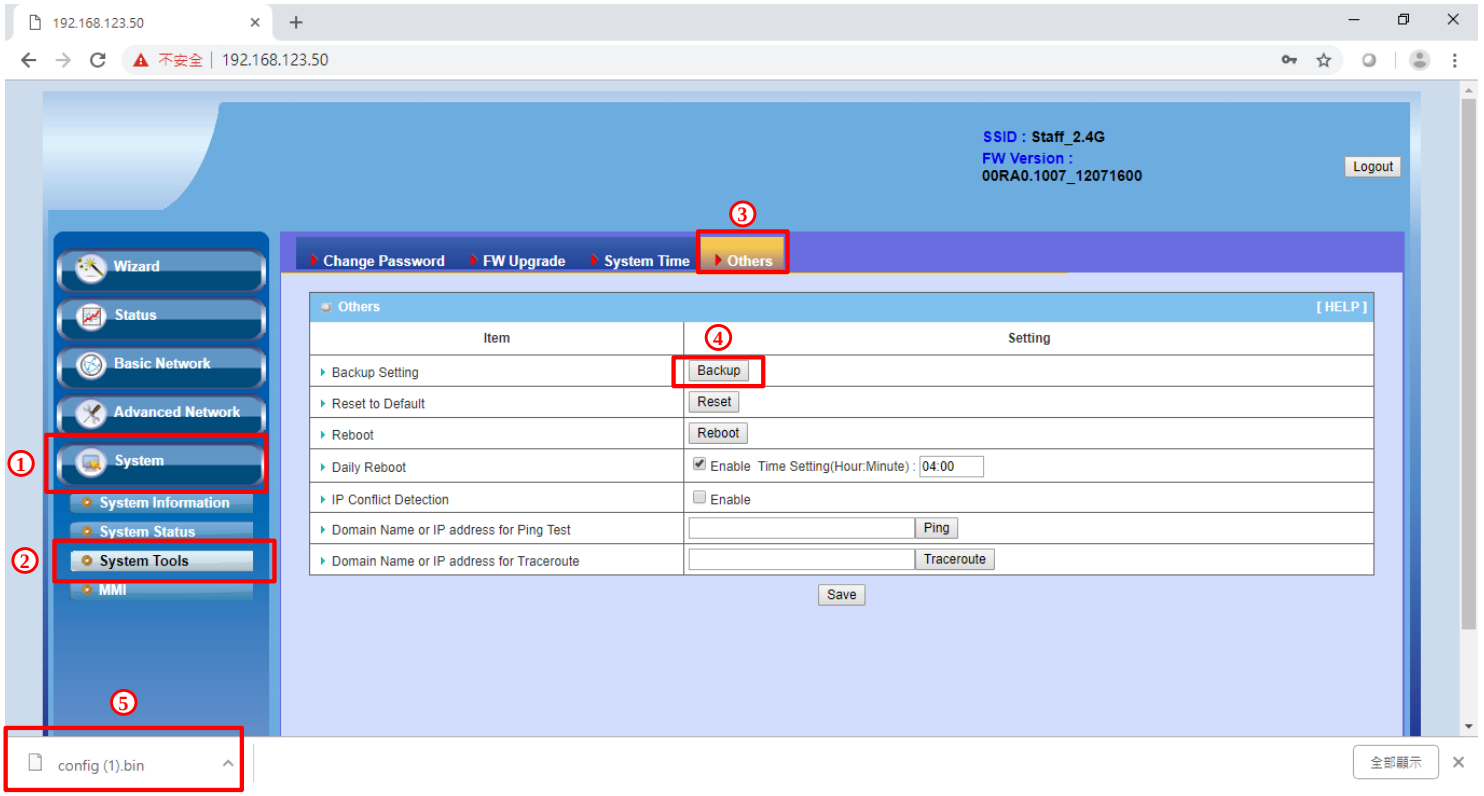


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2. Import Configuration

Step1: You can use the browser to connect web UI, and type in the IP Address (http://192.168.123.254). The default password is admin.

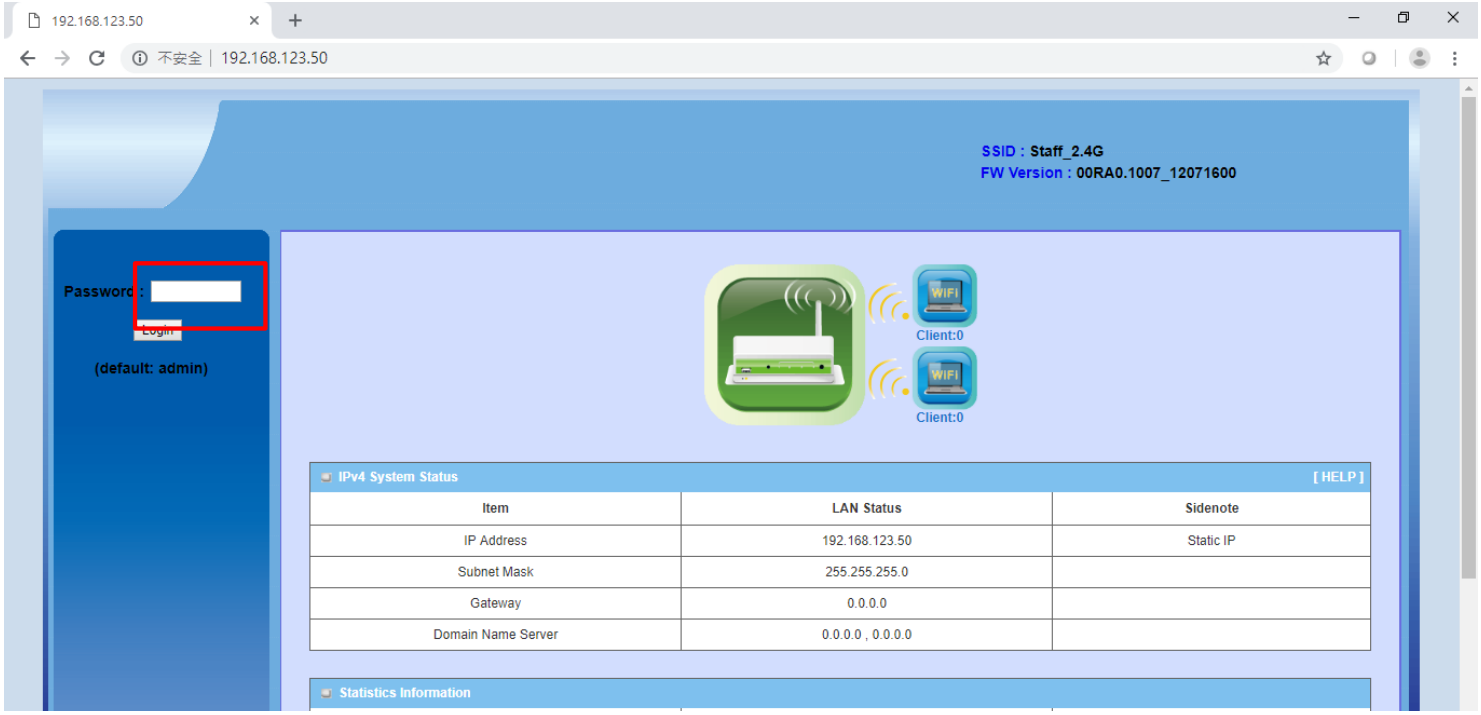

Step2: Going to the FW Upgrade page. System (1) => System Tools (2) => FW Upgrade (3). Please click button(4) to choose the path of configuration and click “Upgrade” button to upload the configuration.

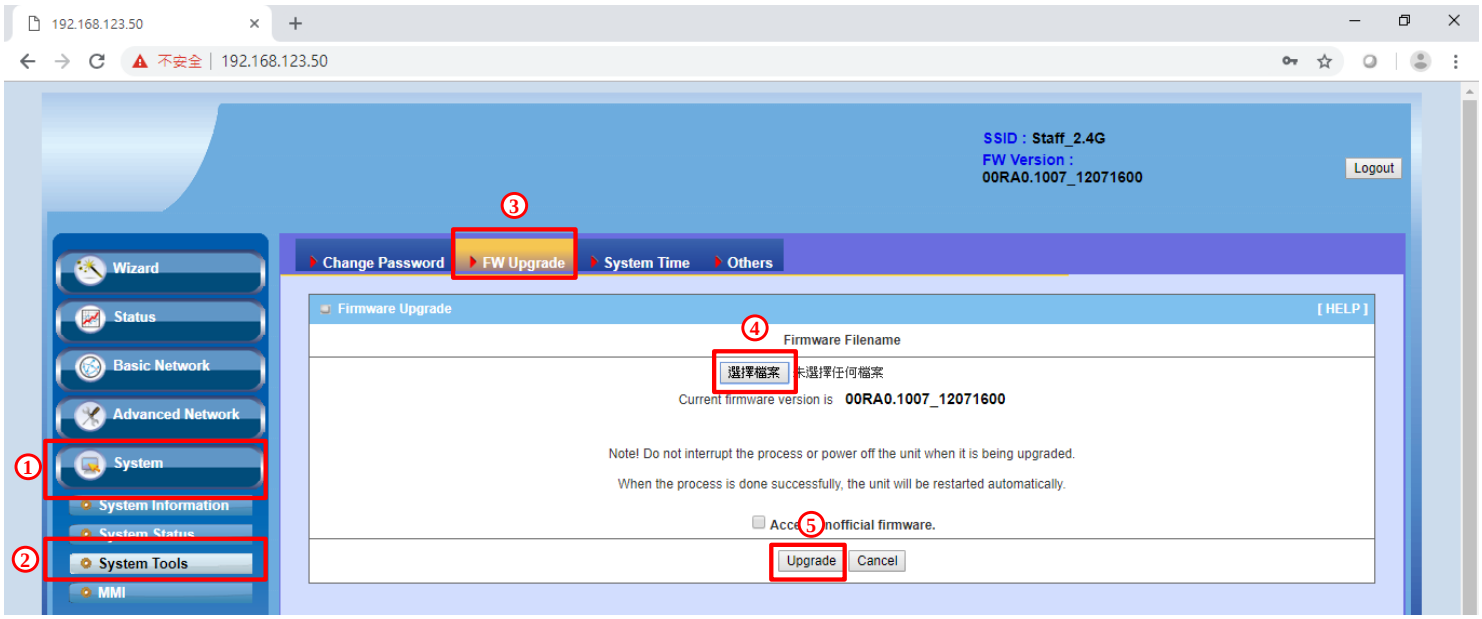

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Q2: I forgot the APW77BAM's IP. What should I do?

A2: The default IP of APW77BAM is "192.168.123.50". You can press the reset button to reset APW77BAM to default configuration.



Q3: The Tx power of APW77BAM is too high. What should I do?

A3: The APW77bam can modify the TX power by the WEB UI.


1. 2.4 GHz

Step1: You can use the browser to connect web UI, and type in the IP Address (http://192.168.123.254). The default password is admin.




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step2: Going to the Advanced RF Module1 Settings page. Basic Network (1) => Wireless (2) => Advanced RF Module1 Settings (3). The “Transmit Power” can modify the Tx power of APW77BAM.

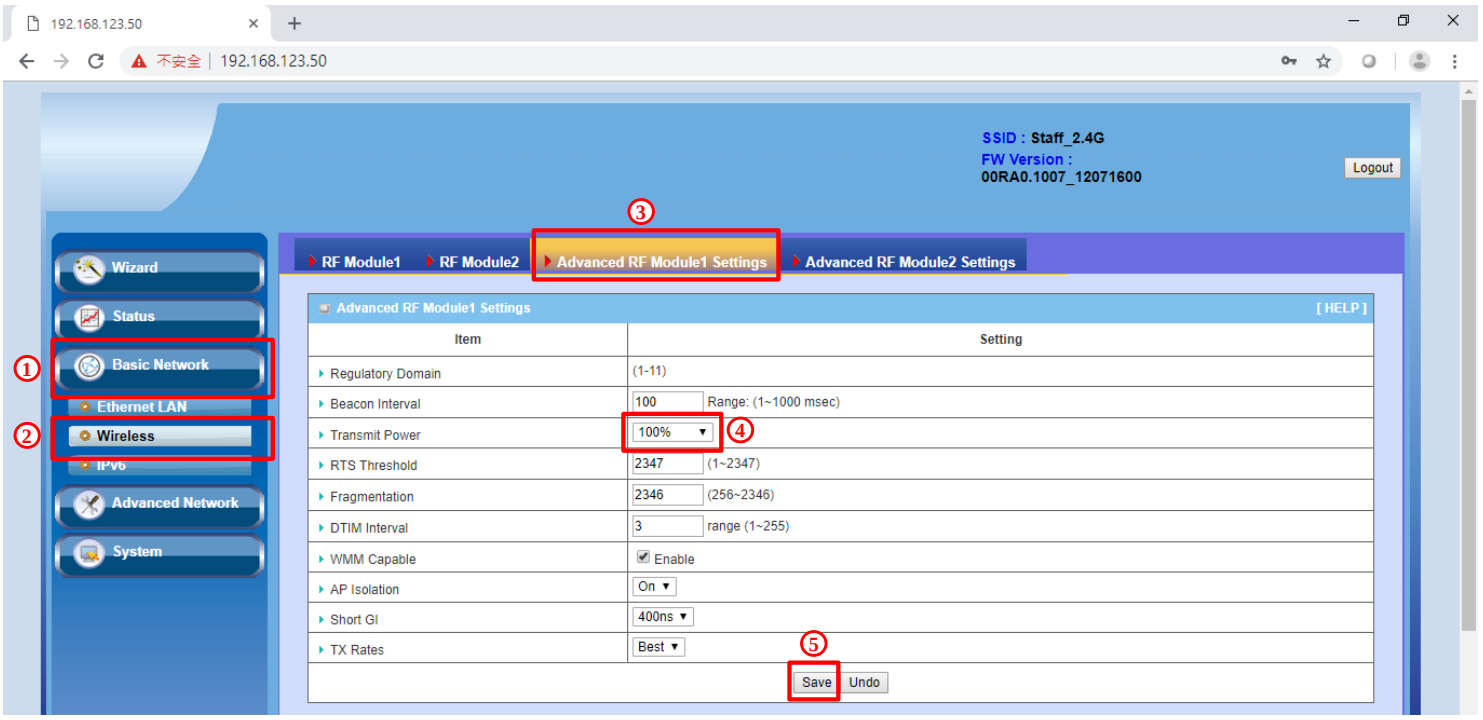


2. **5 GHz**

Step1: You can use the browser to connect web UI, and type in the IP Address (http://192.168.123.254). The default password is admin.

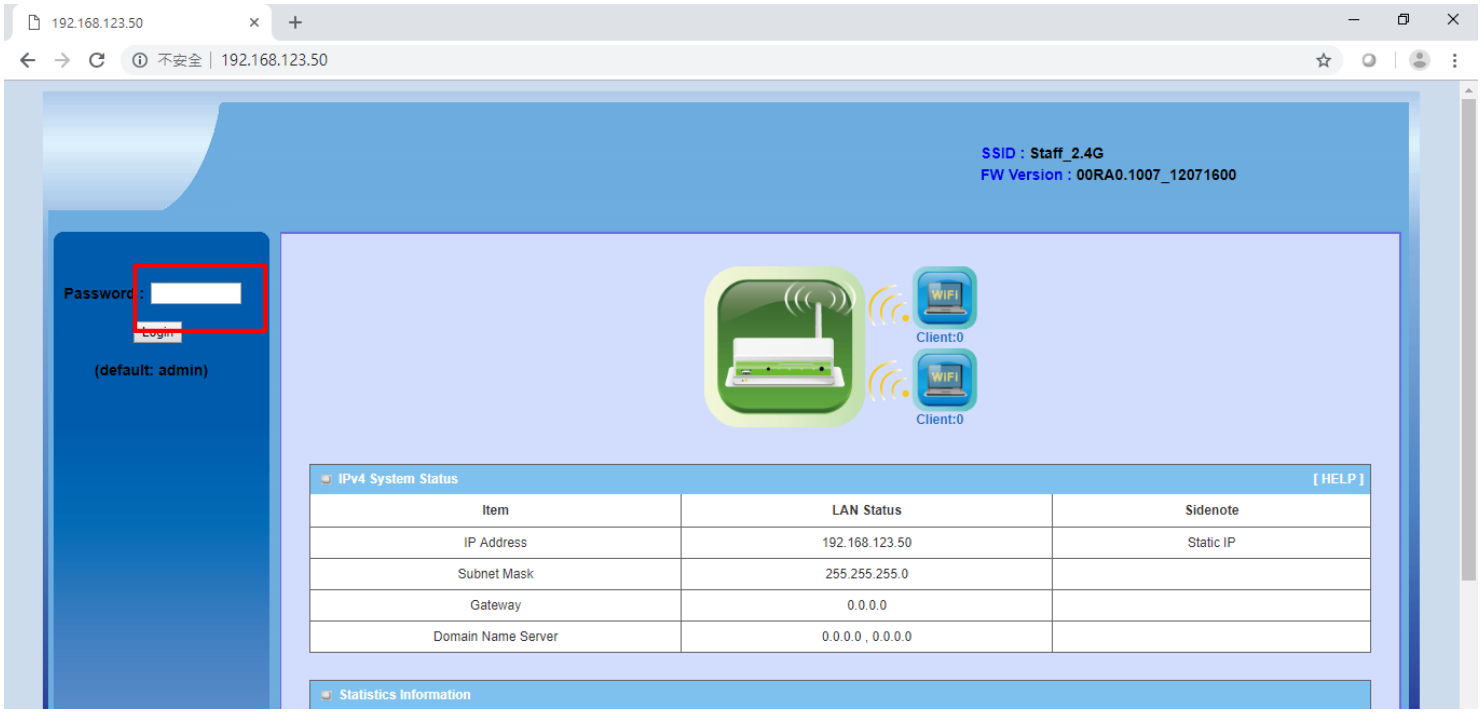

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step2: Going to the Advanced RF Module2 Settings page. Basic Network (1) => Wireless (2) => Advanced RF Module2 Settings (3). The “Transmit Power” can modify the Tx power of APW77BAM.

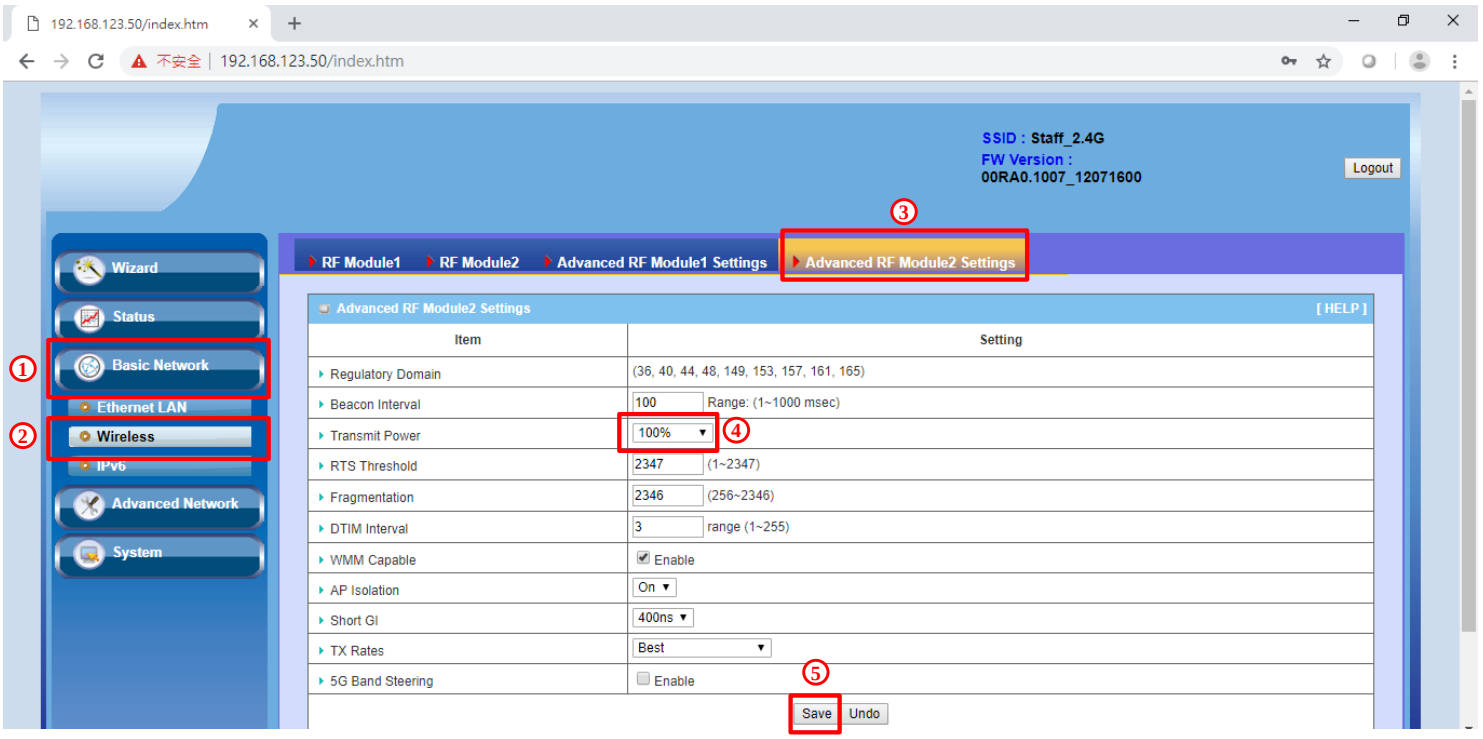


Q4: How to use WDS function in APW77BAM?

A4: The WDS can set by the WEB UI. The setting step show as following:

1. **System Architecture**

   The following picture is the system architecture. Only one AP connects to the PC by Ethernet. The other one AP connects to the AP by wireless.

   Note: The WDS isn’t standard Wi-Fi protocol so that it has compatibility issue with different brands of AP. The WDS function might be fail with other brands of AP.

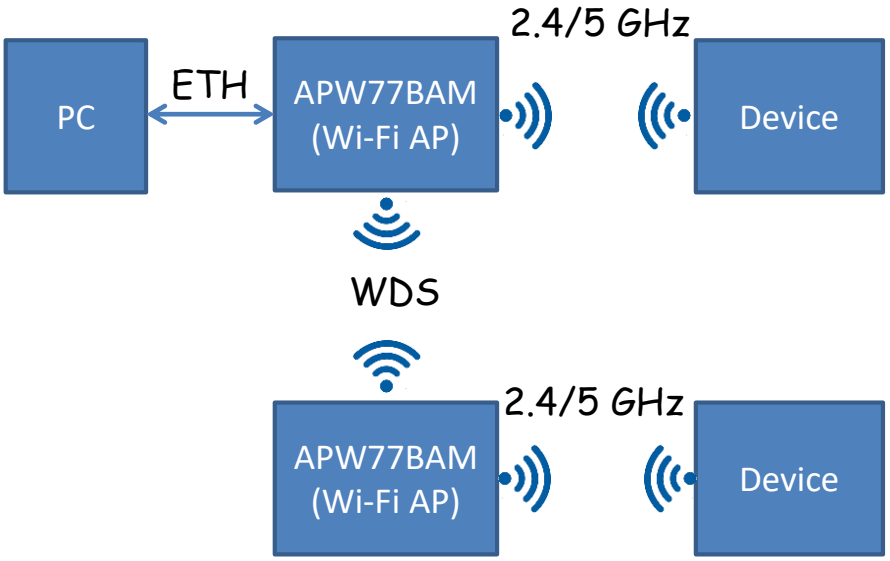


2. **AP LAN IP Setting**

Step1. Enter to the web UI


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

➢ The default IP of APW77BAM is “192.168.123.50”. The default is “admin”. It highly recommends you to change password after logging in the WEB UI.

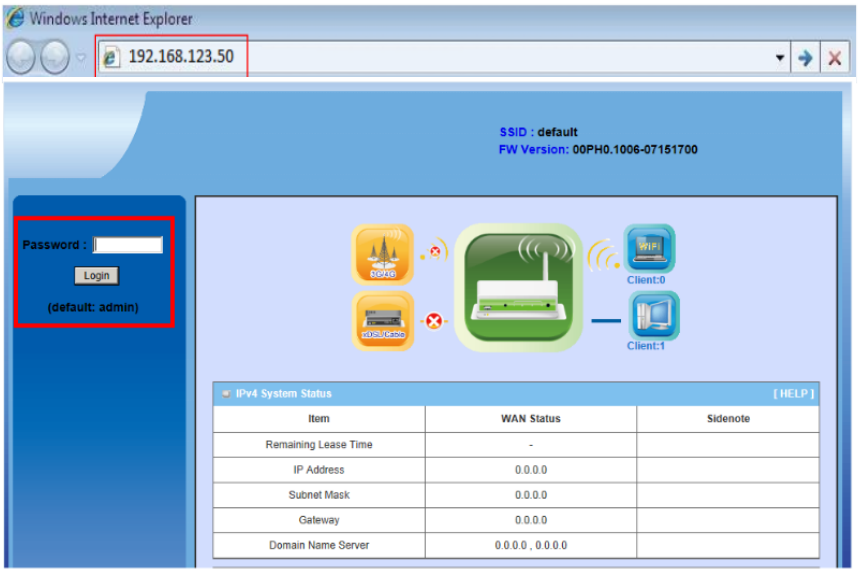

Step2. Devise IP setting


➢ Click ”Basic Network” => “Ethernet LAN”. It can enter to IP setting page and then change the IP setting.

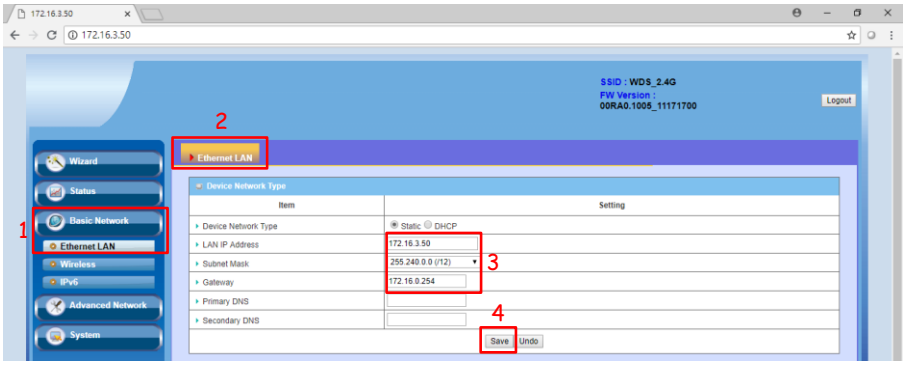

3. AP parameter Setting

Step1. Select Wi-Fi Channel

➢ APW77BAM support 2.4/5 GHz at same time. Please choose ”Basic Network” => “Wireless”. It can enter to the page of wireless setting. The “RF Module1” is the setting of 2.4 GHz. The “RF Module2” is the setting of 5 GHz

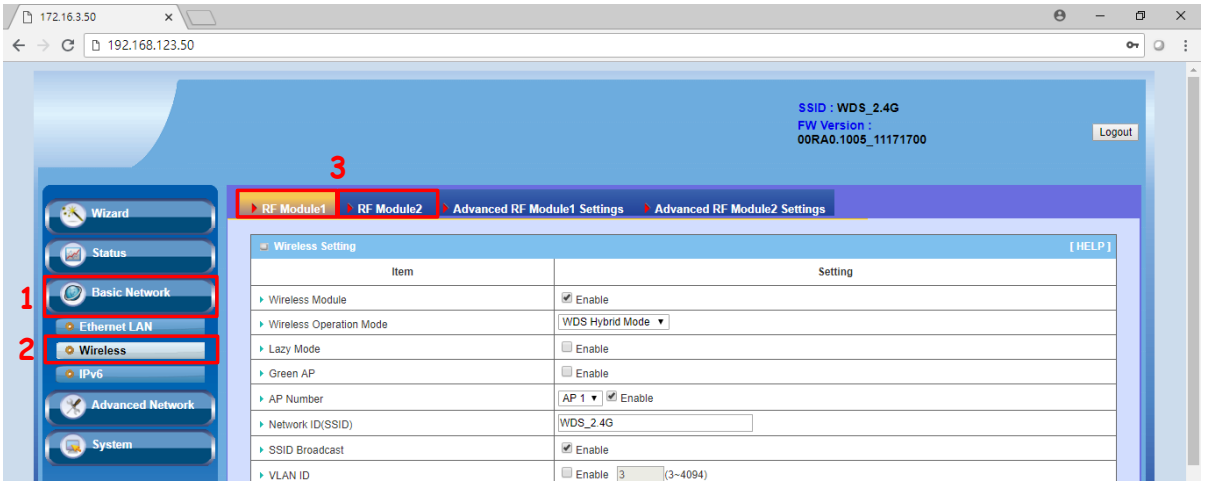


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step2. AP Setting

- Please click ”Basic Network” => “Wireless”

1. Please change wireless operation mode to ”WDS Hybrid Mode”
2. Disable Lazy Mode
3. Choose VAP1 and enable VAP1
4. Choose AP’s channel
5. Choose authentication and encryption.
6. Please click ”Save” button to save the parameter.
7. The setting will be using after clicking ”Apply” button.

P.S The SSID, channel, authentication, encryption and pre-shared key must be same when all APs at WDS mode.

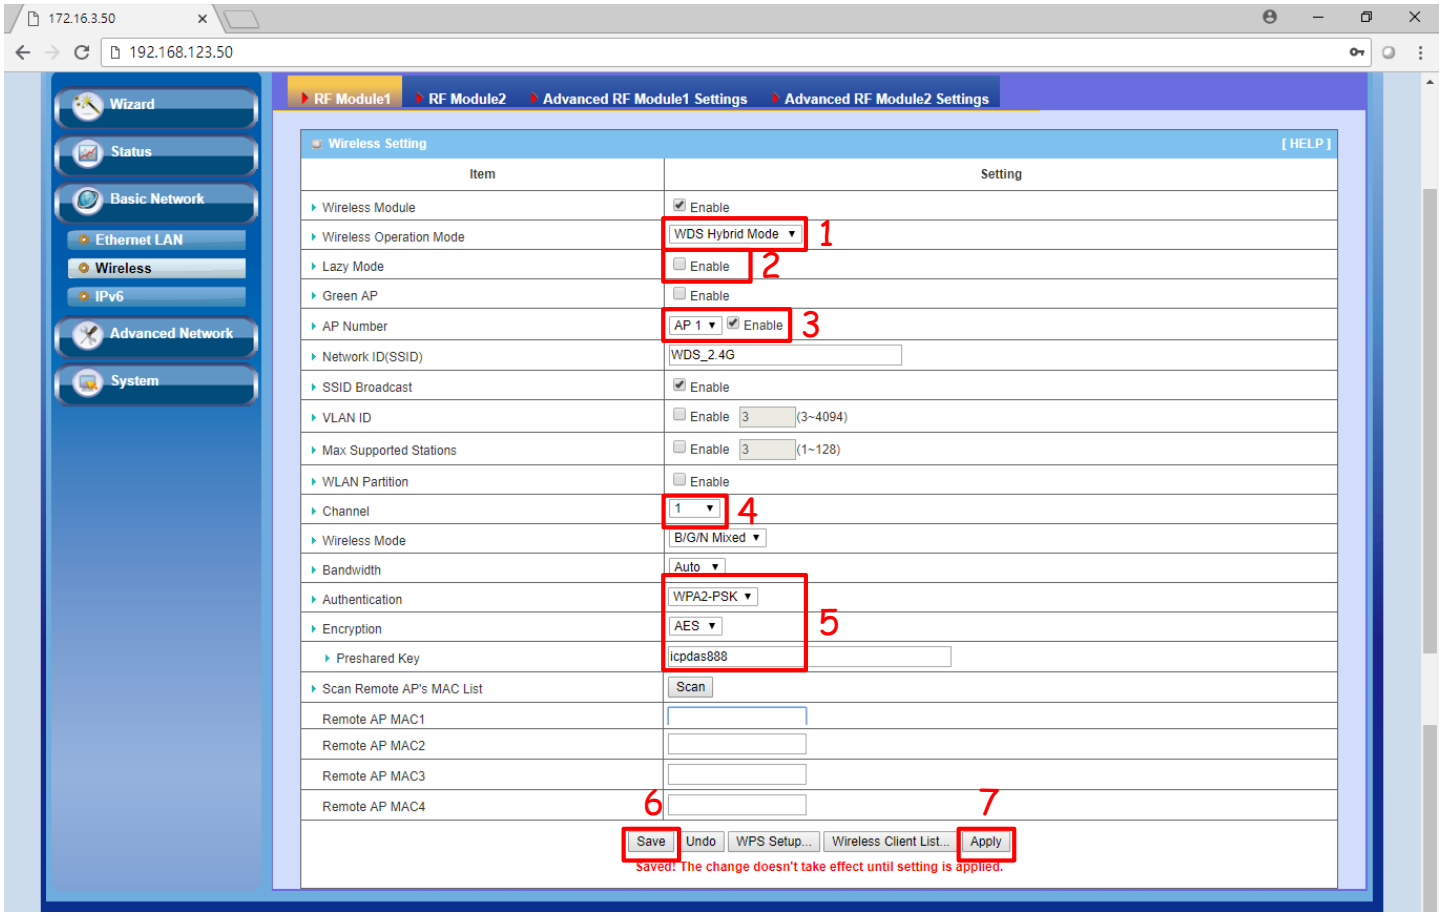


Step3. Make a WDS connection between different APs

- Scan AP and make a WDS connection

1. The AP77BAM will be scanning nearby AP when click the “SCAN” button. The result will show at below the WEB UI.
2. Please click the “Copy to” button to copy AP’s MAC.
3. Please click ”Save” button to save the parameter and then the setting will be using after clicking ”Apply” button.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

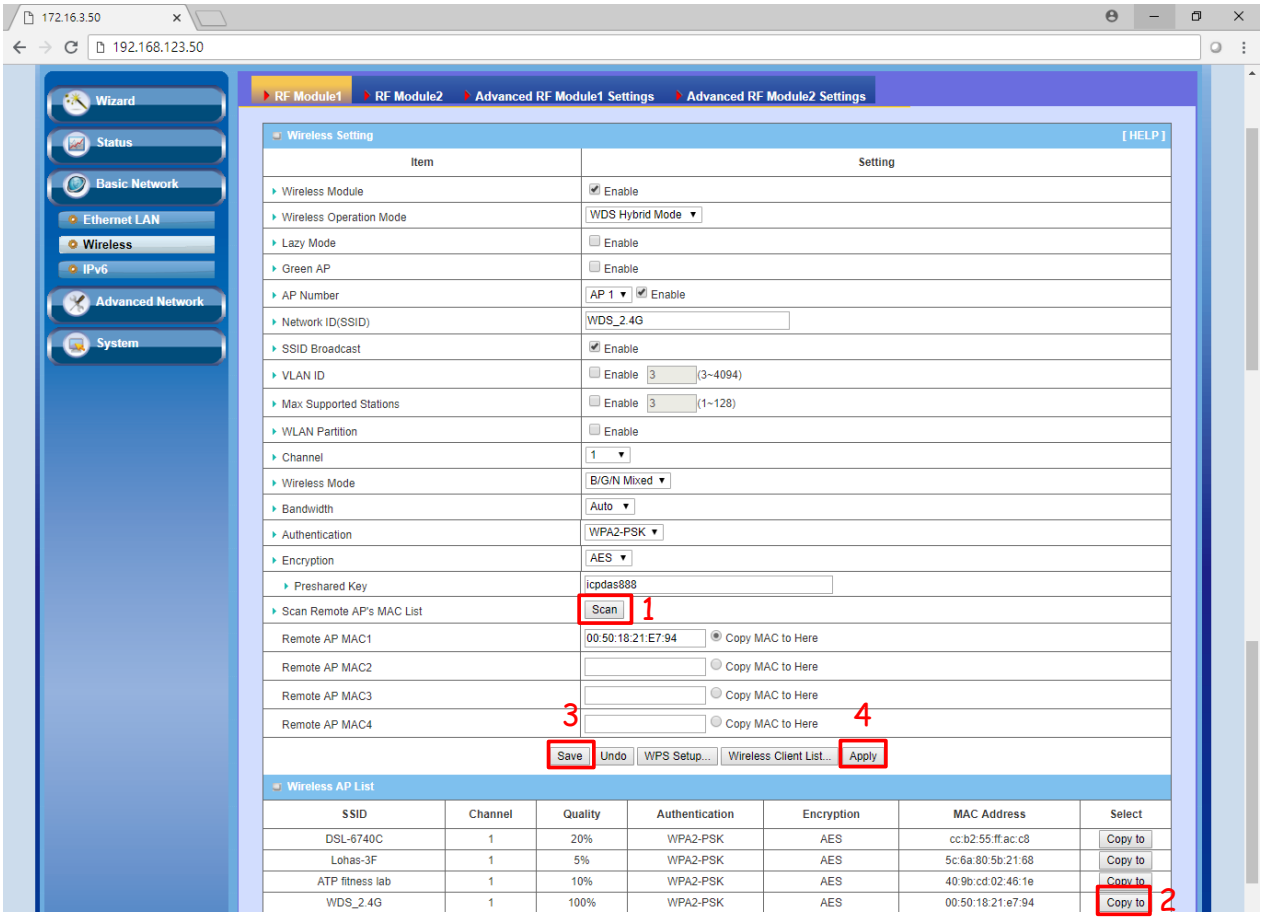

4. Test WDS Connection

Step1. Test Architecture

- PC connects to one of the APW77BAM by Ethernet cable.

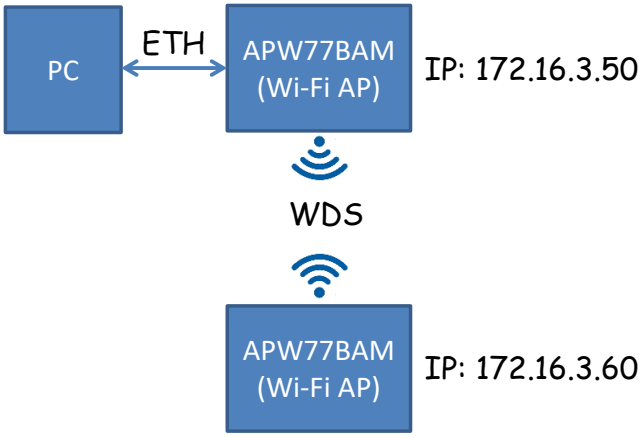


Step2.Test by command line window

- Ping APW77BAM by command line window

  It can use command line windows to ping another APW77BAM. If the command line windows gets response after sending ping packets. It means that the WDS connection is already establishment.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

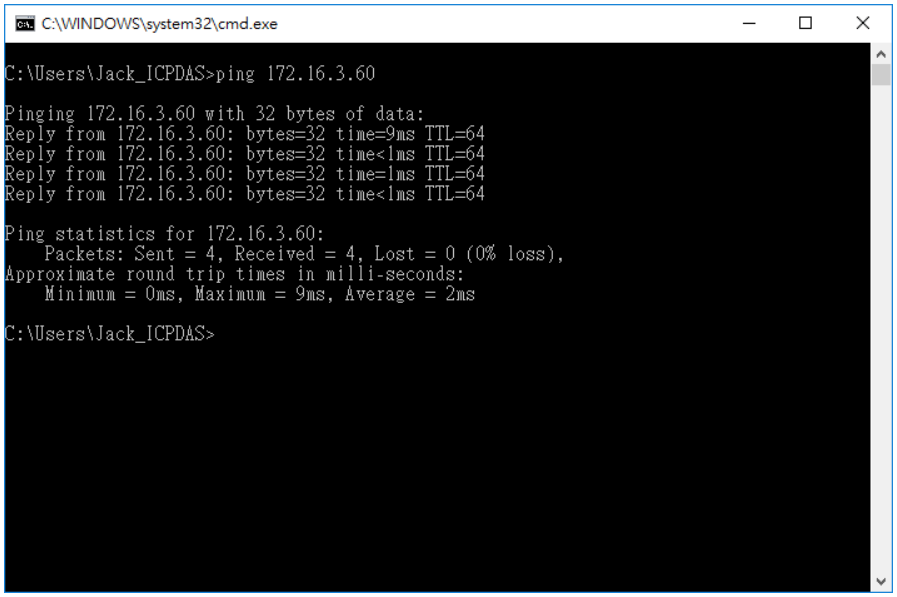

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000