
How to add other languages ?


The EZ-UAQ Utility installation path will be on the user's computer, located in the EZ-UAQ Utility folder in the ICPDAS folder in the system slot. This article uses adding Japanese as an example.

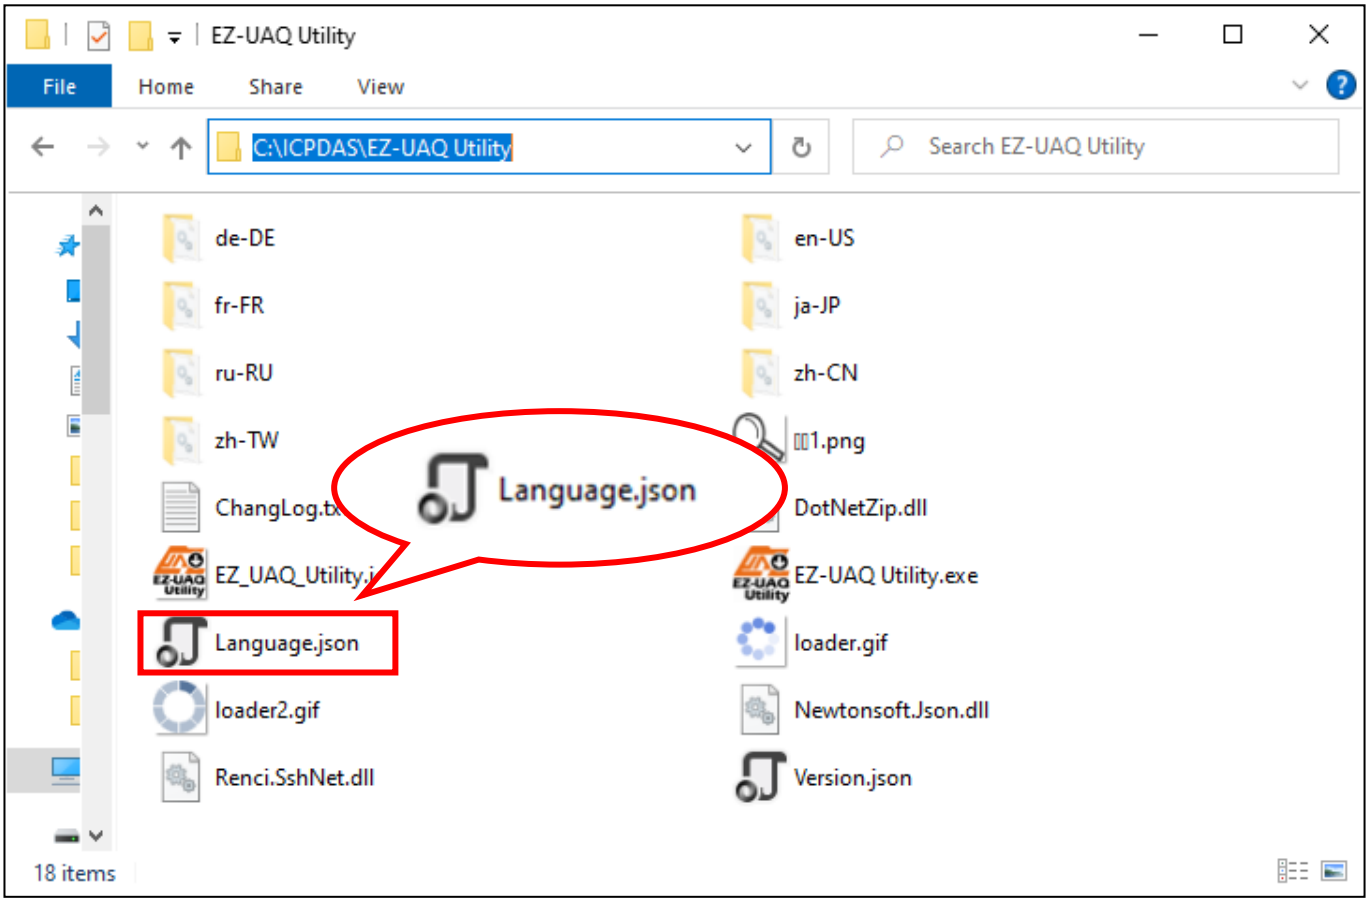

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 1:

Copy the Language.json file in the EZ-UAQ Utility folder to another location, and then open the file with a text editor.

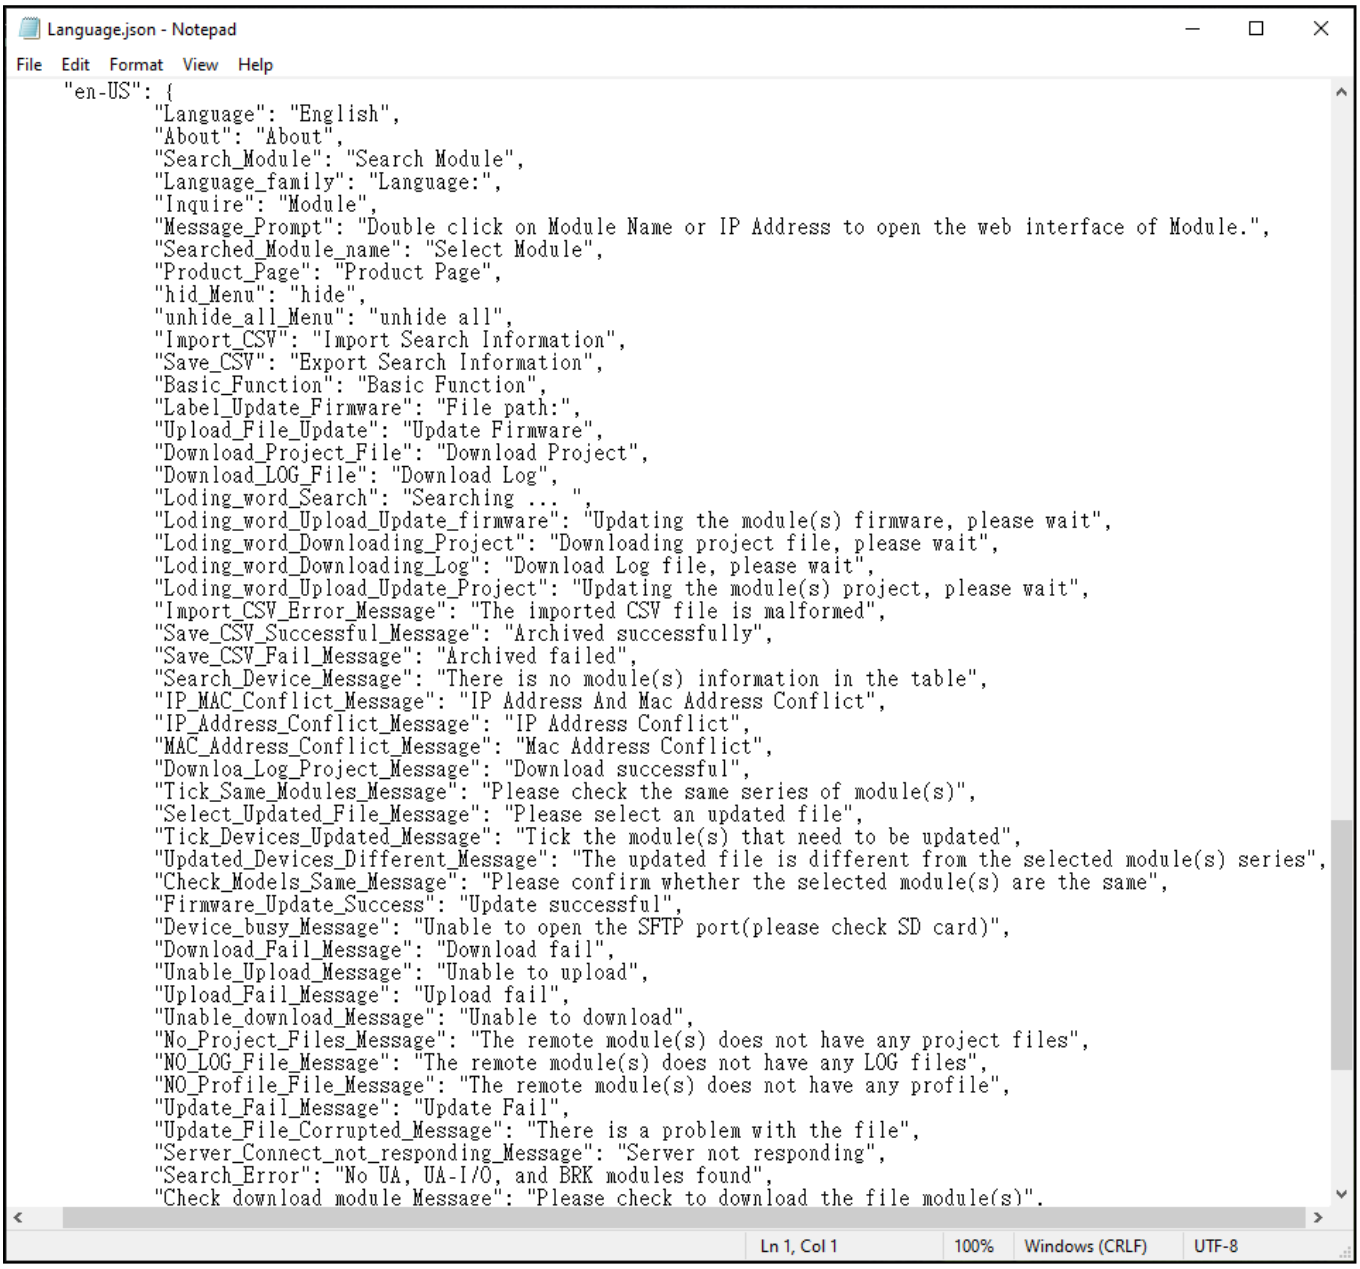

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2:

Please copy the block [,"en-US": to }]. As shown below:




```
        },
        "en-US": {
                "Language": "English",
                "About": "About",
                "Search_Module": "Search Module",
                "Language_family": "Language:",
                "Inquire": "Module",
                "Message_Prompt": "Double click on Module Name or IP Address to open the web interface of Module.",
                "Searched_Module_name": "Select Module",
                "Product_Page": "Product Page",
                "hid_Menu": "hide",
                "unhide_all_Menu": "unhide all",
                "Import_CSV": "Import Search Information",
                "Save_CSV": "Export Search Information",
                "Basic_Function": "Basic Function",
                "Label_Update_Firmware": "File path:",
                "Upload_File_Update": "Update Firmware",
                "Download_Project_File": "Download Project",
                "Download_LOG_File": "Download Log",
                "Loding_word_Search": "Searching ... ",
                "Loding_word_Upload_Update_firmware": "Updating the module(s) firmware, please wait",
                "Loding_word_Downloading_Project": "Downloading project file, please wait",
                "Loding_word_Downloading_Log": "Download Log file, please wait",
                "Loding_word_Upload_Update_Project": "Updating the module(s) project, please wait",
                "Import_CSV_Error_Message": "The imported CSV file is malformed",
                "Save_CSV_Successful_Message": "Archived successfully",
                "Save_CSV_Fail_Message": "Archived failed",
                "Search_Device_Message": "There is no module(s) information in the table",
                "IP_MAC_Conflict_Message": "IP Address And Mac Address Conflict",
                "IP_Address_Conflict_Message": "IP Address Conflict",
                "MAC_Address_Conflict_Message": "Mac Address Conflict",
                "Downloa_Log_Project_Message": "Download successful",
                "Tick_Same_Modules_Message": "Please check the same series of module(s)",
                "Select_Updated_File_Message": "Please select an updated file",
                "Tick_Devices_Updated_Message": "Tick the module(s) that need to be updated",
                "Updated_Devices_Different_Message": "The updated file is different from the selected module(s) series",
                "Check_Models_Same_Message": "Please confirm whether the selected module(s) are the same",
                "Firmware_Update_Success": "Update successful",
                "Device_busy_Message": "Unable to open the SFTP port(please check SD card)",
                "Download_Fail_Message": "Download fail",
                "Unable_Upload_Message": "Unable to upload",
                "Upload_Fail_Message": "Upload fail",
                "Unable_download_Message": "Unable to download",
                "No_Project_Files_Message": "The remote module(s) does not have any project files",
                "NO_LOG_File_Message": "The remote module(s) does not have any LOG files",
                "NO_Profile_File_Message": "The remote module(s) does not have any profile",
                "Update_Fail_Message": "Update Fail",
                "Update_File_Corrupted_Message": "There is a problem with the file",
                "Server_Connect_not_responding_Message": "Server not responding",
                "Search_Error": "No UA, UA-I/O, and BRK modules found",
                "Check_download_module_Message": "Please check to download the file module(s)",
                "detailed_information": "Module Details",
                "Server_Receive_not_responding_Message": "Unable to receive messages from the server",
                "Confirm_upload_file_Message": "Please confirm whether the size of the uploaded file exceeds 100kb",
                "Loding_word_Downloading_Profile": "Downloading the Modbus and OPC UA configuration file, please wait",
                "Upload_project_And_Update": "Update Project",
                "Download_Profile": "Download Modbus and OPC UA Configuration",
                "Loding_word_Get_Port_Protocol": "Get module(s) details",
                "Reduce_Performance_Modules": "Please tick Reduce Performance Modules",
                "Module_drop_performance": "Reduce CPU usage",
                "Potency_reduction_success": "CPU usage reduction success",
                "Performance_reduction_failed": "CPU usage reduction failed",
                "Not_Support_Feature_Message": "This version does not support this feature",
                "detailed_information_Message": "Unchecked any module(s), unable to get detailed information",
                "Advanced_Features": "Advanced Function",
                "Update_Function": "Upload Function",
                "Download_Function": "Download Function",
                "Storage_path": "Storage path:",
                "Password_error_Message":"Password error no response",
                "Please_enter_password":"Please enter password"
        }
}
```


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 3:

Then paste the copied format after the "en-US": symbol } below the end of the text. As shown below:

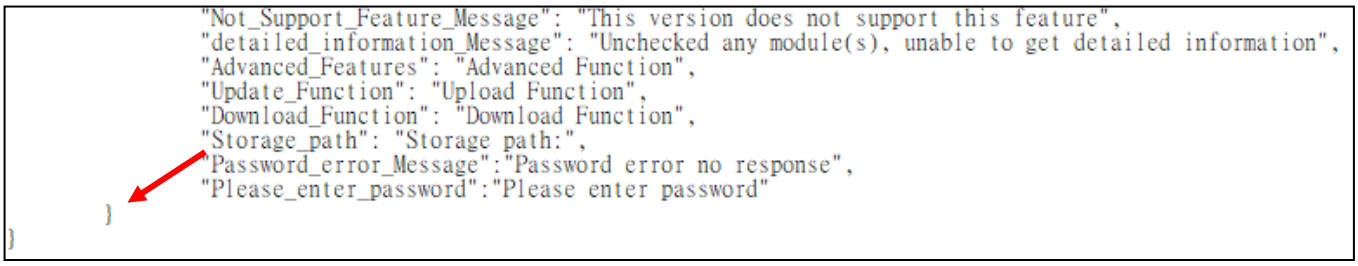

Step 4:


Then change the copied English language "en-US": to Japanese "Japanese":, as shown below:

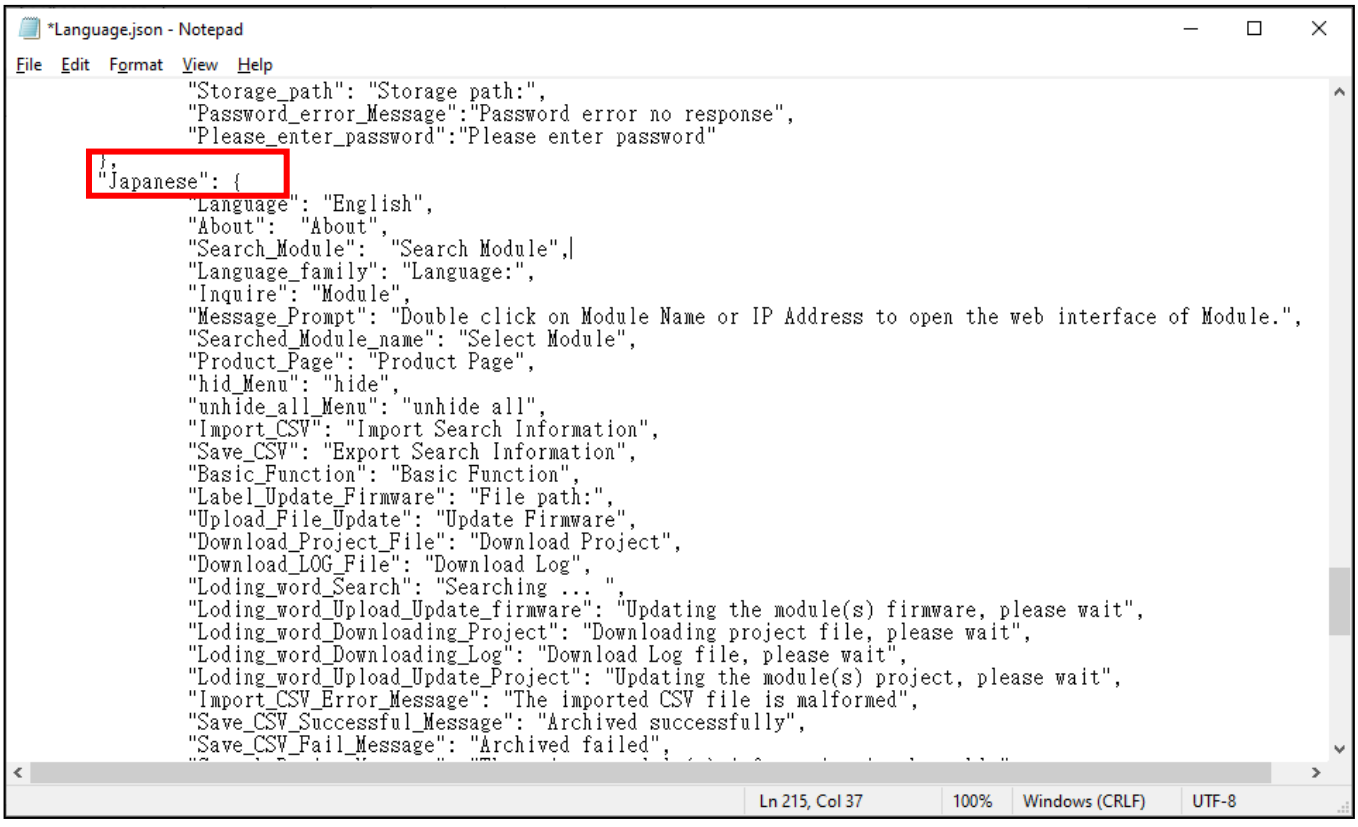

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 5:

Then change ("Language": "**English**",) under Japanese "Japanese" to ("Language": "日本语",), as shown below:

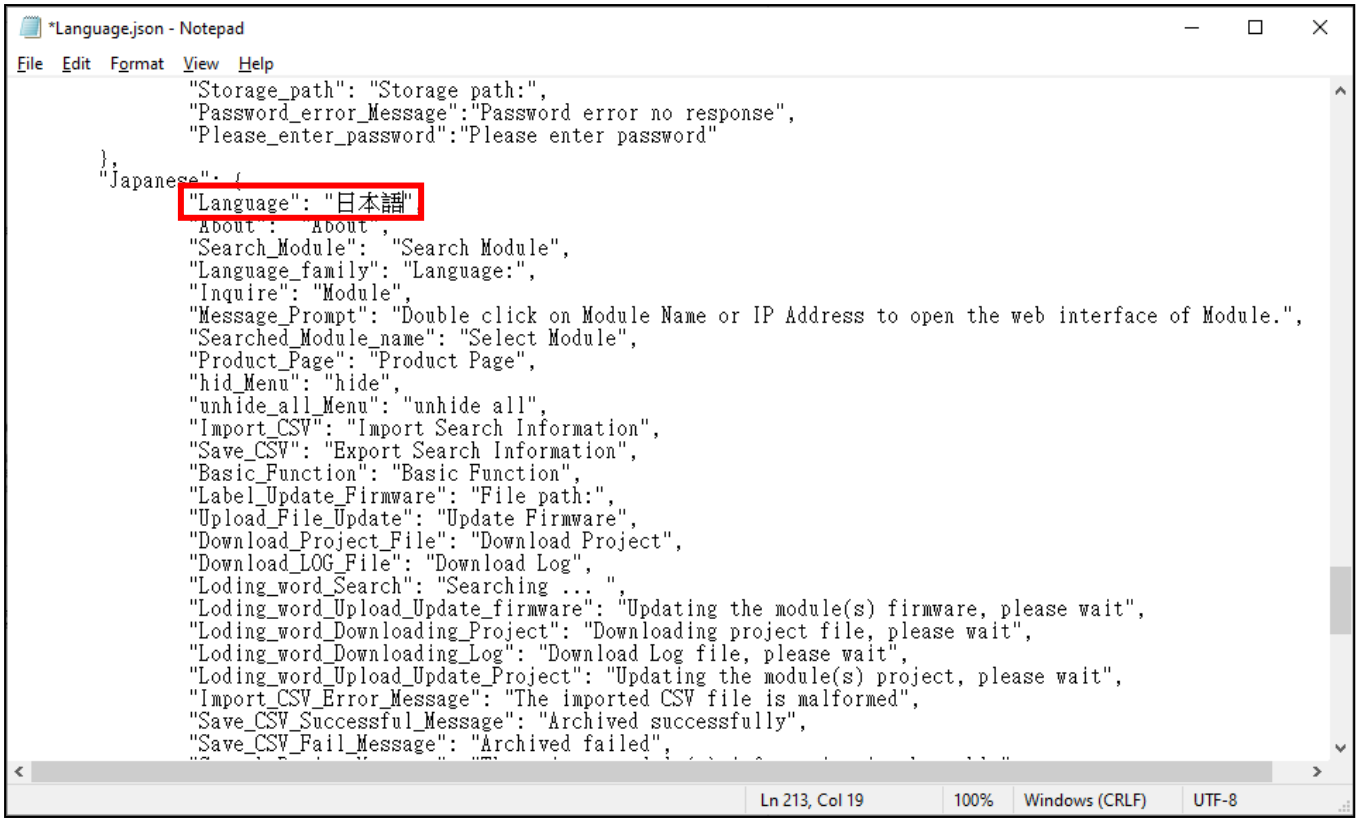

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 6:


Then change the software interface words in sequence (such as ""The middle text is buttons and messages) to Japanese (or other required languages). As shown below:



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 7:

After the modification is completed, please save the file and place the modified file in the EZ-UAQ Utility installation path.

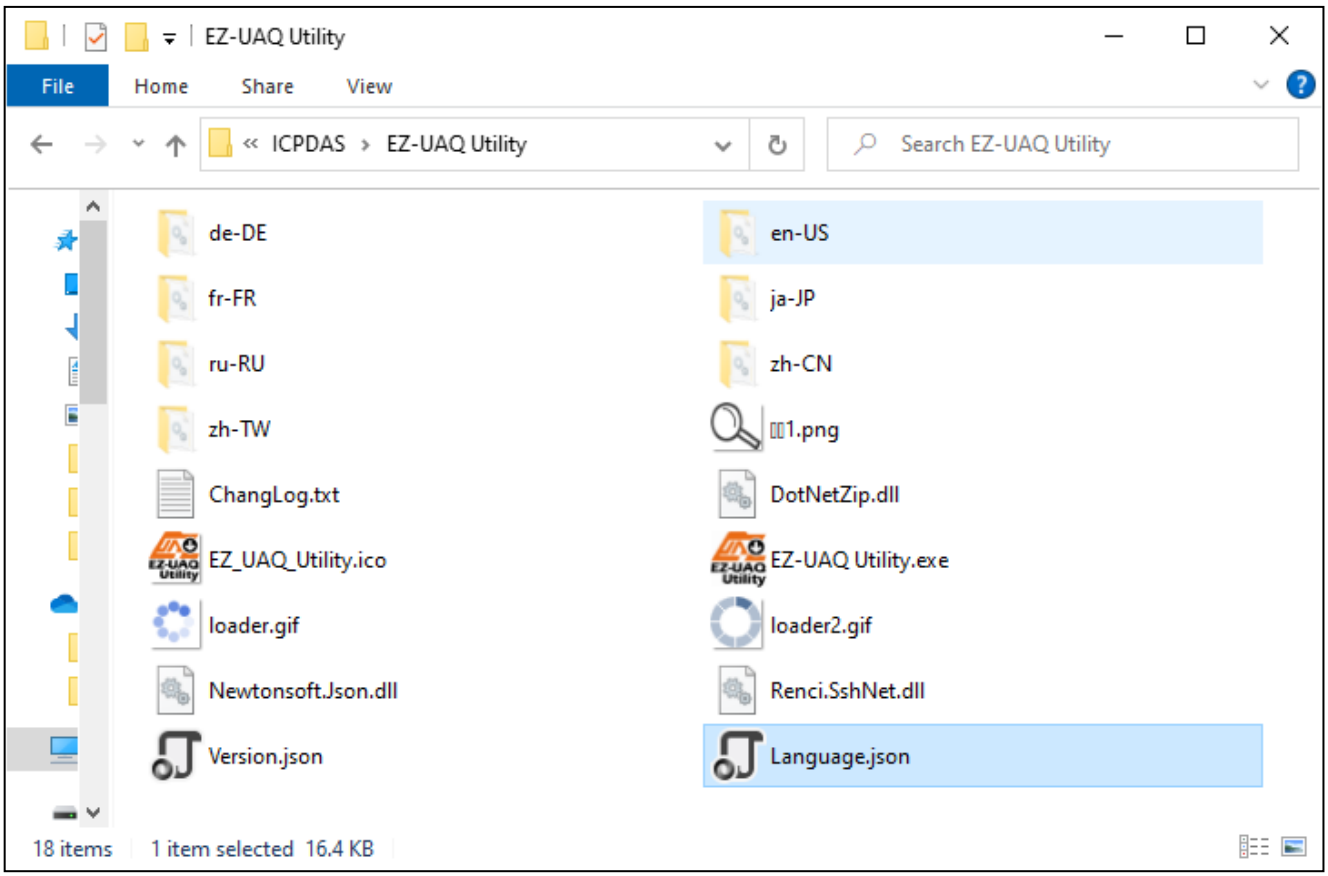

Step 8:

Then start the software, switch the language system to the newly added Japanese, and import the created language system.

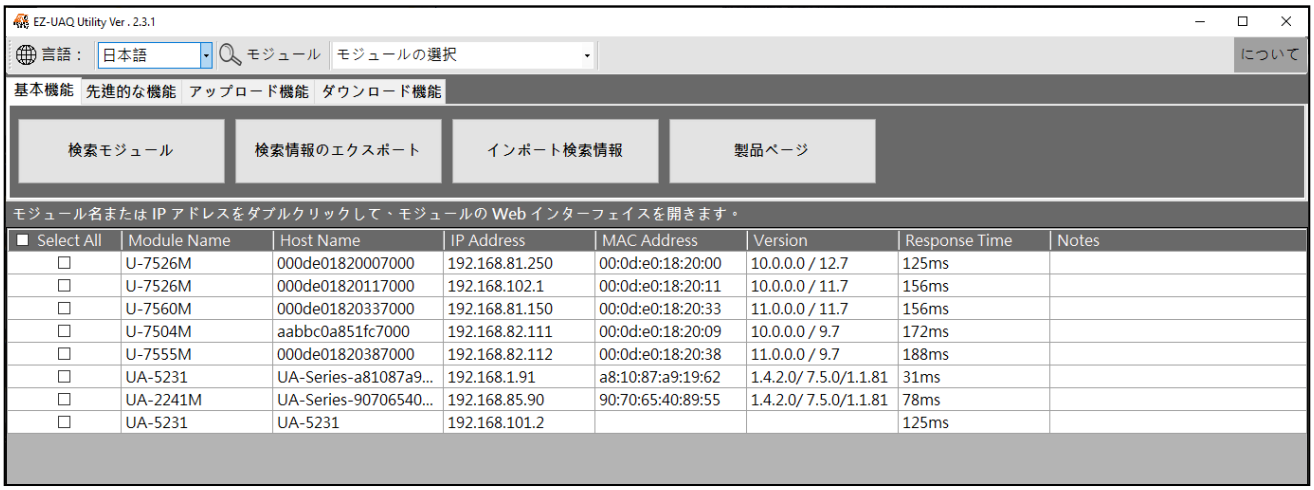

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000