
- **How to add other languages by using the software ?**

Step 1:

Start the EZ-UAQ Utility software.

Step 2:


Click on the **“Advanced”**, then click the **[Add]** button to open the "Add Multiple Languages" window.

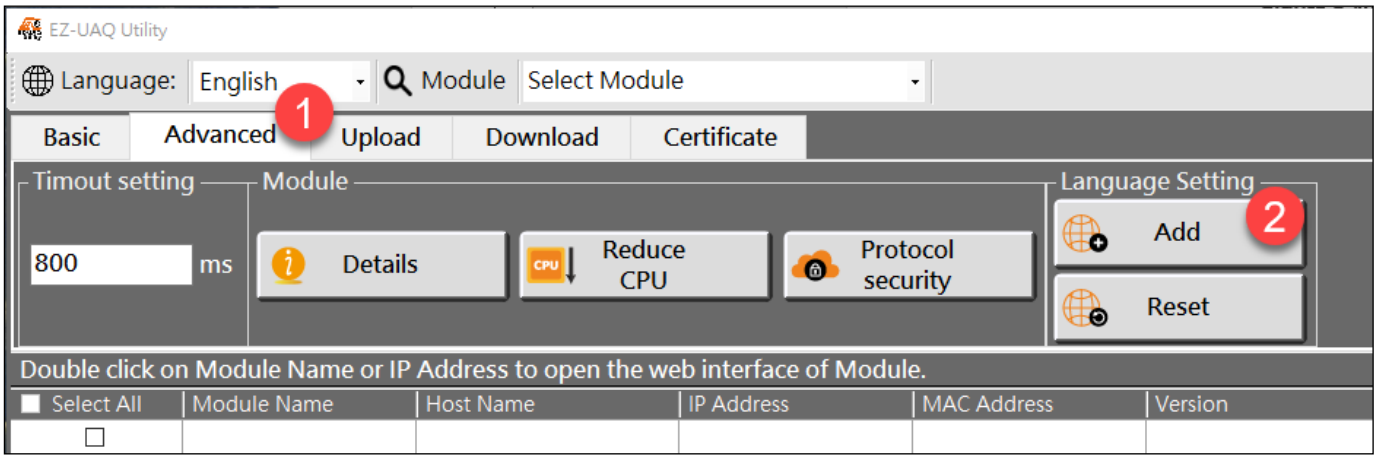

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 3:

First, enter the language you want to add in Add Language, then click **[Copy English Word]**. Use translation software to translate the English word into the language you want (e.g., Japanese) and copy it.

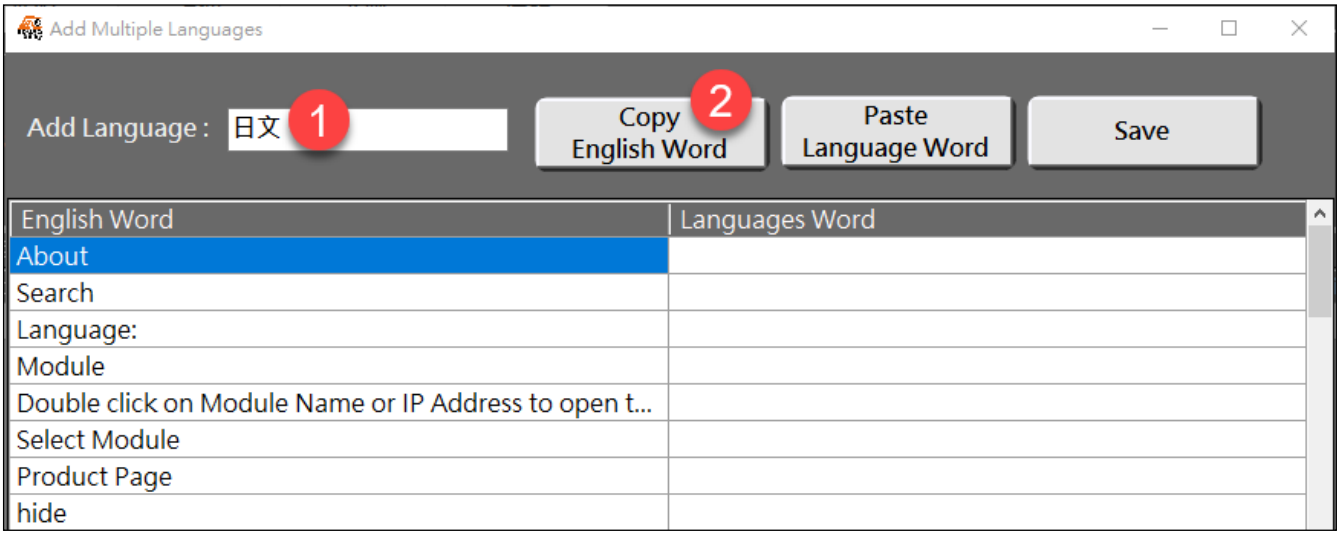

Step 4:


Then click **[Paste Language Word]**, and the Japanese text will be displayed in the table below Add Languages Word. Next, click**[Save]**, and a window shown in Restart EZ-UAQ Utility message will appear; then click '**OK**'.

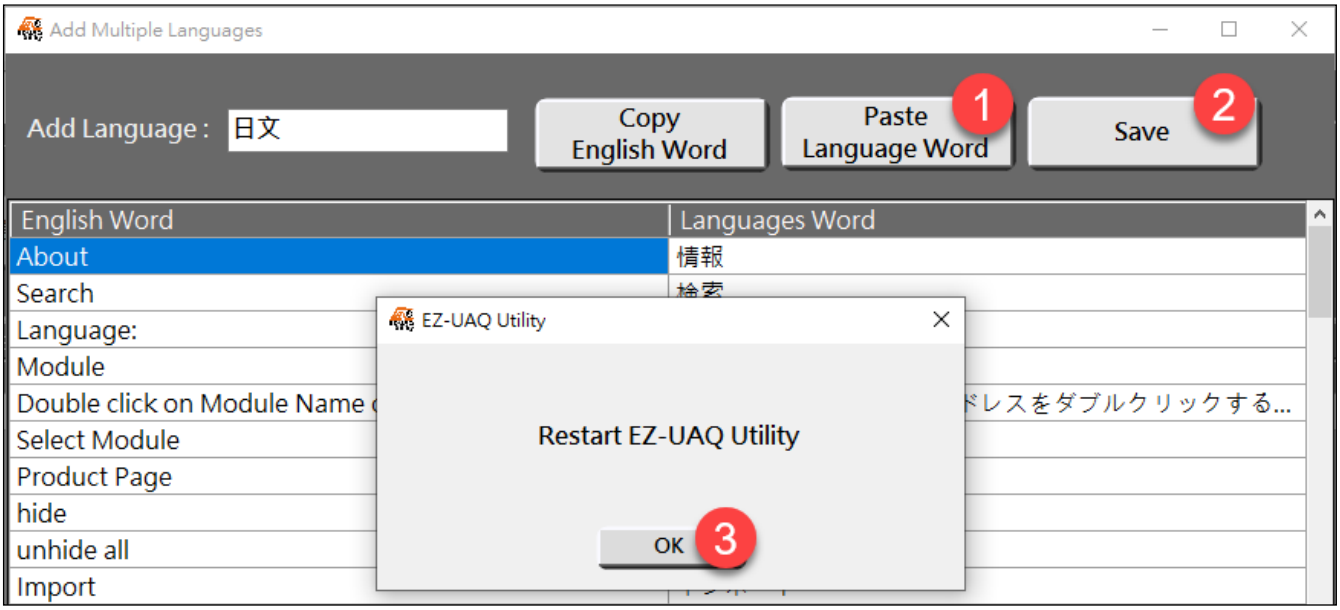

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 5:

Next, restart the software, and Japanese will appear in the language dropdown menu. Please select Japanese.

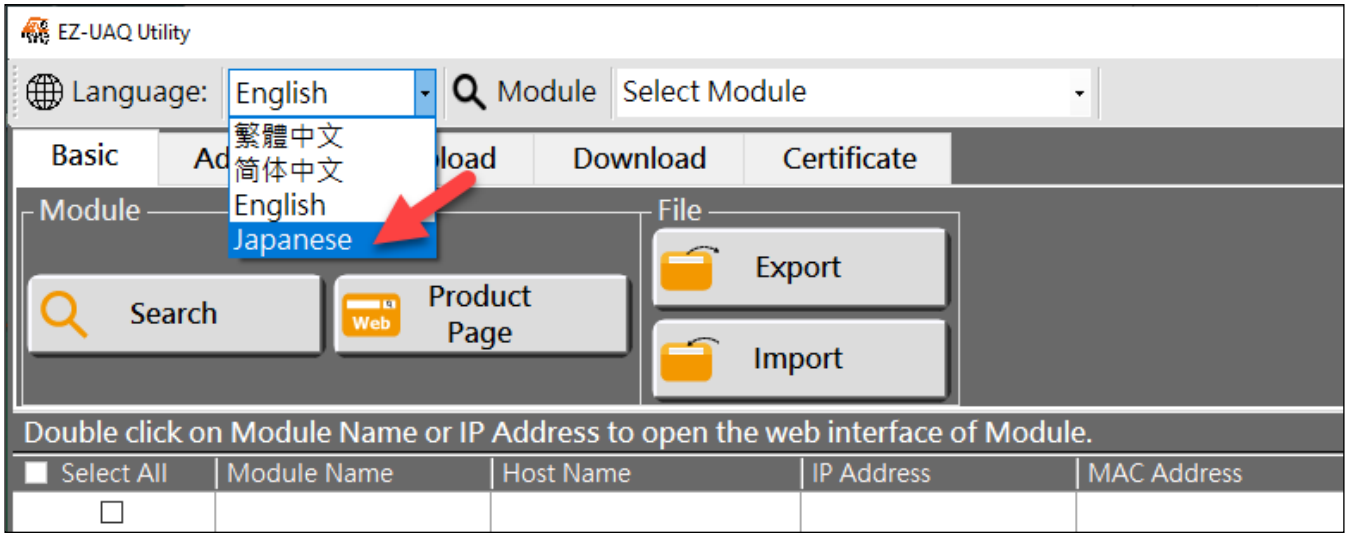

Step 6:

The EZ-UAQ Utility software interface will automatically switch to Japanese.

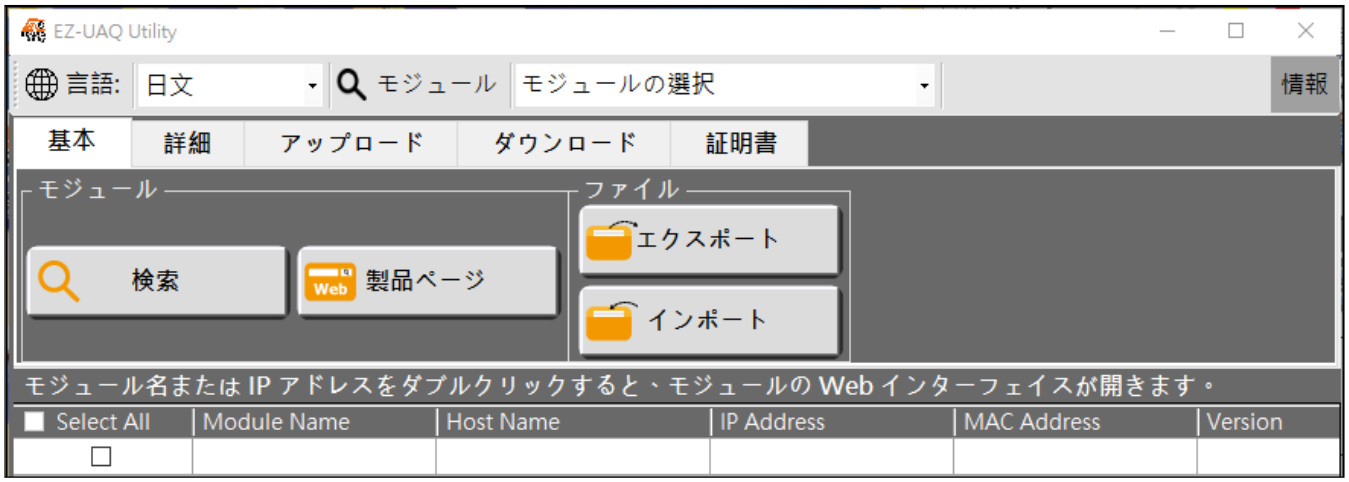

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000