How to calibrate a PenMount serial touch panel

Applies to:


Platform	*OS version*	*WinPAC/ViewPAC utility version*
WP-8x3x/ WP-8x4x	*All versions*	*All versions*
WP-5000	*All versions*	*All versions*
VP-23W1/ VP-25W1	*N/A*	*N/A*
VP-4131	*N/A*	*N/A*

N/A: Not applicable to this platform and OS.


Tips & Warnings

Serial COM Ports 1 and 4 on WP-8000 are standard female/male RS-232 COM Ports.
*If COM3 is used to connect to the touch panel, you will need a "**NULL MODEM**".*

Standard Wiring

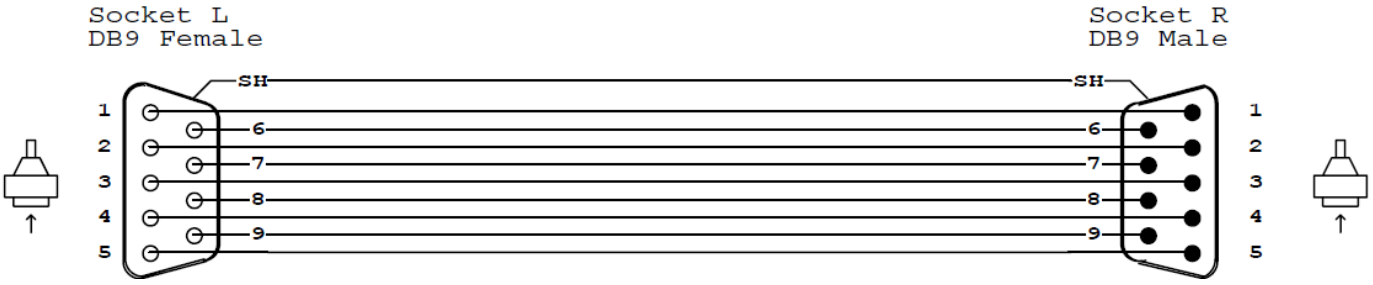


Connecting to COM1

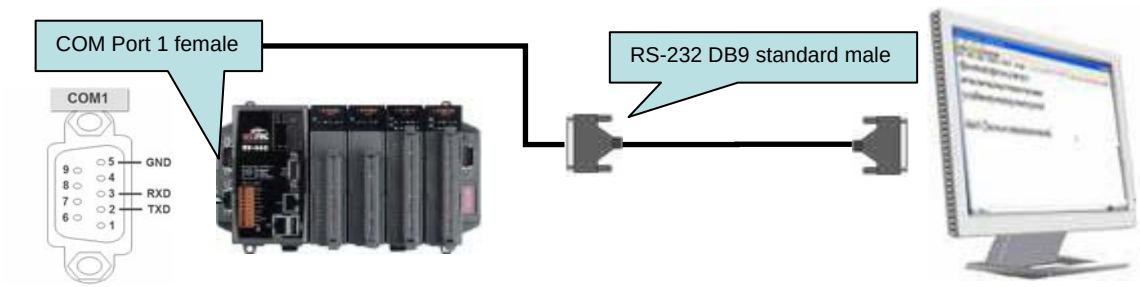


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Connecting to COM4

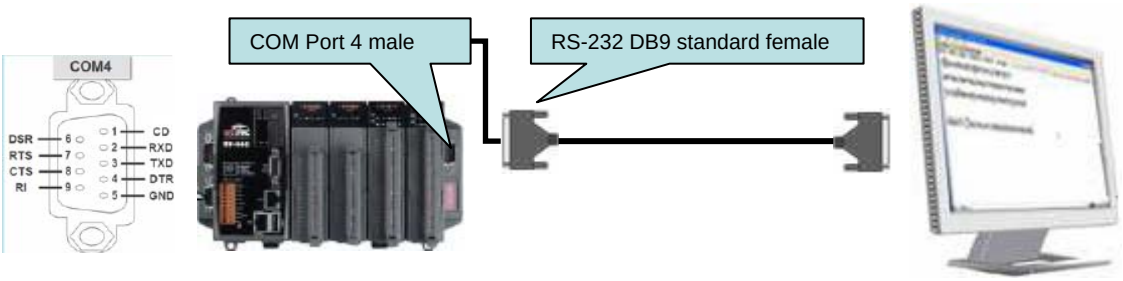


Connecting to COM3

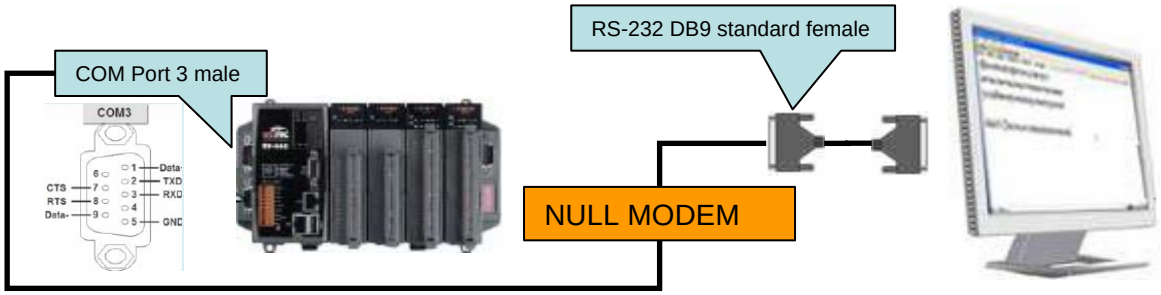

To calibrate a PenMount serial touch panel, perform the following steps:


Step 1: Execute the calibration program.

1.1. Click Start → Programs → Serial_TOUCH → PenMount → Calibration.

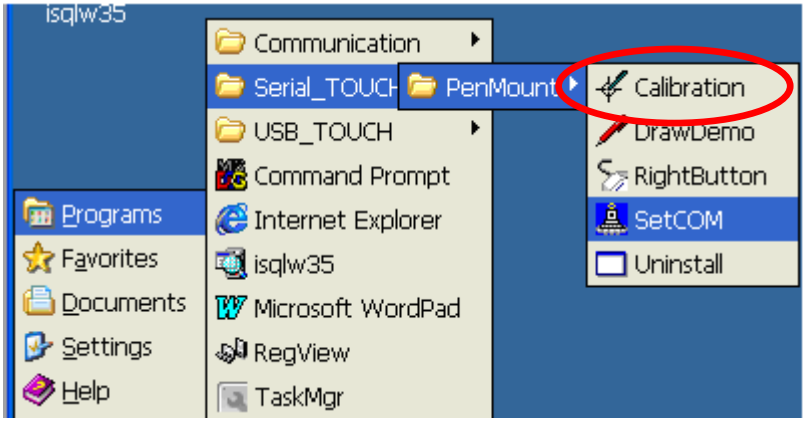

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


1.2. Touch the arrowhead one by one and then touch the "**+**" icon on the monitor till the program finish.

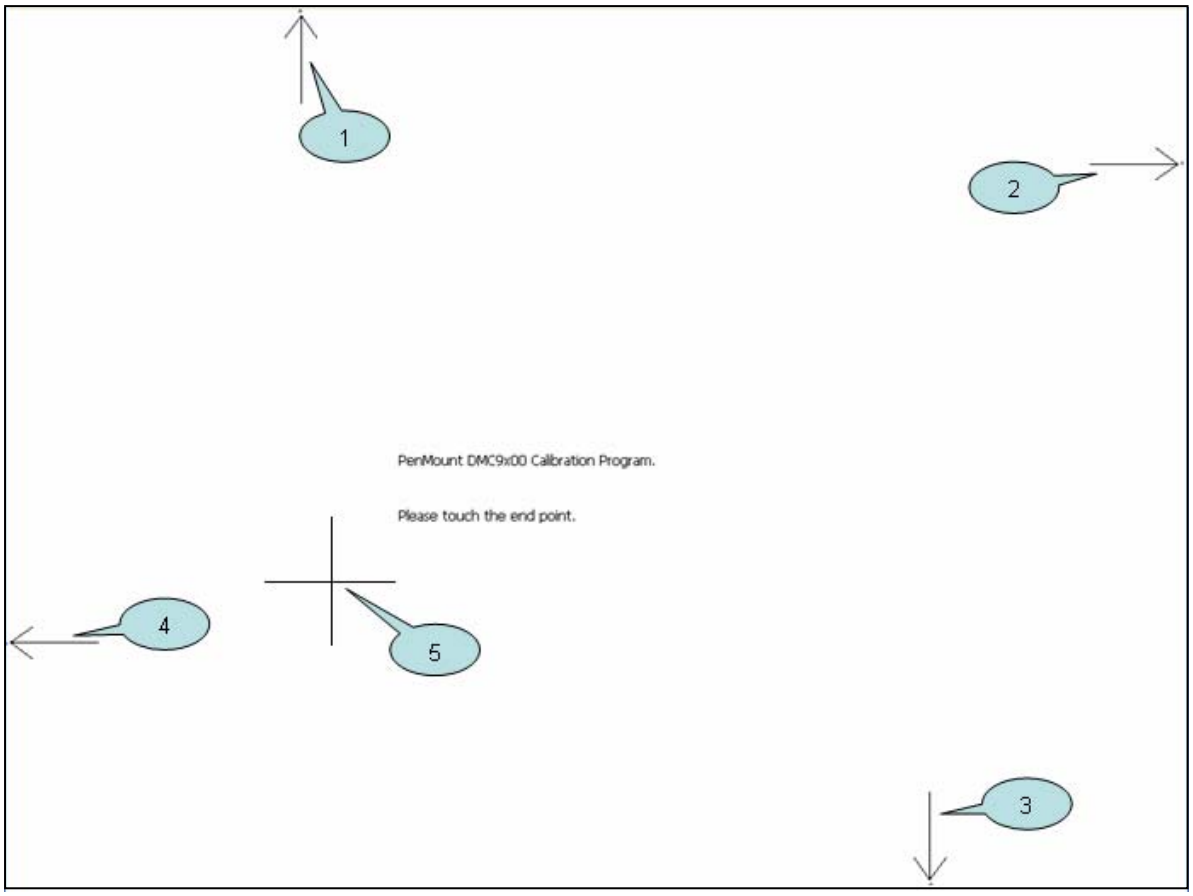

Step 2: Save the settings and reboot your WinPAC.

2.1. Start the Win PAC utility on the desktop and click the "**File**" → "**Save and Reboot**".

2.2. Click the "**Yes**" button and wait for the device to reboot.

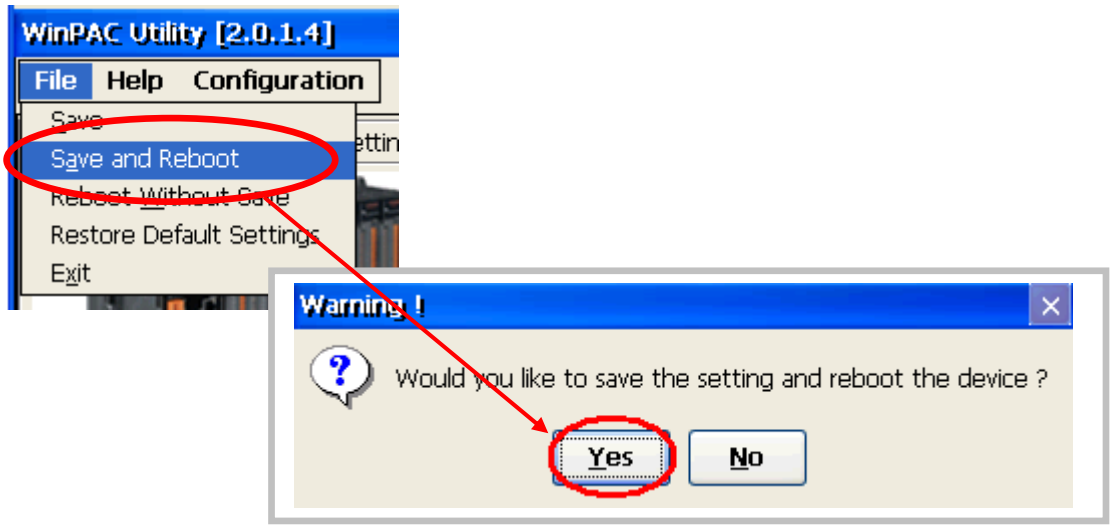

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Date	Description
1.0.1	2013/08/06	NEW: Added support information for WP-5000 series
1.0.0	2010/02/12	Initial release

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000