How to calibrate an Egalax serial touch panel

Applied to:


Platform	*OS version*	*WinPAC/ViewPAC utility version*
WP-8x3x/ WP-8x4x	*All versions*	*All versions*
WP-5000	*All versions*	*All versions*
VP-23W1/ VP-25W1	*N/A*	*N/A*
VP-4131	*N/A*	*N/A*

N/A: Not applicable to this platform and OS.


Tips & Warnings

Serial COM Ports 1 and 4 on WP-8000 are standard female/male RS-232 COM Ports.
*If COM3 is used to connect to the touch panel, you will need a **"NULL MODEM"**.*


Standard Wiring

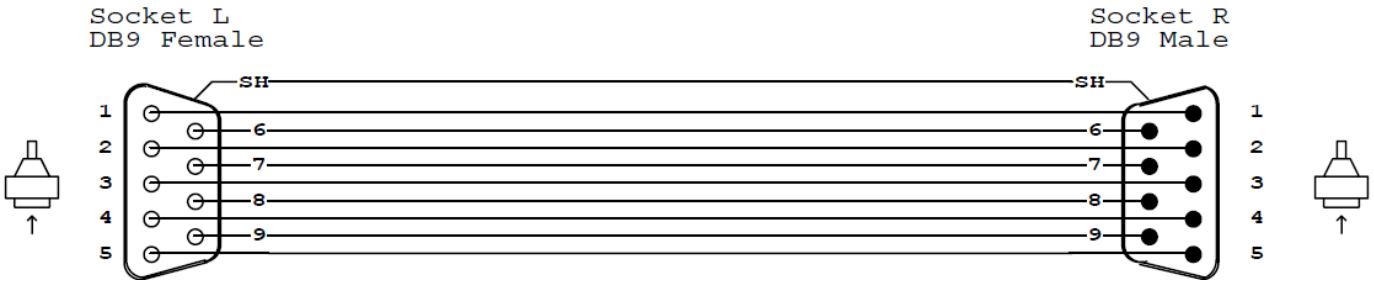

Connecting to COM1

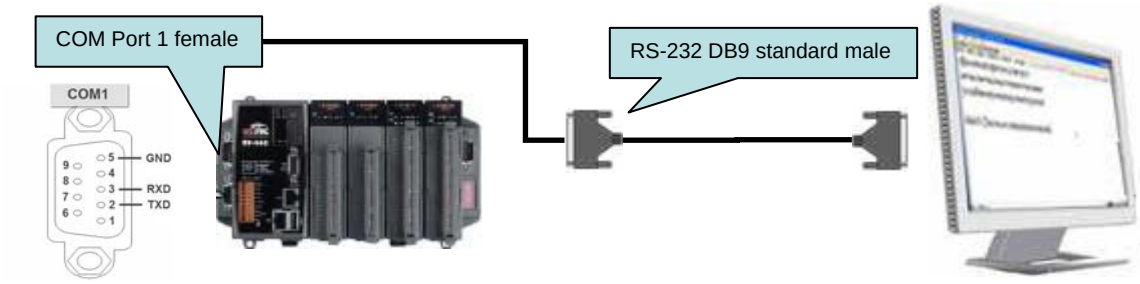


Connecting to COM4

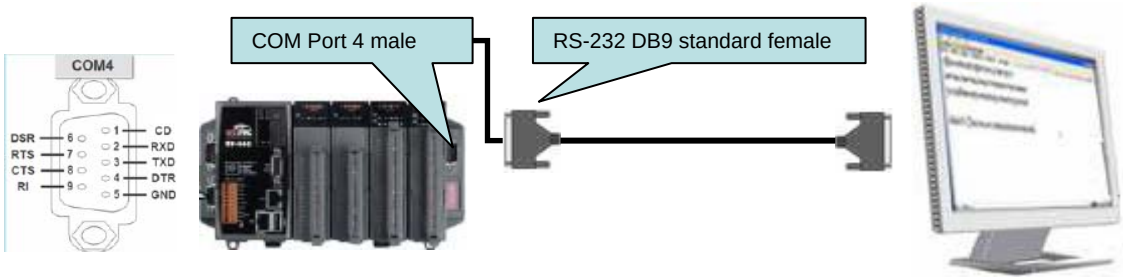

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Connecting to COM3

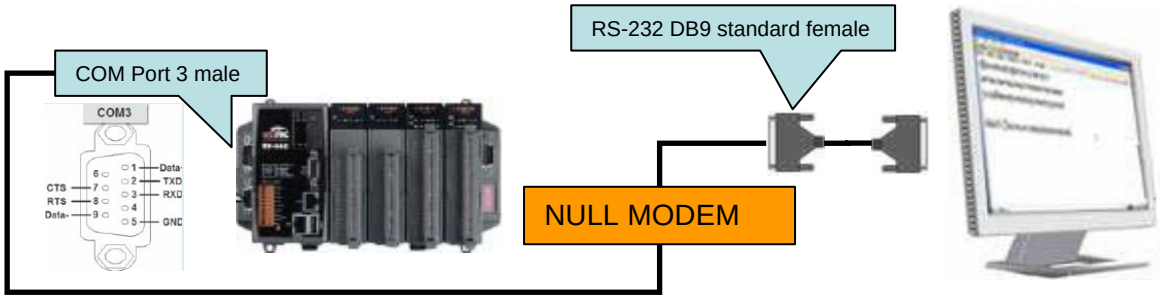

To calibrate an Egalax serial touch panel, please perform the following steps:


Step 1: Execute the calibration program.

1.1. Click Start → Programs → Serial_TOUCH → Egalax → TouchKit.

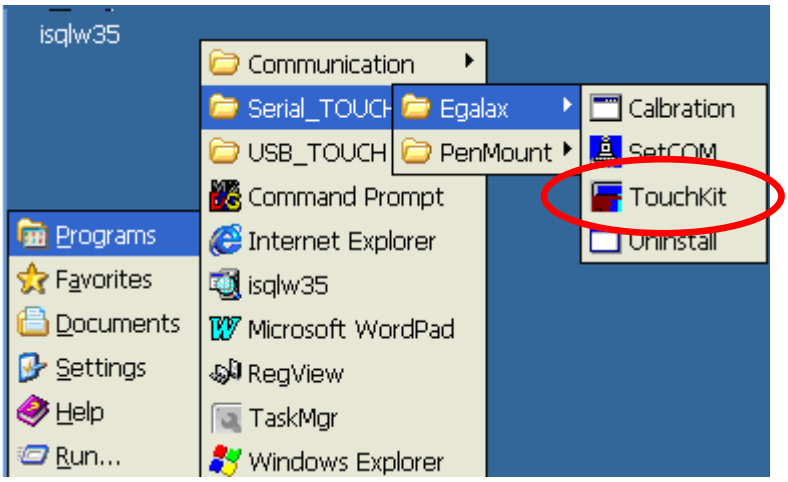


1.2. Click the **"4 Pts Cal**" button.

(Pressing the "25 Pts Cal" button would process more accurate calibration)

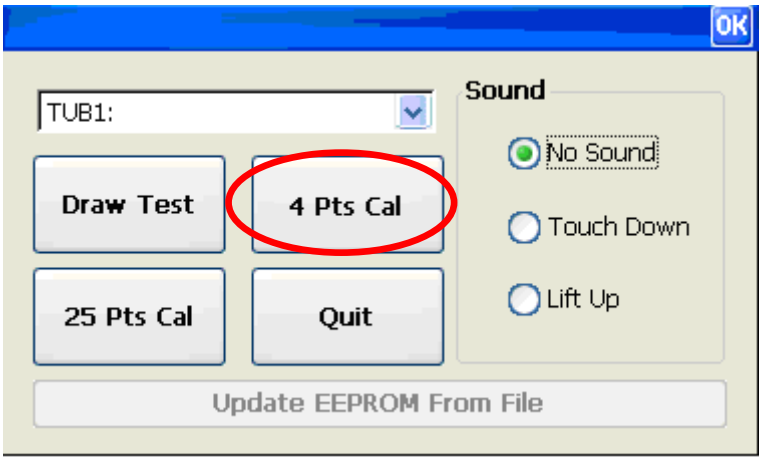

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


1.3. Touch the "**X**" icons on the monitor to perform the calibration process.

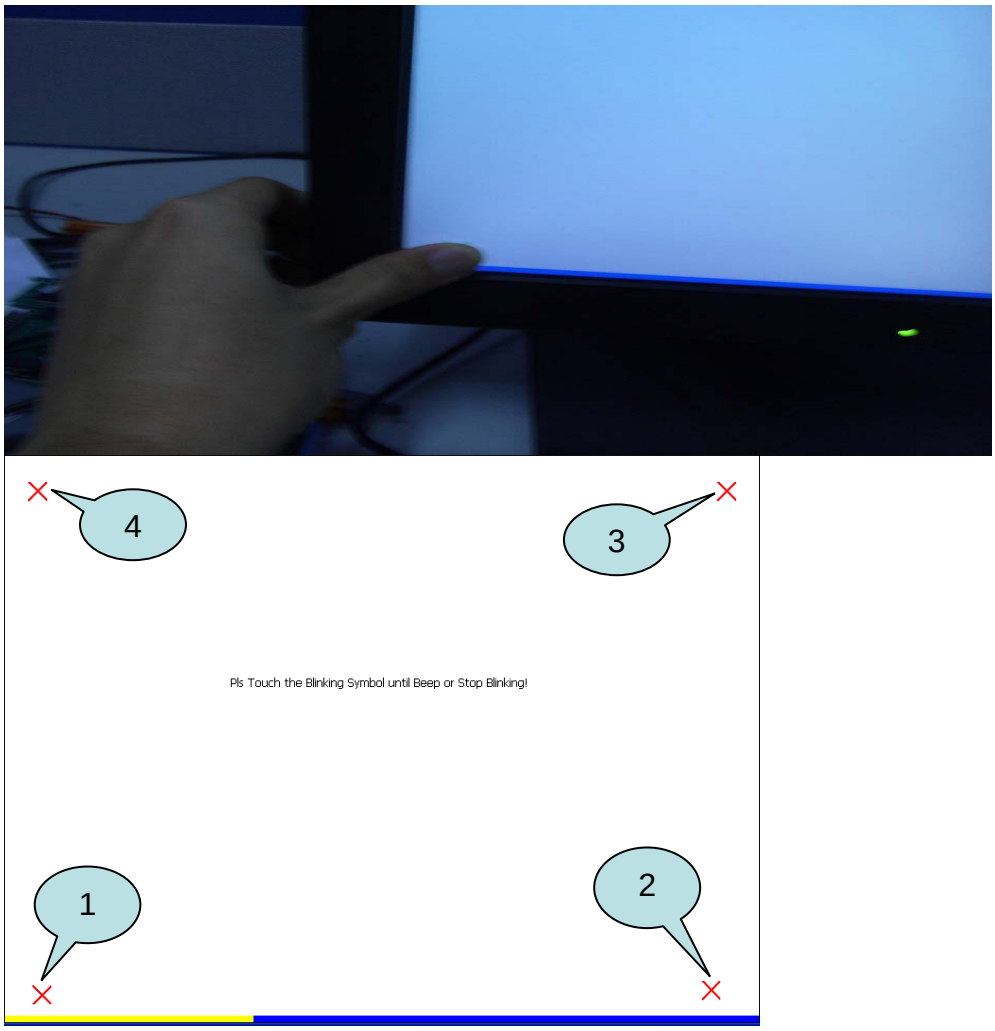

Step 2: Save the settings and reboot your WinPAC.

2.1. Start the WinPAC Utility on the desktop and then click "**File**" → "**Save and Reboot**".

2.2. Click "**Yes**" button and wait for reboot.

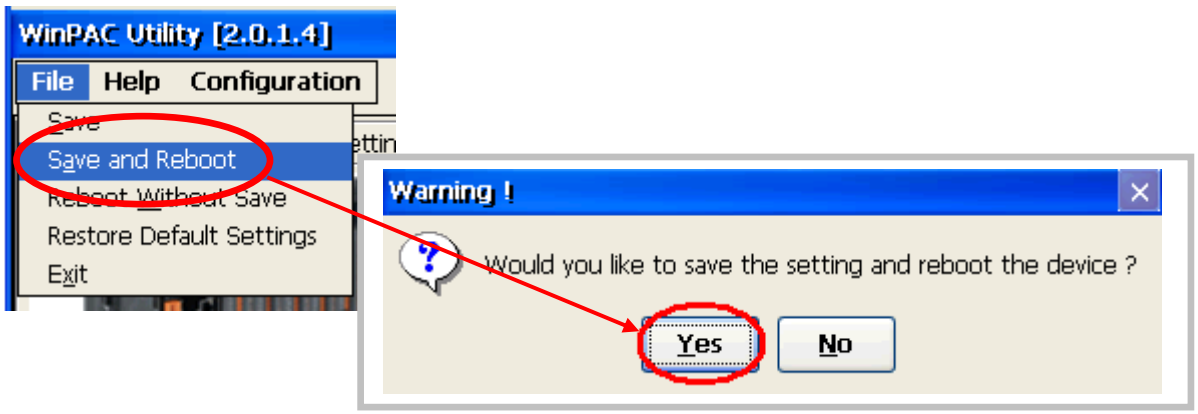

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Date	Description
1.0.1	2013/08/06	NEW: Added support information for WP-5000 series
1.0.0	2010/02/12	Initial release

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000