How to calibrate an Egalax USB touch panel


Applies to:

Platform	*OS version*	*WinPAC/ViewPAC utility version*
WP-8x3x/ WP-8x4x	*All versions*	*All versions*
WP-5000	*All versions*	*All versions*
VP-23W1/ VP-25W1	*N/A*	*N/A*
VP-4131	*N/A*	*N/A*

N/A: *Not applicable to this platform and OS.*

Tips & Warnings

To use a touch panel and a keyboard at the same time on WP-8x4x, you need a USB hub to expand the single USB port into several.

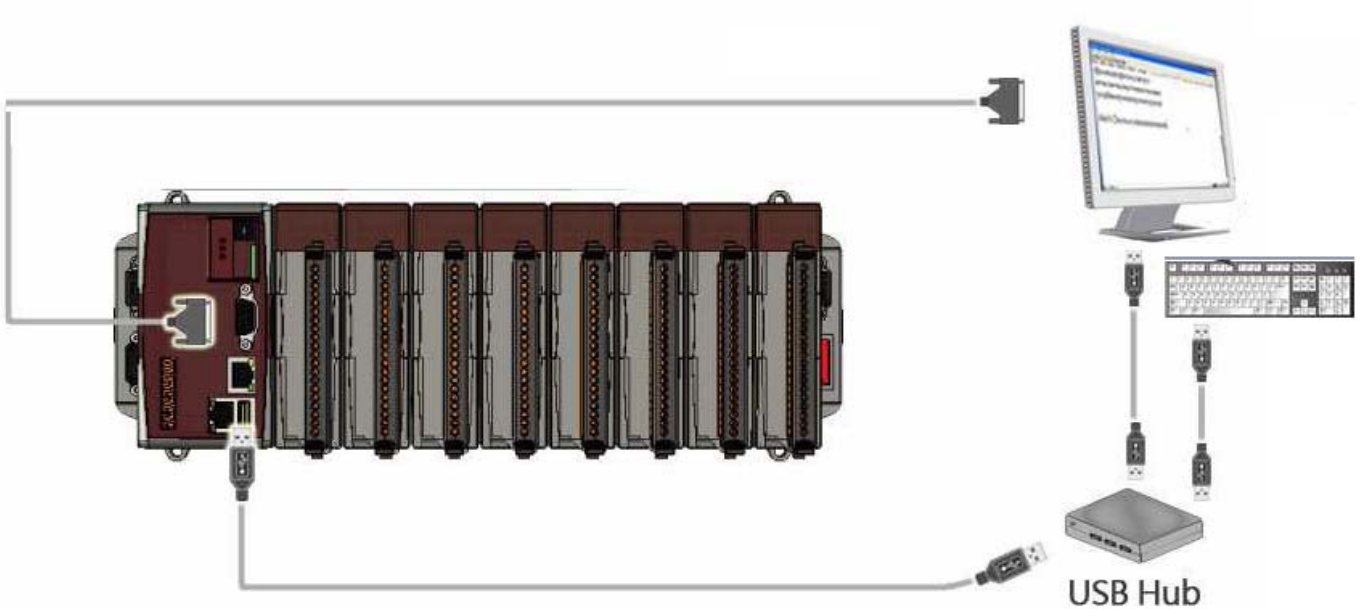


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


To calibrate an Egalax USB touch panel, perform the following steps:

Step 1: Execute the calibration program.

1.1. Click Start → Programs → USB_TOUCH → Egalax → TouchKit.

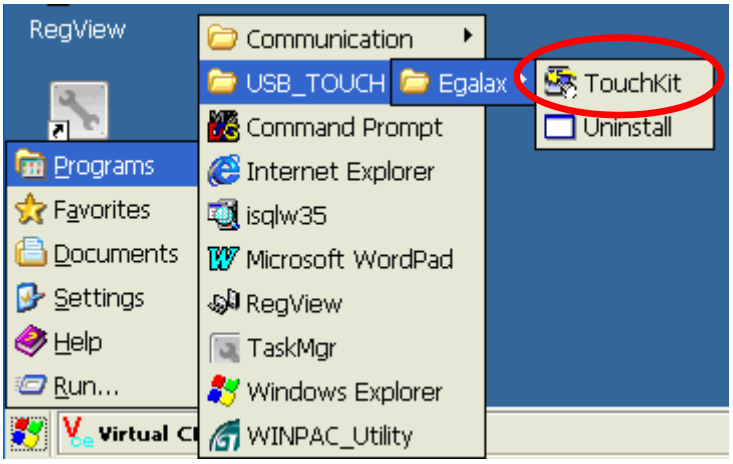


1.2. Click the “4 Pts Cal” button.
(Pressing “25 Pts Cal” button could process a more accurate calibration)

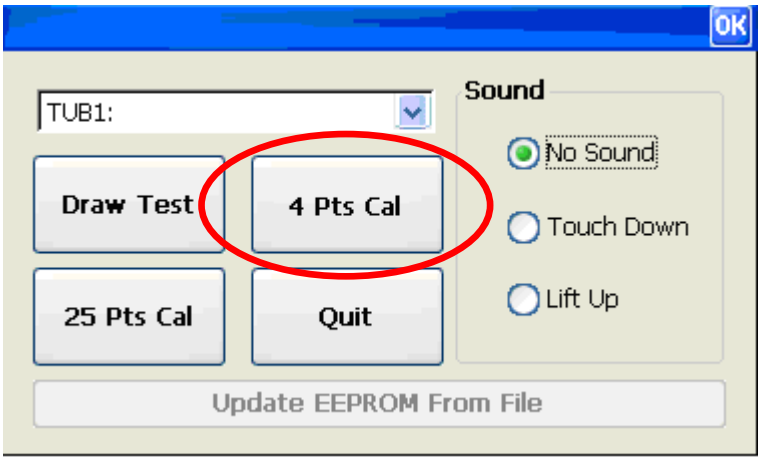

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


1.3. Touch the "**X**" icons on the monitor to perform the calibration process.

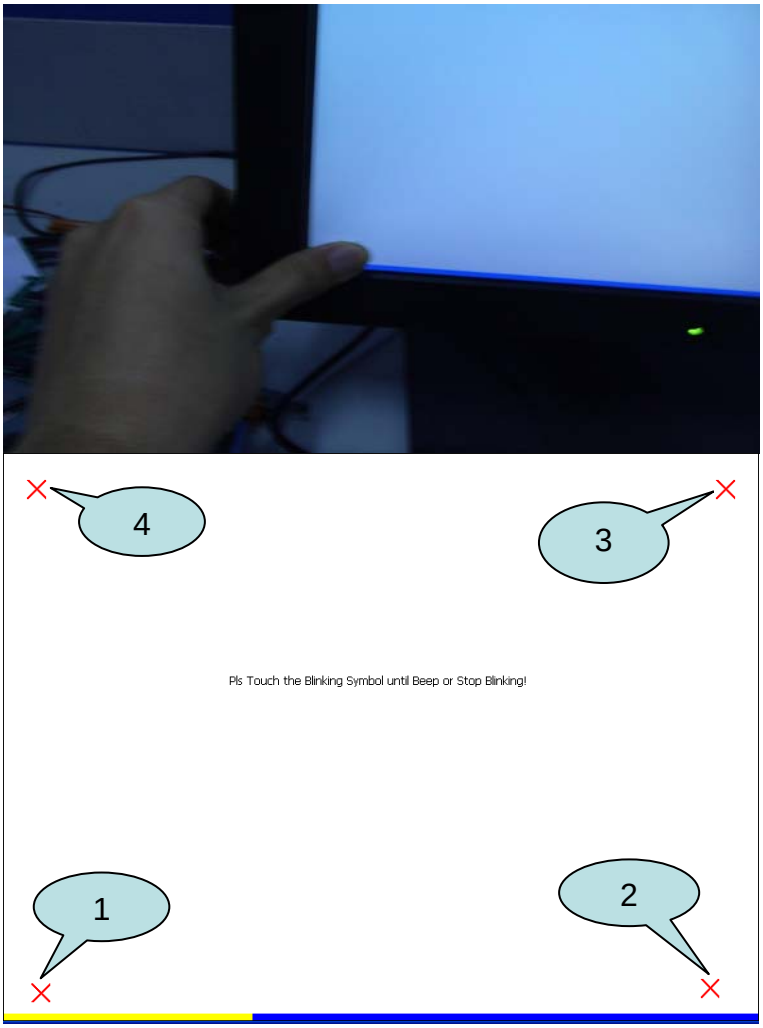

Step 2: Save and Reboot your WinPAC.

2.1. Start the Win PAC utility on the desktop and click the "**File**" → "**Save and Reboot**".

2.2. Click the "**Yes**" button and wait for reboot.

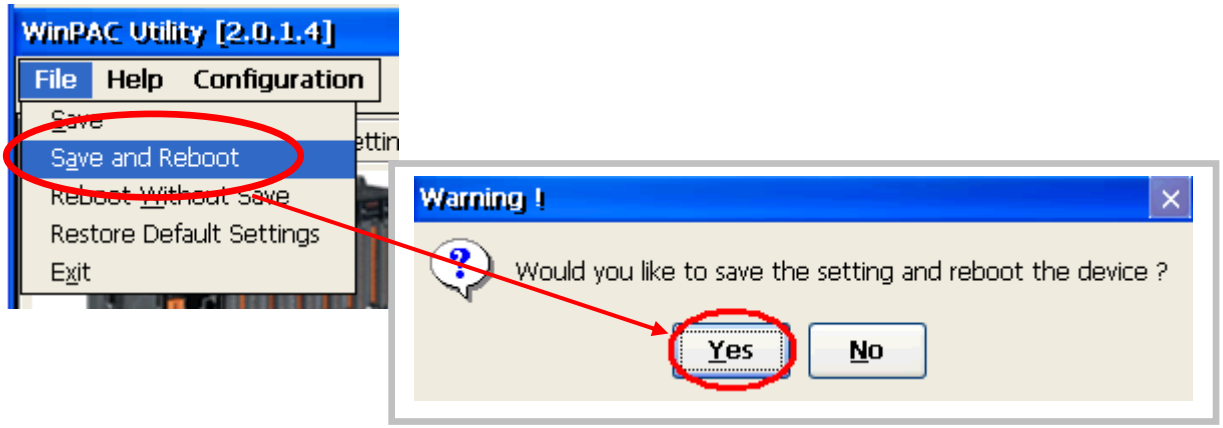

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Date	Description
1.0.1	2013/08/06	NEW: Added support information for WP-5000 series
1.0.0	2010/02/12	Initial release

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000