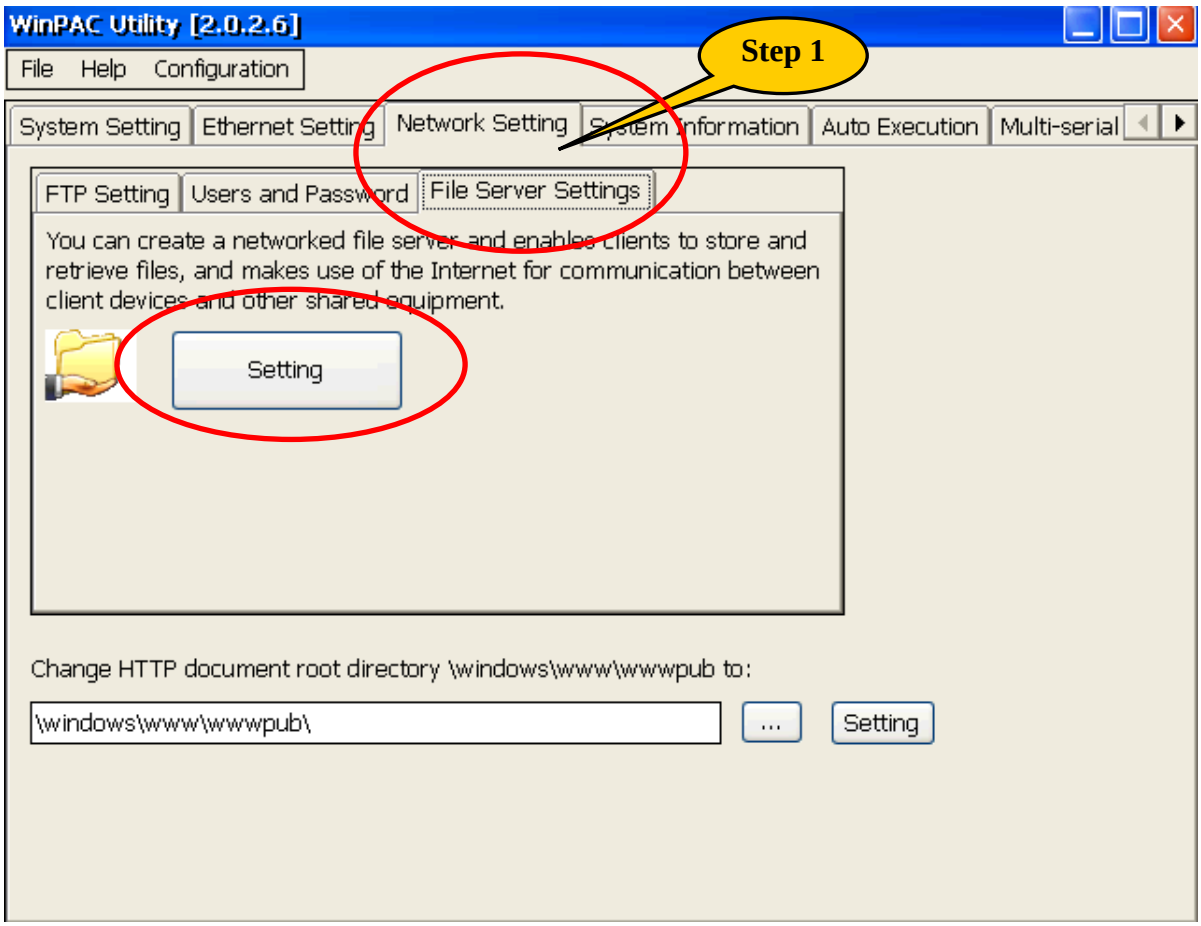
# How to configure the SMB File Server

*Applies to:*

| *Platform* | *OS version* | *WinPAC/ViewPAC utility version* |
|---|---|---|
| *WP-8x4x* | *V 1.6.0.1 and later* | *V2.0.2.5 and later* |
| *WP-8x3x* | *V1.3.0.0 and later* | |
| *WP-5000* | *V1.1.1.0 and later* | |
| *VP-25Wx* | *V2.2.0.0 and later* | |
| *VP-23Wx* | *V2.2.0.0 and later* | |
| *VP-413x* | *V2.4.1.0 and later* | |

Please use the version 2.0.2.5 and later of the WinPAC Utility (ViewPAC Utility) to configure the SMB File Server and perform the follow steps:

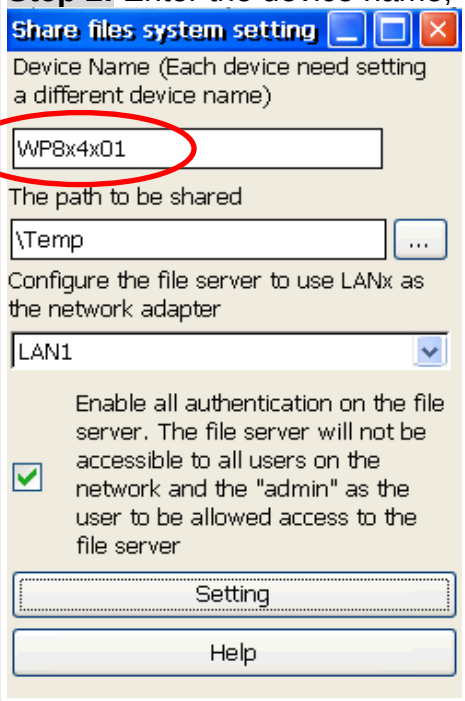
**Step 1:** Execute the WinPAC Utility, chick the Setting button on the File Server Settings tab on the Network Setting tab.





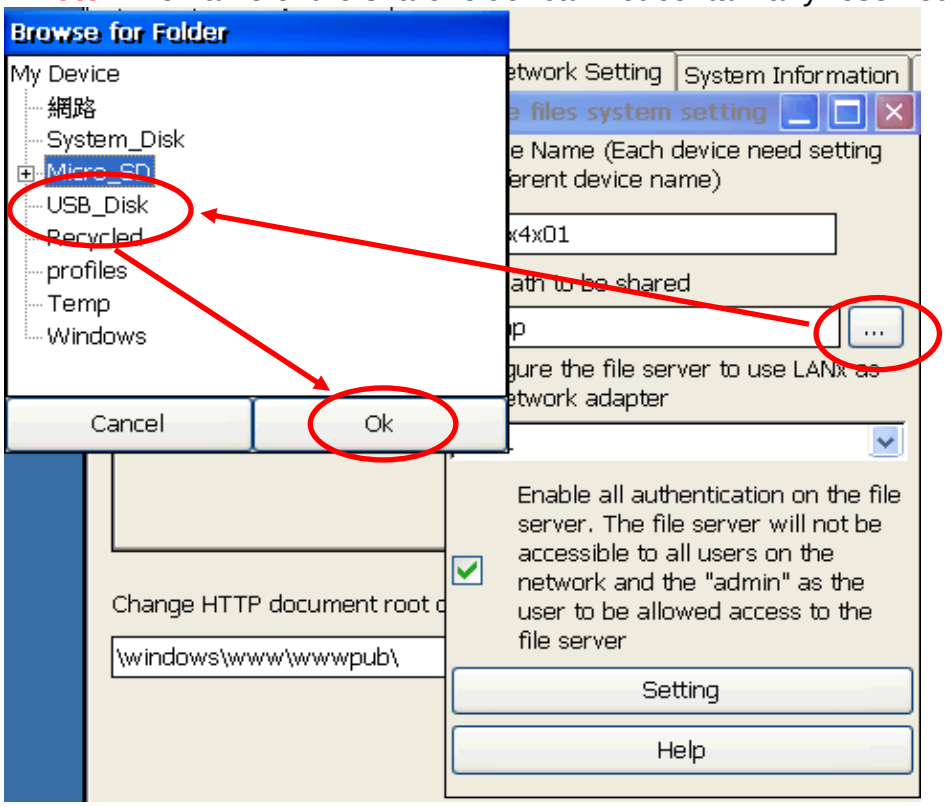

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

**Step 2:** Enter the device name, ensure that the name for each device is different.




**Step 3:** Specify the share folder then click OK.

**Note:** The name of the share folder can not contain any reserved characters.

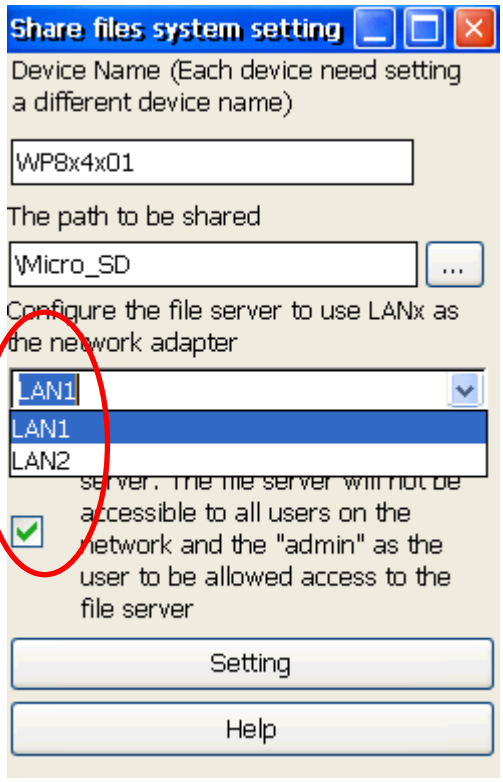




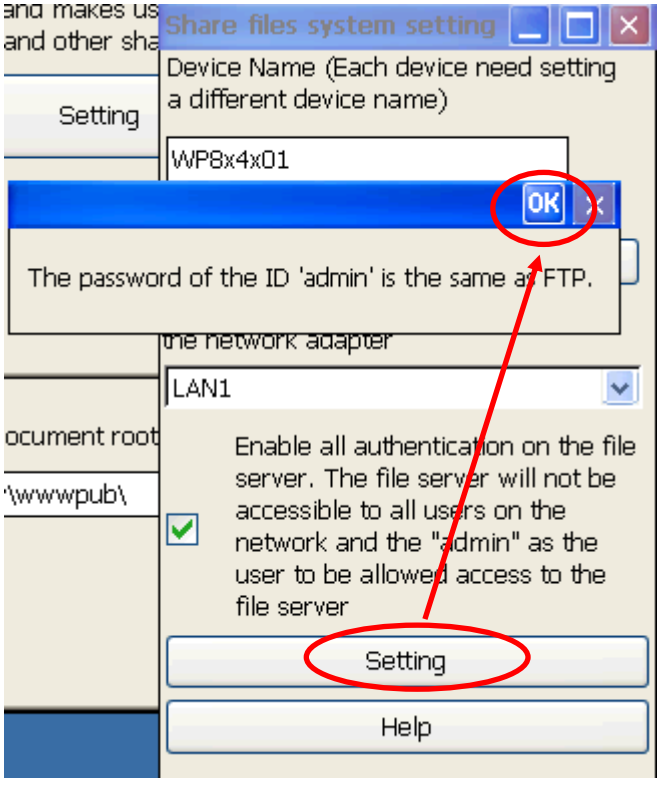

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

**Step 5:** Choose the LAN adapter for connecting to the File Server. Uncheck the checkbox will allow all users to connect to the file server.

**Note:** The file server uses the same ID and password with the FTP server.



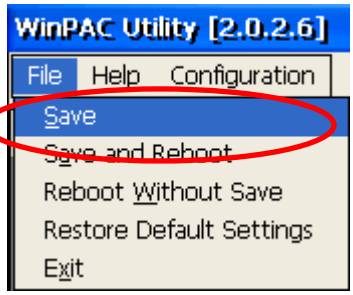

**Step 6:** Click the ”Setting” button and then press OK.






Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

**Step 7:** Select the “File“ -> “Save”.




**Step 8:** On the PC or other device, enter the “IP address“ for the LAN set in step5 or “\\“ + device name set in step 2 (e.g., \\WP8x4x01) in the address bar and press Enter, then enter the ID and password to connect to the file server.

**Note:** If you can not use the “IP address” to connect with the file server, you can use the “\\device name” to connect to the file server.






Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

## Revision History

| Revision | Date | Description |
|---|---|---|
| 1.0.0 | 2013/05/16 | Initial release |
| | | |
| | | |



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000