
How to get the operating frequency of CPU

Applies to:


Platform	***OS version***	***WinPAC/ViewPAC utility version***
WinPAC series	*All versions (WinCE5)*	*All versions*
ViewPAC series	*All versions (WinCE5)*	*All versions*

Please perform the follow steps to get the CPU frequency of WinPAC/ViewPAC.

Step1: Click Start ->Settings -> Control Panel, and then double click the icon for system

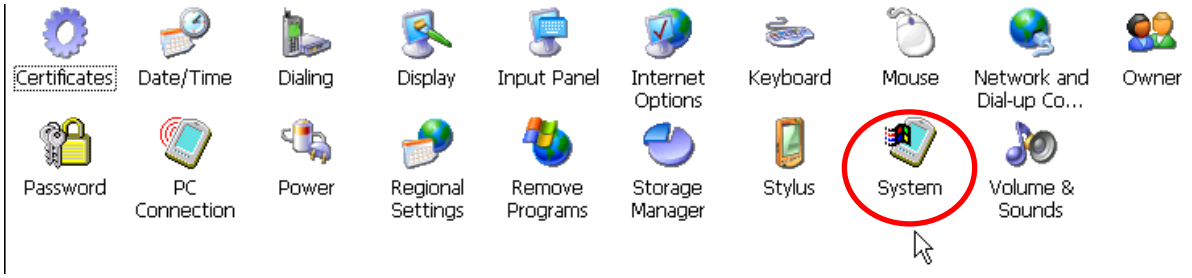

Step2: Get the CPU frequency shown in the Processor column on the General tab.

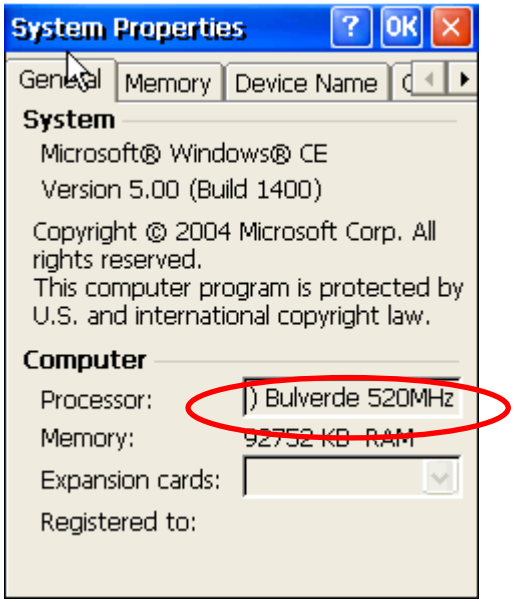

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Date	Description
1.0.0	2013/05/16	Initial release

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000