
How to set up a printer on LAN

Applies to:

Platform	*OS version*	*WinPAC/ViewPAC utility version*
WP-8x3x/ WP-8x4x	*All versions*	*All versions*
WP-5000	*All versions*	*All versions*
VP-23W1/ VP-25W1	*All versions*	*All versions*
VP-4131	*All versions*	*All versions*


Tips & Warnings

A shared printer added using the "local printer attached to this computer" option is only used for WinPAC/ViewPAC via the network.

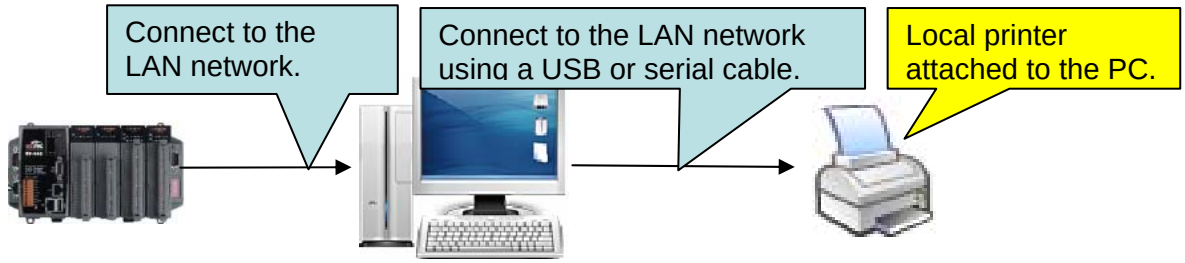

*Selecting "**Local printer attached to the PC**" in this diagram means a printer (local printer or network printer) that is setting "Local printer attached to this computer" on PC, as show below.*


*The WinPAC/ViewPAC series **doesn't support** a printer which is set up with the second option: "A network print or a printer attached to another computer" option.*

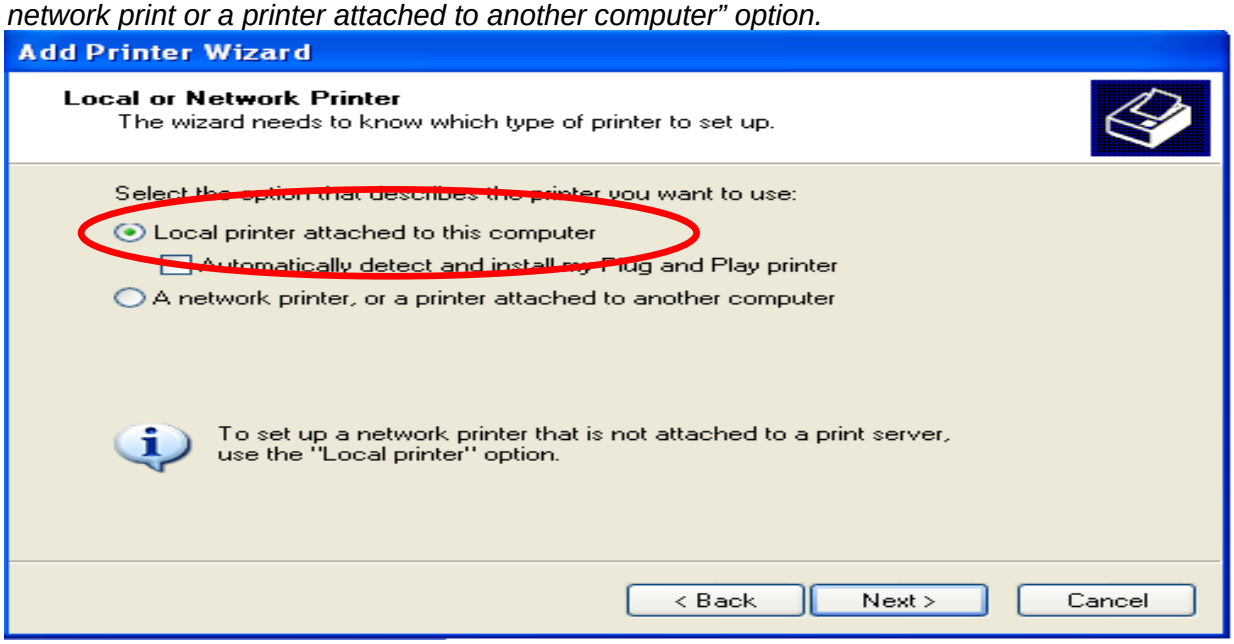

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


To use a shared printer, perform the following steps:

Step 1: On the Host PC**,** check the names of the Host PC and the shared printer.

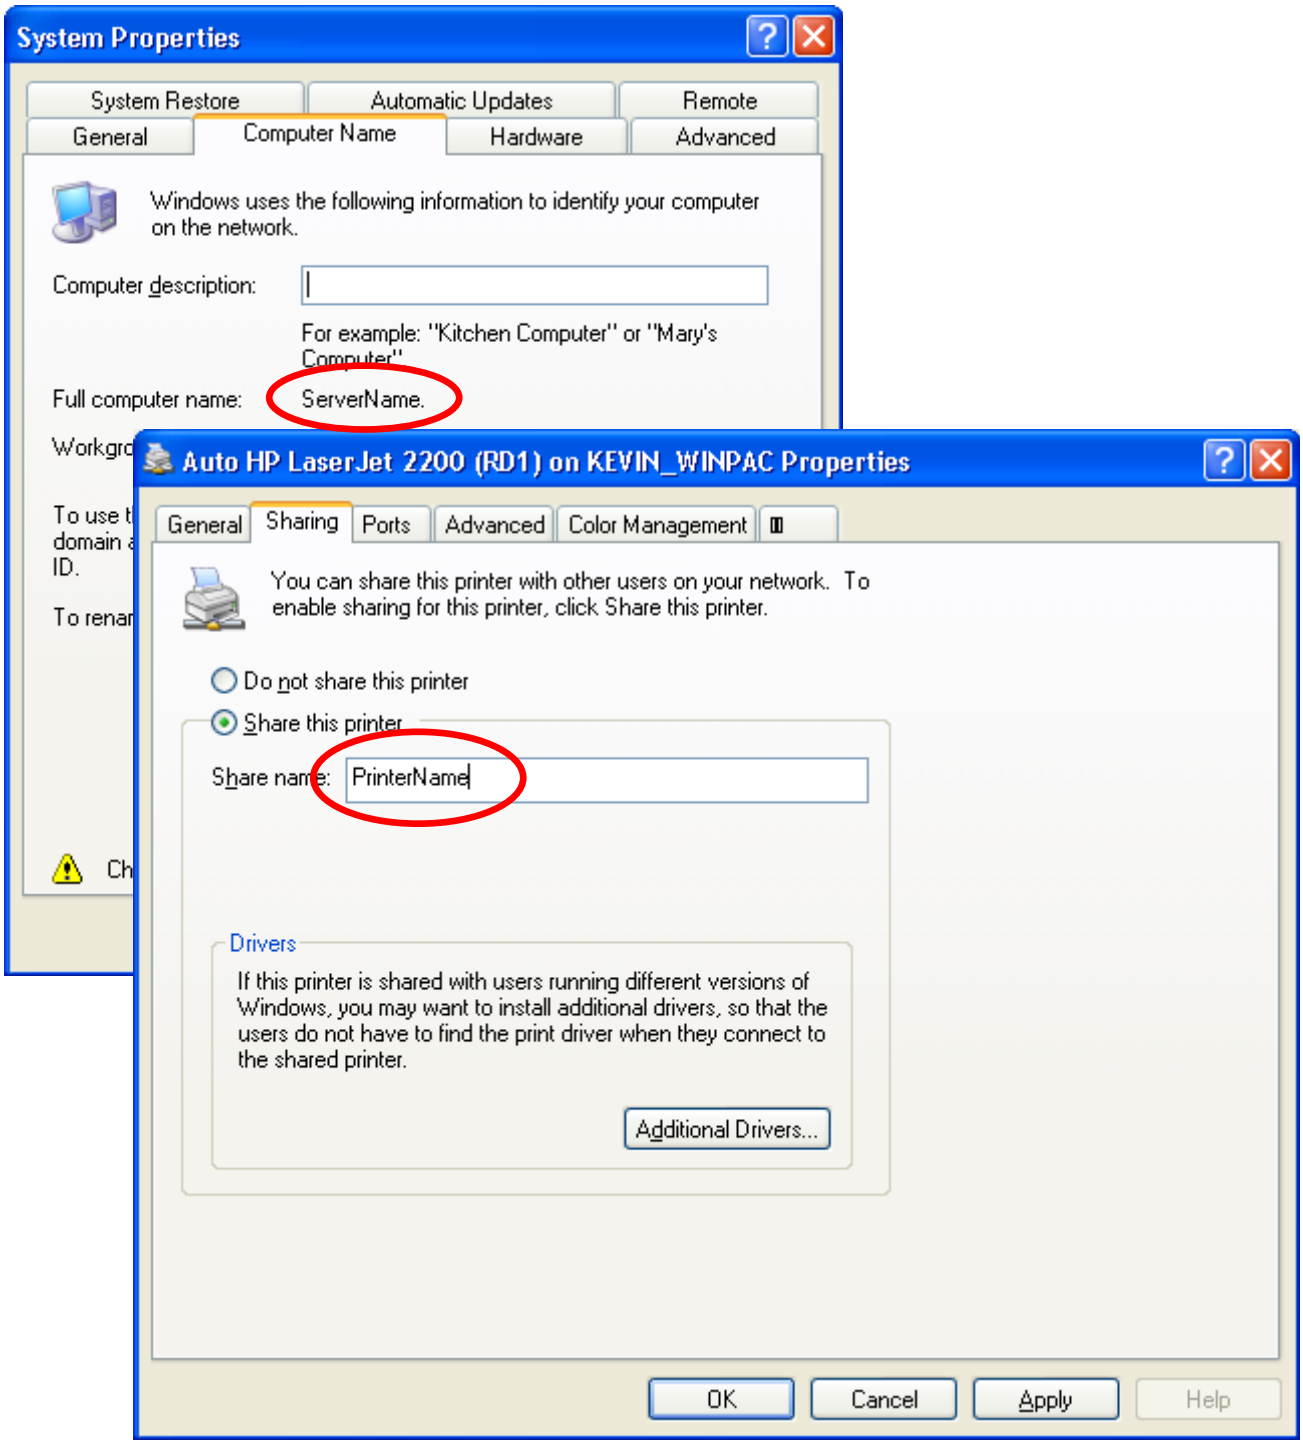


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2: On the WinPAC/ViewPAC, open a WordPad format file (*.txt,*.ini…) and click the "**File**" → "**Print**".

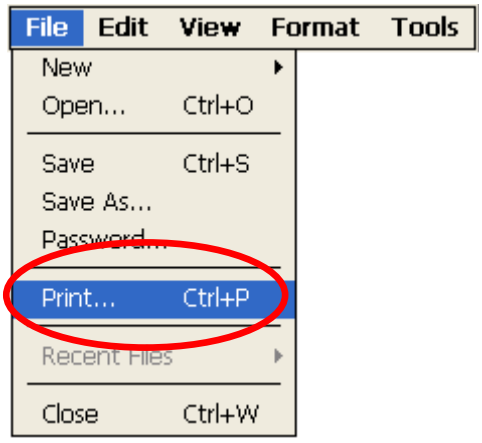

Step 3: Set up the printer as following.

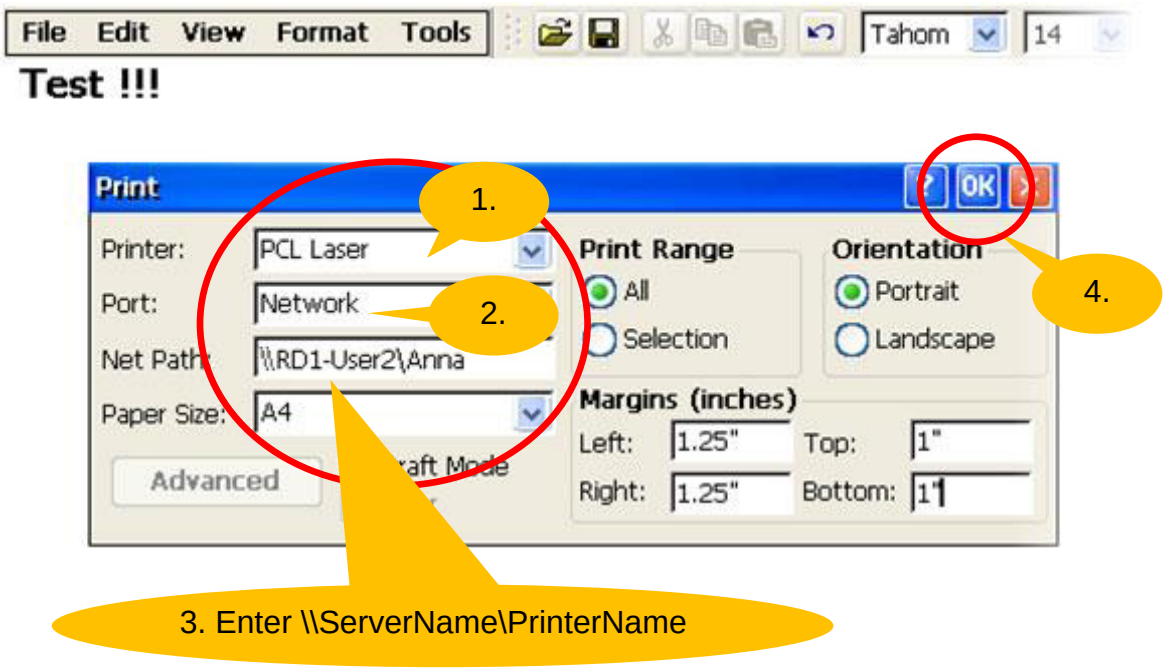

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Date	Description
1.0.1	2013/10/12	NEW: Added support for WP-5000 series and VP-4131
1.0.0	2010/02/12	Initial release

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000