How to set up a USB printer

Applies to:

Platform	*OS version*	*WinPAC/ViewPAC utility version*
WP-8x3x/ WP-8x4x	*All versions*	*All versions*
WP-5000	*All versions*	*All versions*
VP-23W1/ VP-25W1	*All versions*	*All versions*
VP-4131	*All versions*	*All versions*


Tips & Warnings

WinPAC/ViewPAC only supports HP Laser Jet Printers that support the PCL6 driver




To use a printer via USB, perform the following steps:

Step 1: On the WinPAC/ViewPAC, open a WordPad format file (*.txt,*.ini…) and click the "**File**" → "**Print**". (or Ctrl + P)

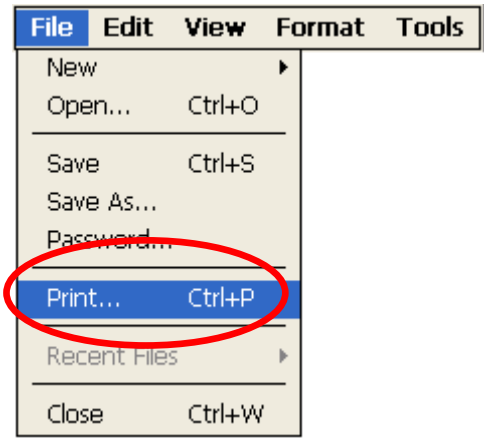

Step 2: Set up the printer as following.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

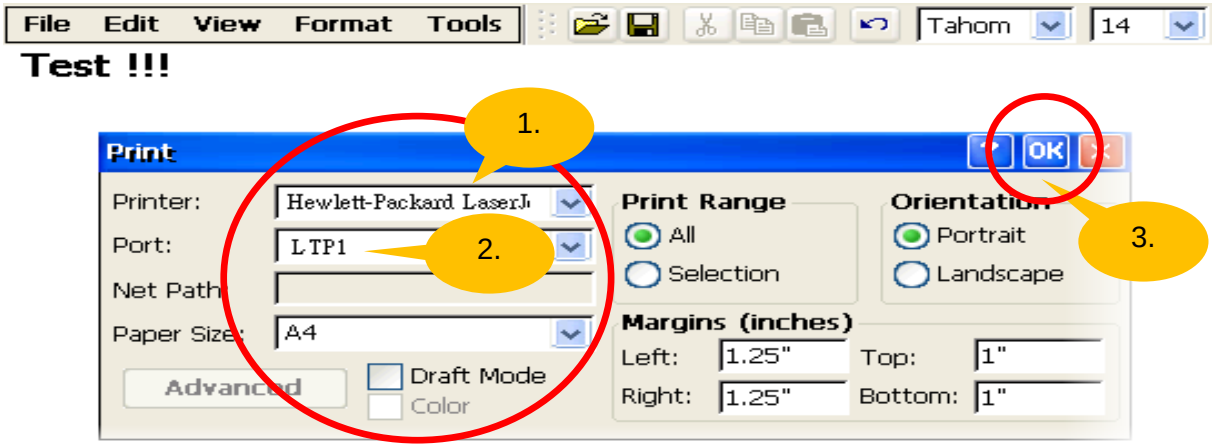

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Date	Description
1.0.1	2013/10/12	NEW: Added support for WP-5000 series and VP-4131
1.0.0	2010/02/12	Initial release

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000