How to use the Console port

Applies to:


Platform	*OS version*	*WinPAC/ViewPAC utility version*
WP-8x3x	*V1.3.0.0 and later*	*V2.0.2.5 and later*
WP-8x4x	*V1.6.0.1 and later*	
WP-5000	*V1.1.1.0 and later*	
VP-23Wx/ VP-25Wx	*V2.2.0.0 and later*	
VP-413x	*V2.4.1.0 and later*	

The console port can be used to control the WinPAC/ ViewPAC or execute a program.

Please perform the follow steps to use the console port:


Connect to the PC

Step 1: Connect the WinPAC/ViewPAC (COM3) and the PC using an RS232 cable.

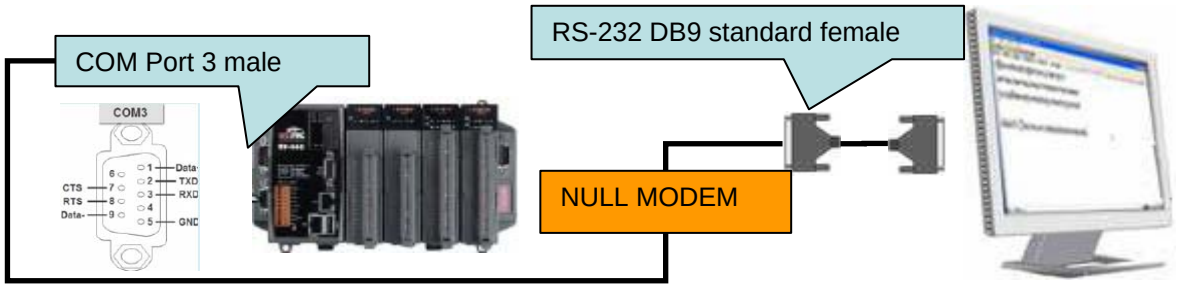


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2: On the PC side, execute HyperTerminal (Start->All Programs->Accessories-> Communications->HyperTerminal), and configure the settings as bellow.

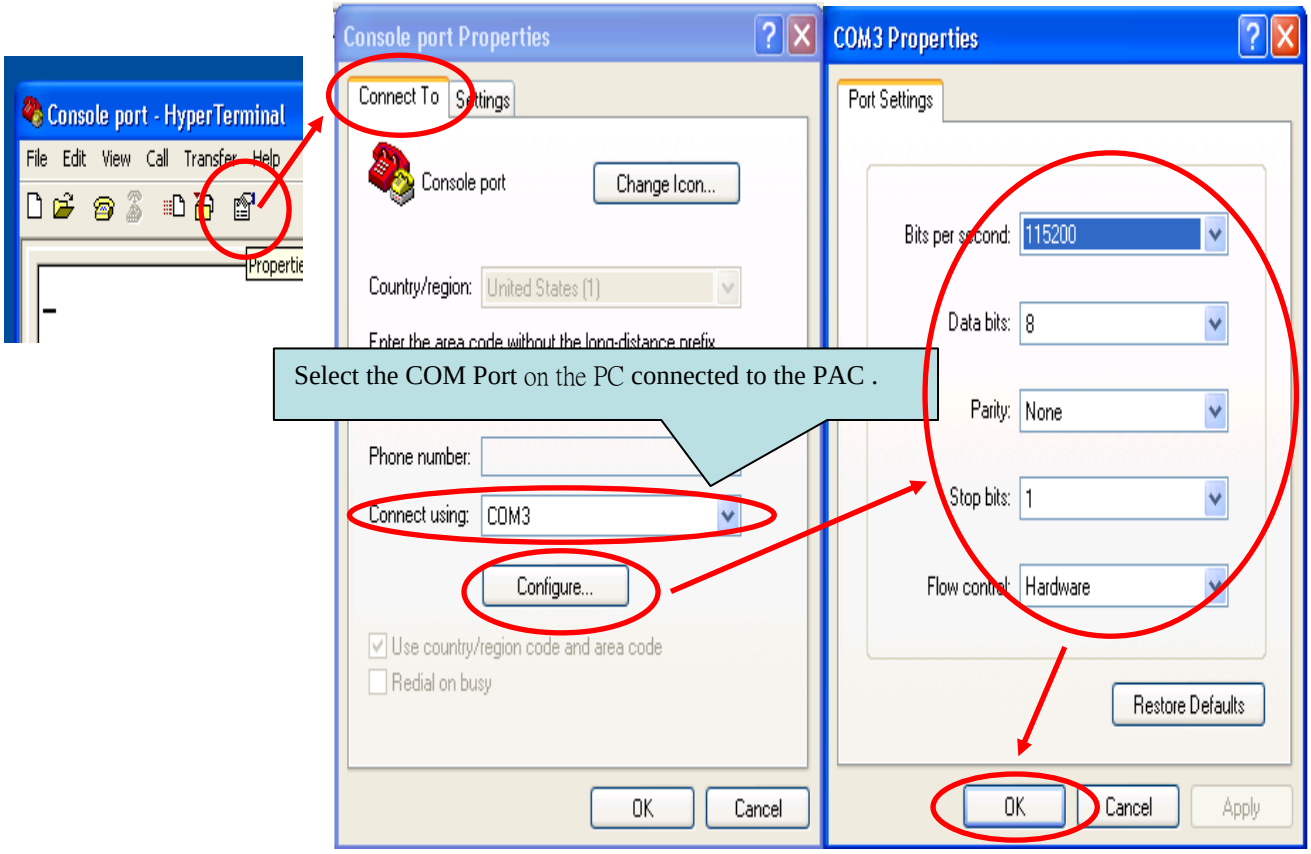


Step 3: Turn the Rotary switch to 1 to boot the PAC controller at safe mode. The following message displayed in the HyperTerminal window on PC means that the connection is established, and you may key in your command to control the PAC controller.

3.1.

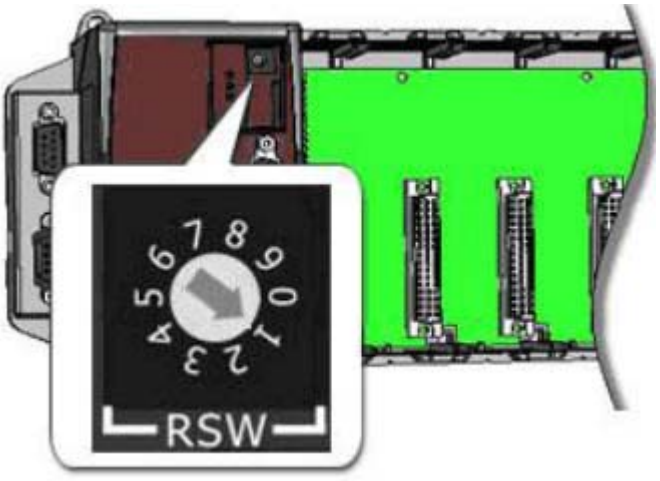

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.2.

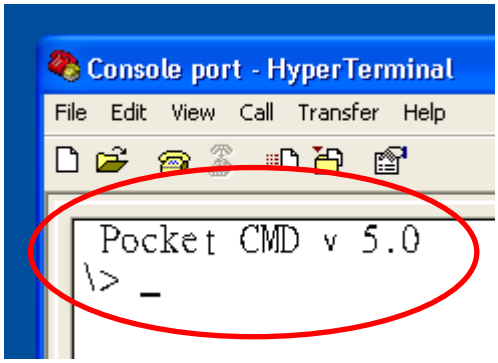

Note: The operation of the Console port is the same with the CMD.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Date	Description
1.0.0	2013/05/16	Initial release

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000