How to change the display type for XPAC when the display settings on the current monitor out of range

Applies to:


Platform	*OS version*	*XPAC utility version*
XPAC series	*All versions (WinCE6)*	*All versions*

N/A: *Not applicable to this platform and OS.*

The default display resolution of XPAC is “1024*768”. If the settings on your monitor are out of range, you are still able to change the display resolution for the XPAC by performing the following steps:

Step 1: Use the remote desktop tool (cerdisp) to connect to your XPAC on the host PC.
(For more details about cerdisp, please refer to the document “X2-16_how_to_use_the_remote_desktop_tool_cerhost_en.pdf”)

1.1. Reboot your XPAC in boot mode “9”. The cerdisp.exe file will auto execute

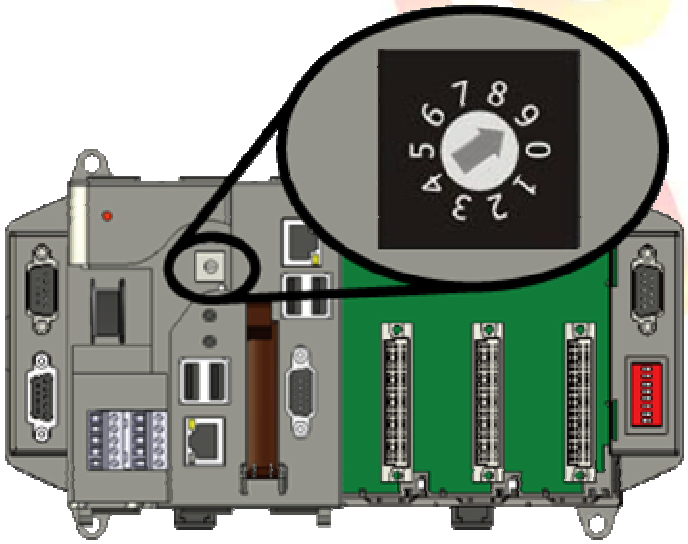


1.2. Download the cerhost.exe to the host PC.

1. CD:\pc_tools\Remote_Display\
2. ftp://ftp.icpdas.com/pub/cd/xp-8000-ce6/pc_tools/remote_display/ (XP-8000-CE6)
   ftp://ftp.icpdas.com/pub/cd/xpac-atom-ce6/pc_tools/remote_display/ (XP-8000-Atom-CE6)


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.3. Execute cerhost.exe on host PC, if the connection is established successfully, you will see your XPAC Desktop will be displayed.

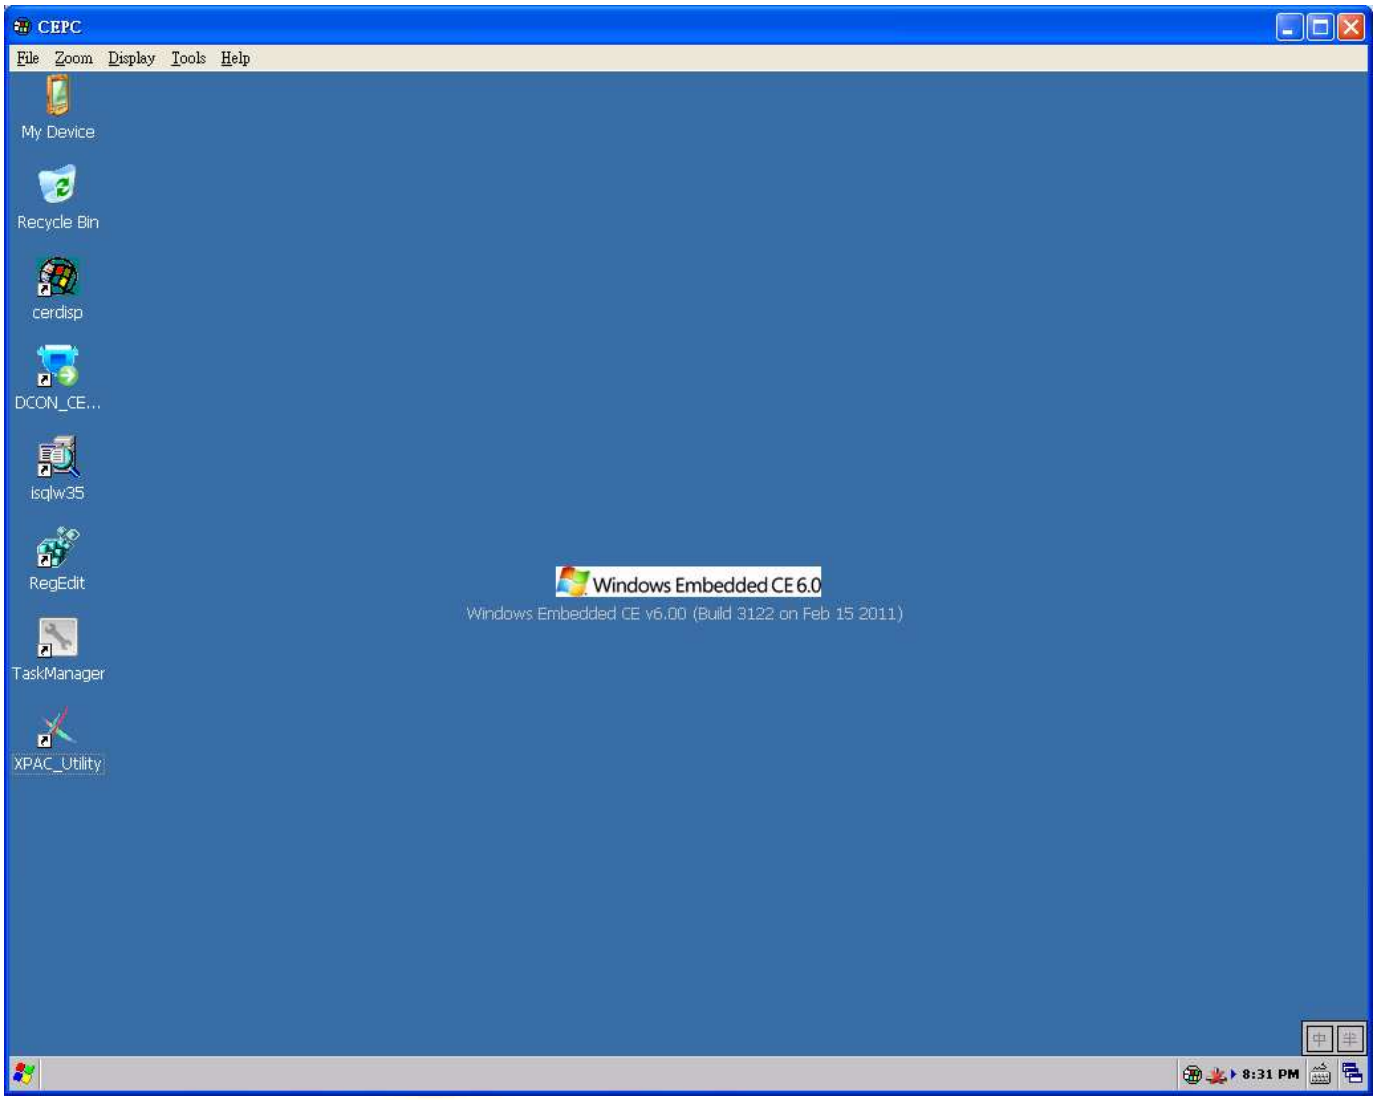

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2: Change the display resolution using the XPAC utility.
2.1. Start the XPAC Utility on the desktop and select the display resolution for"1024*768".

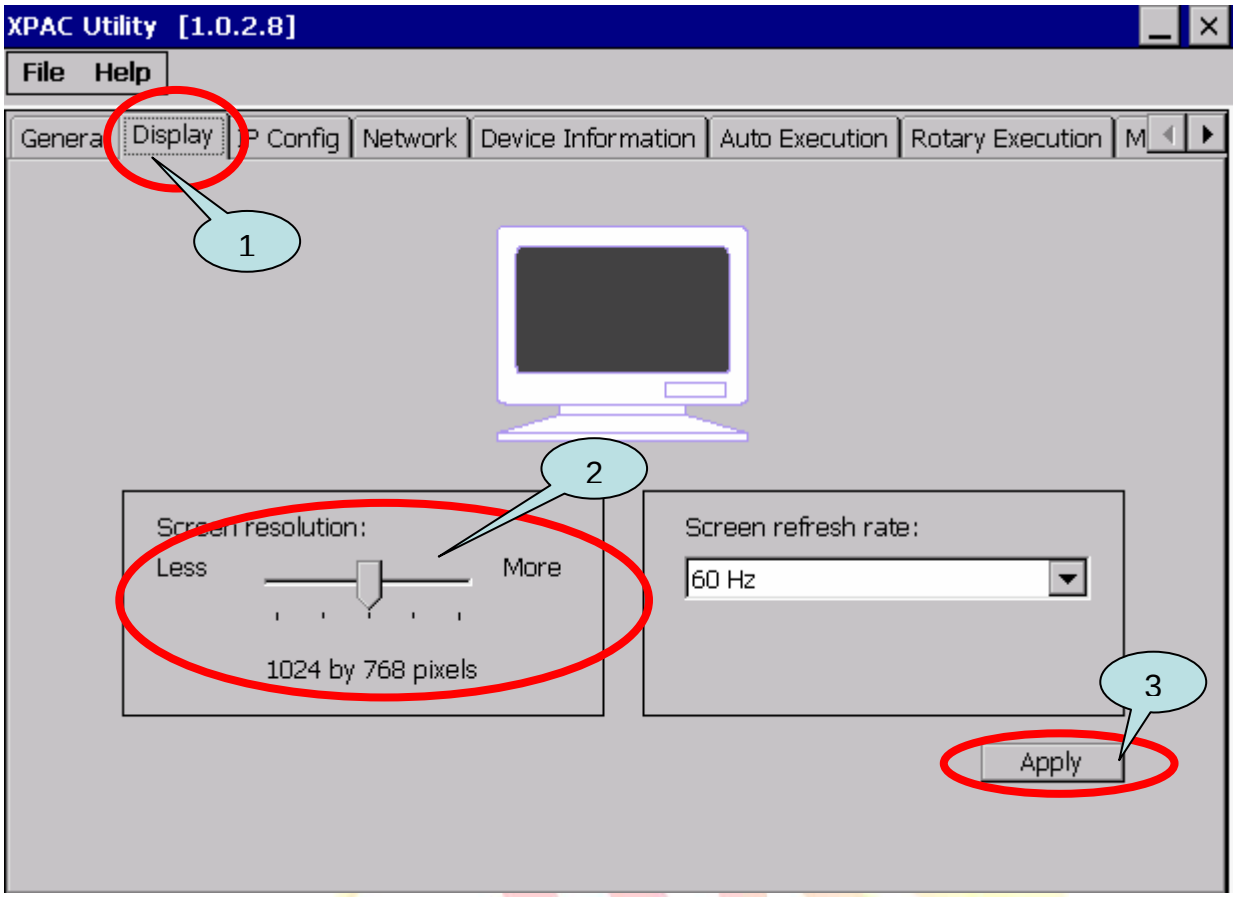

Step 3: Reboot your XPAC.

Tips & Warnings

If the monitor is still unable to display correcting, please contact ICPDAS.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000