
How to change the input Panel size

Applies to:


Platform	*OS version*	*XPAC utility version*
XPAC series	*All versions (WinCE6)*	*All versions*

To change the Input Panel size, perform the following steps:

Step 1: Choose the Control Panel. Now the Panel size is large.

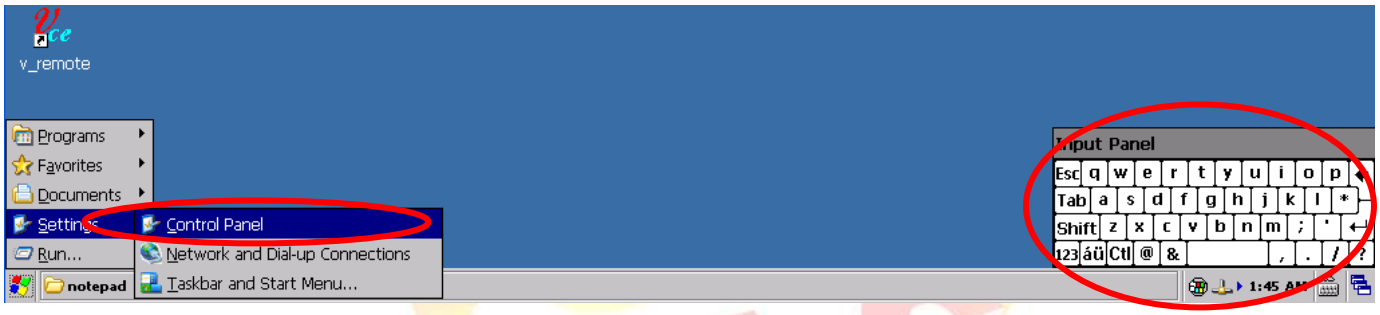


Step 2: Choose the Input Panel.

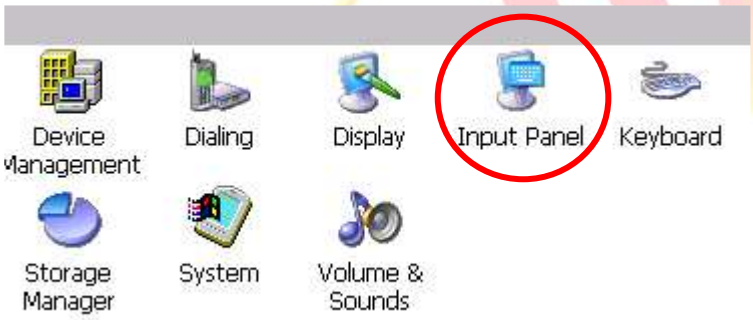


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 3: Click the “Options” button.

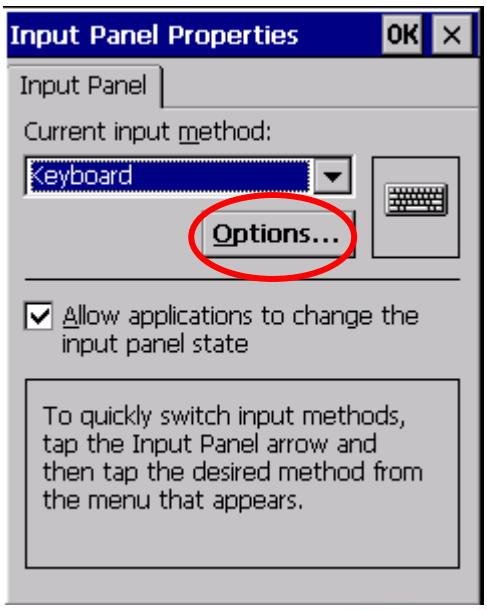


Step 4: Select Small keys and then click the “OK” button.

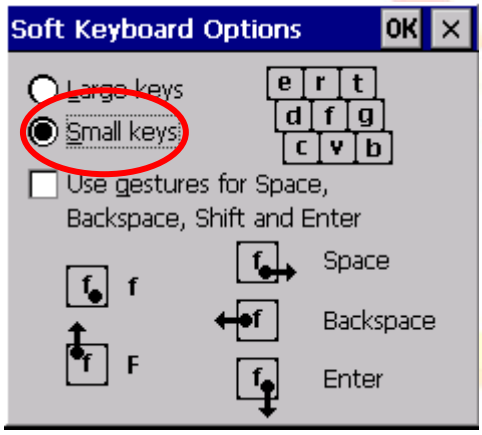

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 5: After performing steps 1 to 4, you will see the size of the input panel will become small.

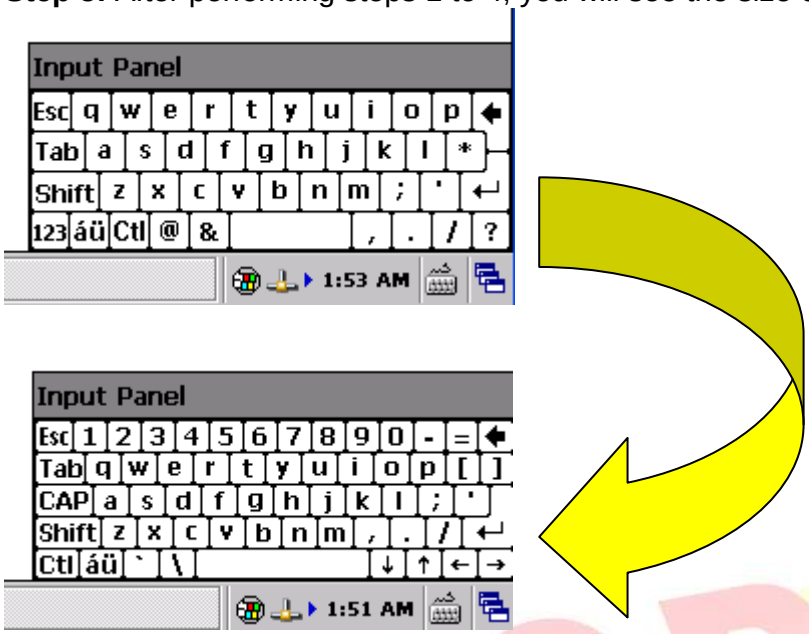

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000