How to set up a printer via USB

Applies to:

Platform	*OS Version*	*XPAC Utility Version*
XPAC Series	*All Versions (WinCE6)*	*All Versions*

Tips & Warnings

XPAC only operates with HP Laser Jet Printers that support the PCL6 driver.



HP provides driver support for the following printers

- HP LaserJet 4000 series/HP LaserJet 4100 series
- HP LaserJet 2100 series/HP LaserJet 2200 series
- HP LaserJet 1200
- HP LaserJet 3200/HP LaserJet 3300
- HP LaserJet 4200 series/HP LaserJet 4300 series
- HP LaserJet 5000 series/HP LaserJet 5100 series
- HP LaserJet 8000 series
- HP LaserJet 9000 series printers


For the latest drivers for HP PCL6 printers, refer to the following:

http://h20000.www2.hp.com/bizsupport/TechSupport/Document.jsp?objectID=bpl04568


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

To use a printer via USB, follow the steps below:

1: On the XPAC, execute INotepad from the "/System_Disk/tool/INotepad" folder.

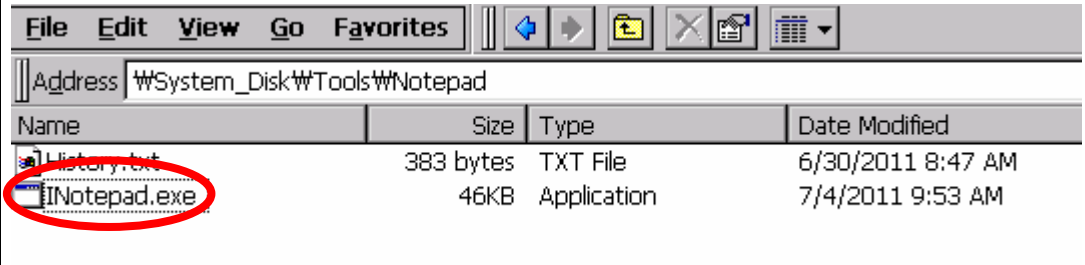

2: Click "**File**" → "**Open**" and open a text file, then click the "OK" button.

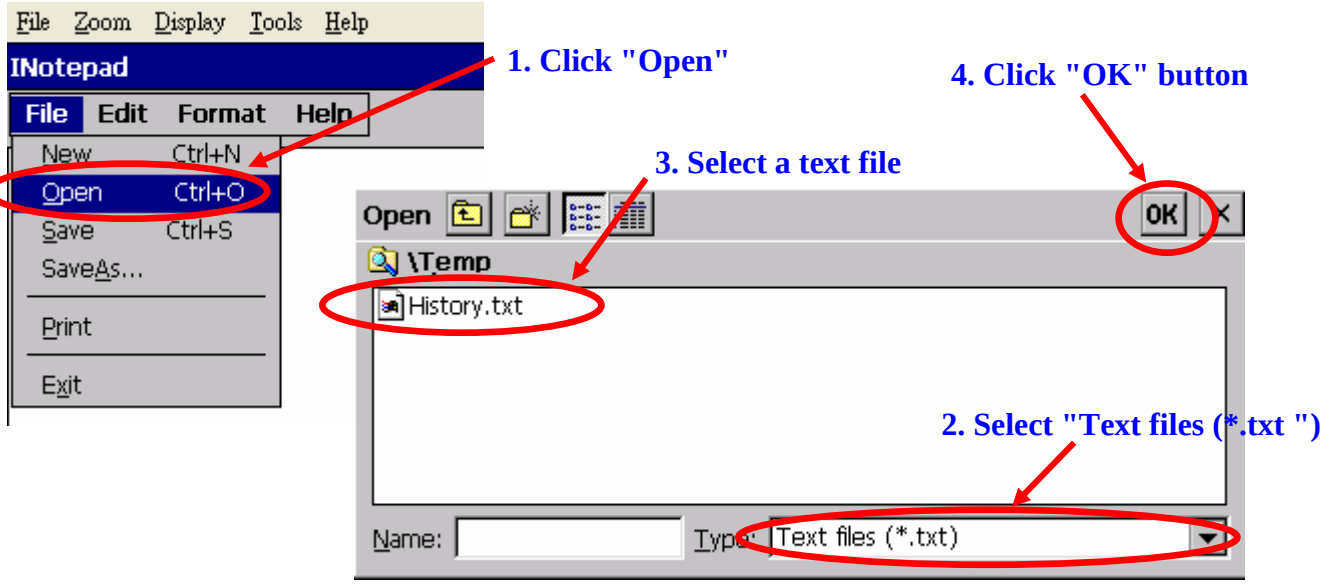


3: Click "**File**" → "**Print**".




LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4: Select the printer from the "printer" dropdown menu.

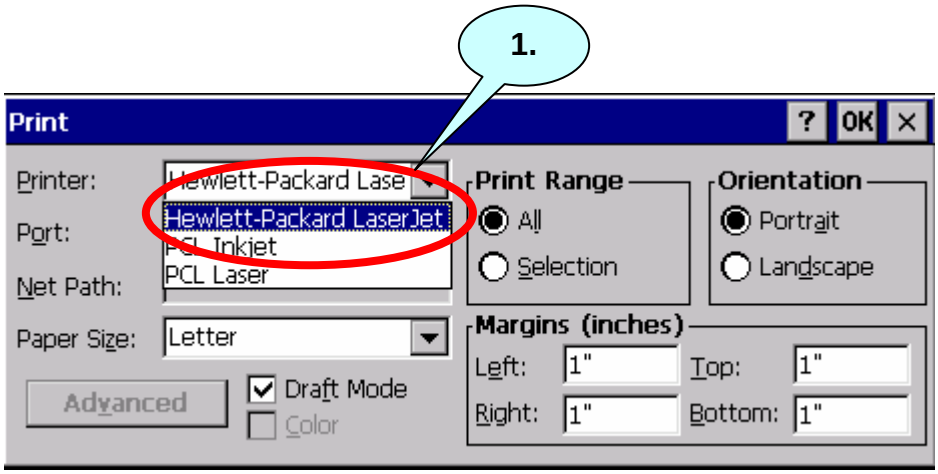

Select the port from the "port" dropdown menu, and then click the "OK" button

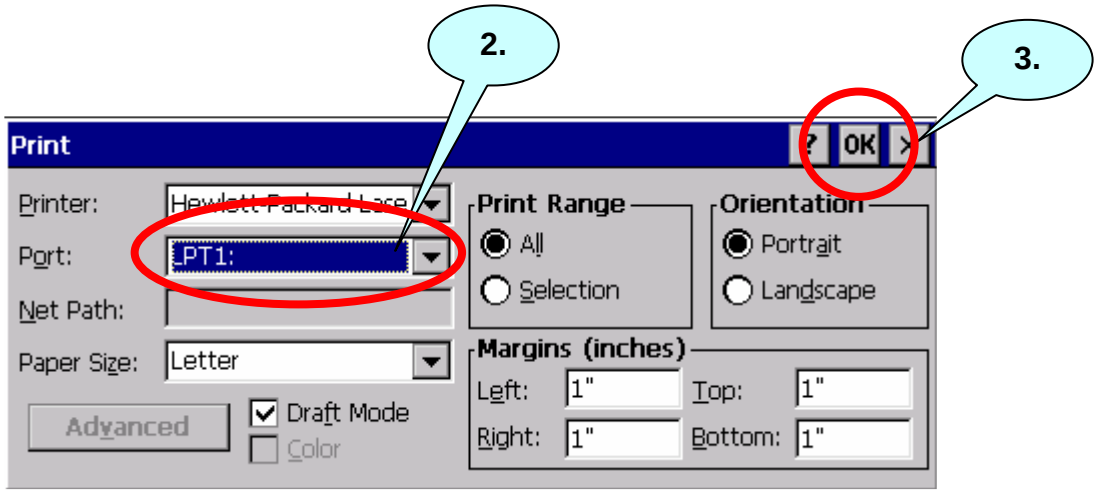

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000