How to set up an Egalax USB touch panel


Applies to:

Platform	*OS version*	*XPAC utility version*
XPAC series	*All versions (WinCE6)*	*All versions*

N/A: *Not applicable to this platform and OS.*

Use a touch panel and a keyboard at the same time on XP-8x4x.

The XP-8x4x series only has two USB ports, so if you want use a touch panel and keyboard/mouse at the same time. You will need a USB hub.

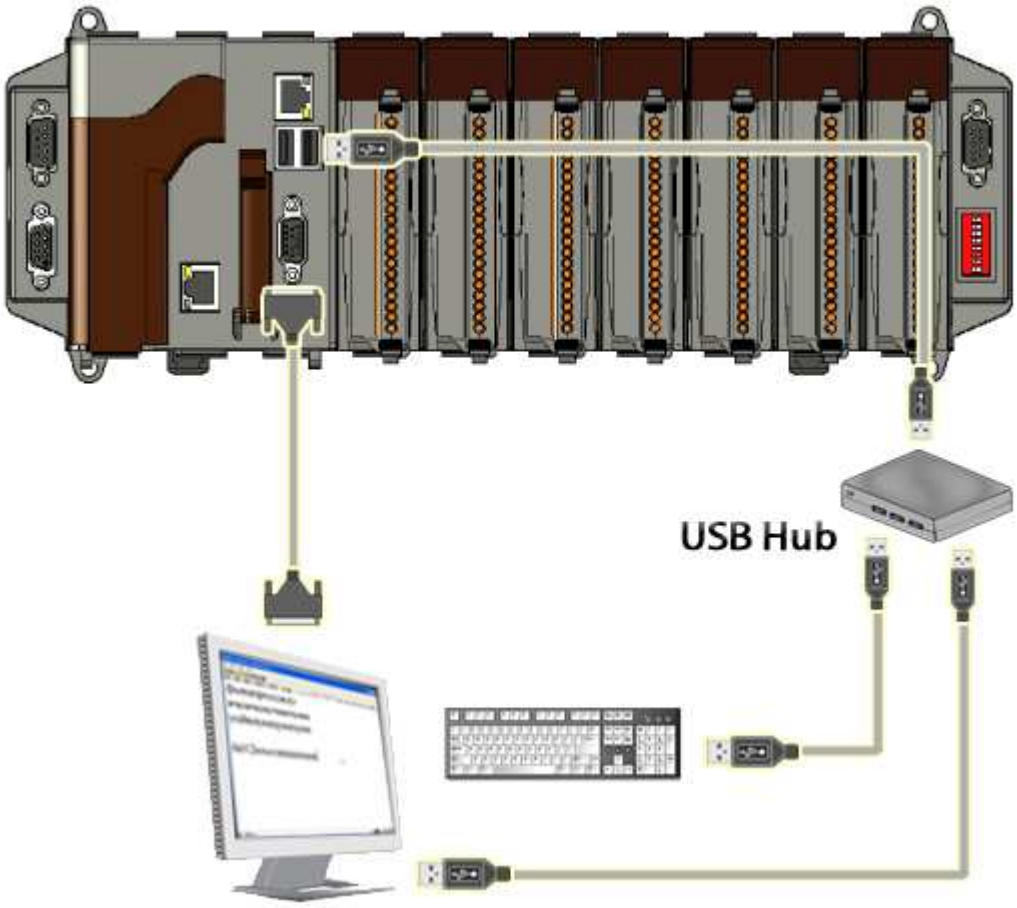

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

To use an Egalax USB touch panel, perform the following steps:


Step 1: Location of the devices for the touch panel
The Egalax_USB_TOUCH_V3.1.3.1727_yyyymmdd_XPAC_CE6.CAB file is located at (yyyymmdd means Year /Month/ Day)
1. CD:\System_Disk\External_device_driver\
2. ftp://ftp.icpdas.com/pub/cd/xp-8000-ce6/system_disk/external_device_driver/ (XP-8000-CE6)
   ftp://ftp.icpdas.com/pub/cd/xpac-atom-ce6/system_disk/external_device_driver/ (XP-8000-Atom-CE6)

Step 2: Install the Egalax_USB_TOUCH_V3.1.3.1727_ yyyymmdd _XPAC_CE6.CAB file.

2.1. Double click the Egalax_USB_TOUCH_V3.1.3.1727_ yyyymmdd _XPAC_CE6.CAB file, and then click “OK”.




2.2 Double click ok, and will reboot your XPAC.

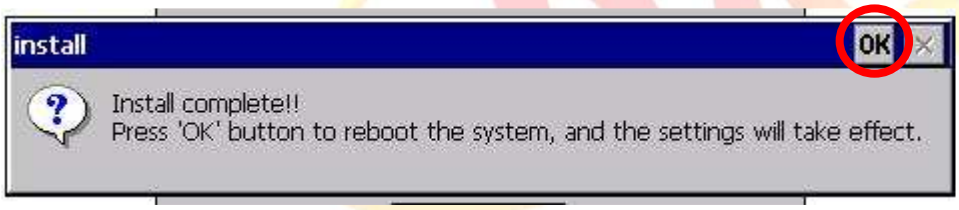


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 3: Execute the calibration program.

3.1. Click Start->Programs->USB_TOUCH->Egalax->eGalaxTouch.bat.

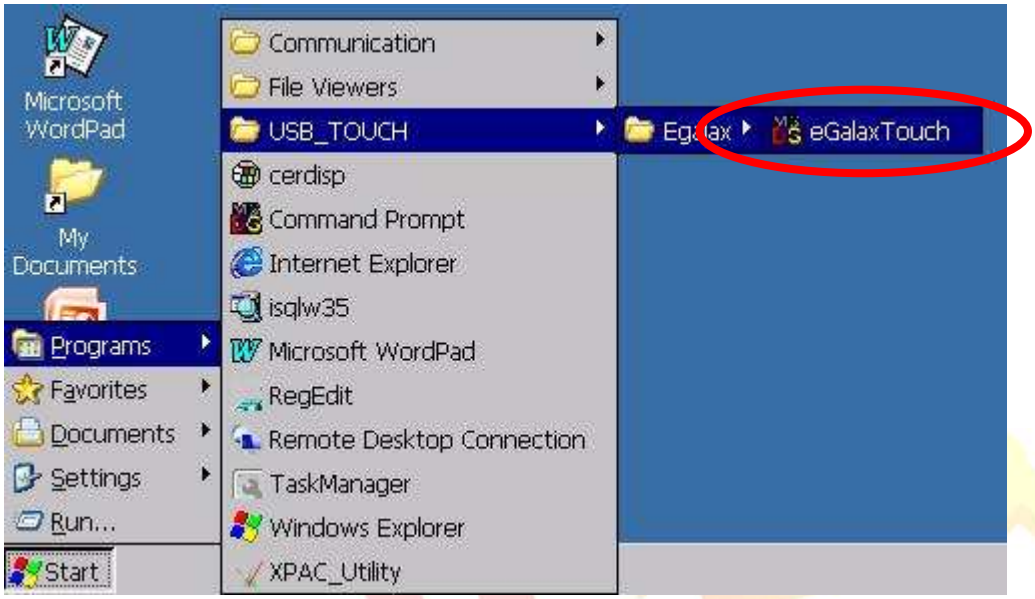



3.2. Click the “4 Pts Cal” button. (Click the “25 Pts Cal” button to obtain a more accurate calibration for the touch panel)

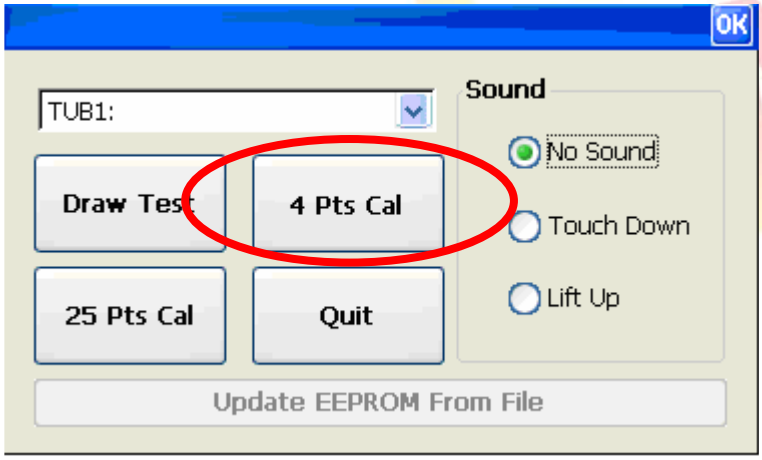

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3. Perform the calibration process.
3.3.1. Touch the “X” icons on the monitor to perform the calibration process.

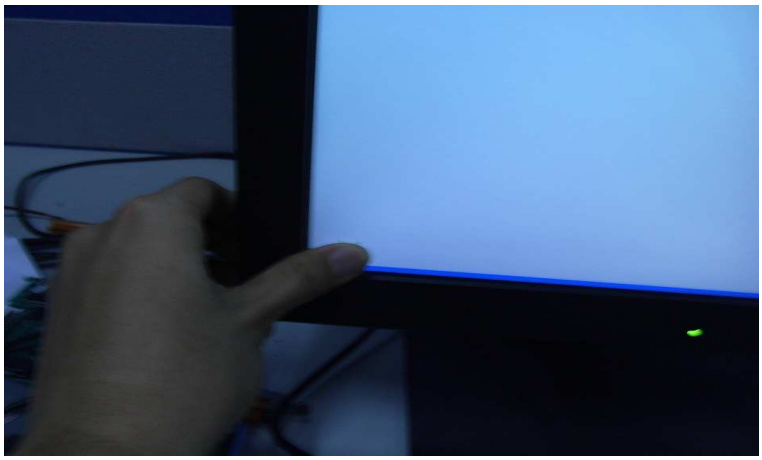

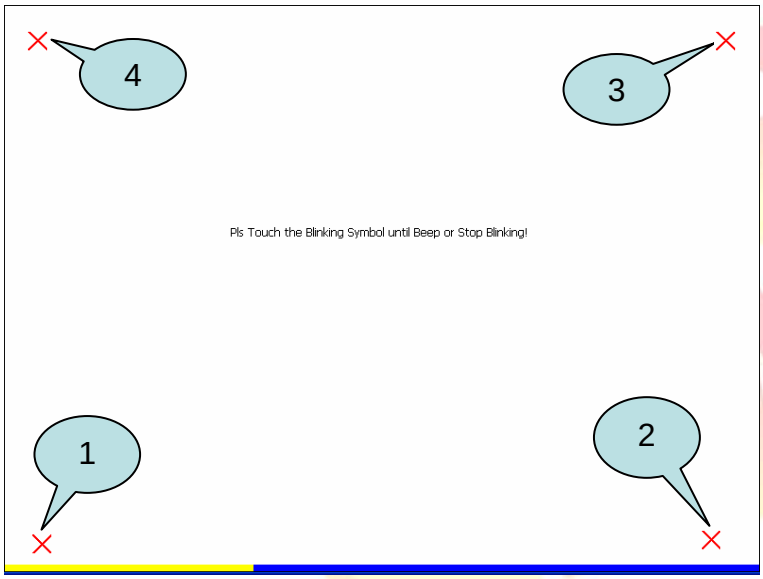

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Uninstall Egalax USB touch driver, and perform the following steps:

Step 1: Execute the Remove Program.

1.1 Click the Start->Settings ->Control Panel.




1.2 After Open “Control Panel”, double click “Remove Programs”.

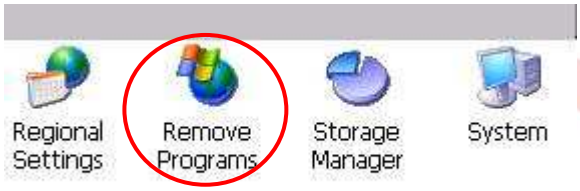


Step 2: Uninstall Penmount USB touch driver.

2.1 After execute “Remove Programs”, click “ICPDAS USB Egalax” and then click “Remove” button

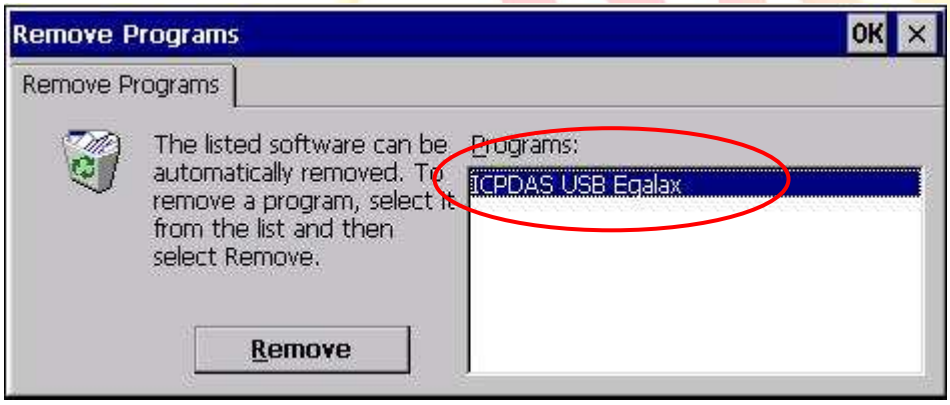


2.2 Click “Yes” button, and will uninstall Egalax USB touch driver.

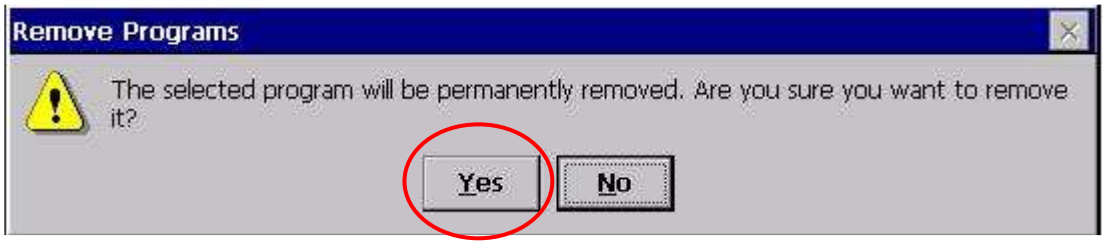

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.3 Click “Yes”, and will reboot your XAC to take effect.

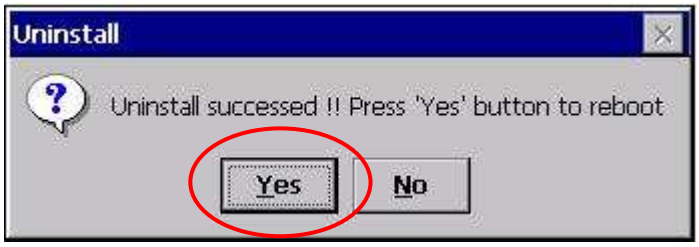

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000