How to set up the FTP server

Applies to:


Platform	***OS version***	***XPAC utility version***
XPAC series	*All versions (WinCE6)*	*All versions*

The FTP sever is always active on the XPAC, so you can download or upload file from/to PC from XPAC.

To configure enable or disable FTP service、download directory and user login id, perform the following steps:


Enable or Disable FTP service

Step 1: Execute the XPAC Utility, and then select “Network” Page.

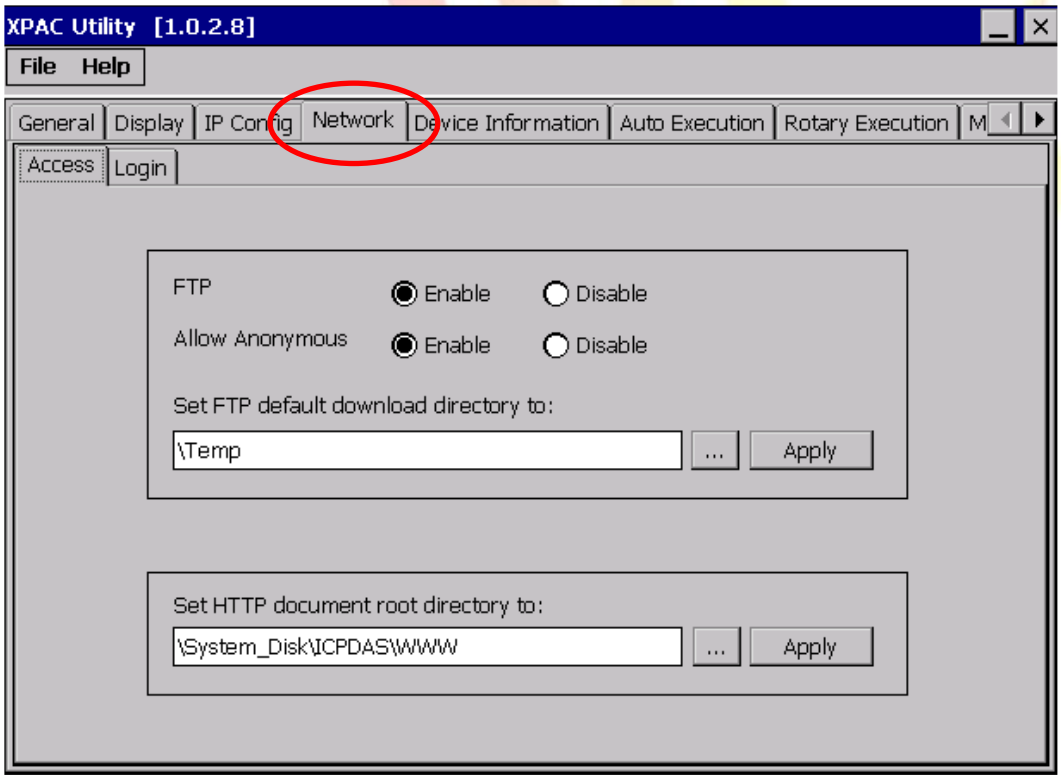

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 2: Click the FTP item “Enable” is Openning FTP service or click “Disable” is closing FTP service.

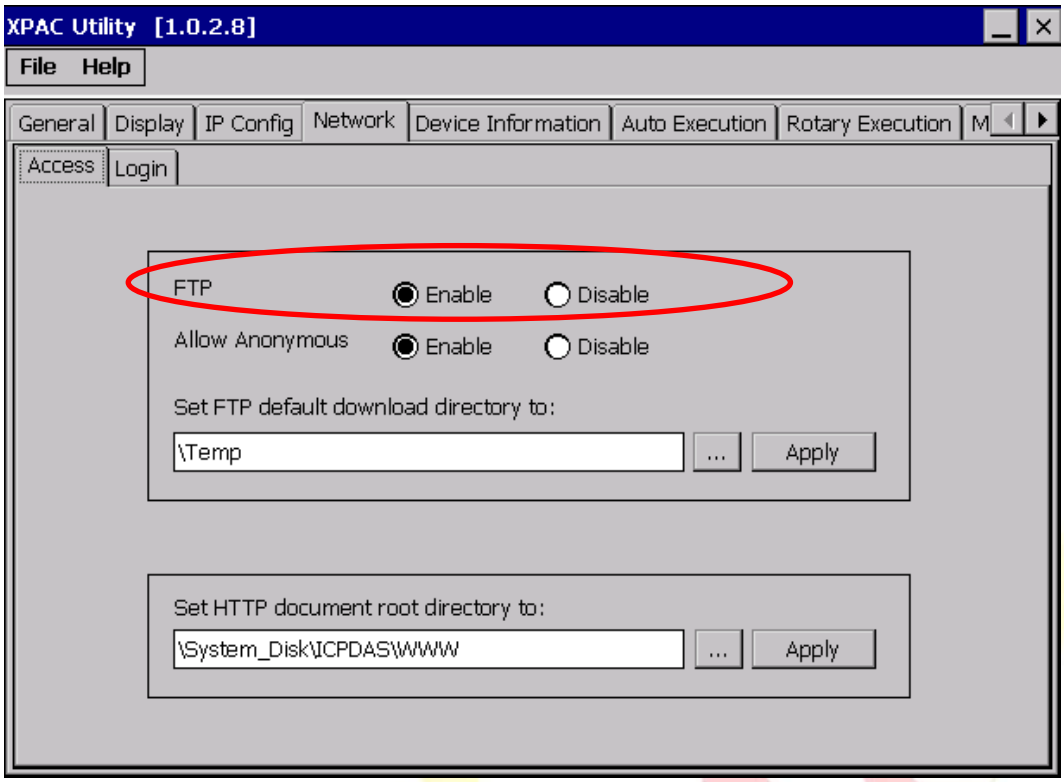


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Change FTP download directory

Step 1: Execute the XPAC Utility and select “Network” Page, and then Click “…” button.

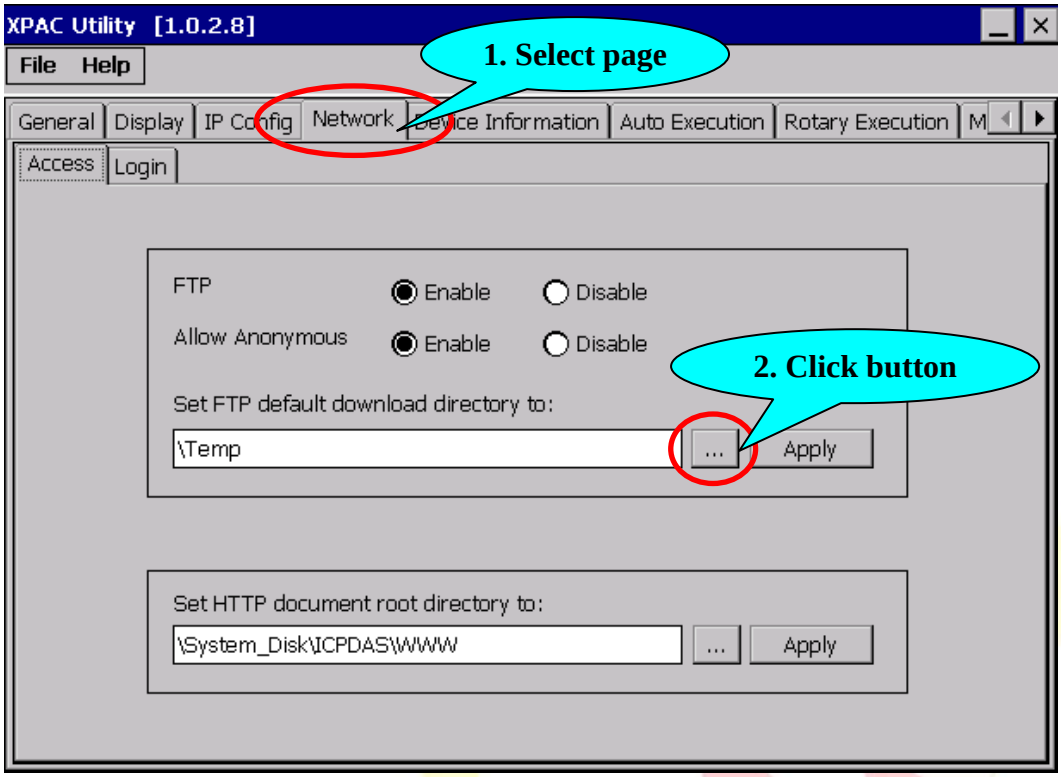


Step 2: Click “…” button will show following dialog, and you can select other directory for FTP download directory.

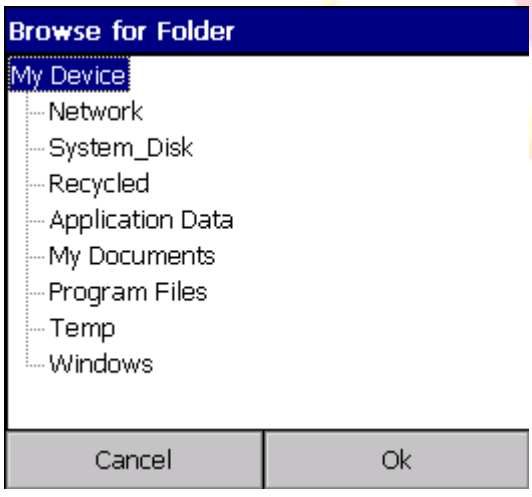

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 3: If you change FTP download directory, Click “Apply” button and reboot your XPAC for take effect.

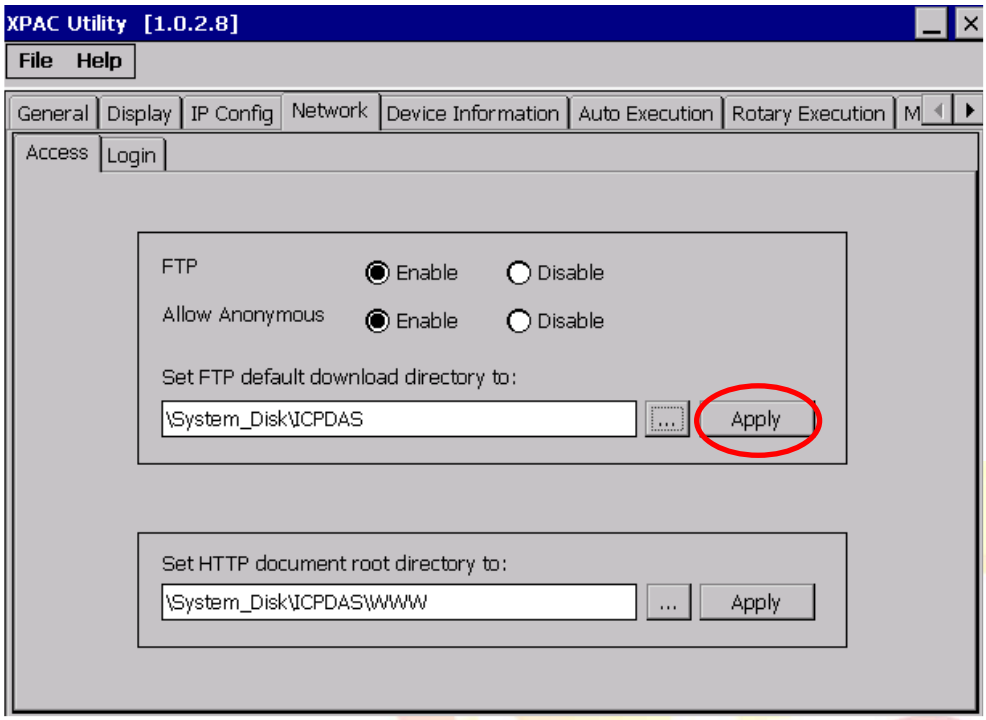

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Set Login ID

Step 1: Execute the XPAC Utility, and then select “Network” Page. Click the “Allow anonymouse” item “Enable” is anyone access FTP ,click “Disable” is only setting ID can access FTP.

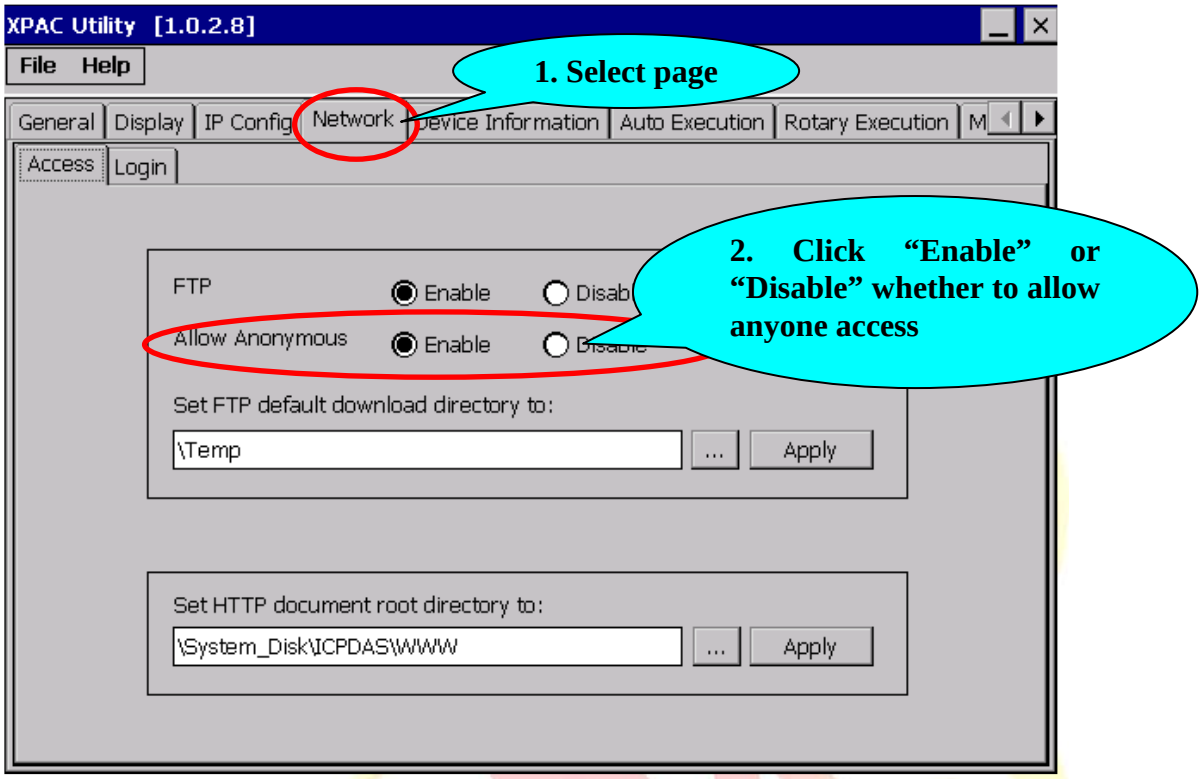

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2: Select “Login” page, and then input user name and password. Finally click “Add” button, you will add a new user id. If the “Allow anonymouse” item is setting “Disable”, anyone must using setting user id login before download or upload.

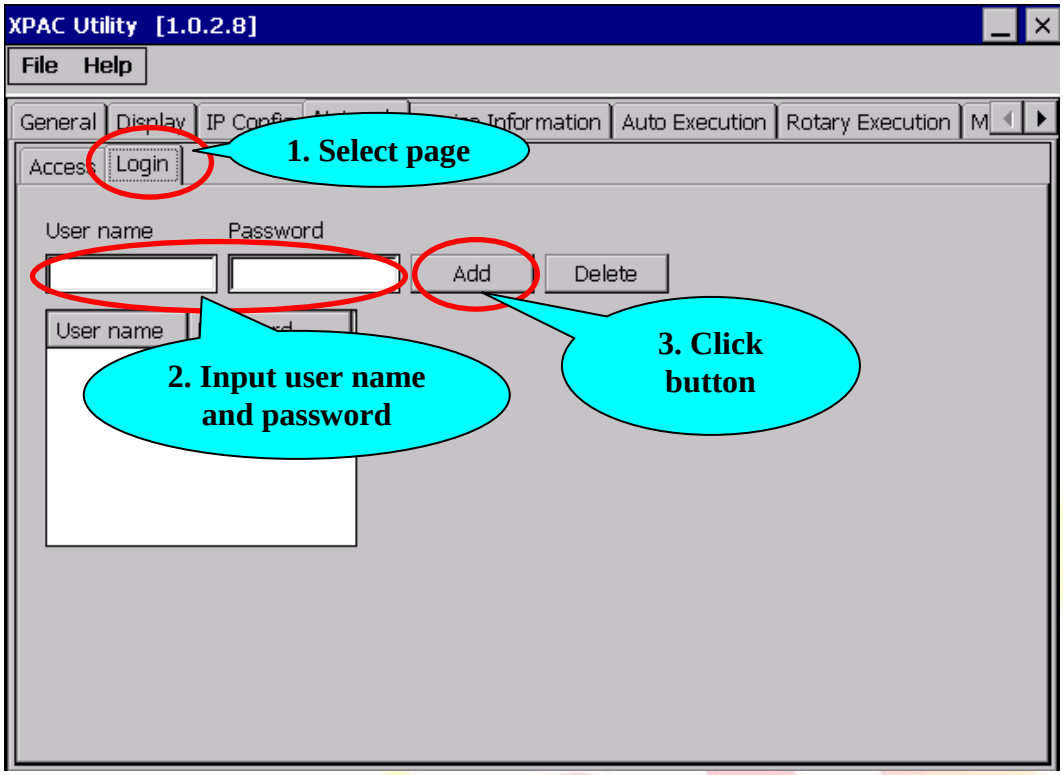

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000