How to set up the Web server

Applies to:


Platform	***OS version***	***XPAC utility version***
XPAC series	*All versions (WinCE6)*	*All versions*

The web sever is always active on the XPAC, so you can use browser connect to XPAC.

To configure root directory, perform the following steps:


Change root directory

Step 1: Execute the XPAC Utility, and then select “Network” Page, and then click “…” button.

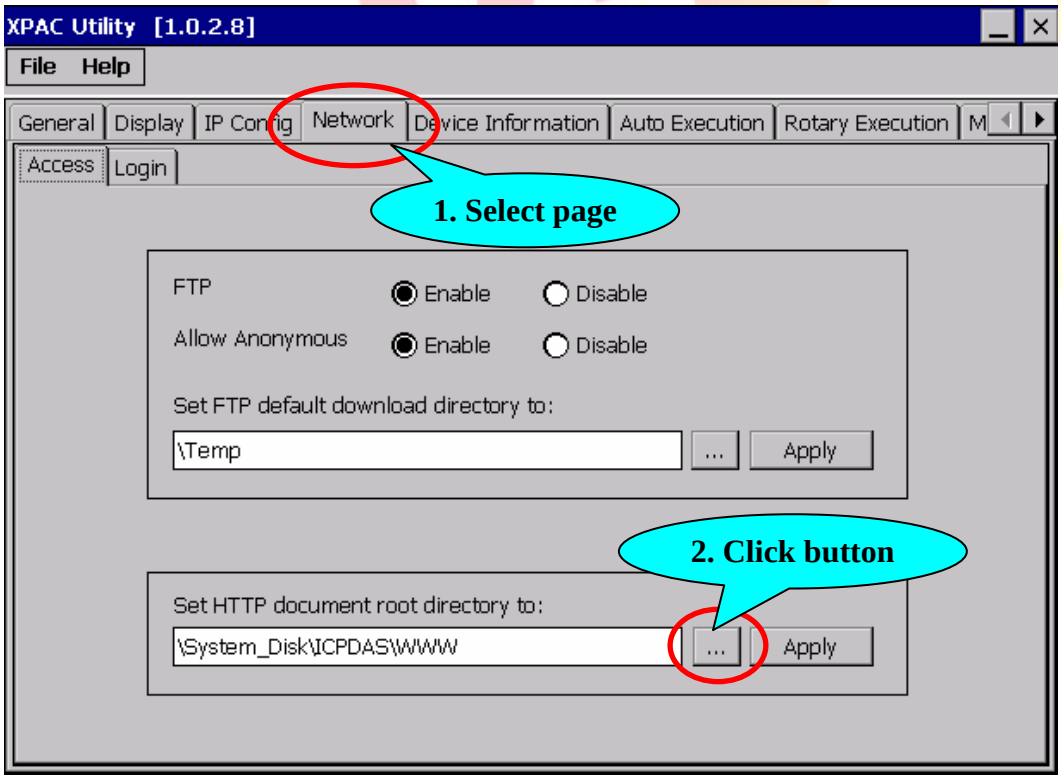


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2: Click "…" button will show following dialog, and you can select other root directory for web server.

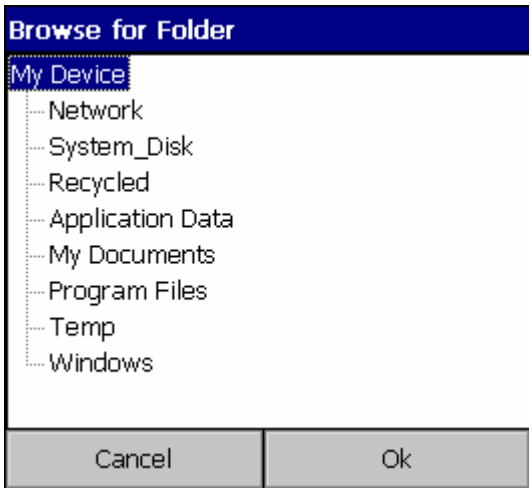

Step 3: If you change root directory, Click "Apply" button and reboot your XPAC for take effect.

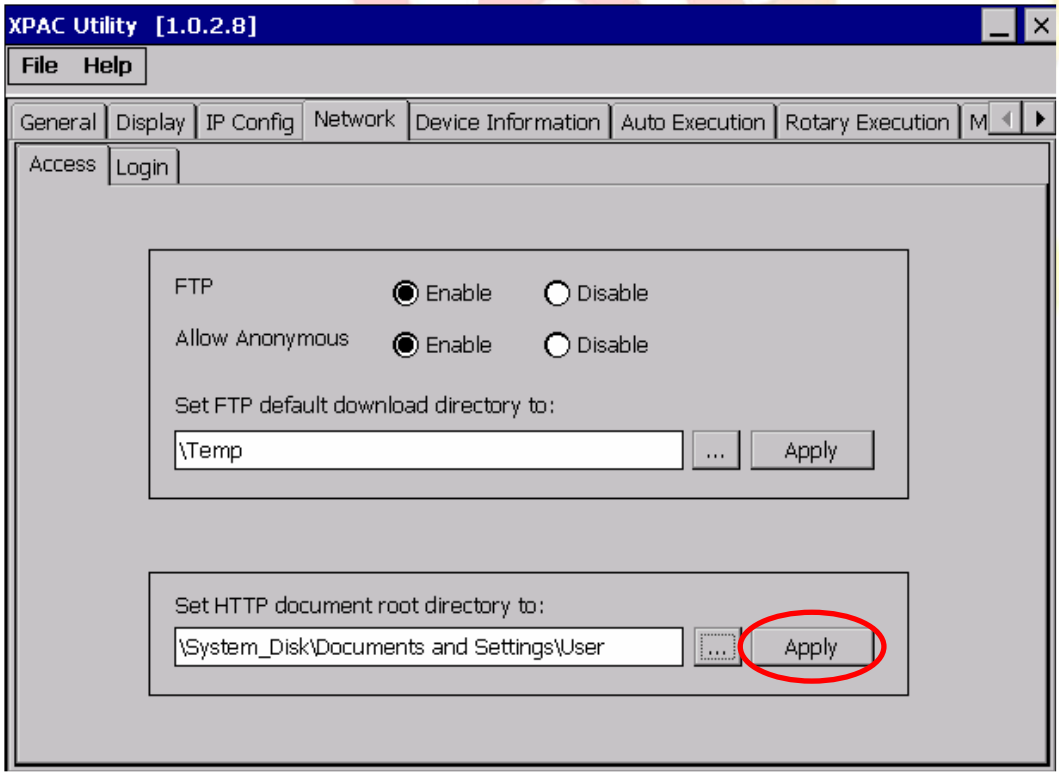

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000