How to use a remote desktop tool (cerhost)

Applies to:

Platform	*OS version*	*XPAC utility version*
XPAC series	*All versions (WinCE6)*	*All versions*

The cerdisp provided by Microsoft is used to help the user to manage your WinCE device for any location. No matter where you are, the cerdisp provides a convenient environment on your Desktop PC that allows you to remotely control your XPAC.



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Executing the cerdisp

(The XPAC and the PC are connected using DHCP or a static IP via the **LAN network**)


To use the cerdisp, perform the following steps:

From the XPAC Side

Step 1: Double click cerdisp.exe from the "\System_disk\Tools\Remote_Display" folder

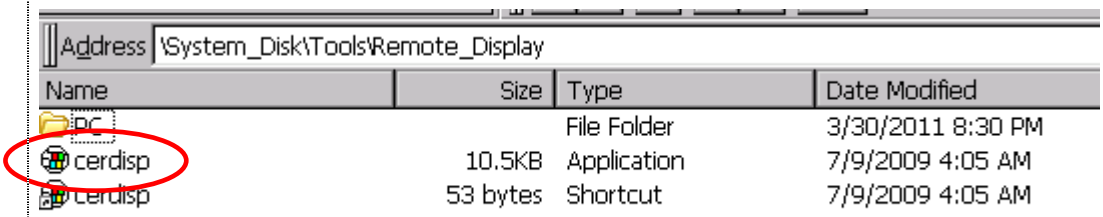

If the cerdisp.exe is working, it is showing icon in taskbar.

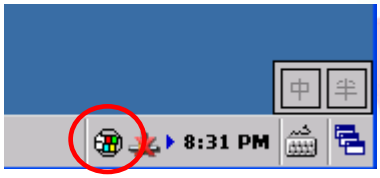

From the PC Side


Step 2: Download the cerhost to your host PC.
The "cerhost.exe" file is located at
1. CD:\pc_tools\Remote_Display\
2. ftp://ftp.icpdas.com/pub/cd/xp-8000-ce6/pc_tools/remote_display/ (XP-8000-CE6)
   ftp://ftp.icpdas.com/pub/cd/xpac-atom-ce6/pc_tools/remote_display/ (XP-8000-Atom-CE6)

Step 3: Run the cerhost.exe




Step 4: Click the "File->Connect"

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

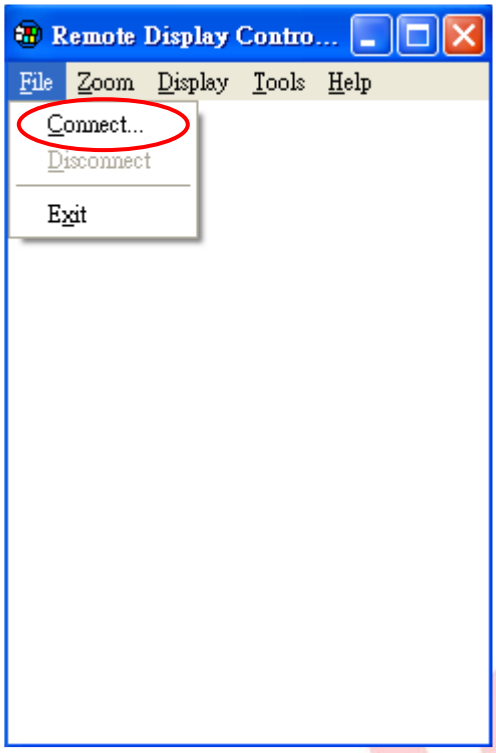


Step 5: it is searching XPAC and cost some time. If it is found a device will showing below picture. Please check IP address is your XPAC IP.

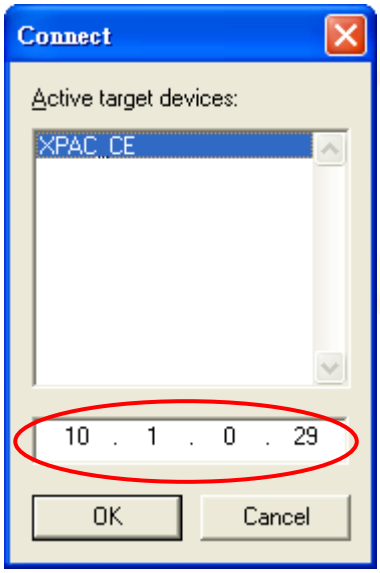


5.1. Click the “OK” button.

Step 6: It is connecting device and cost some time.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

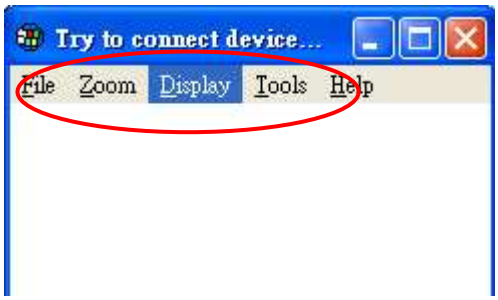

Step 7: If connect success. It will showing below picture.

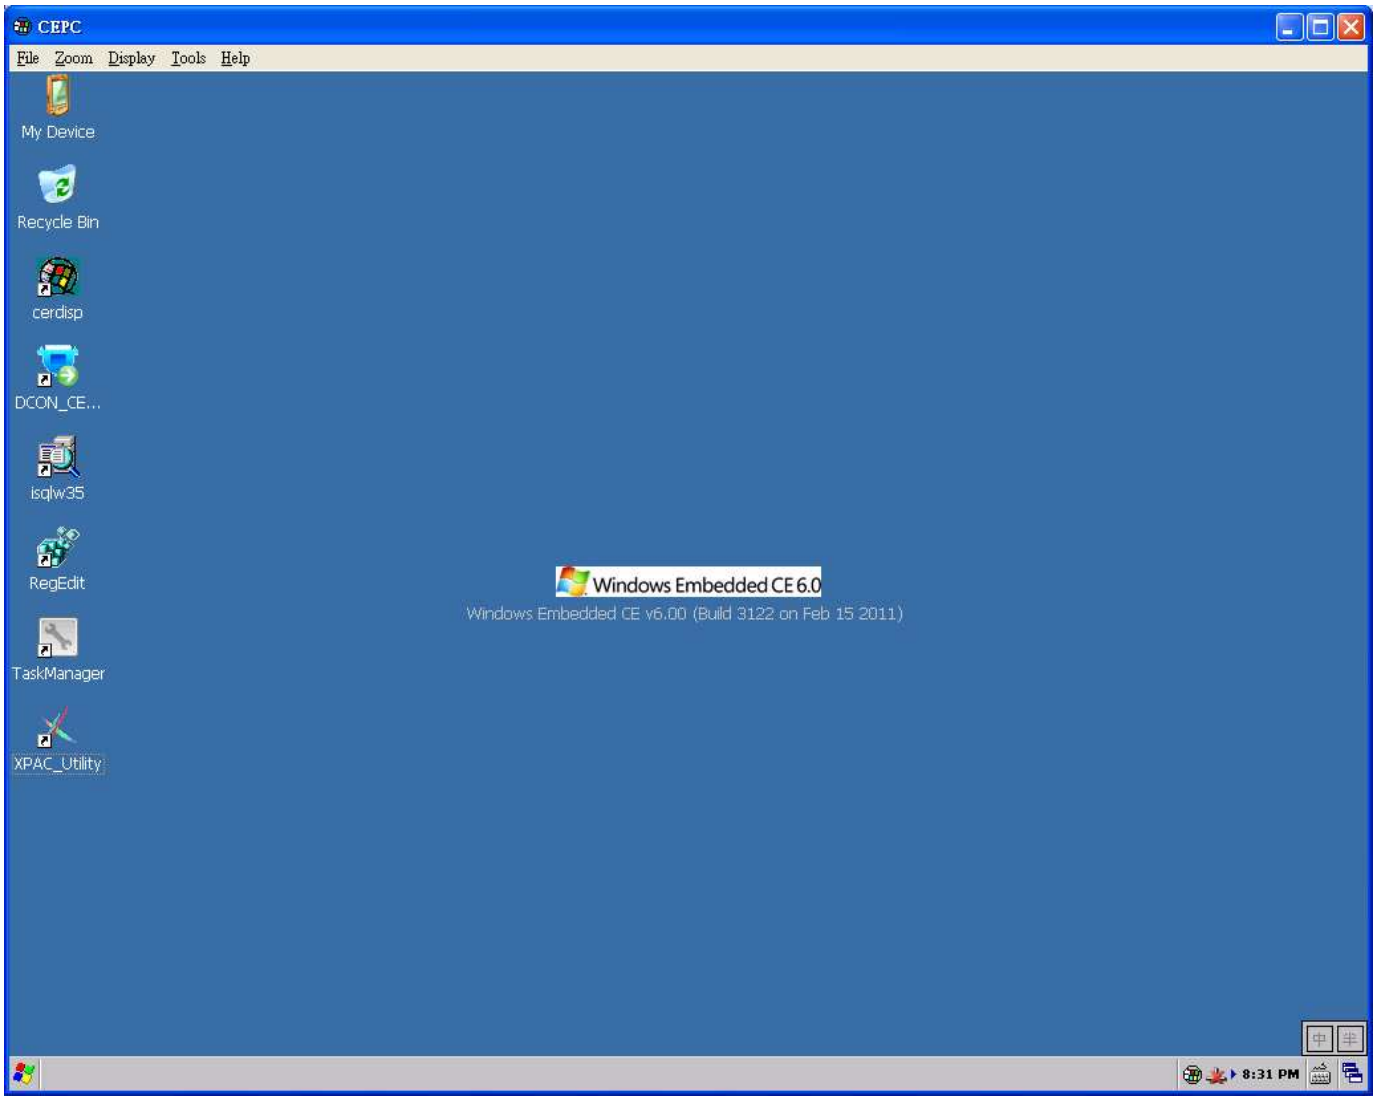

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000