How to use ZigBee modules in NAPOPC_CE5?

Applies to:

Platform	*OS version*	*NAPOPC version*
XP-8000-CE6	*CE6*	*NAPOPC_CE6 v1.00*

Assume that we now have a group of Zigbee modules:

ZB-2550 (Host Converter)

ZB-2052 (DI)

ZB-2060 (DIO)

If we can connect NAPOPC_CE6 to ZB-2550, then we can exchange data with ZB-2052 / ZB-2060 further.

We have two ways to establish communication:

Search (Automatic) / Add device (Manual)


Search (Automatic)

Step 1




Click ”Search” on the Toolbar to scan modules connected with your PC. It will show you the dialog as below. After setting up, just click “search”.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

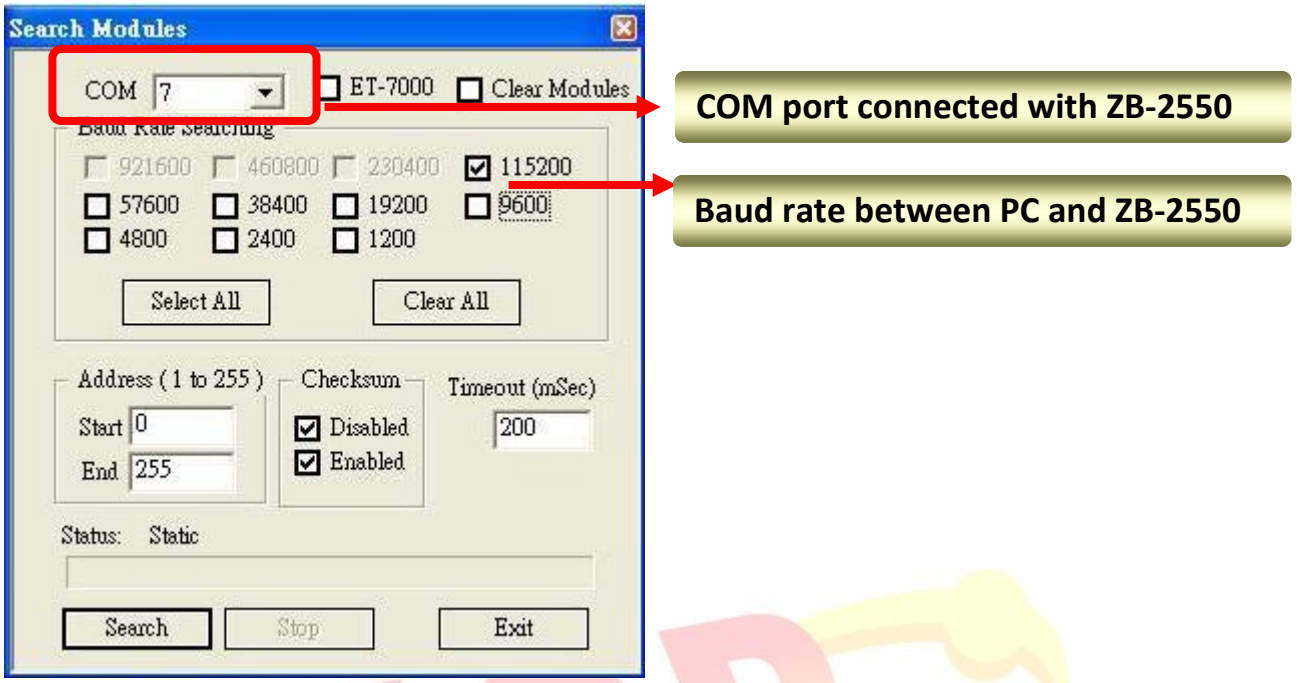

Step 2

After searching, NAPOPC_CE6 is able to communicate with ZB-2052 and ZB-2060.

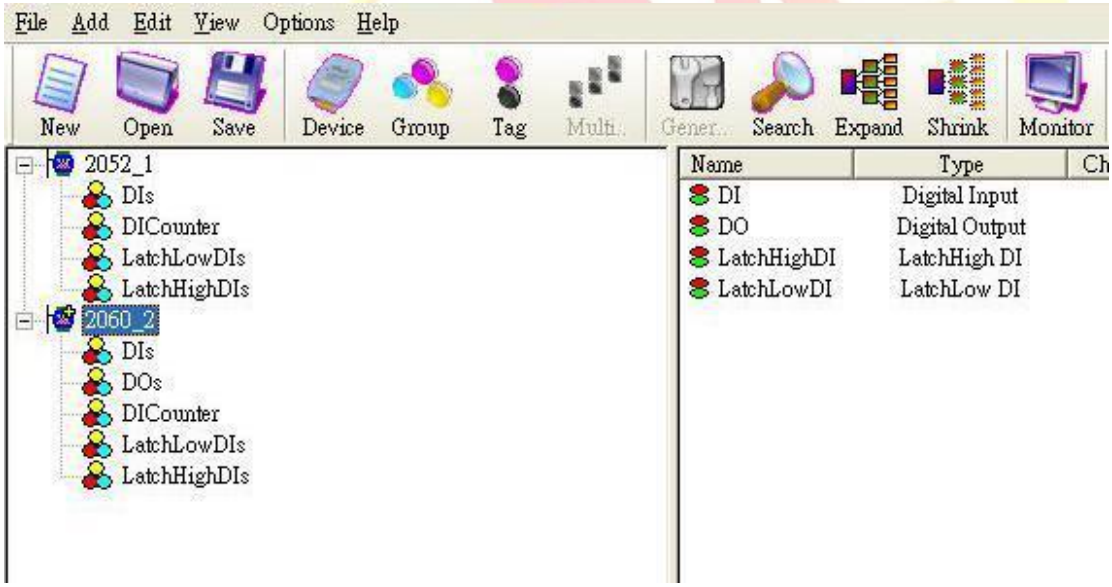


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Add device (Manual) (DCON)

Step 1




Click "Device" on the Toolbar, it will show you the dialog as below. Check the options which are marked, then click "OK" to add device.

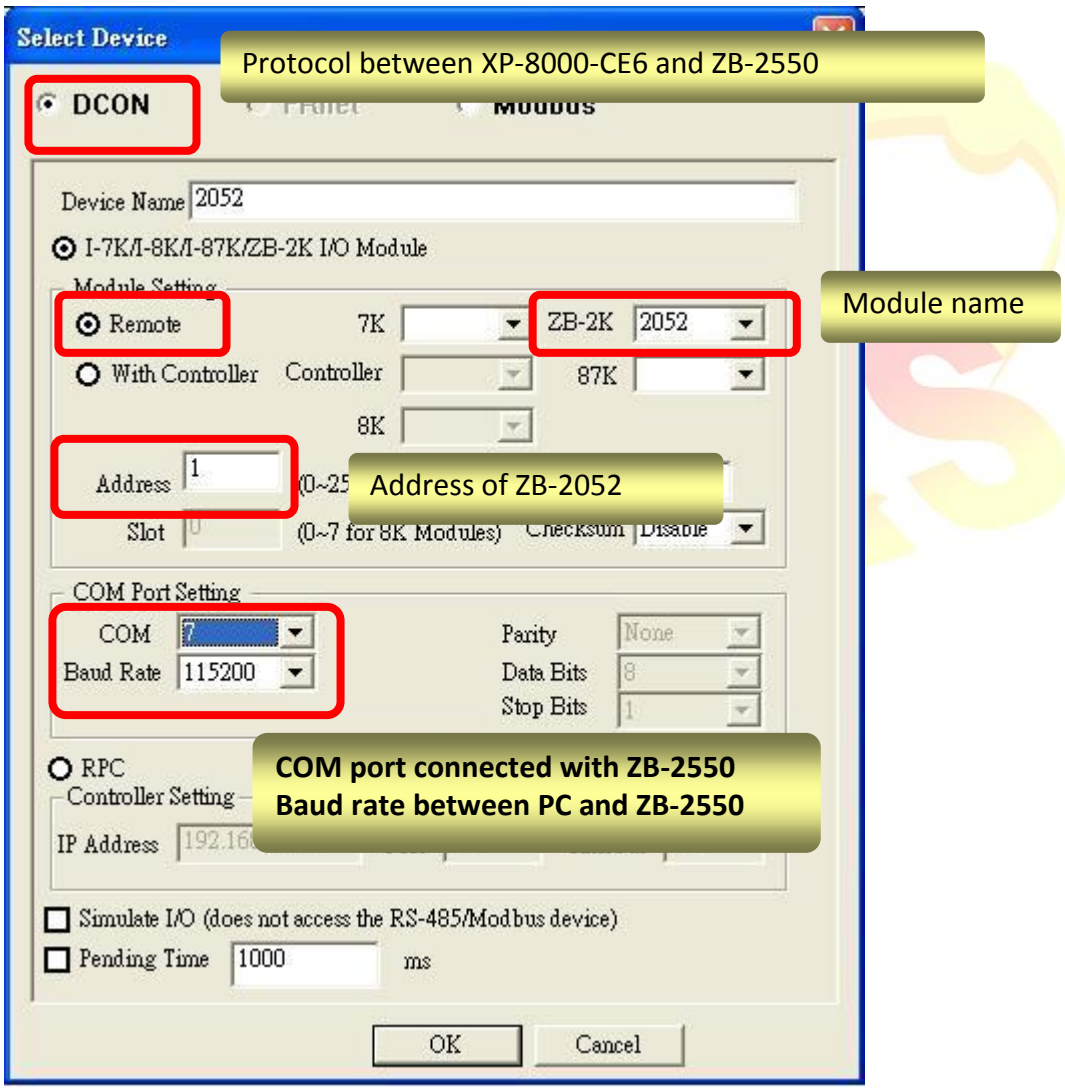


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2

ZB-2052 is added：

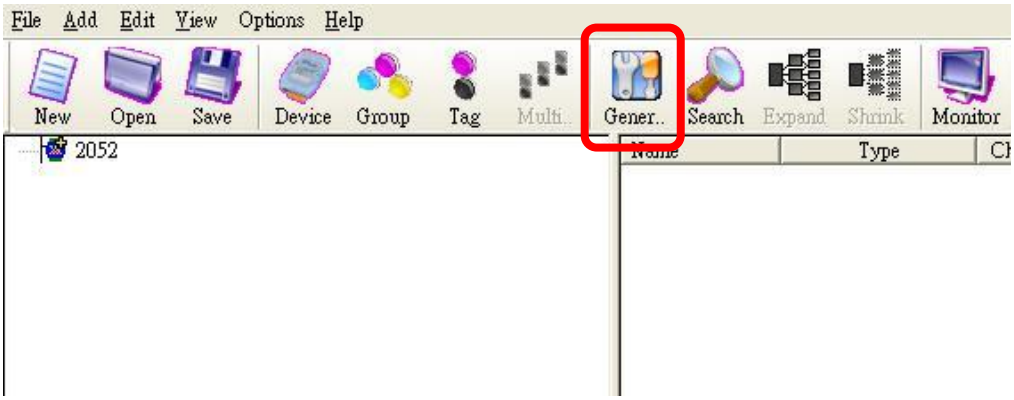

Click ”Generate Tag” on the Toolbar, it will add all tags according to the ZB-2052 specification.

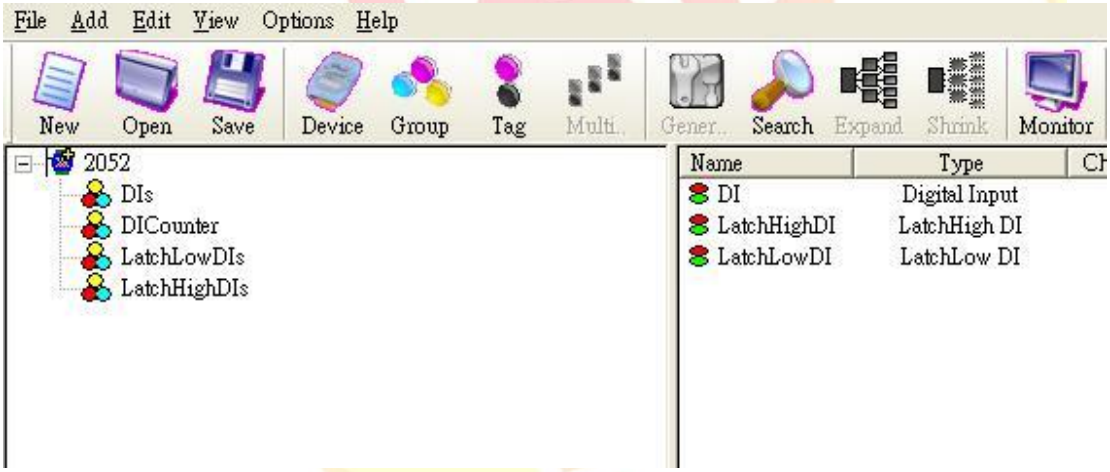

Step 3

Use the same procedure to establish ZB-2060. And then NAPOPC_CE6 will be able to communicate with ZB-2052 and ZB-2060.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000