How to calibrate a Penmount serial touch panel


Applies to:

Platform	*OS Version*	*PAC Utility Version*
WinPAC	*All Versions*	*All Versions*


Tips & Warnings

Serial COM Ports 1 and 4 on WP-8000 are standard female/male RS-232 COM Ports.
*If COM3 is used to connect to the touch panel, you will need a "**NULL MODEM**".*

Standard Wiring

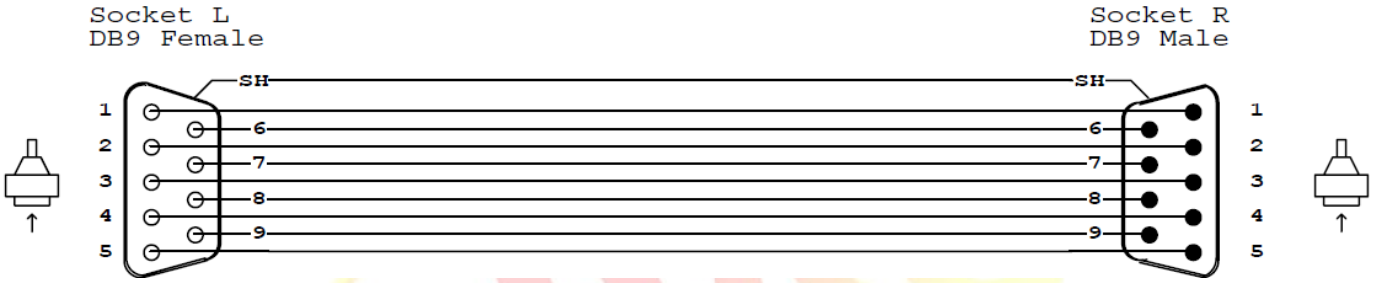


Connecting to COM1

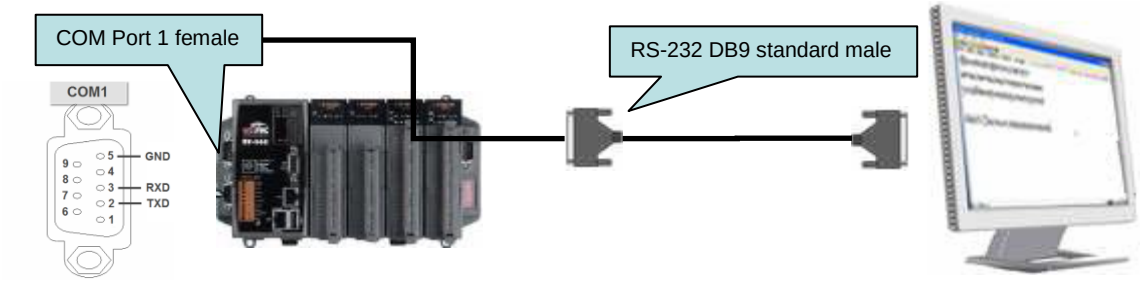


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Connecting to COM4

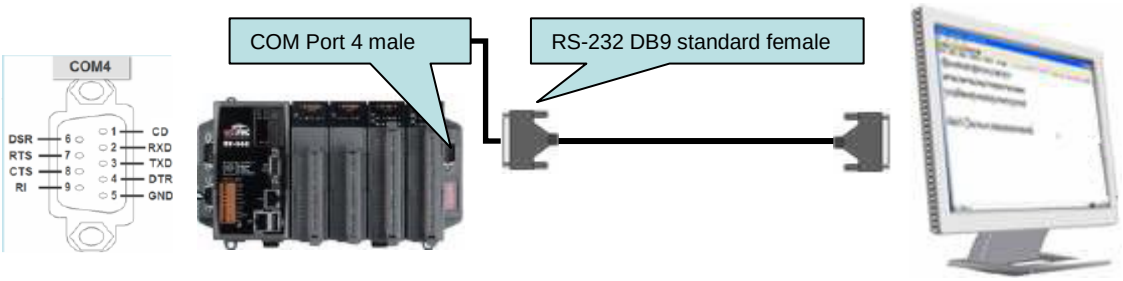


Connecting to COM3

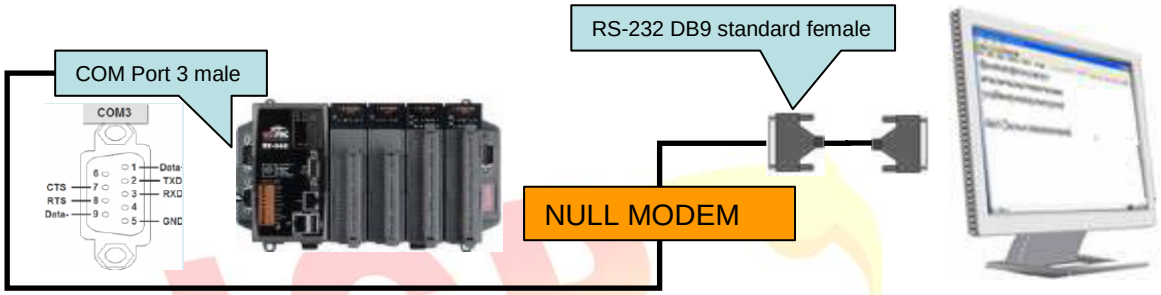

To calibrate a Penmount serial touch panel, perform the following steps:


Step 1: Execute the calibration program.

1.1. Click My Device →System_Disk→Drivers→ Serial_TOUCH →Penmount →LNK →Calibration.

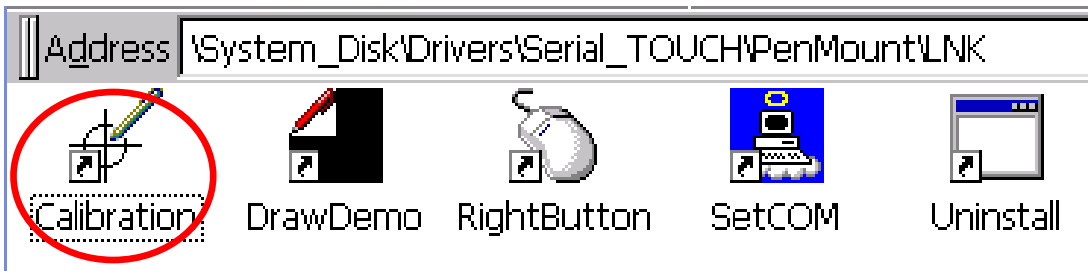

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


1.2. Touch the arrowhead one by one and then touch the "**+**" icon on the monitor till the program finish.

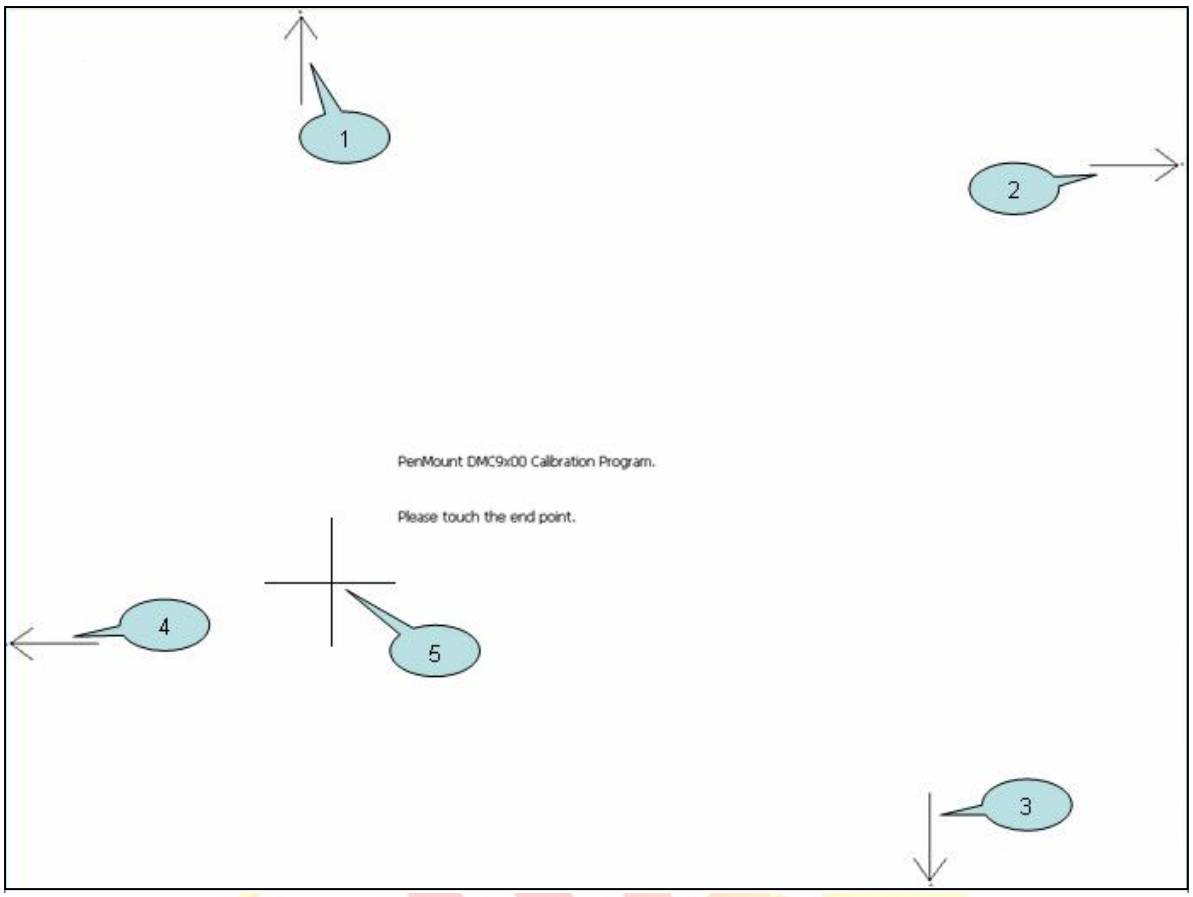

Step 2: Reboot your WinPAC.

2.1. Start the PAC utility and click the "**File**" → "**Reboot**" menu option.

2.2. Click the "**Yes**" button and wait for reboot.

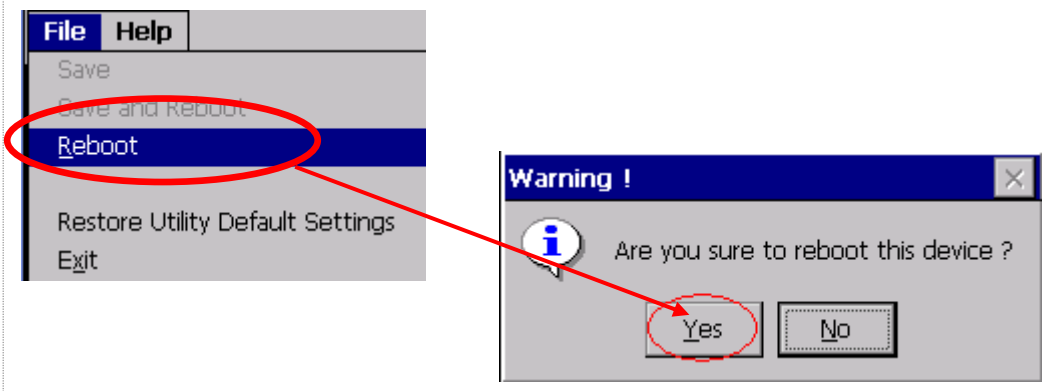

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000