
How to configure the File (SMB) Server

Applies to:

Platform	*OS Version*	*PAC Utility Version*
WinPAC	*All Versions*	*All Versions*
ViewPAC	*All Versions*	*All Versions*

Please perform the follow steps to configure the File(SMB) server.


Step 1: Execute the PAC utility->“Network Setting”->File Server Settings tab.
Step 2: Click the “Setting” button.

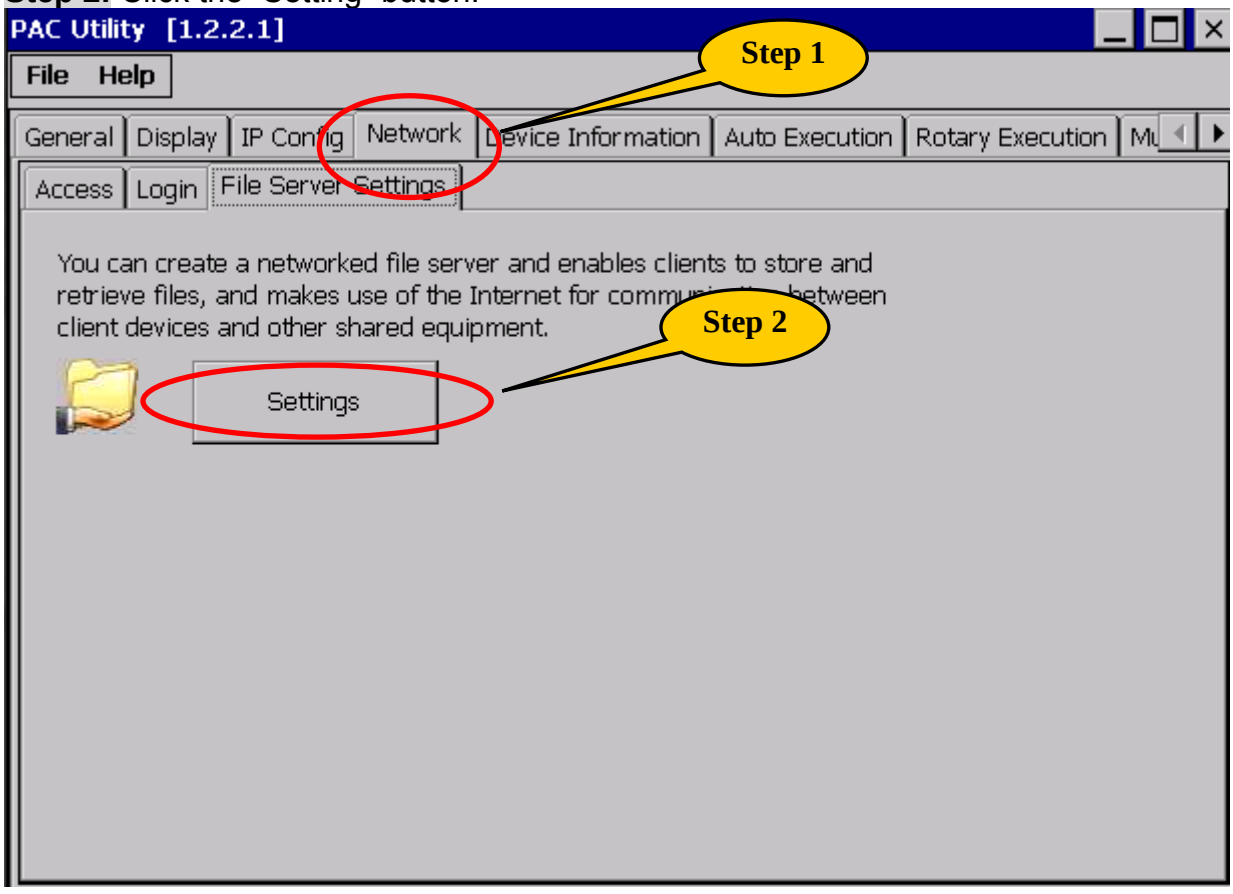

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 3: Enter the device name.

Note: If the LAN network contains several devices, ensure that different device names are set for each device.

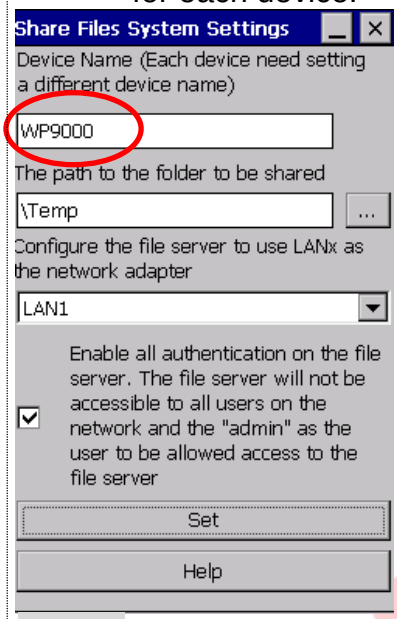

Step 4: Specify the share folder then click OK.


Note: The name of the share folder nust not contain any reserved characters.

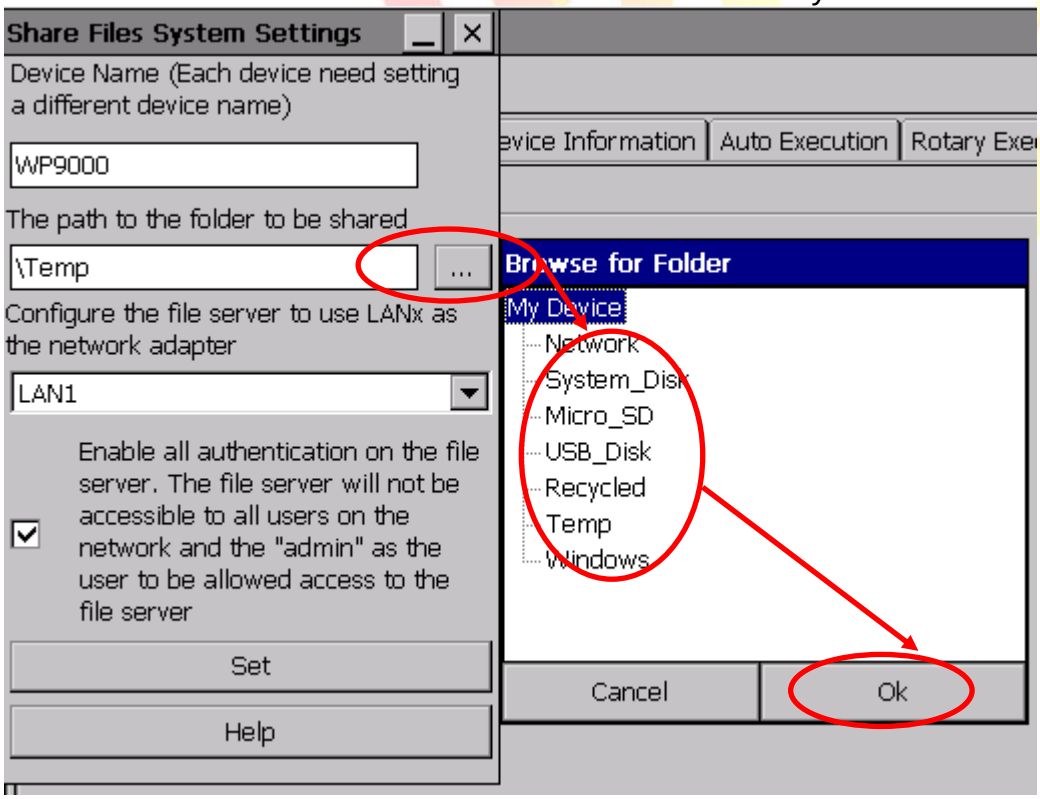


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 5: Choose the LAN adapter to be used as the gateway for the file server. This will allow all users to connect to the file server.

Note: The file server and the FTP server use the same ID and password.

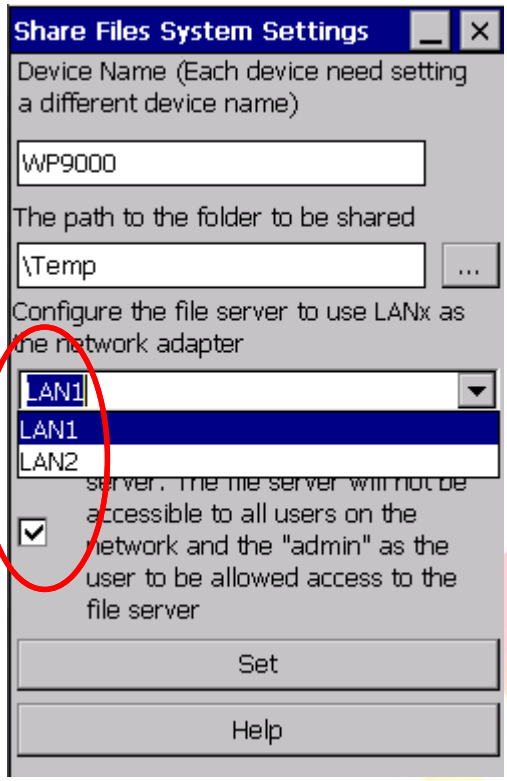

Step 6: Click the ”Set” button.

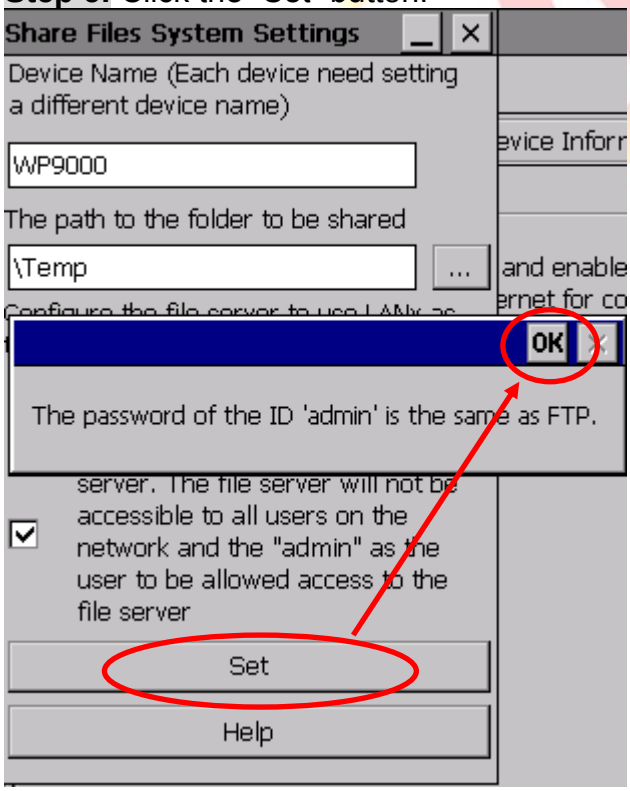

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 7: Enter the “IP address for LAN1” of the device or enter “\\device name” (e.g., WP8x4x01) in the address bar, then enter the ID and password to connect to the file server.

Note: If you can not use the “IP address for LAN1” to connect with the network share folder, you can use the “\\device name” to connect to the file server.



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000