How to connect with the mobile network

Applies to:

Platform	*OS version*	*WinPAC/ViewPAC utility version*
WP-8x2x	*All versions*	*Do not matter with the utility.*
WP-9x2x		
WP-523x		
WP-224x		
VP-x231		
VP-x201		


To connect with the mobile network, please perform the following steps:

Note: Before installing the SIM card, please cancel the PIN lock function of SIM card; otherwise you will not be able to dial the Internet

Create a new dial-up and networking connection
Step1. Control Panel → Double-Click "Network and Dial-up Connections




Step 2: Double-Click "Make New Connection"

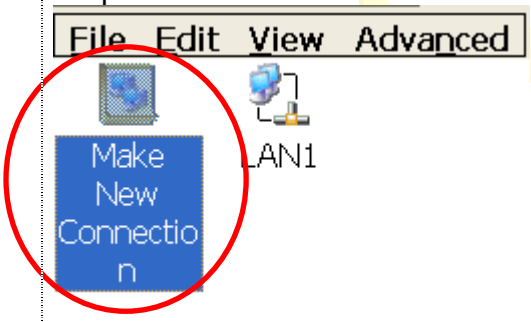


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 3: Key in your name for the connection → Select “Dial-Up Connection” → Click ”Next”

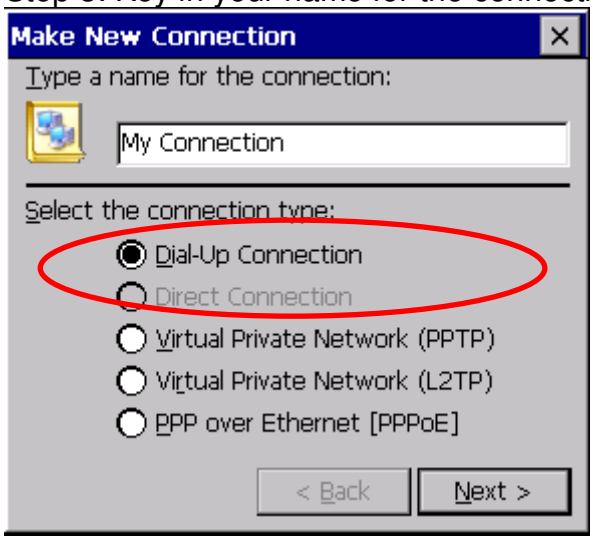

Step 4: Select "USB Modem" in Drop-down menu → Click “Configure…”

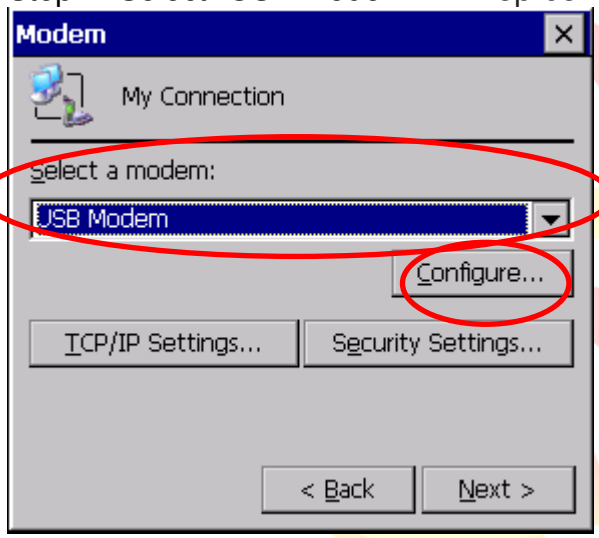


Step 5: Select Baud Rate “115200”, Data Bits “8”, Parity “None”, Stop Bits “1” Note and FlowControl ”None”→ Click “Call Options”

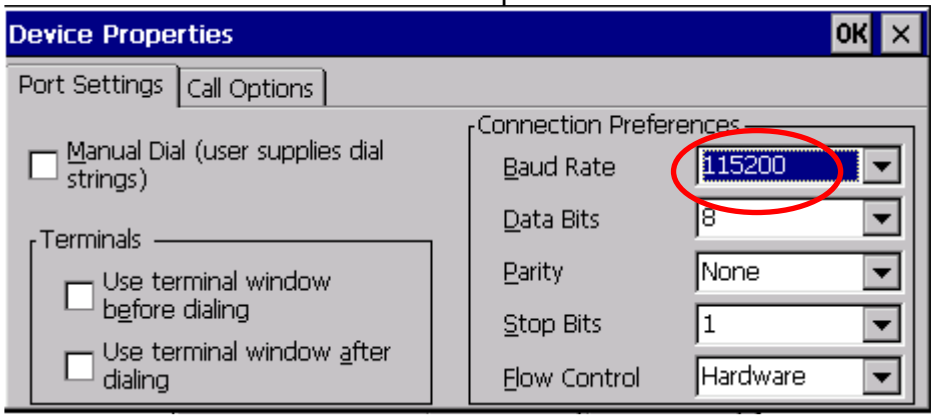


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 6: Extra Settings → Click “OK”
Note: GPRS’s APN must be provided from your Telecom. CO., LTD.
For example in Taiwan: +CGDCONT=1,”IP”,”INTERNET”
For example in China: +CGDCONT=1,”IP”,” CMNET

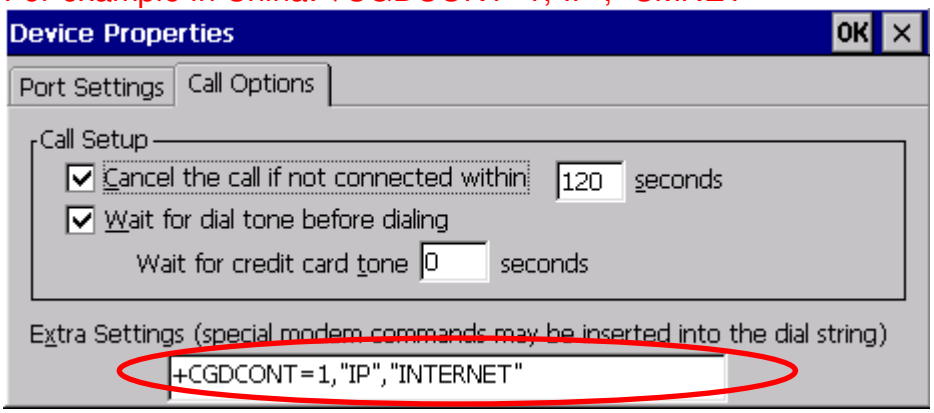

Step 7: Click the “Next“ buttom.

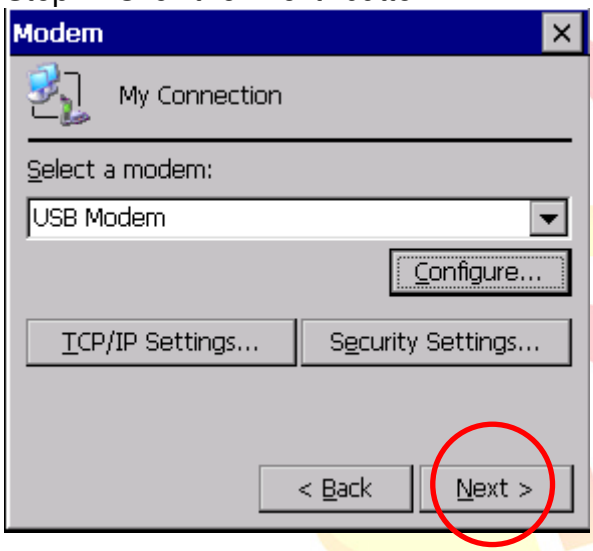


Step 8: Phone Number: → Click “Finish”
Note: Phone Number must be provided from your Telecom. CO., LTD.
For example in Taiwan: *99***1#

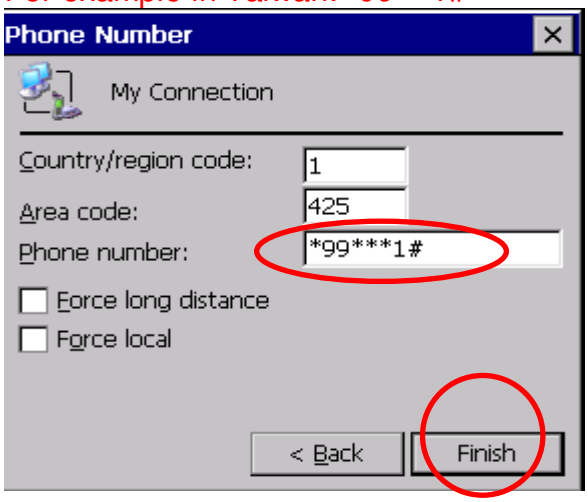


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 9: Double-Click you make new connection name.
Key in GPRS's User name and Password → Click "Connect"
Note: GPRS's User name and Password must be provided from your Telecom. CO., LTD.
For example in Taiwan: GPRS's User name = guest、Password = guest

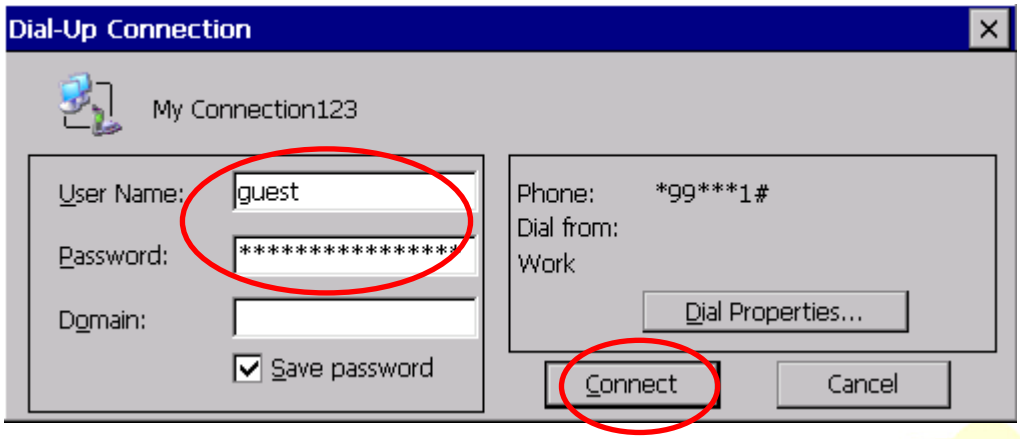

Step 10: If you connect to internet successfully, they will show "Connected"

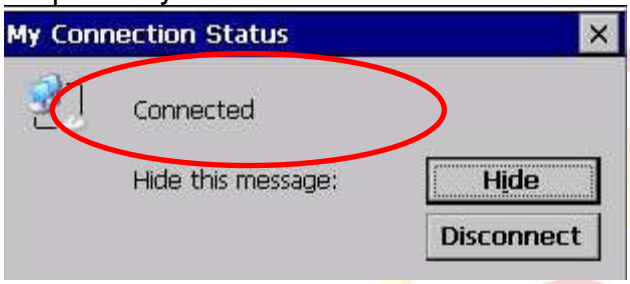

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000