How to Use FTP/Telnet authentication


Applies to:

Platform	***OS version***	***PAC utility version***
WinPAC series	*All versions (WinCE7)*	*All versions*
ViewPAC series	*All versions (WinCE7)*	*All versions*

Please perform the follow steps to set the "User name" and "Password", before the user login the "Telnet" and "FTP" of the "WinPAC/ViewPAC".

Add a User for FTP and Telnet

Step1: Run PAC utility and Click “Network -> Login Tab”
Step2: Type the user name and password. (The length of input characters must be less than 20.)
Step3: Press “Add” button.

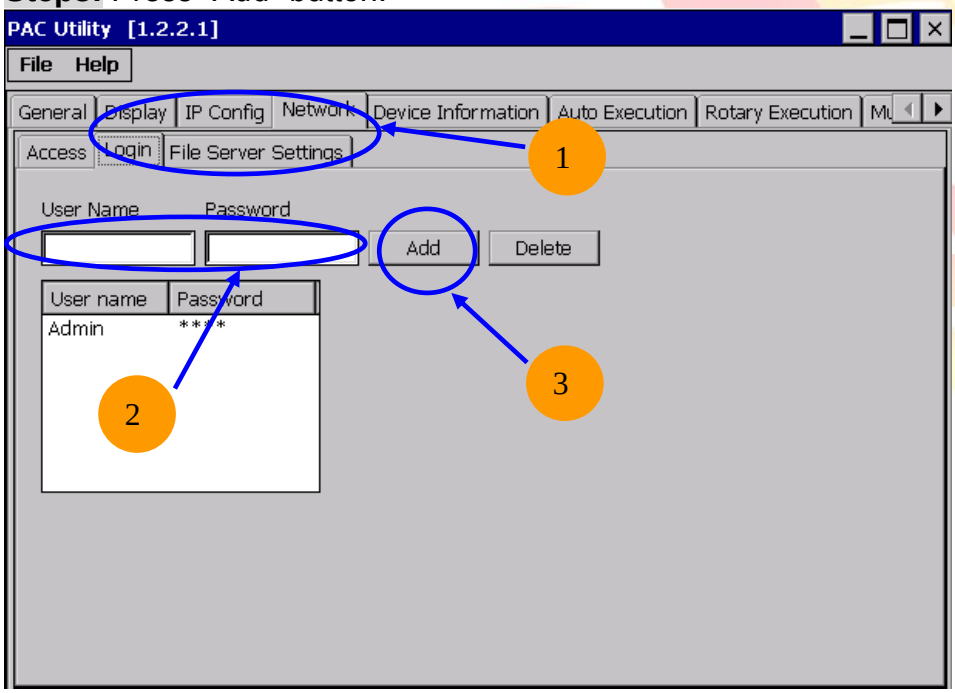


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Delete a User for FTP and Telnet

Step1: Click any user in the “User name” field.

Step2: Display the user name that is chosen.

Step3: Press “Delete” button to delete the user name.

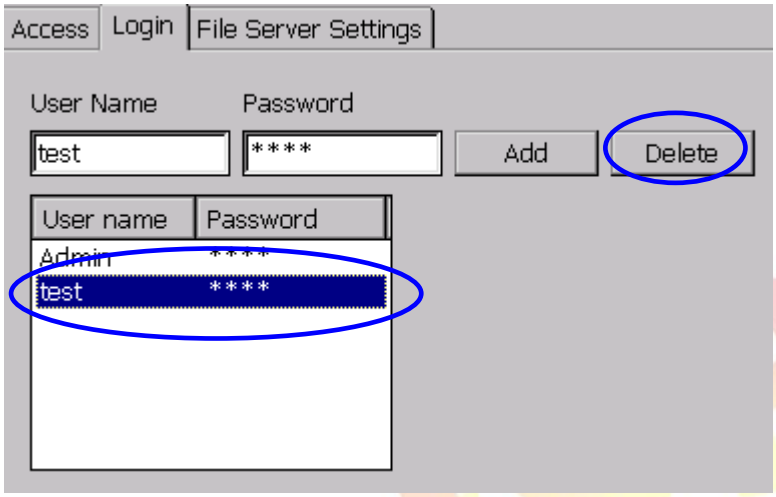

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Use Telnet to Login WinPAC from PC


Step1: Start →Run on PC.

Step2: Type “cmd “to call a console window.

Step3: Type “telnet (IP address)” to connect to WinPAC.

Step4: If connection operation succeeds, type user name and password to login.

Step5: Login successfully.

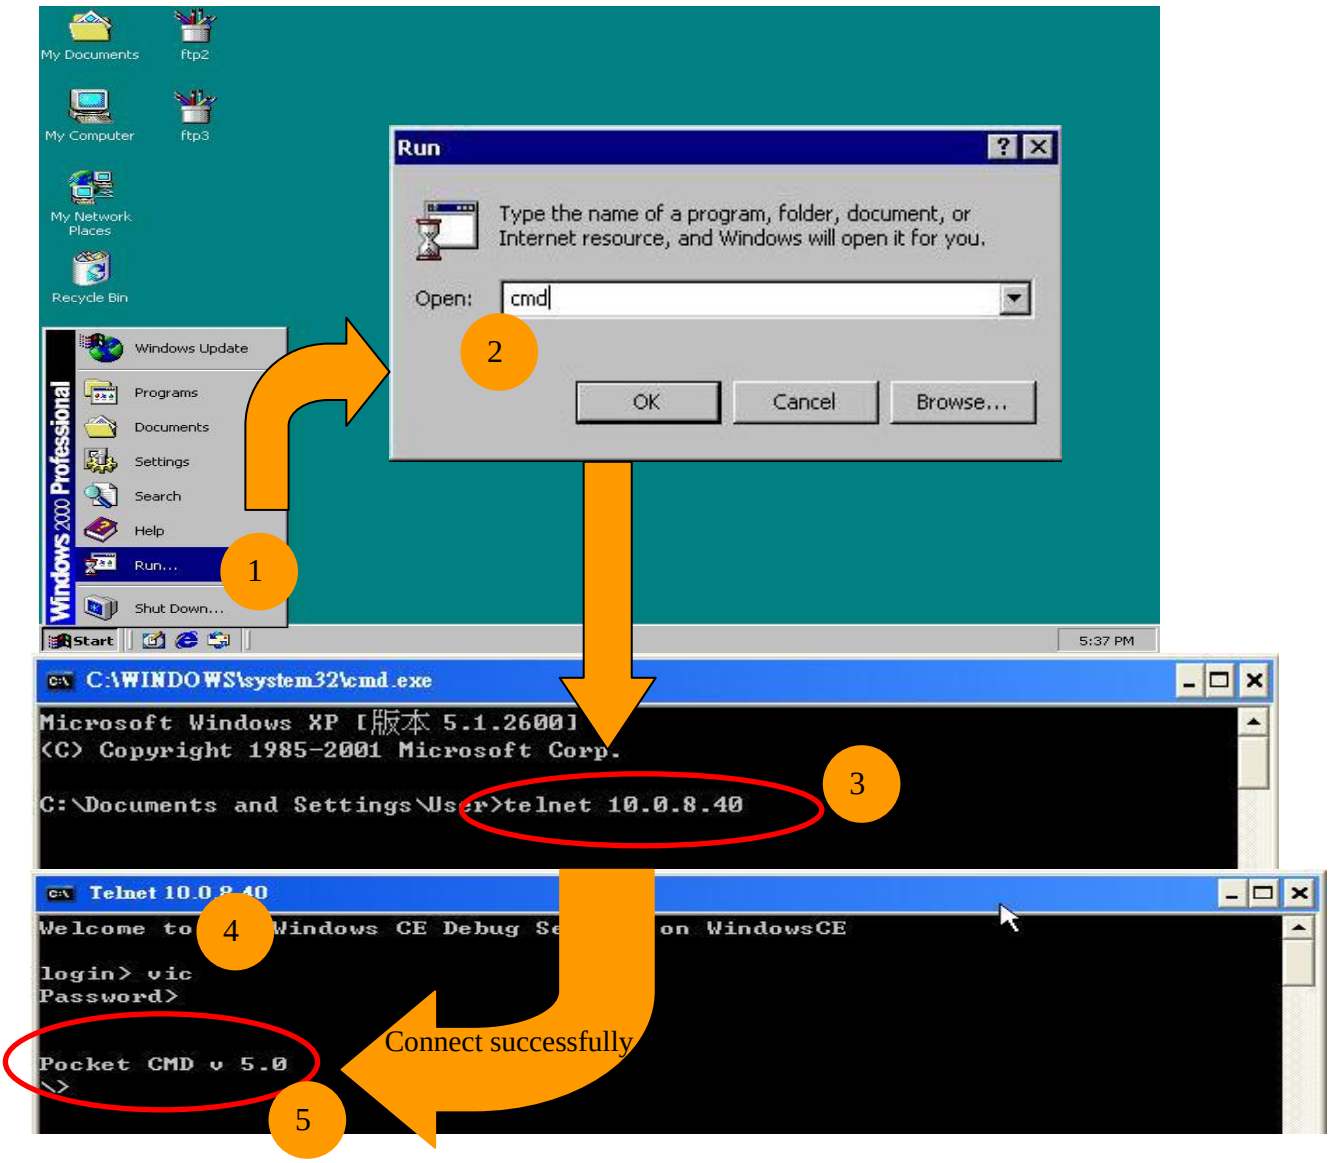


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Use FTP to Login WinPAC from PC

On WinPAC side:

Step1: Set FTP in the PAC Utility.
FTP: Enable.
Allow Anonymous: Disable.

Step2: Click"**Apply**".

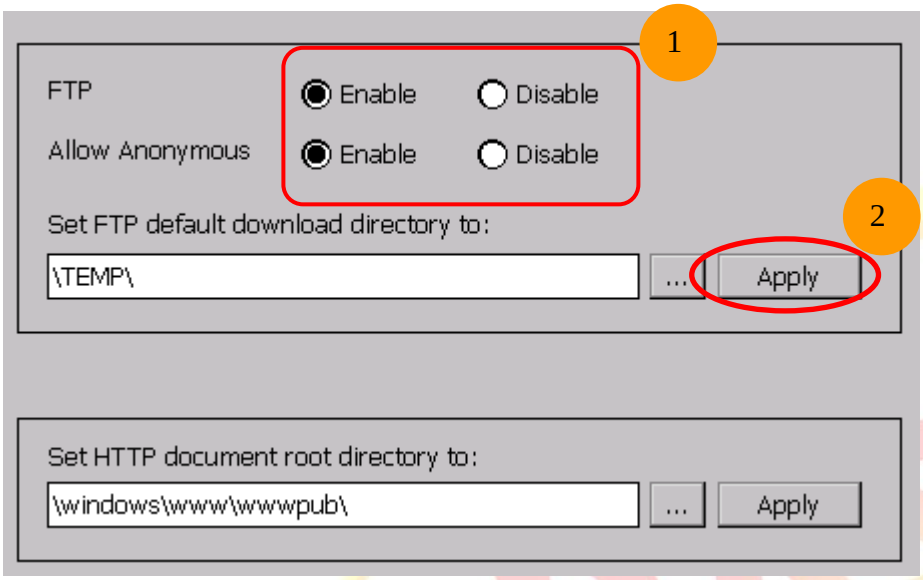


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

On PC side:

Step3: On PC, open a windows and type “ftp:// (IP address)” and press “Enter”.

Step4: Click right mouse button and select “Login As…”.

Step5: Input user name and password.

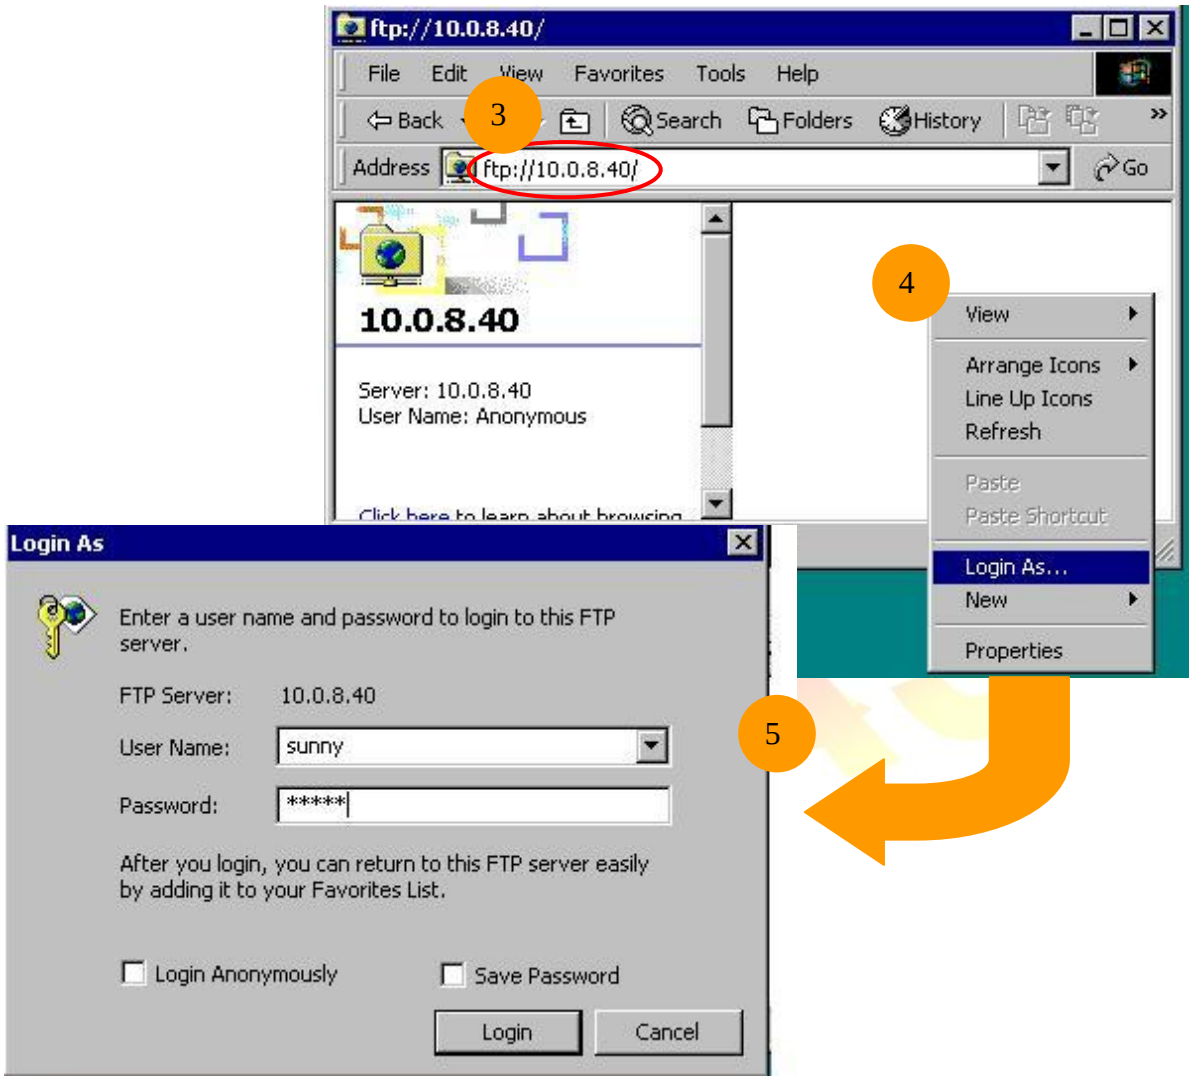

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000