What is UWF? Enable and disable WUF

Applies to:

platform	*OS version*	*PAC Utility version*
XP-9000-IoT/AXP-9000-IoT	*Windows 10 IoT*	*All versions*


What is UWF?

UWF (Unified Write Filter) is an optional Windows 10 feature that intercepts and redirects any writes from the disk drive to temporary memory instead of being written to the disk to protect your disk. These data are usually cleared when reboot or the user logs out.
In XP-9000-IoT/AXP-9000-IoT, UWF is used to protect the C slot.

Enable and disable UWF


When XP-9000-IoT/AXP-9000-IoT leaves the factory and after recover the OS, UWF is turned on (protected) by default. When you need to install new applications or change system settings, you can run the PAC Utility tool on the desktop to turn off UWF protection. After completing the action, please turn UWF back on to protect system security.


1. Execute PAC_Utility on your desktop

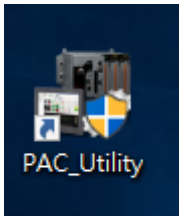

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


2. Switch to the UWF operation screen, select Disable for UWF Control, and a warning window will pop up after clicking Apply.
   After pressing YES, please restart your XP-9000-IoT to make the settings take effect.

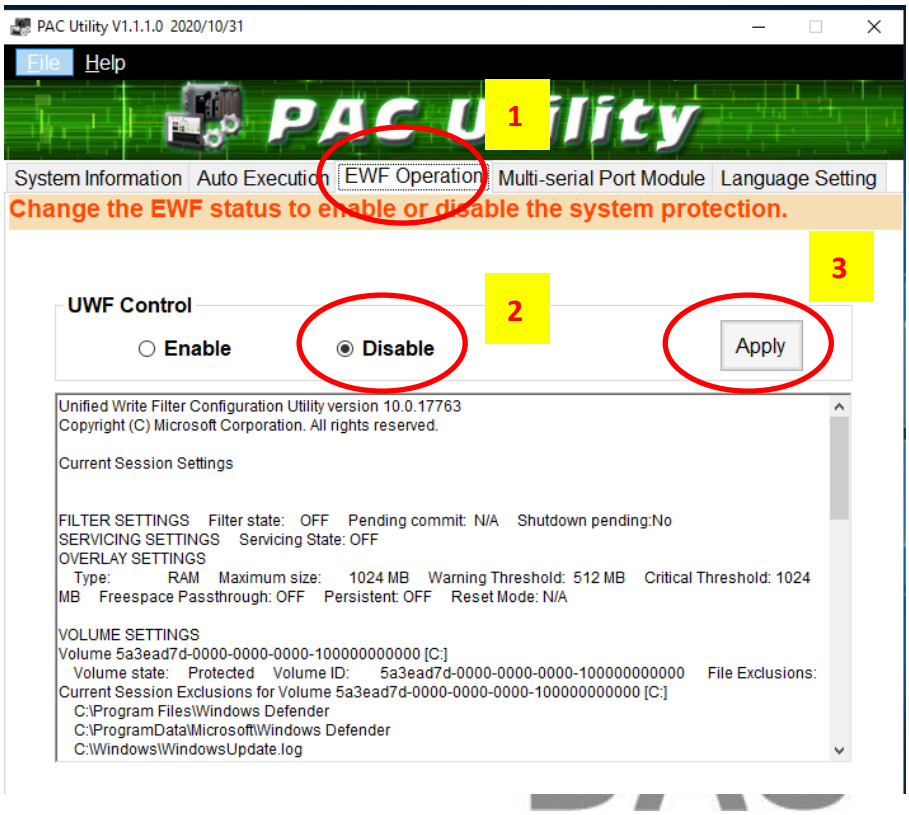


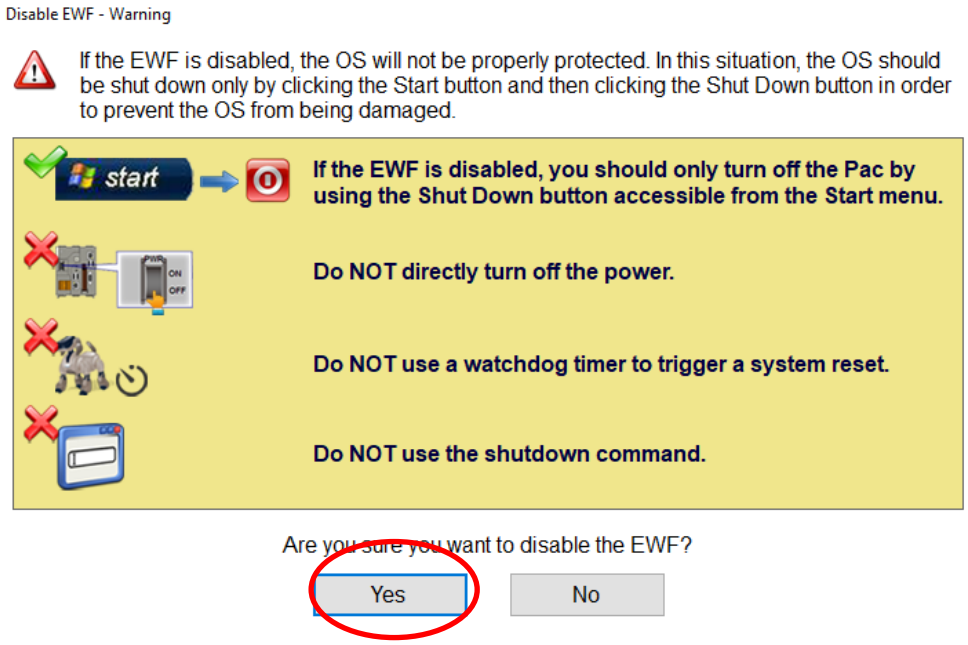


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. To enable UWF, please select Enable in UWF, and then click Apply. A window will pop up to remind you to restart your computer.
   After clicking OK, please restart your XP-9000-IoT/AXP-9000-IoT to make the settings take effect.

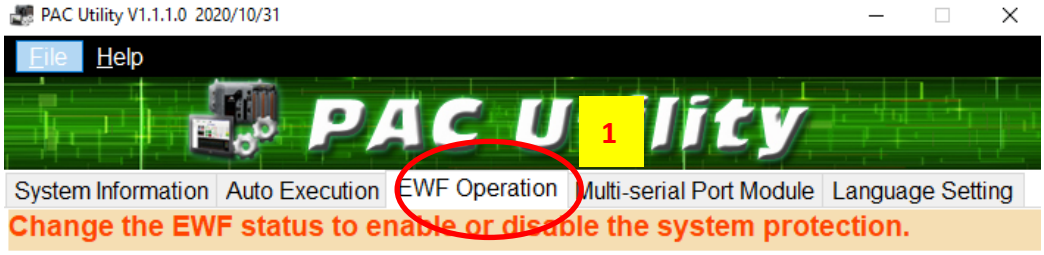

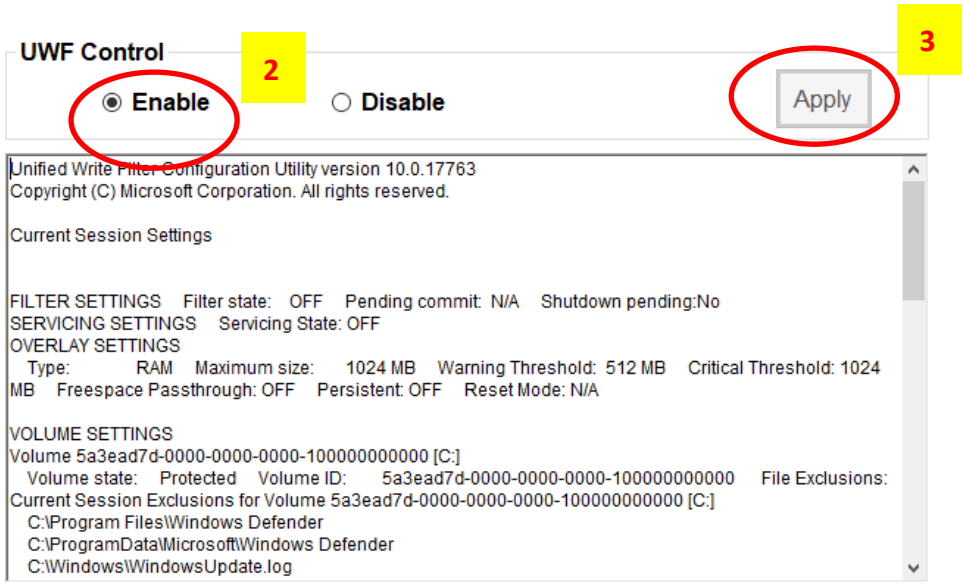

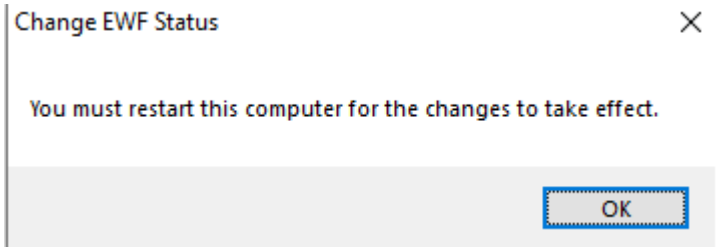

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000