
How to update iSN-81x-MRTU firmware

- Take iSN-812-MRTU for example

1. Set Initial Pin to Init

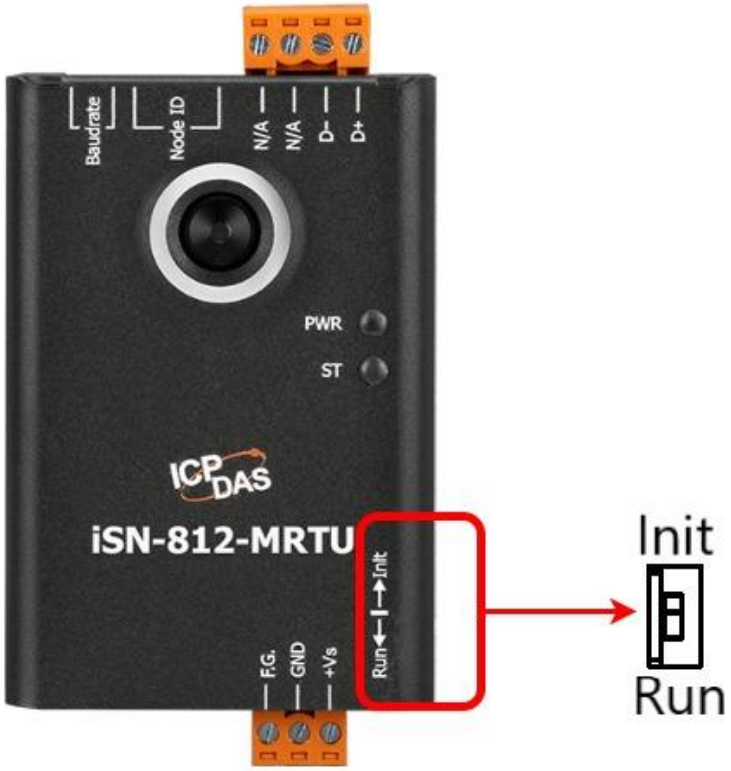

2. Connect PC and iSN-812-MRTU via RS-485


(Don’t connect other device in RS-485)



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


3. Restart iSN-812-MRTU

4. Right click “UARTupdate.bat”, and then click “Edit”

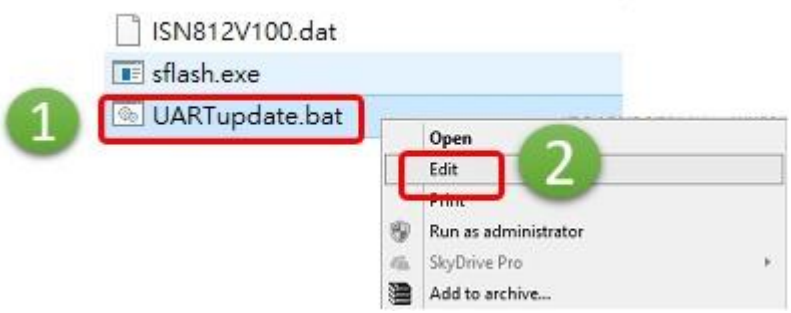


5. Change Com port setting. E.g., Com 2 you should set

“set comport=2”

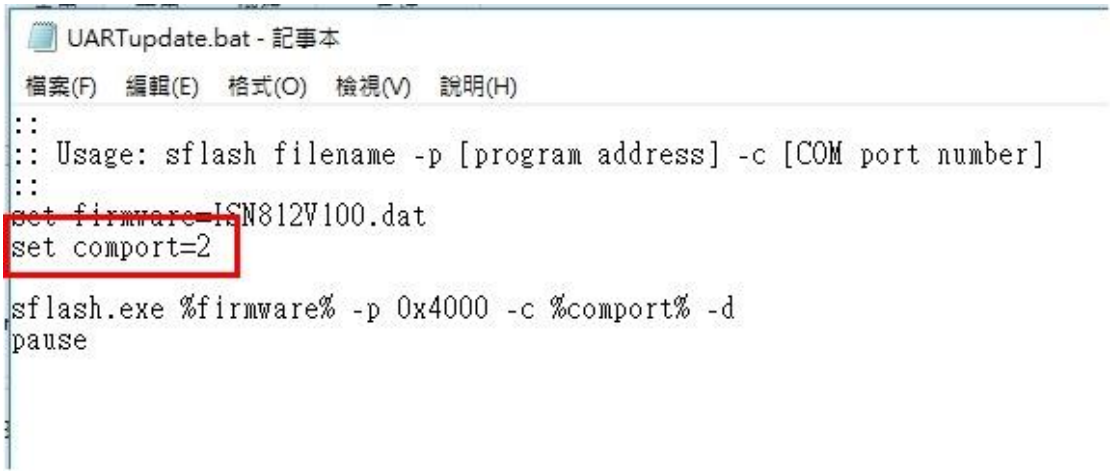

6. Save “UARTupdate.bat” file


7. Double left click “UARTupdate.bat”. Start Updating Firmware

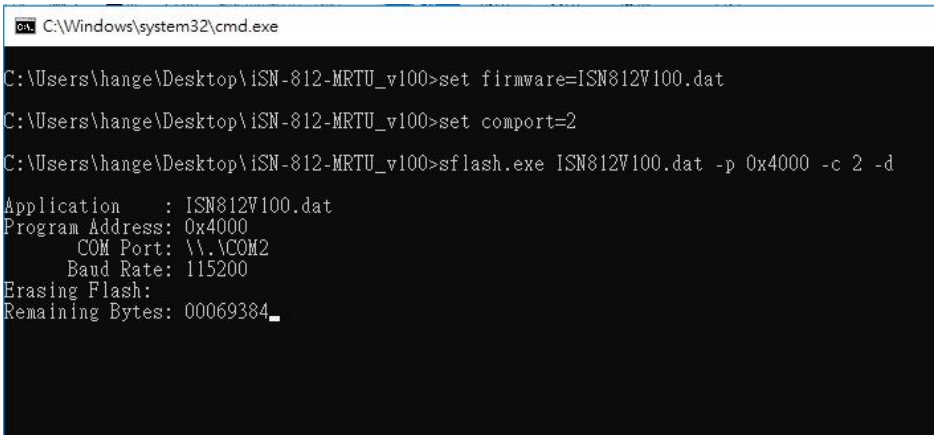

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8. When “Successfully download to device” message occurs, it means that updating firmware is finished.

Press any key to close this window.

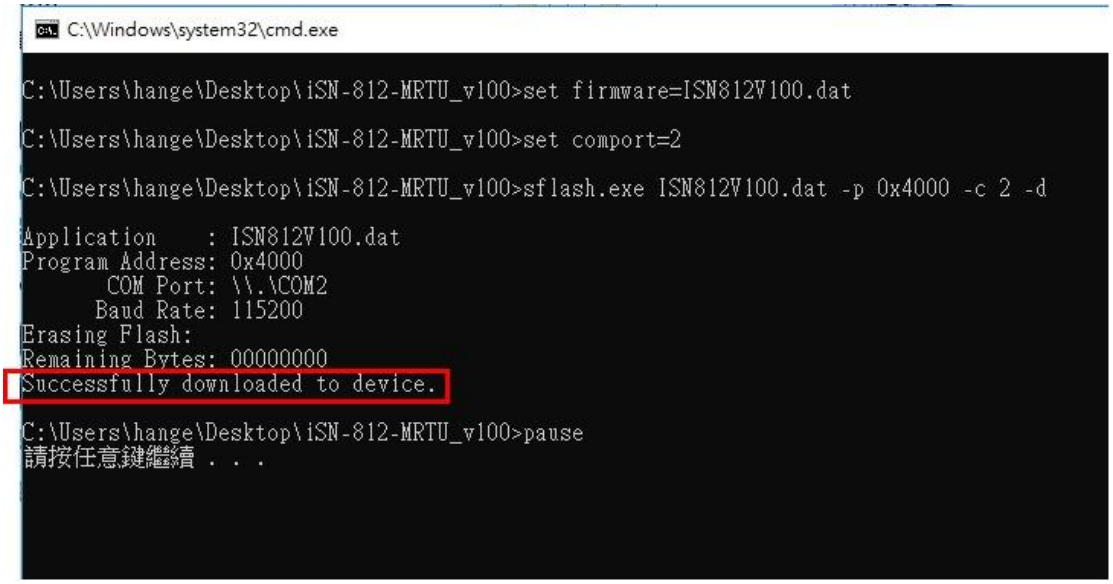

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000