
# How to compile UniDAQ lib using MinGW in Windows?

| Applies to: | | | No. L3-003 |
|---|---|---|---|
| Platform | OS version | SDK version | Classification |
| Window | All versions | — | Software Development |

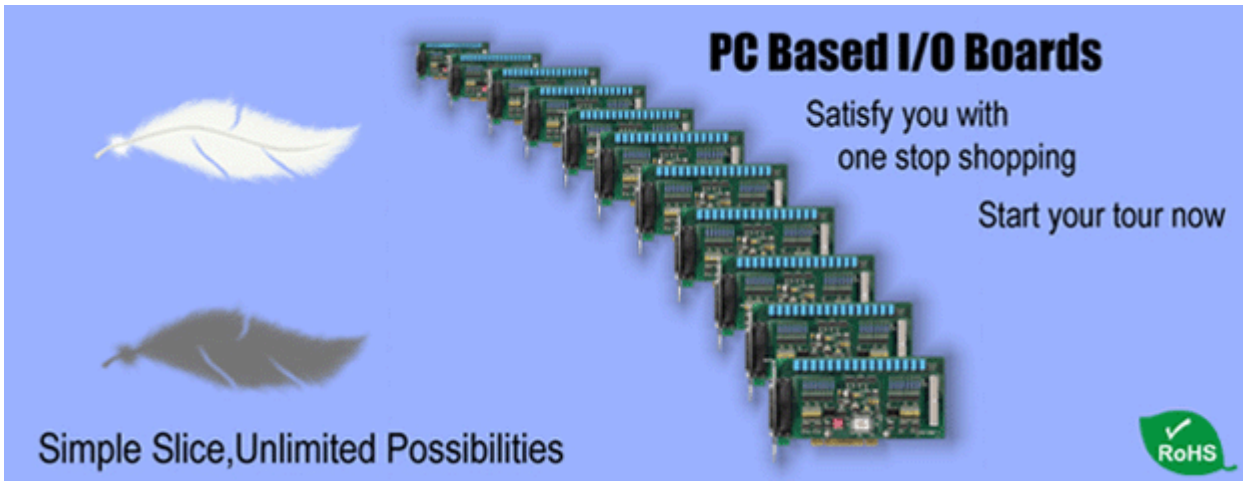


User can download **MinGW** in below link first:
http://jaist.dl.sourceforge.net/project/mingw-w64/Toolchains%20targetting%20Win32/Personal%20Builds/mingw-builds/installer/mingw-w64-install.exe

Notice the Setting select, please refer to Fig 1-1

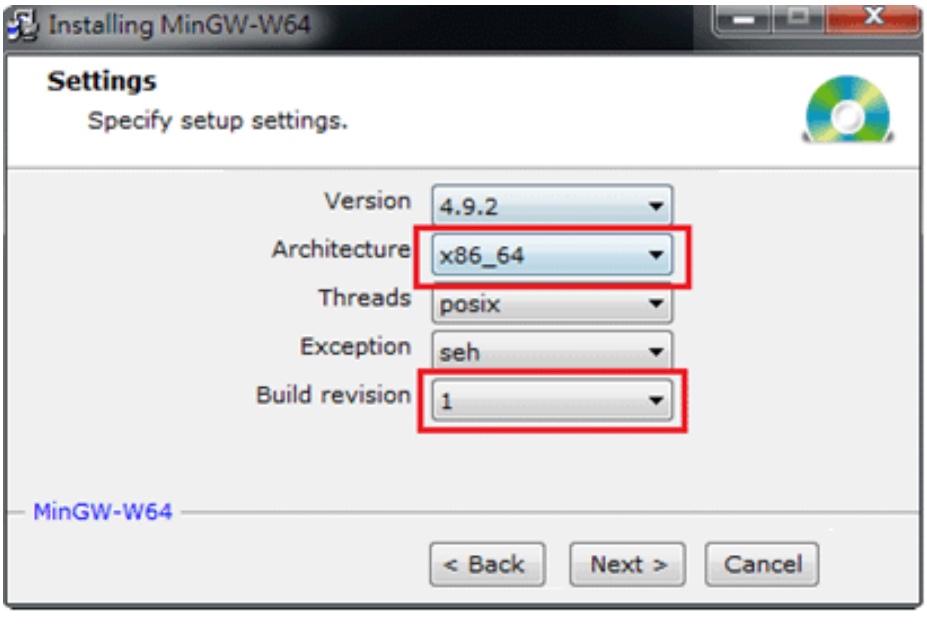



Fig 1-1

In Architecture option, if your computer is X86, please select i686, if X64, please select x86_64 In Build revision option, please select 1.


Copyright © 2020 ICP DAS Co., Ltd. All Rights Reserved.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

After installing, user can execute “**Run Terminal**” in start menu or “**mingw-w64.bat**” in directory.

User can download demo program in below links, if X86, select IO_32_VC.zip, if X64, select IO_64_VC.zip.

**X86**

IO_32_VC.zip

**X86_64**

IO_64_VC.zip

Decompress zip file and using **MinGW** to compile demo program, please refer to Fig 1-2

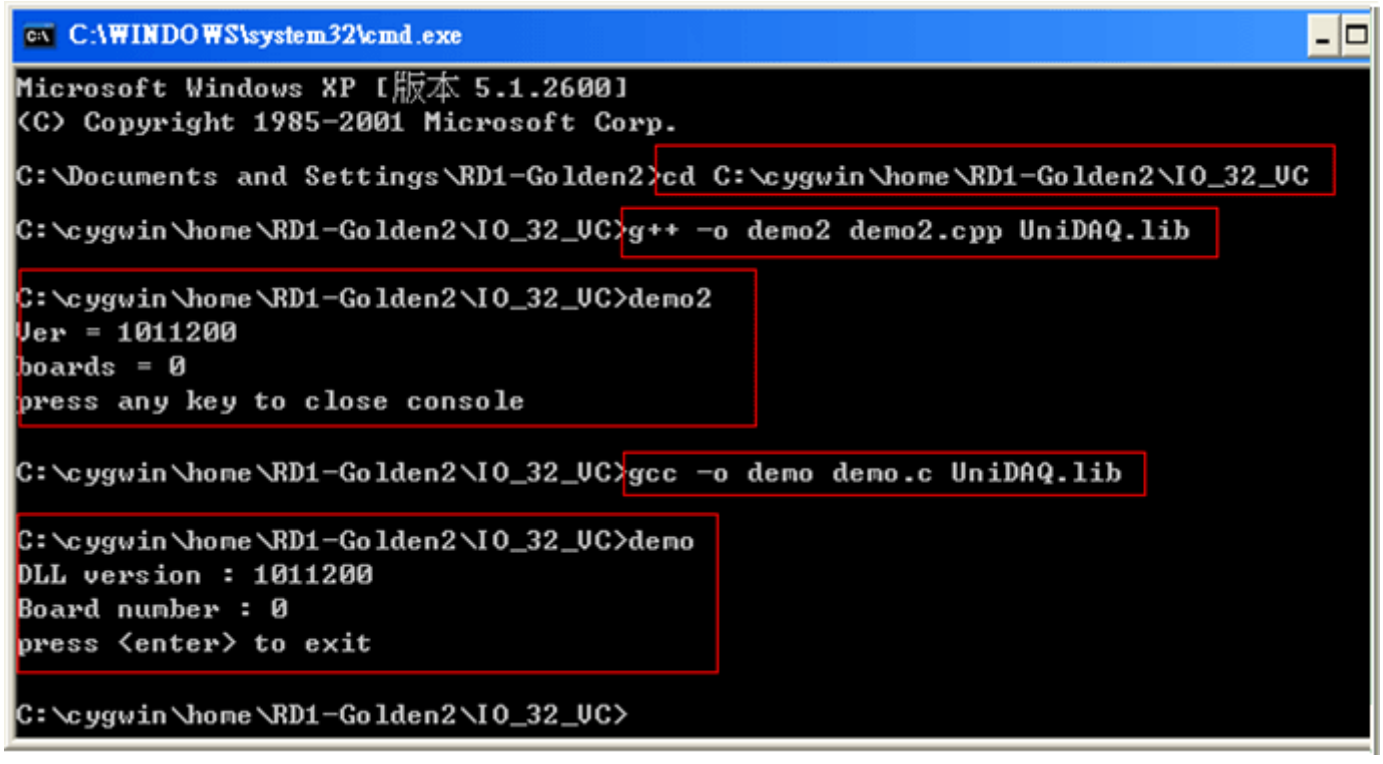



Fig 1-2


Copyright © 2020 ICP DAS Co., Ltd. All Rights Reserved.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000