M2M-710D

FAQ

Version 1.01



LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of Contents

Q1: If I forget the M2M-710D's IP, how can I set and operate the M2M-710D by web browser? 3
Q2: Client cannot connect to Server. 4
Q3: Server and Client can't establish Com Port connection. 6
Q4: Why can not the PC of user connect to M2M-710D in VxComm mode? 7
Q5: What kind of version does the VxComm driver support M2M-710D on user's PC? .. 7
Q6: Why can't M2M-710D connect to VxServer after making sure that the setting of server IP and port are correct and that the server executes VxServer? 8


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

FAQ

Q1: If I forget the M2M-710D's IP, how can I set and operate the M2M-710D by web browser?

A1：

(1) ：Please reset system, and IP address will show again.

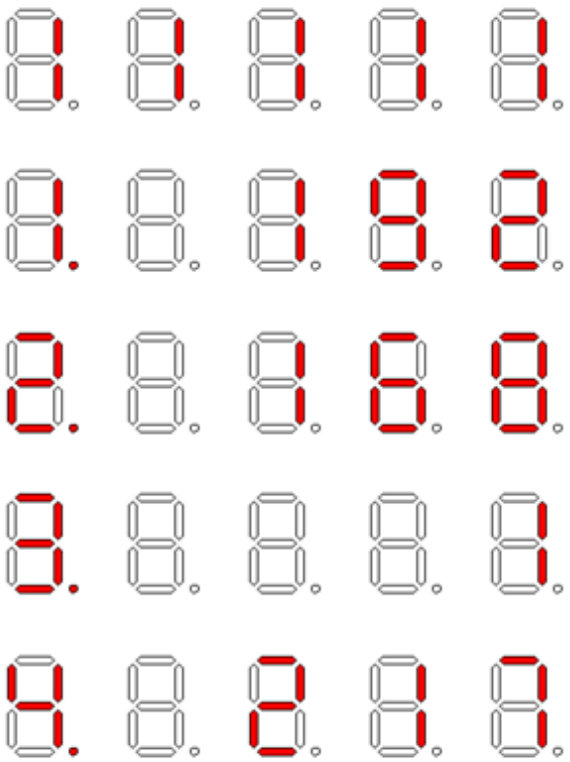

Display IP address

(2)：Init M2M-710D reference 2.3. Default value of IP address is 192.168.1.217


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Q2: Client cannot connect to Server.

A2: Please follow the following steps to check that the network configuration is correct.

Step 1: Check IP of Server and Client is the only. The IP is not the same with the other network device.

Step 2: Please confirm the network configurations are correct. The configurations include IP Address, Net Mask, Gateway and DNS Server. If the configurations are all correct, it should respond to the ping command from PC.

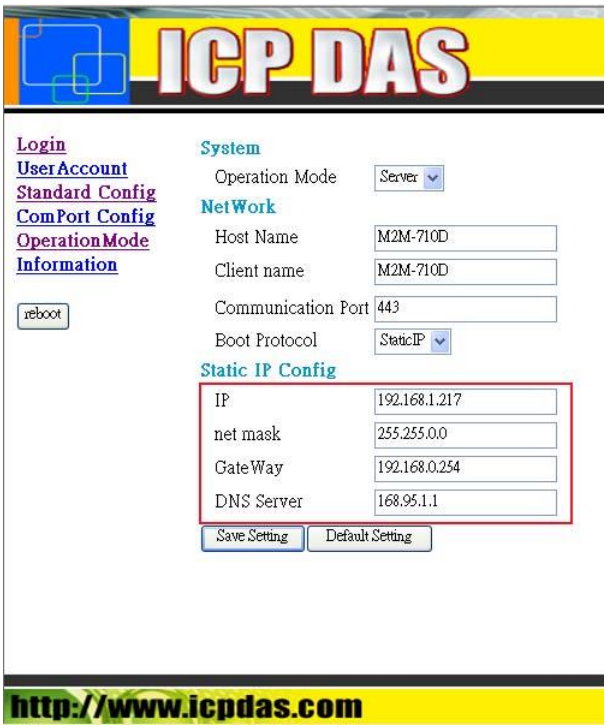

Net setting


Step 3: Please confirm that the following settings are correct.

- ¾ "Server IP" of Client is the same with "IP Address" of Server.
- ¾ "Communication Port" of Server and Client are the same.
- ¾ "Operation Mode" of Client is "Client".
- ¾ "Operation Mode" of Server is "Server".

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000



Client's "Standard Config" page

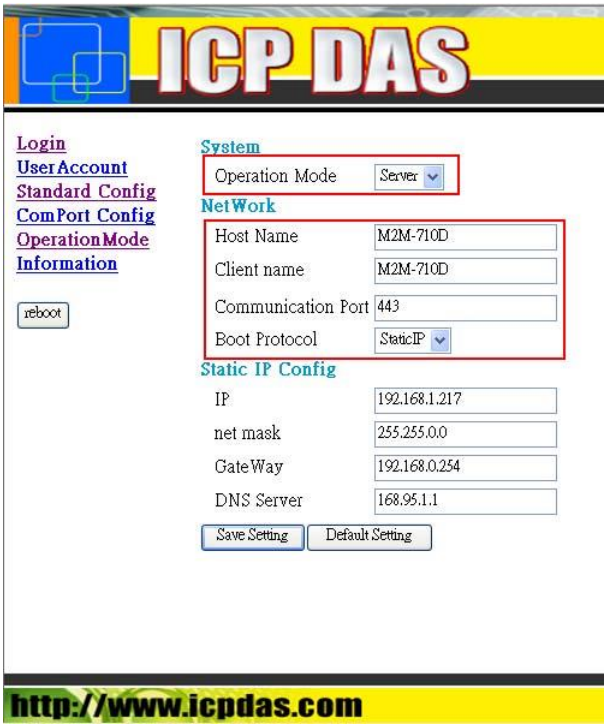

Server's "Standard Config" page

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Q3: Server and Client can’t establish Com Port connection.

A3: Please follow the steps to check below.

Step 1: Confirm client’s name is the same as server permission name list.

Step 2: Confirm comport setting of server and client. Server comport setting must the same setting as client.



Comport setting of server

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000



Comport setting of client

Step 3: Does the inspection wiring have the question?

Q4: Why can not the PC of user connect to M2M-710D in VxComm mode?

A4: Please confirm the mask address. The mask address of PC and M2M-710D must be the same. Like 255.255.0.0

Q5: What kind of version does the VxComm driver support M2M-710D on user's PC?

A5:
Above Vxcomm driver version as v2.9.13
Above M2M-710D's firmware version as v13

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Q6: Why can’t M2M-710D connect to VxServer after making sure that the setting of server IP and port are correct and that the server executes VxServer?

A06: Please make sure M2M-710D is the same domain with gateway, or change "Boot protocol" into DHCP.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000