
How to update Firmware of PROFINET device?

Step 1: Download the PROFINET_FW_Update_Tool software and latest firmware of PROFINET device.


PROFINET_FW_Update_Tool software => Download


Step 2: Please connect Ethernet cable to LAN2 to update firmware.

PFN-2000 series module

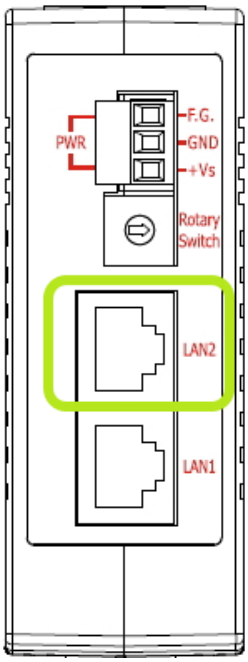

Gateway and Converter module

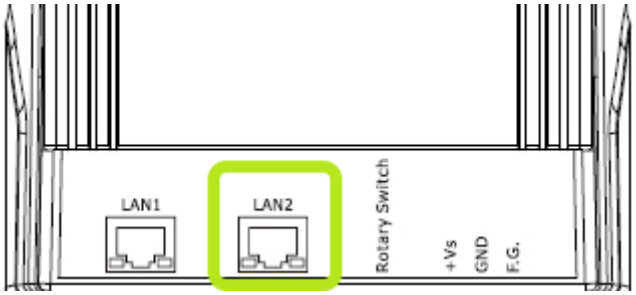

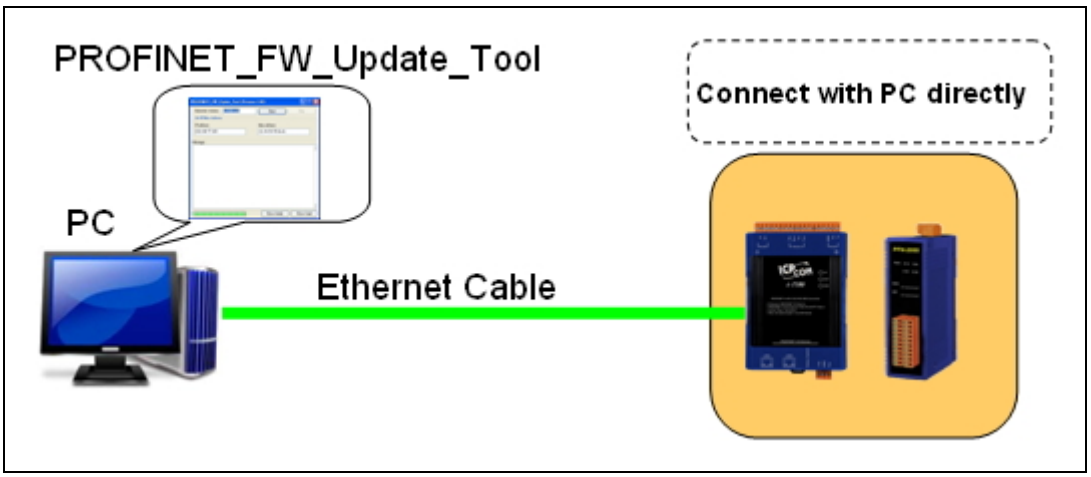


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 3: Please turn rotary switch to “**E**” and turn the “**Power ON**”.




Note 1: PFN-2000 series module =>

S1A, S1B, S2B LED ON and S2A LED OFF

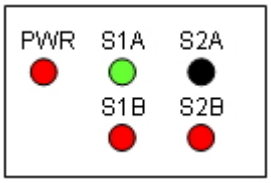


Note 2: Gateway and Converter =>


AP, ERR LED OFF and BOOT LED ON

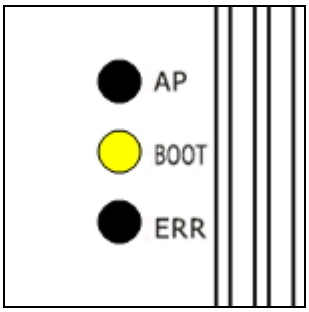


Step 4: Extract the firmware file.

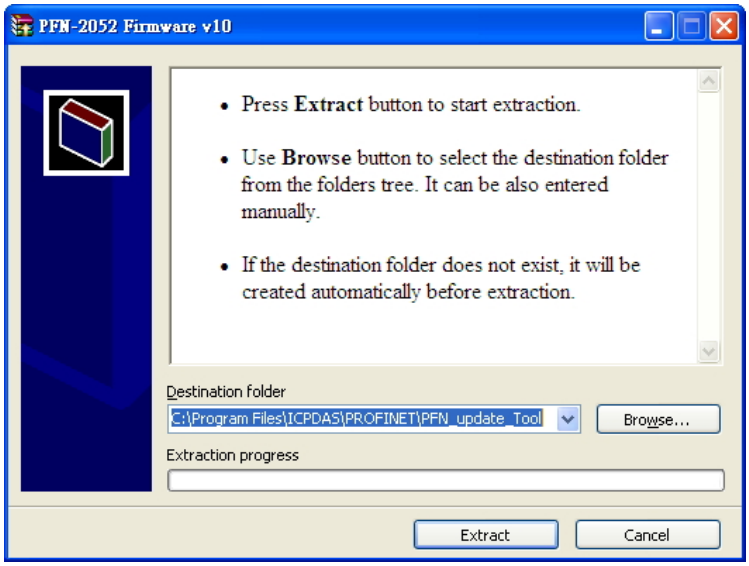


Step 5: Right click "**PFN_Update_Tool.exe**" →"**Properties**"→ "**Compatibility**" →"**Run this program as an administrator**" (for windows 7, 8).

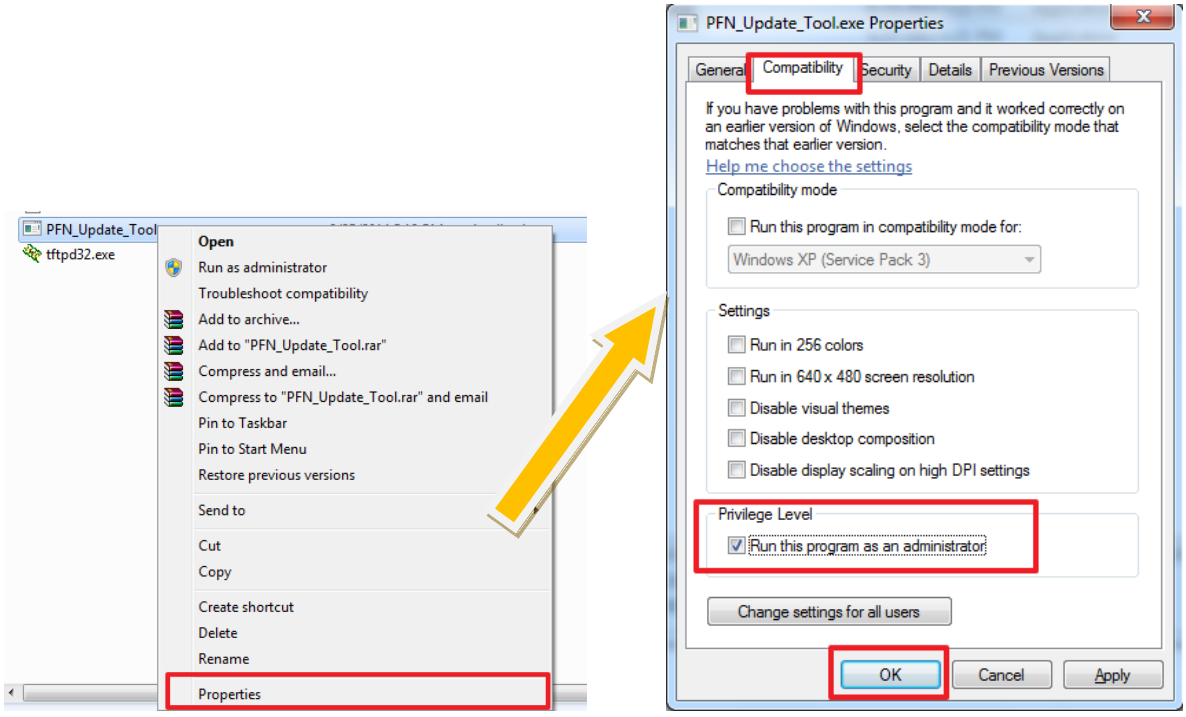


Step 6: Double click "**PFN_Update_Tool.exe**" . Select product and press “**OK**” button.

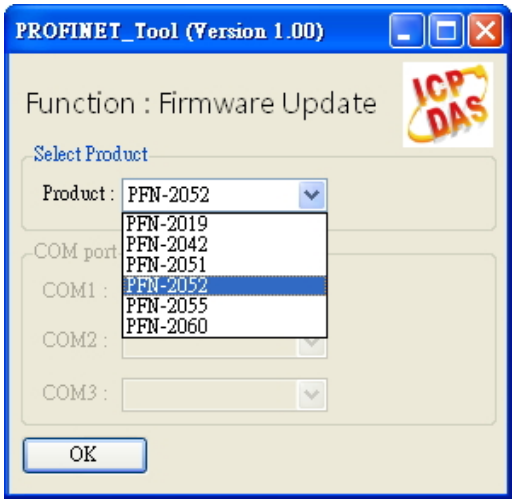


Step 7: Please input device’s IP, and note that PROFIBET device’s IP must have the same domain and different IP with PC.

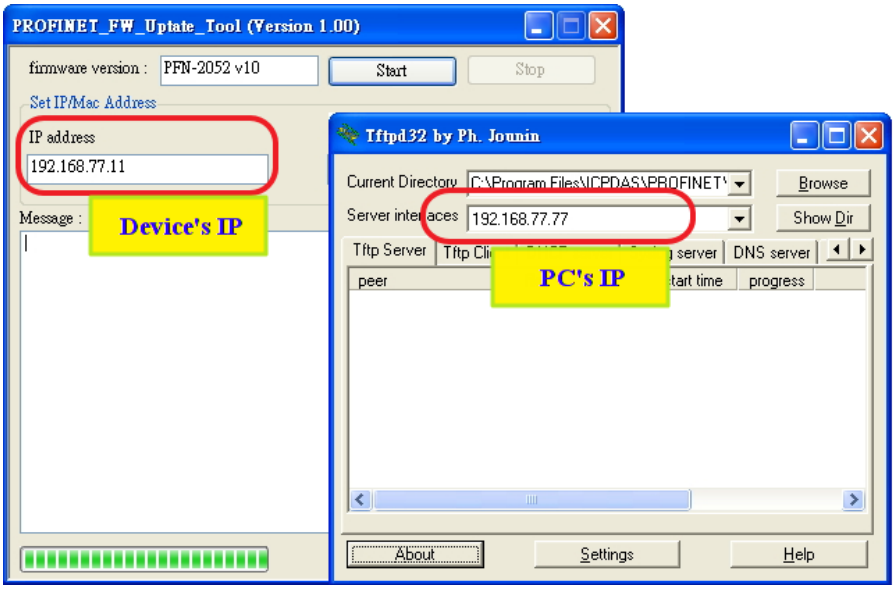

Step 8: Please input device's MAC address. You can find it at cover of device.

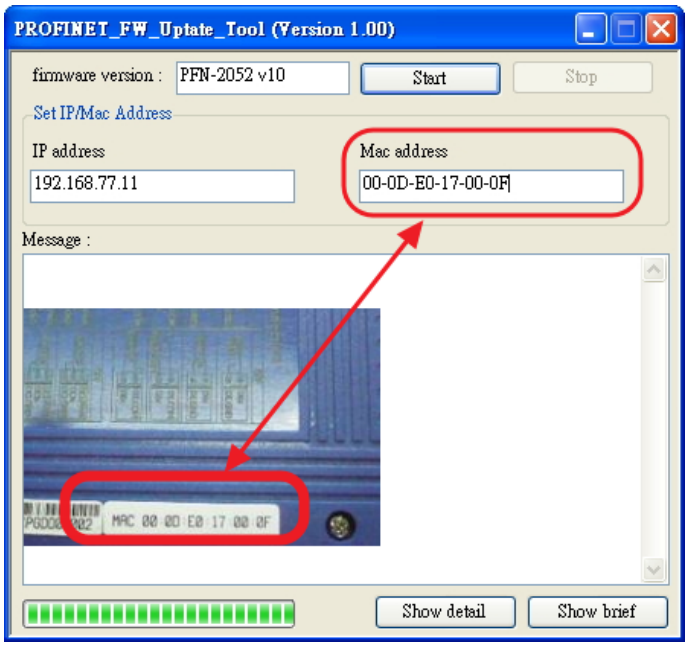

Step 9: Press "**Start**" button to update firmware.

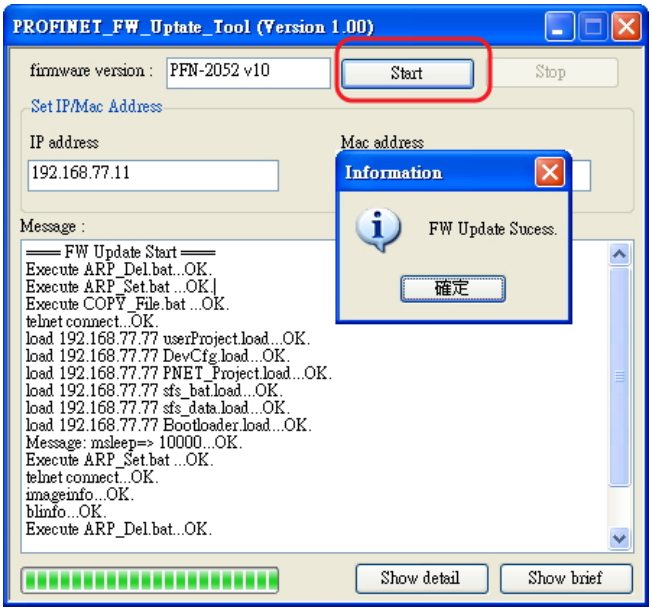


Step 10: Firmware update success, please turn rotary switch to "**0**" and turn power on.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 11: You can use PFN_Tool or MiniOS7 Utility to confirm firmware version.

MiniOS7 Utility

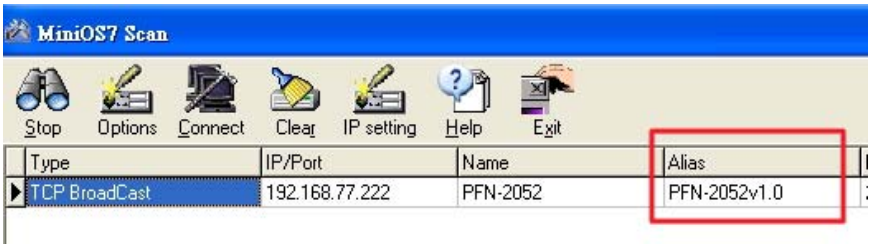

PFN_Tool

