
● How to save the UA collected data into MariaDB in NAS and then show the trend chart in InduSoft? (Take NAS DS712+ as an example)

UA series products of ICP DAS provide a useful service to transfer TCP/RTU data into the database. The NAS can be used to store the database data, and then by using InduSoft can retrieve the data to manage the database easily. Due to the time format written by UA being different from the reading format of InduSoft, here is how InduSoft read data.

(In this example, we use UA-5231M-4GE / Windows 10 64 bits OS / MariaDB 10 Database / NAS DS712+ / DL-302 with Modbus RTU protocol)

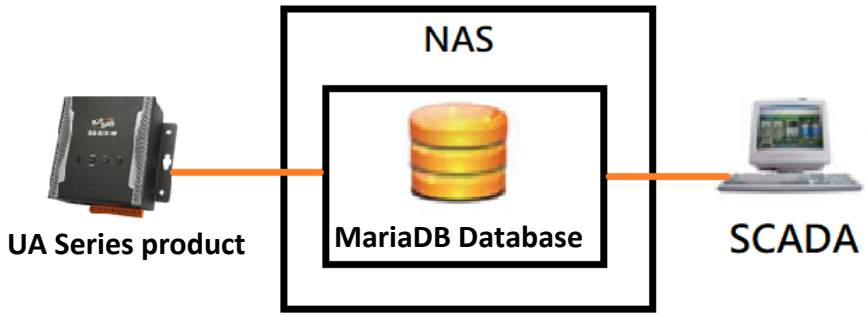

This FAQ will introduce:


1. **How to Create MariaDB Environment in NAS?**
2. **How to set up UA products to save Modbus RTU data into the Database?**
3. **After transferring UA data into Database, how to combine the Date and Time columns?**
4. **How InduSoft read data in the Database?**


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1. How to Create MariaDB Environment in NAS?

First, go to [Package Center] of NAS.


In the [All Packages], select [MariaDB 10] and click on the [**Install**].

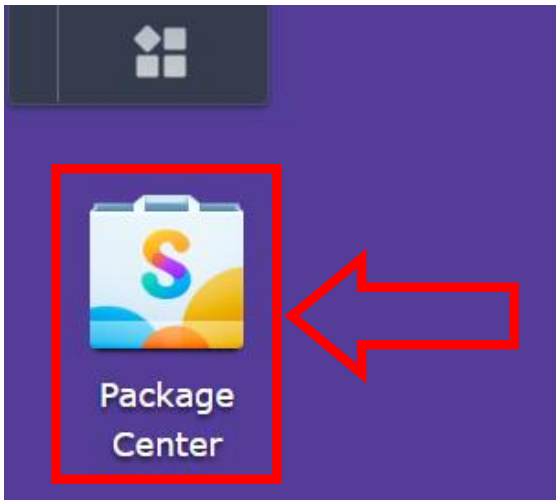


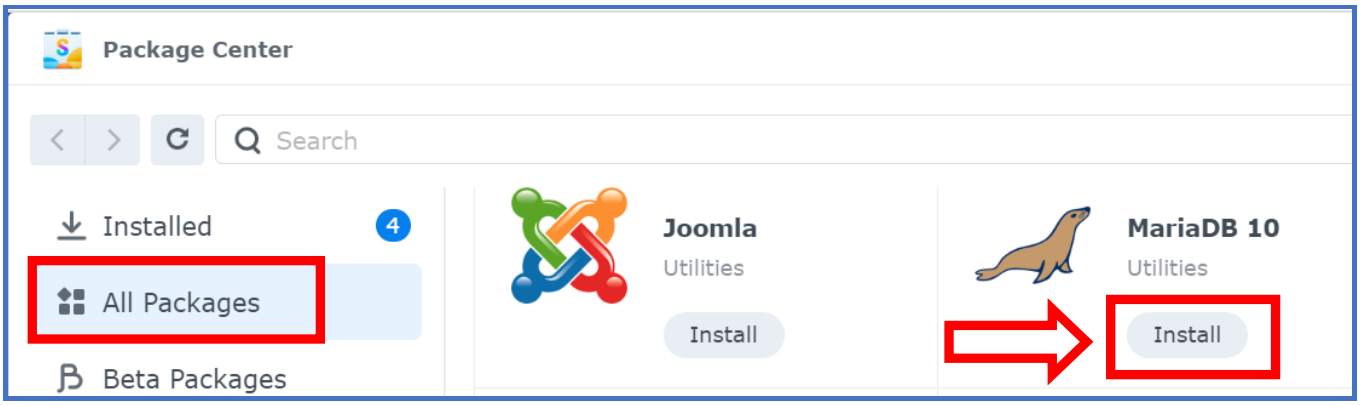

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Fill in the password to install the package.

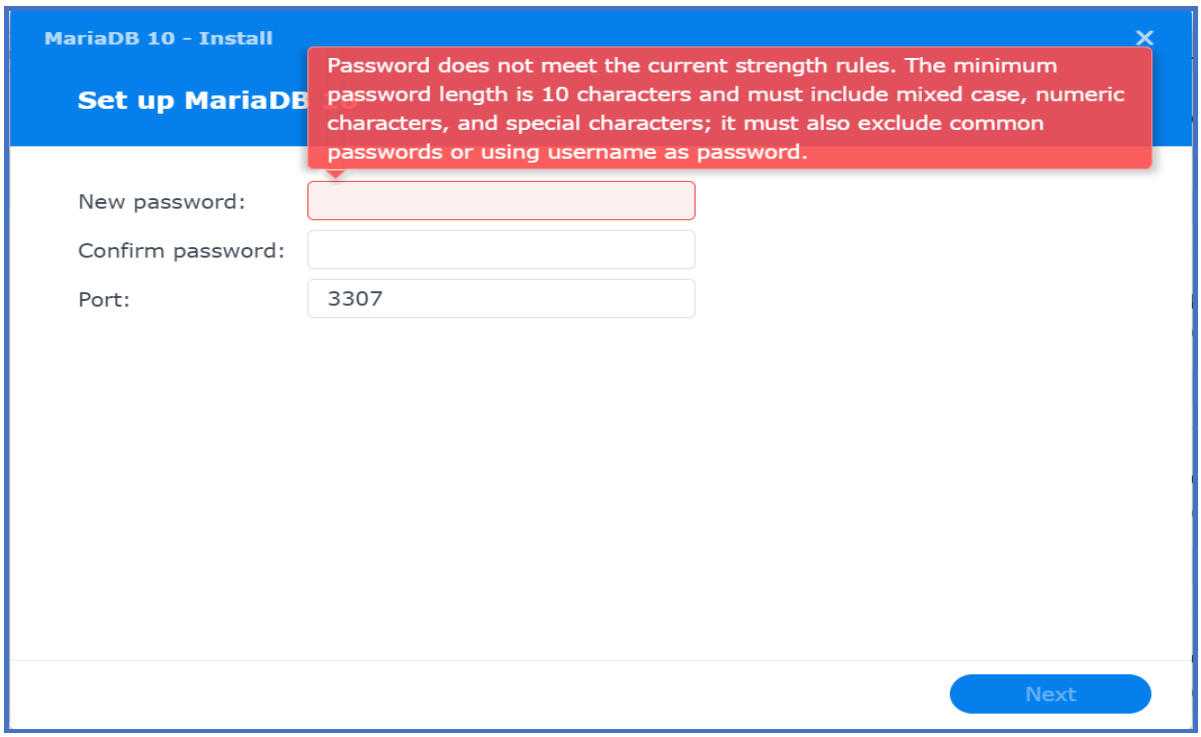

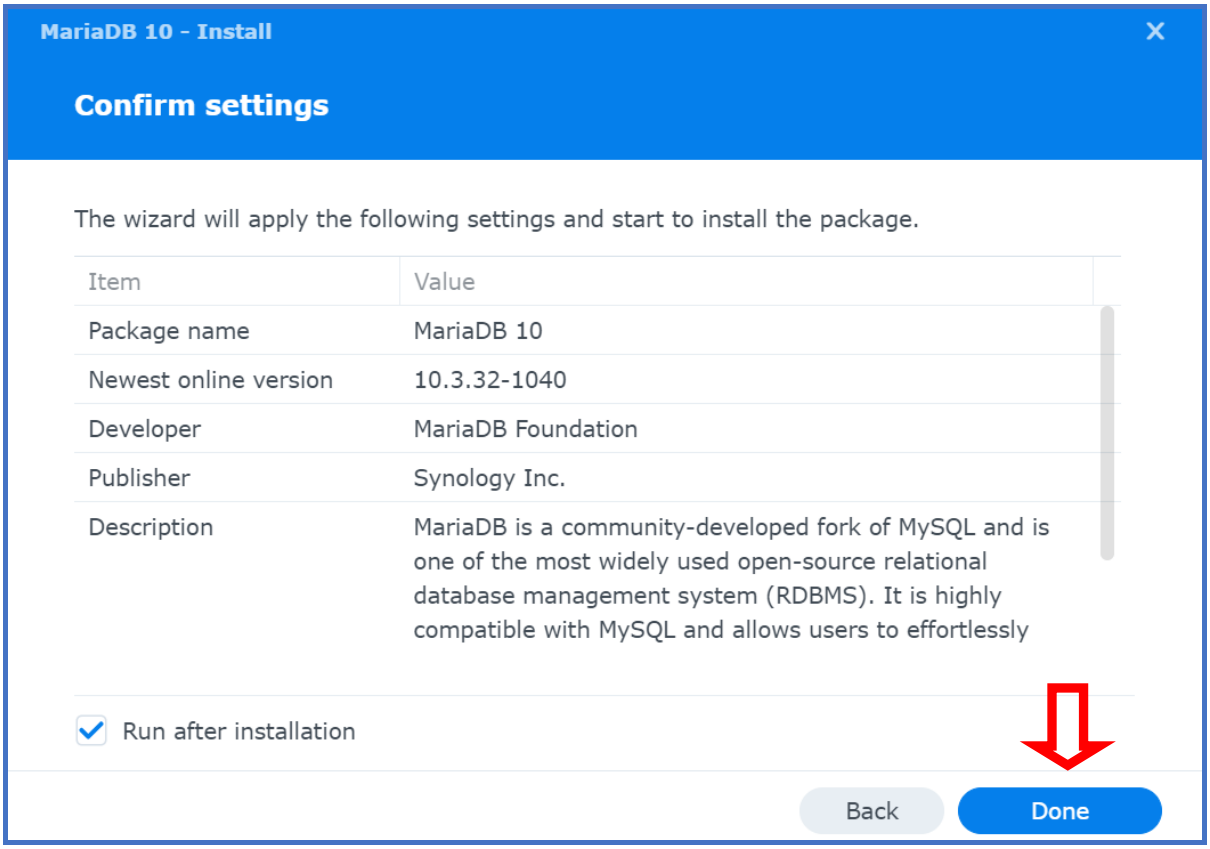


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Run the MariaDB 10.

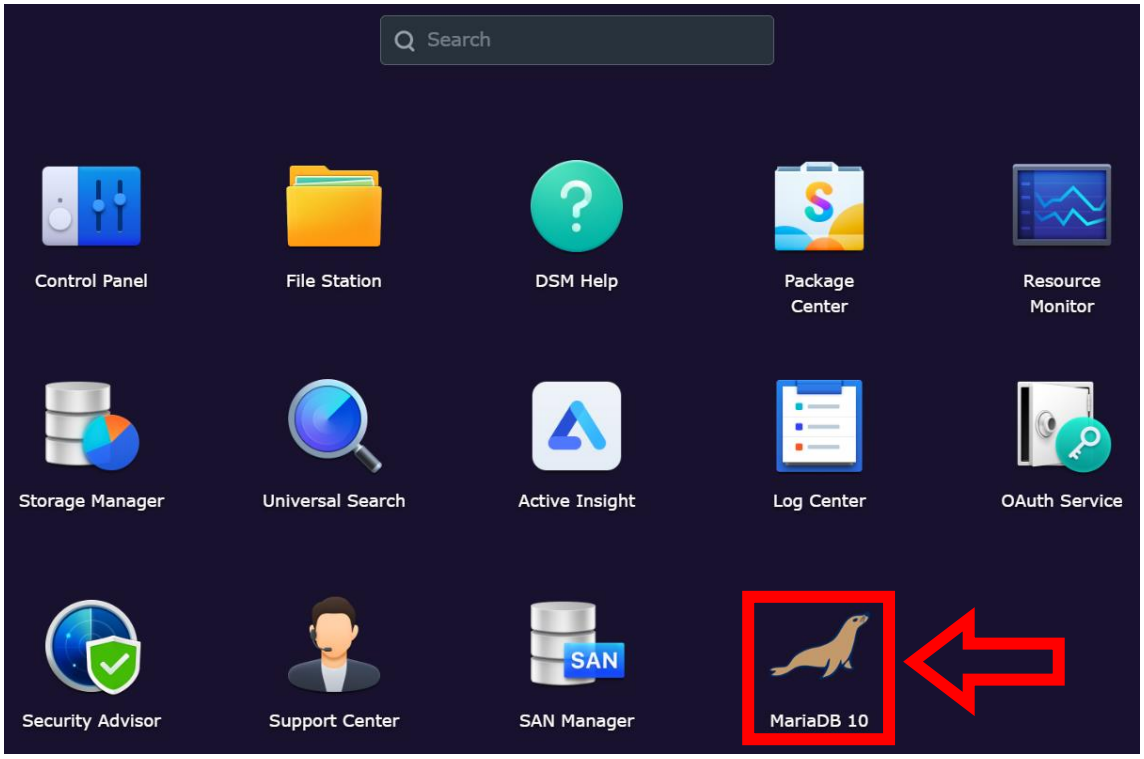


Check the [**Enable TCP/IP connection**] and click [**Apply**].

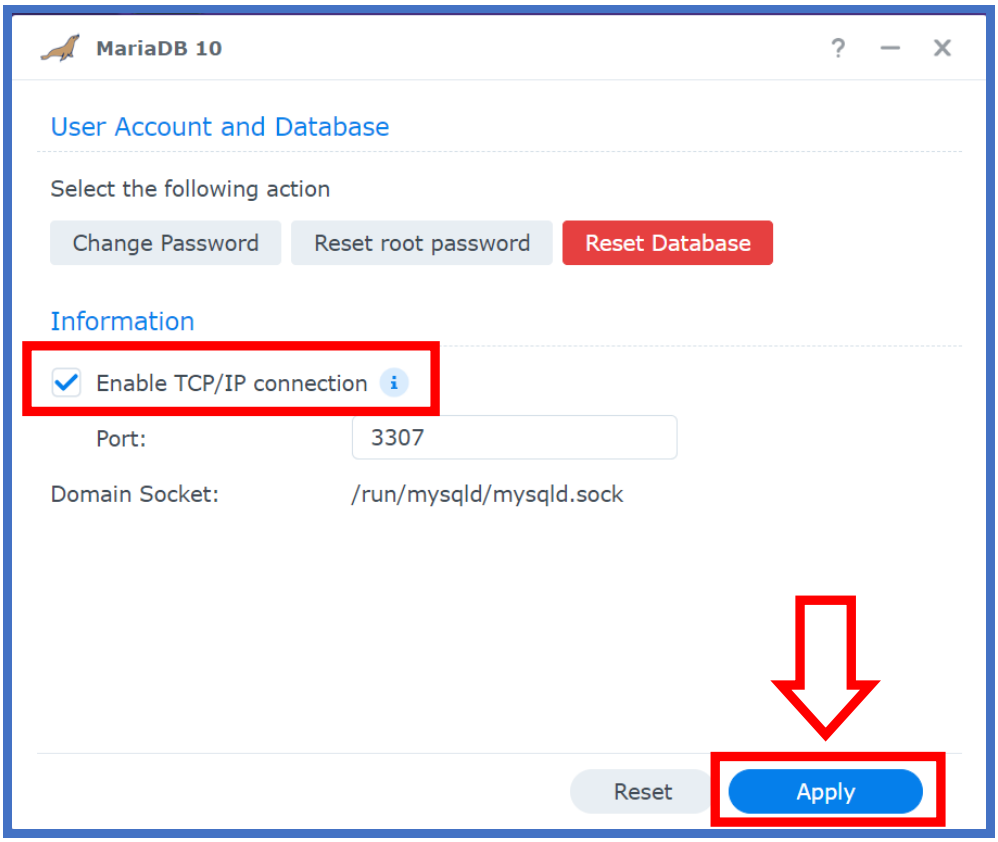


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


In the [All Packages], select [**phpMyAdmin**] and click on the [**Install**].

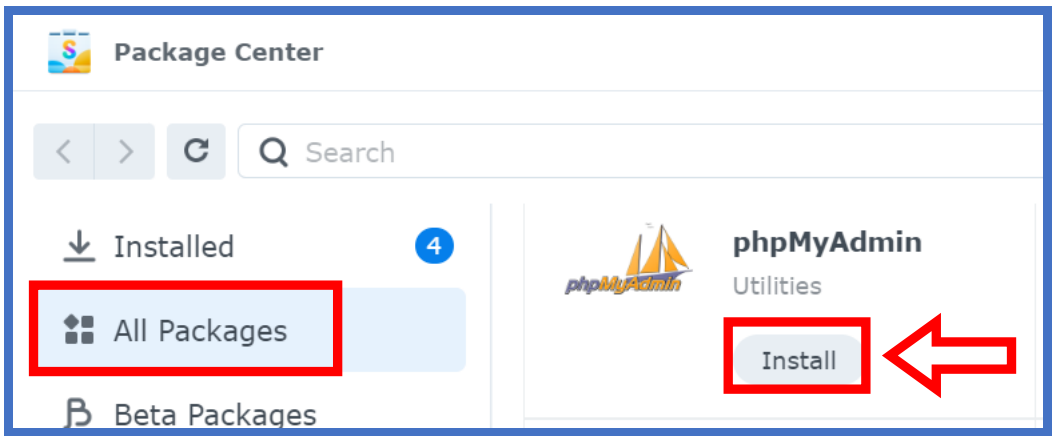


If the firewall is enabled, go to [**Control Panel**] and then the [**Security**] to set it up.

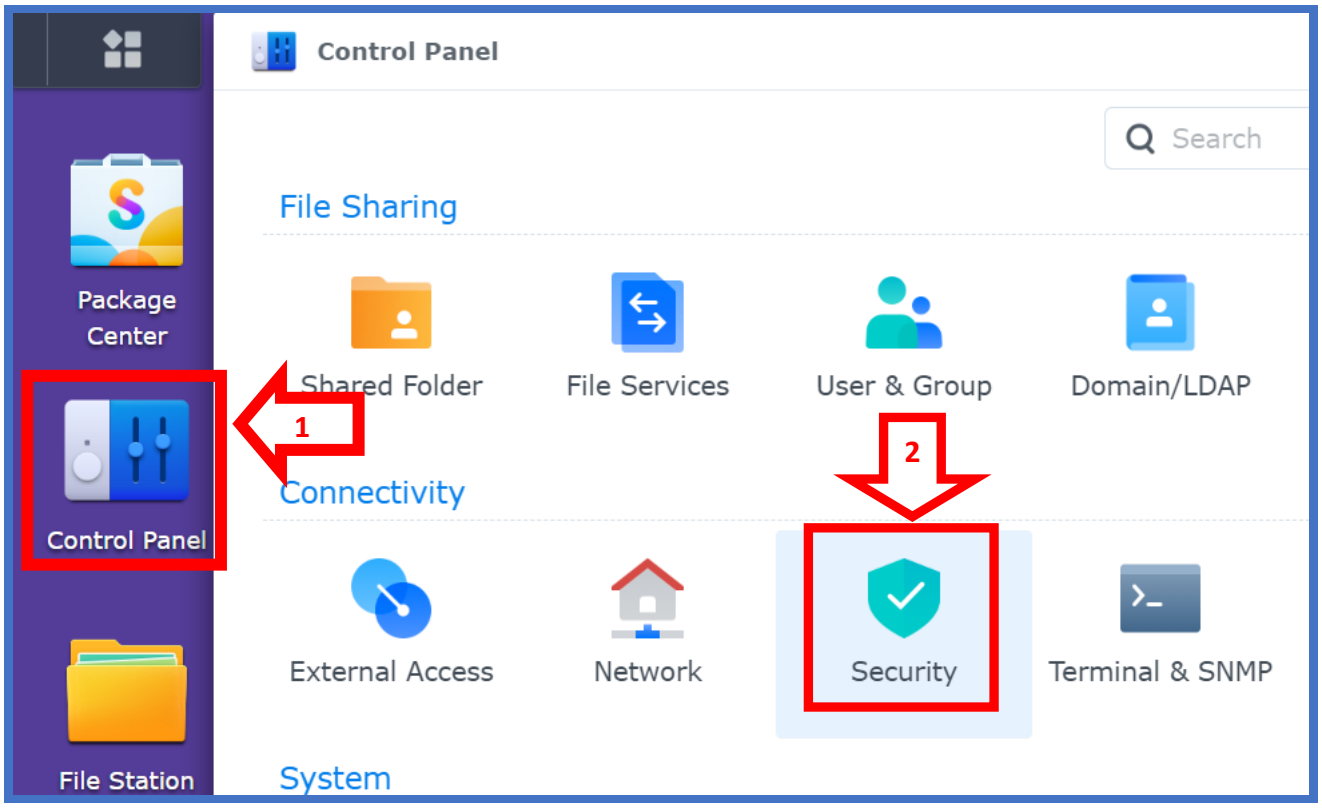


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

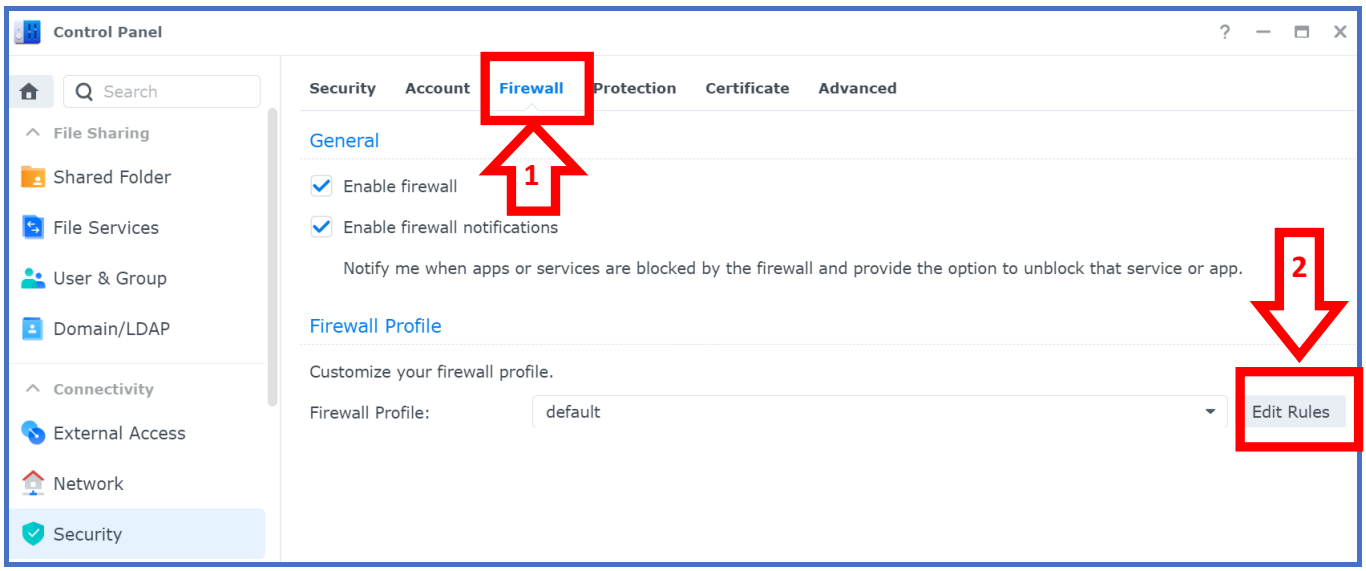


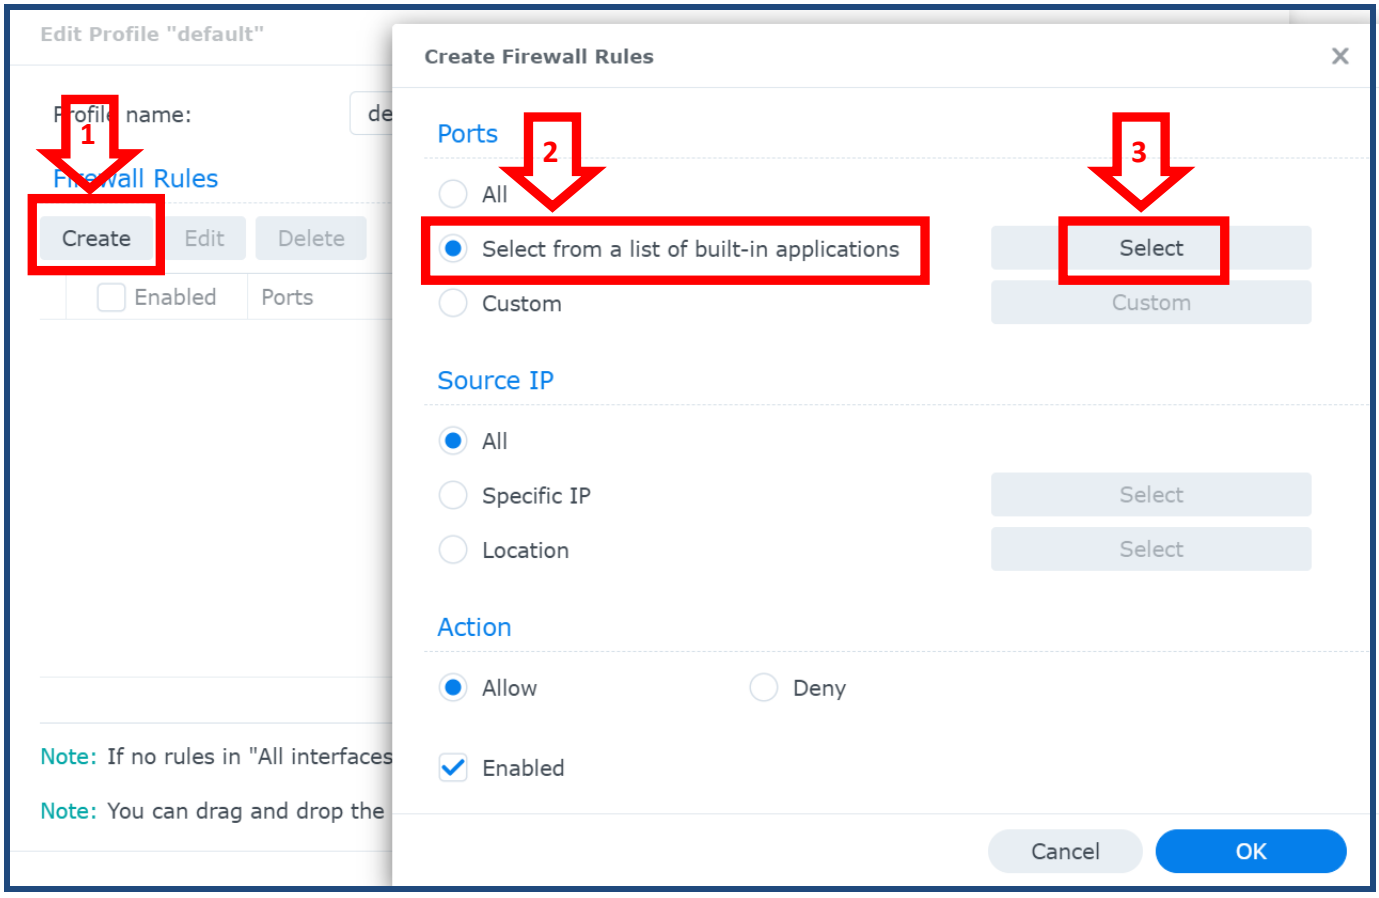

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Add the MariaDB 10 to the Allow list.

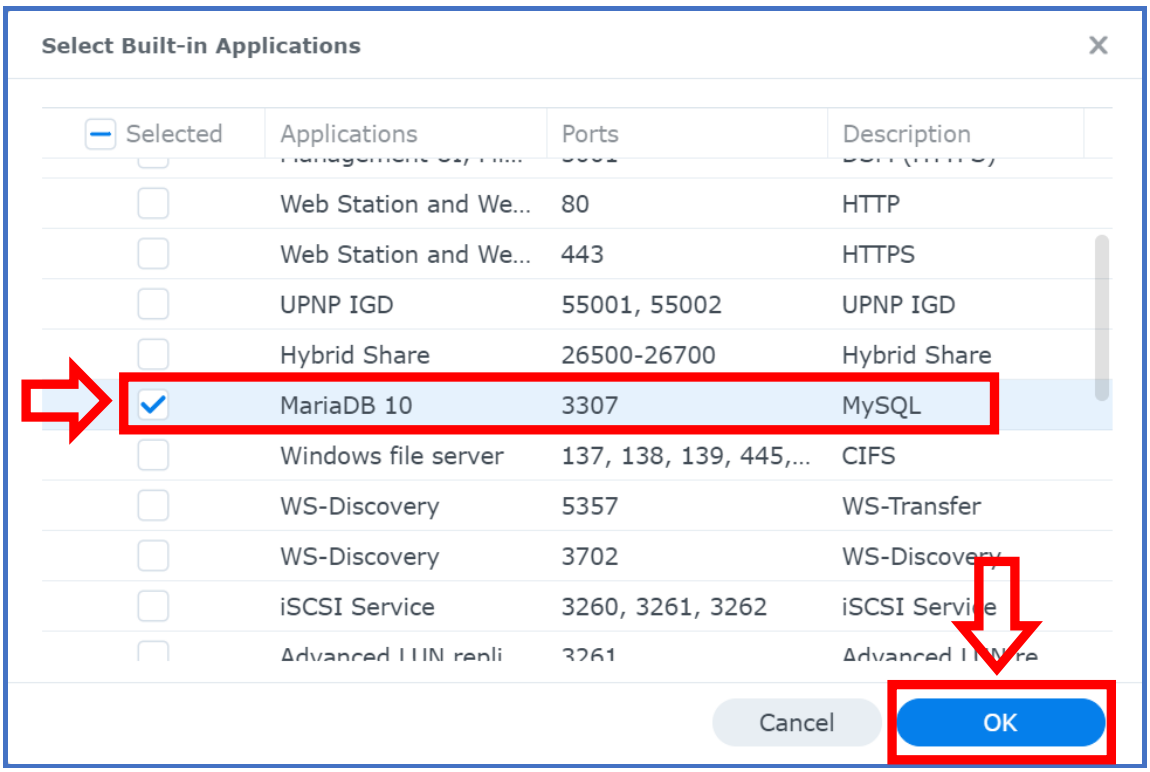

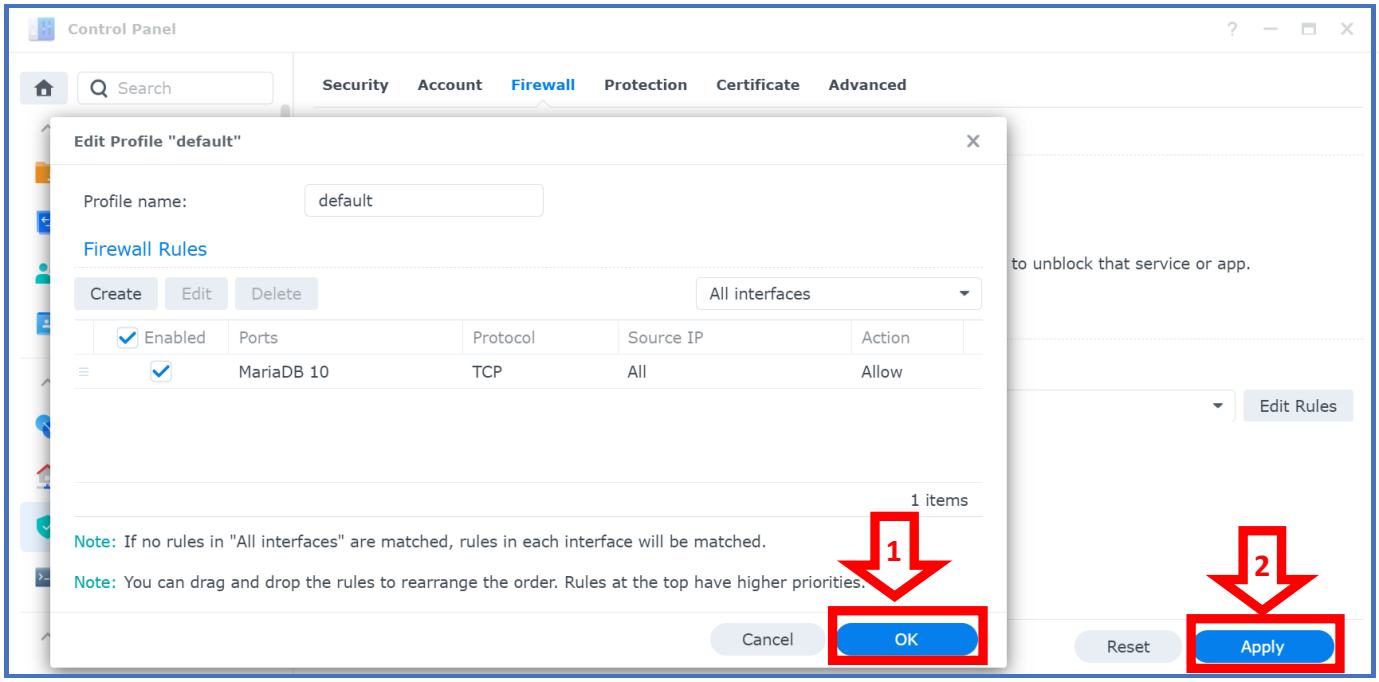

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

After settings, click the Menu icon on the left top, and run the **phpMyAdmin**.

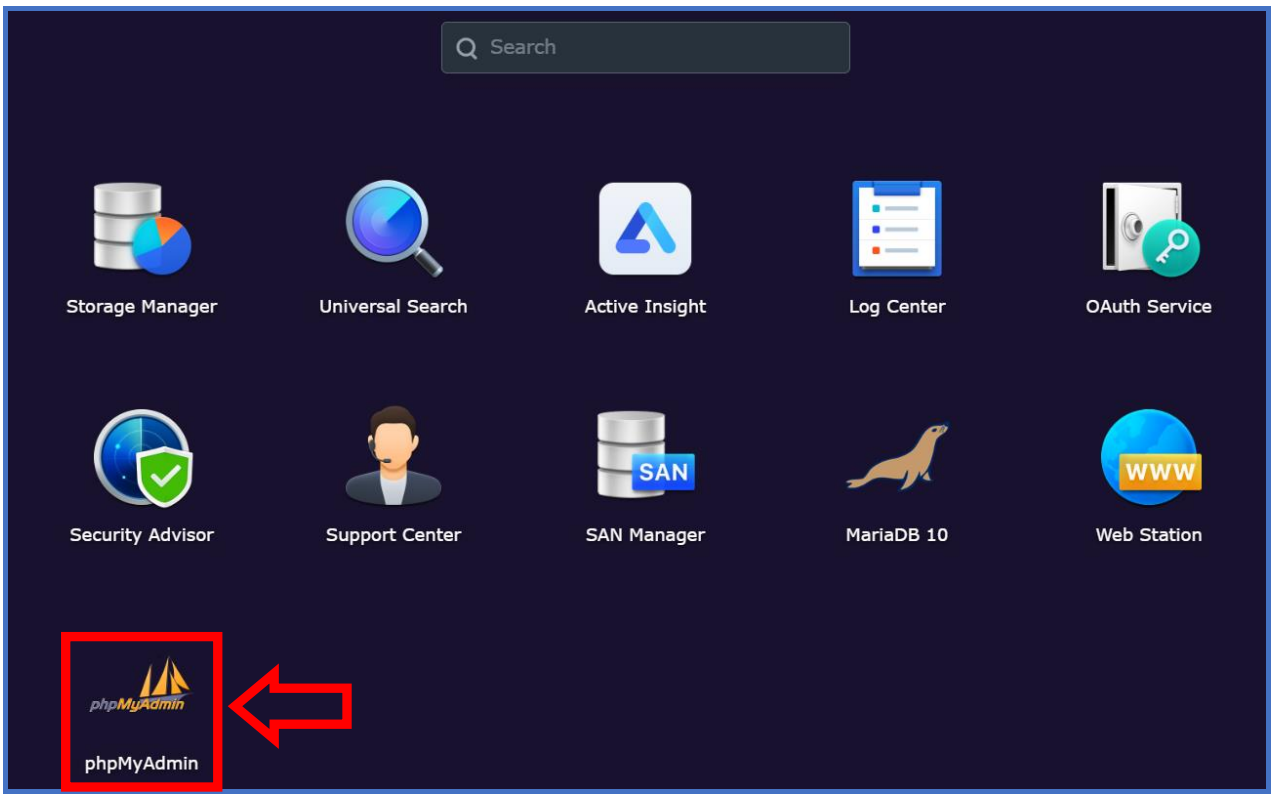


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Default Username: root

Password: password entered during installation




Add user account.

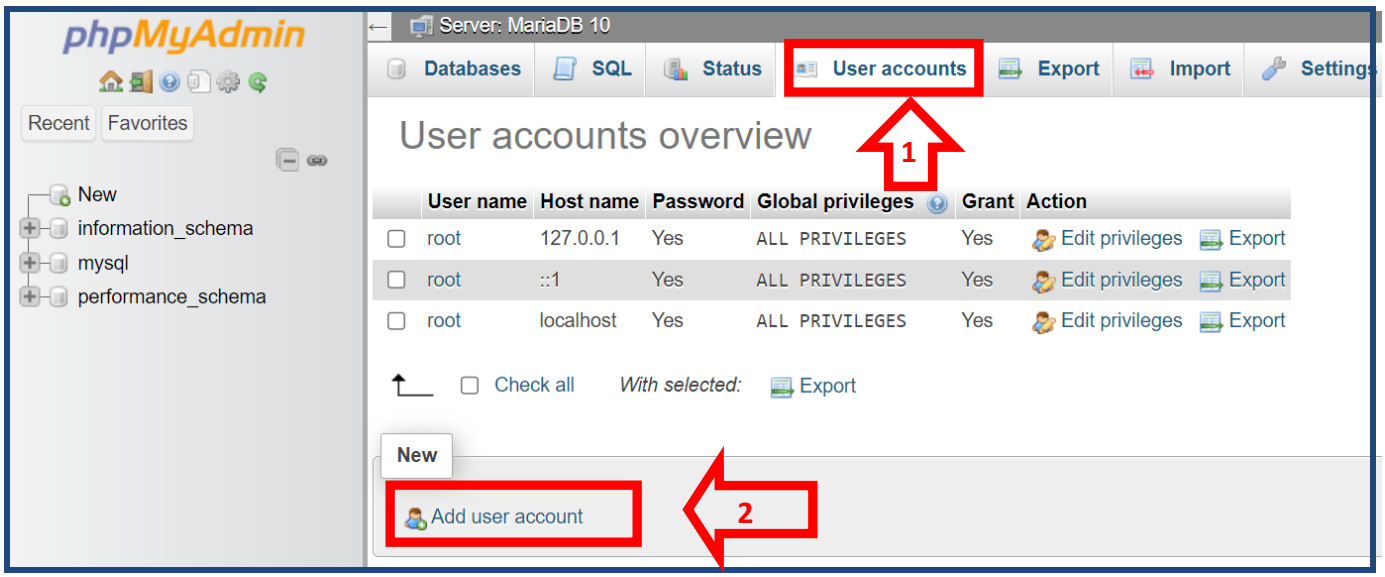


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Add User accounts, allow any host to be [%], and set [password].

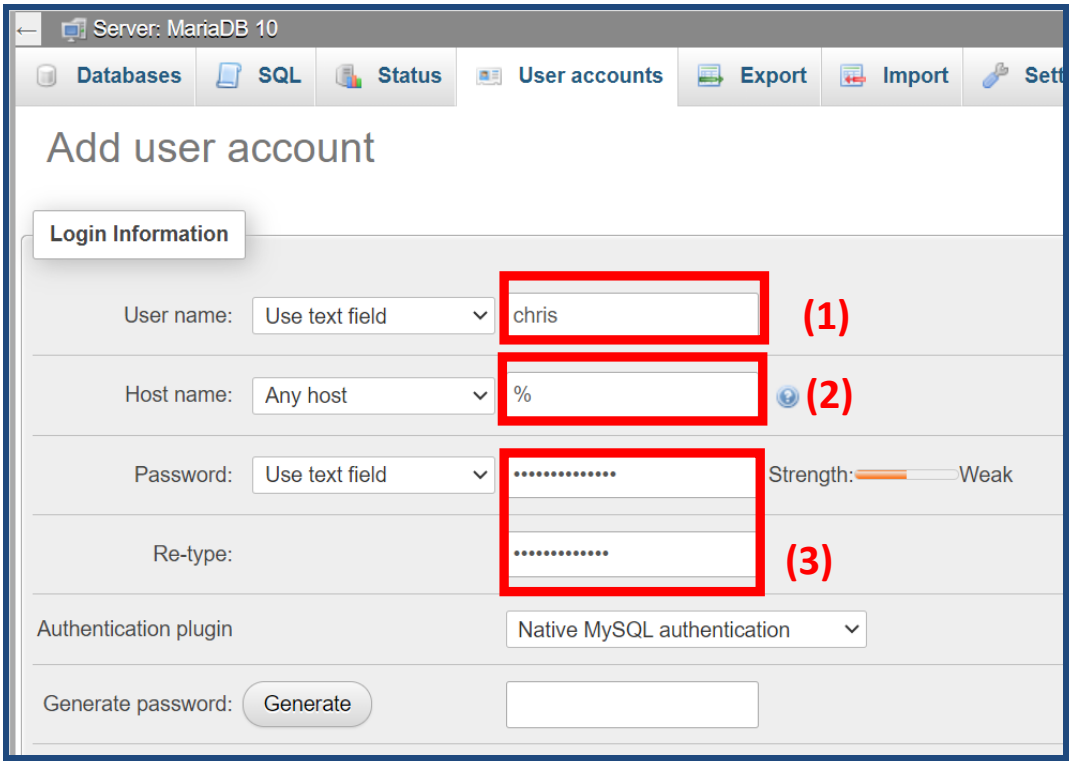


Database [Permission] setting, check [**Check All**], and click [Go].

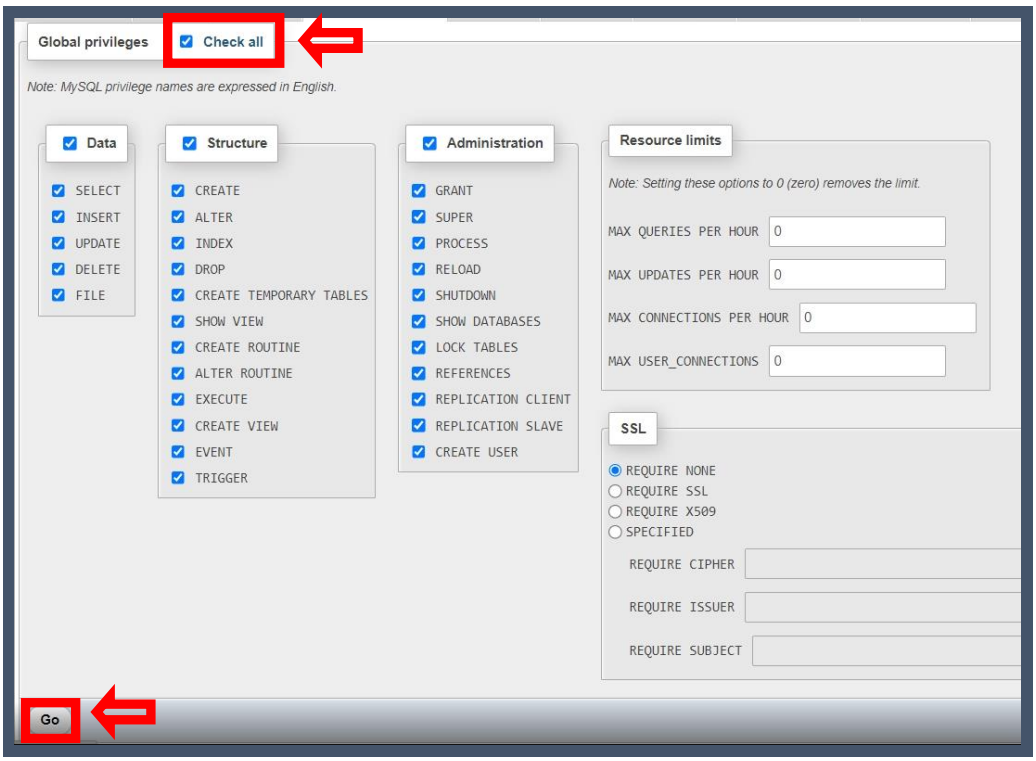


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2. How to set up UA products to save Modbus RTU data into the Database?

Enter http://192.168.255.1 in the URL bar and after the Web UI login page appears, log in with the default Web UI account/password root/root.

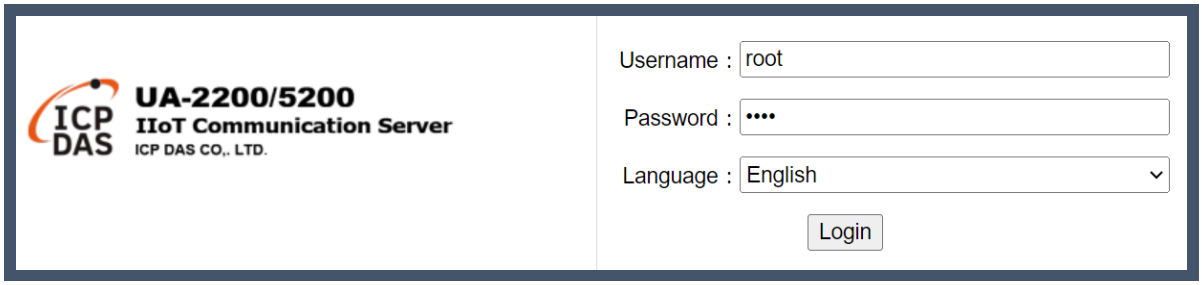


After successful login, go to [**System Setting**] => [**Network Setting**] => [**Network Setting (LAN1)**] to change the network settings according to the actual network environment.

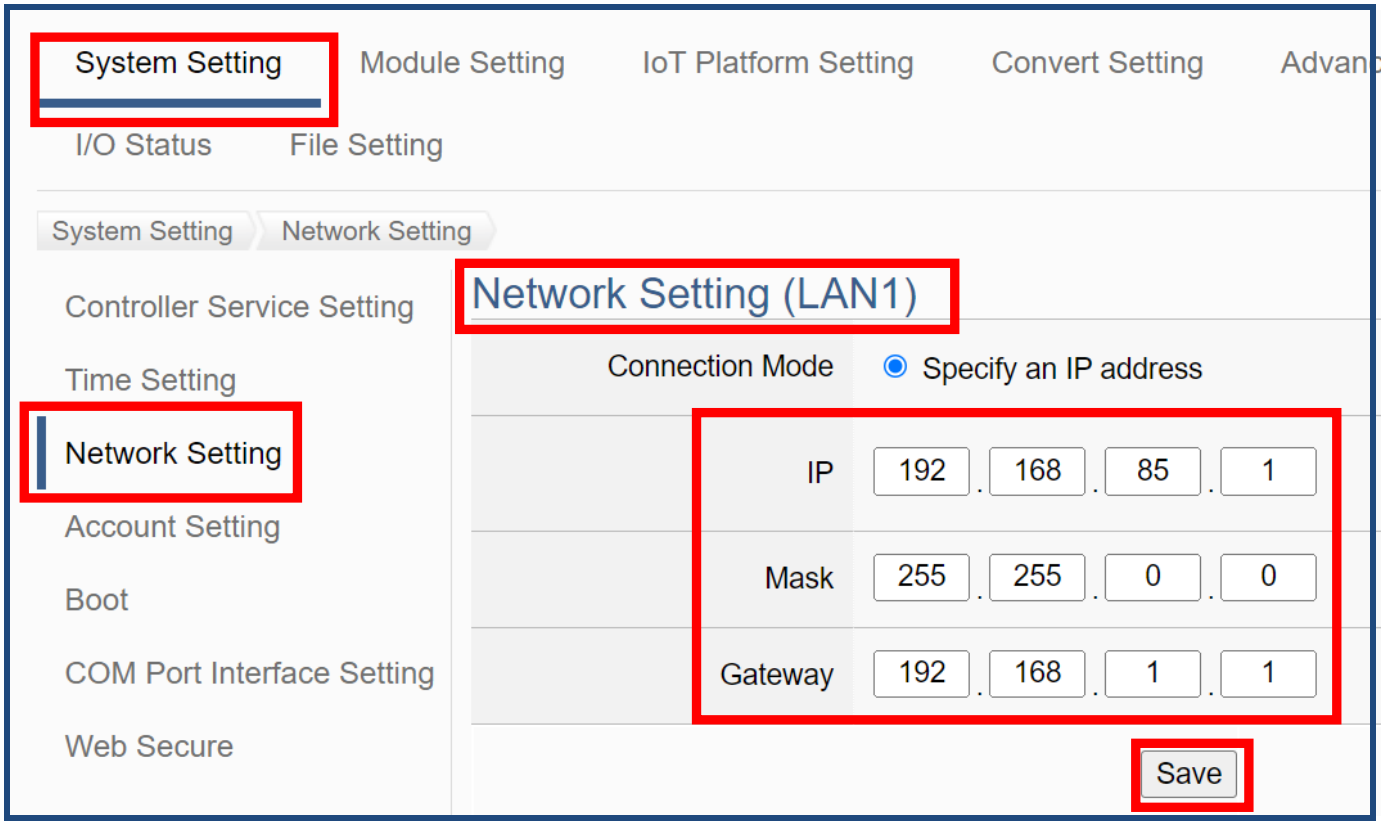


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


After re-entering the page, select [**(Master) Modbus RTU / MySQL(MariaDB)**] from the menu in the upper right corner.

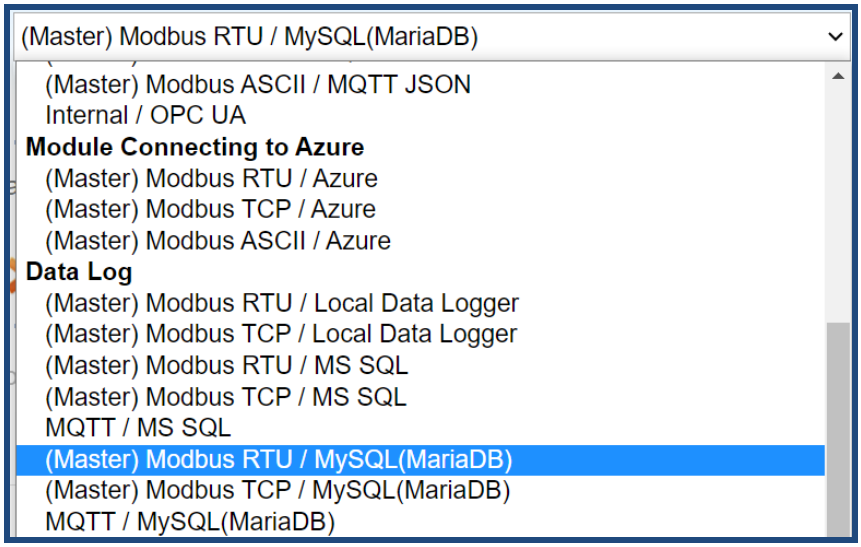

Simply follow the steps on the screen to set up and complete your project!

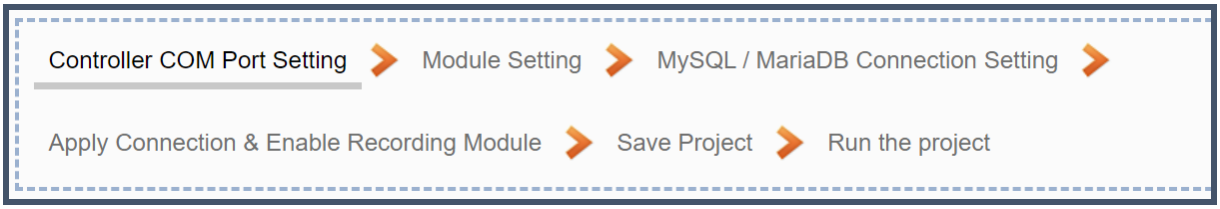


COM Port settings are based on the DL-302 as an example.

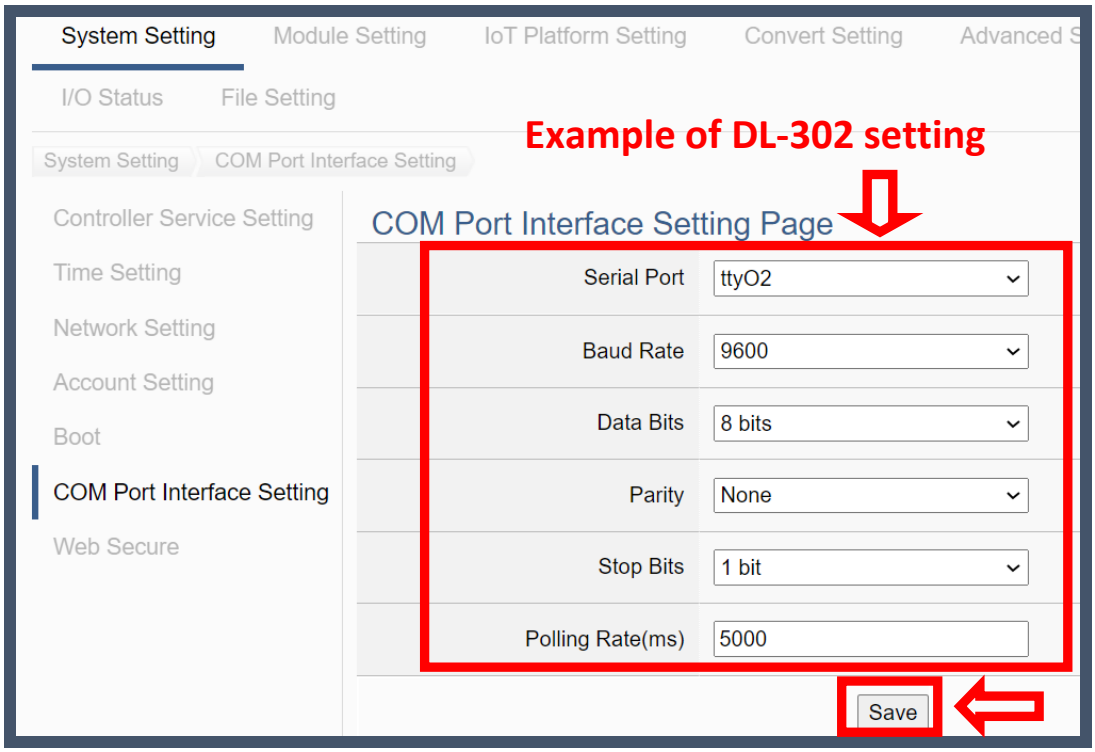



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Address: Sets the address for a module.
Default: 1 Range: 0 ~ 255
Protocol: Sets the communication protocol.
- ModbusRTU (default) - DCON - DCONChkSum: uses DCON protocol and enables checksum validation feature
Baud Rate
Default: 9600 Support Baud Rate: 1200/ 2400/ 4800/ 9600/ 19200/ 38400/ 57600/ 115200 (unit: bps)
Parity
Default: N,8,1 Support format: N81, N82, E81, O81
Response Delay (ms): Sets the delay time between receiving the command and sending the data.
Default: 0 ms Range: 0 ~ 30 (unit: ms)
Save: Saves the modification and returns to the Settings menu. All the changes take effect immediately after saving changes.
Skip: Returns to the Settings menu without saving any changes.

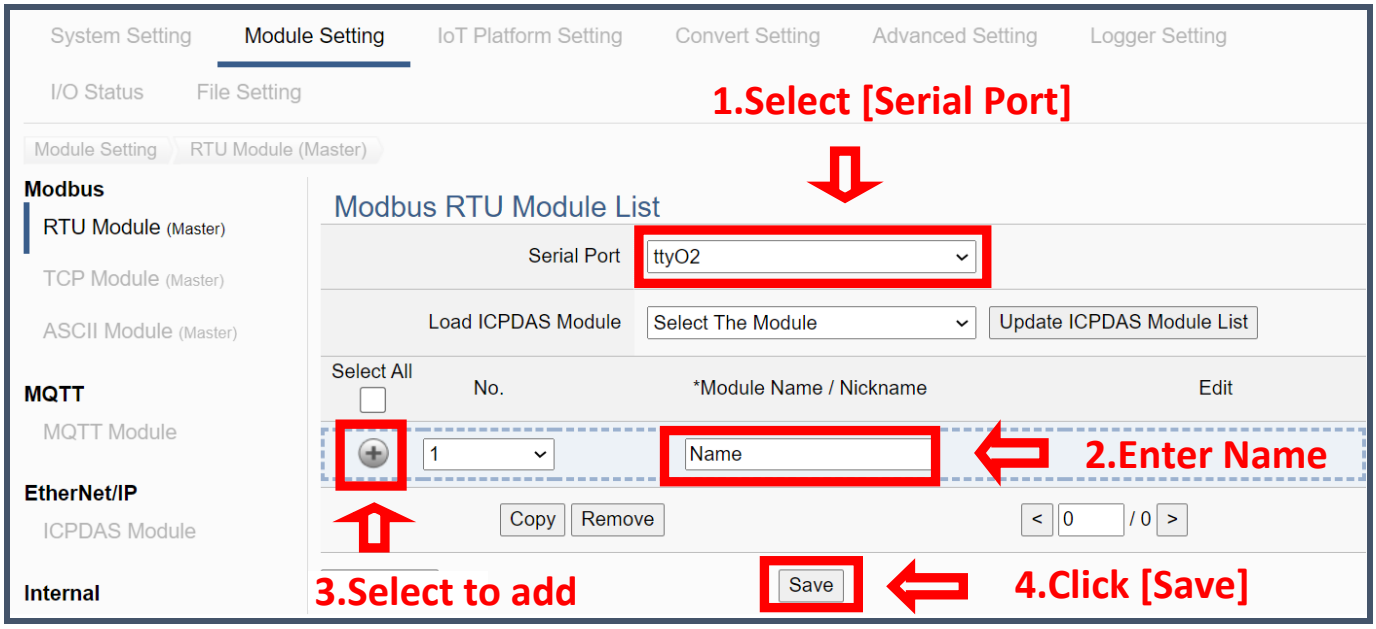


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

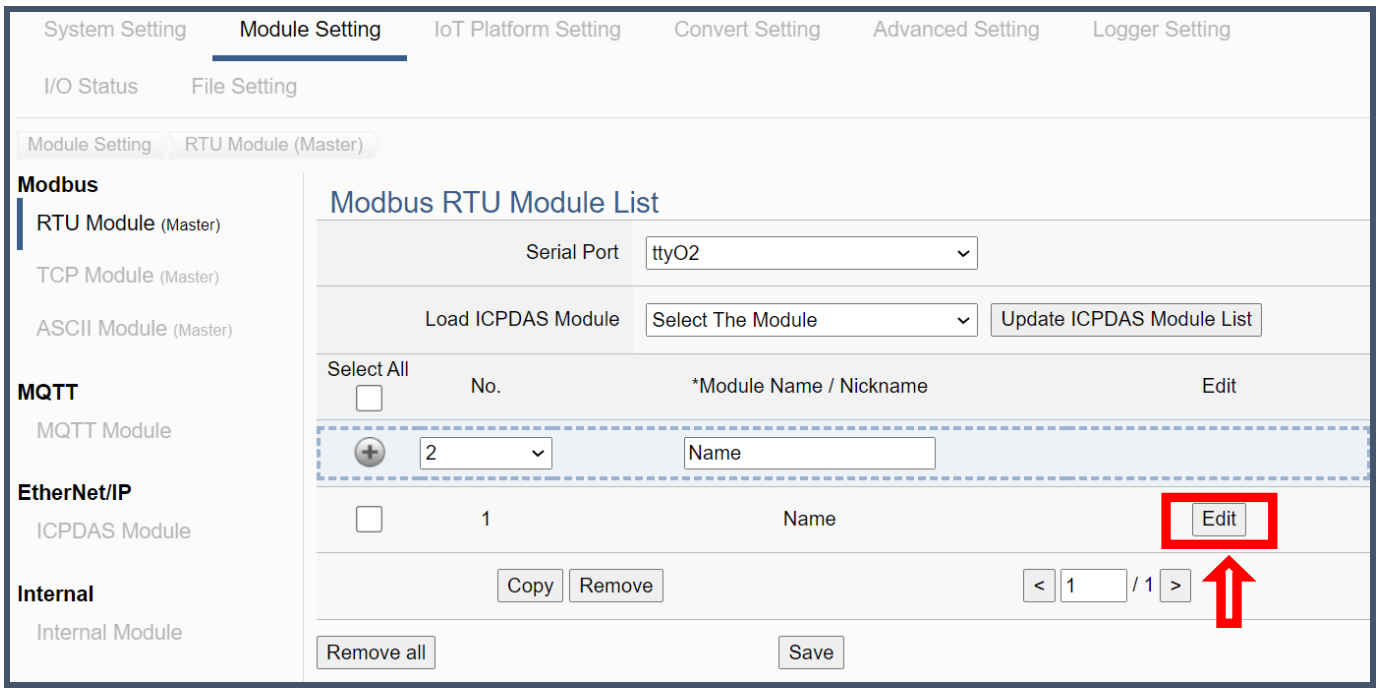

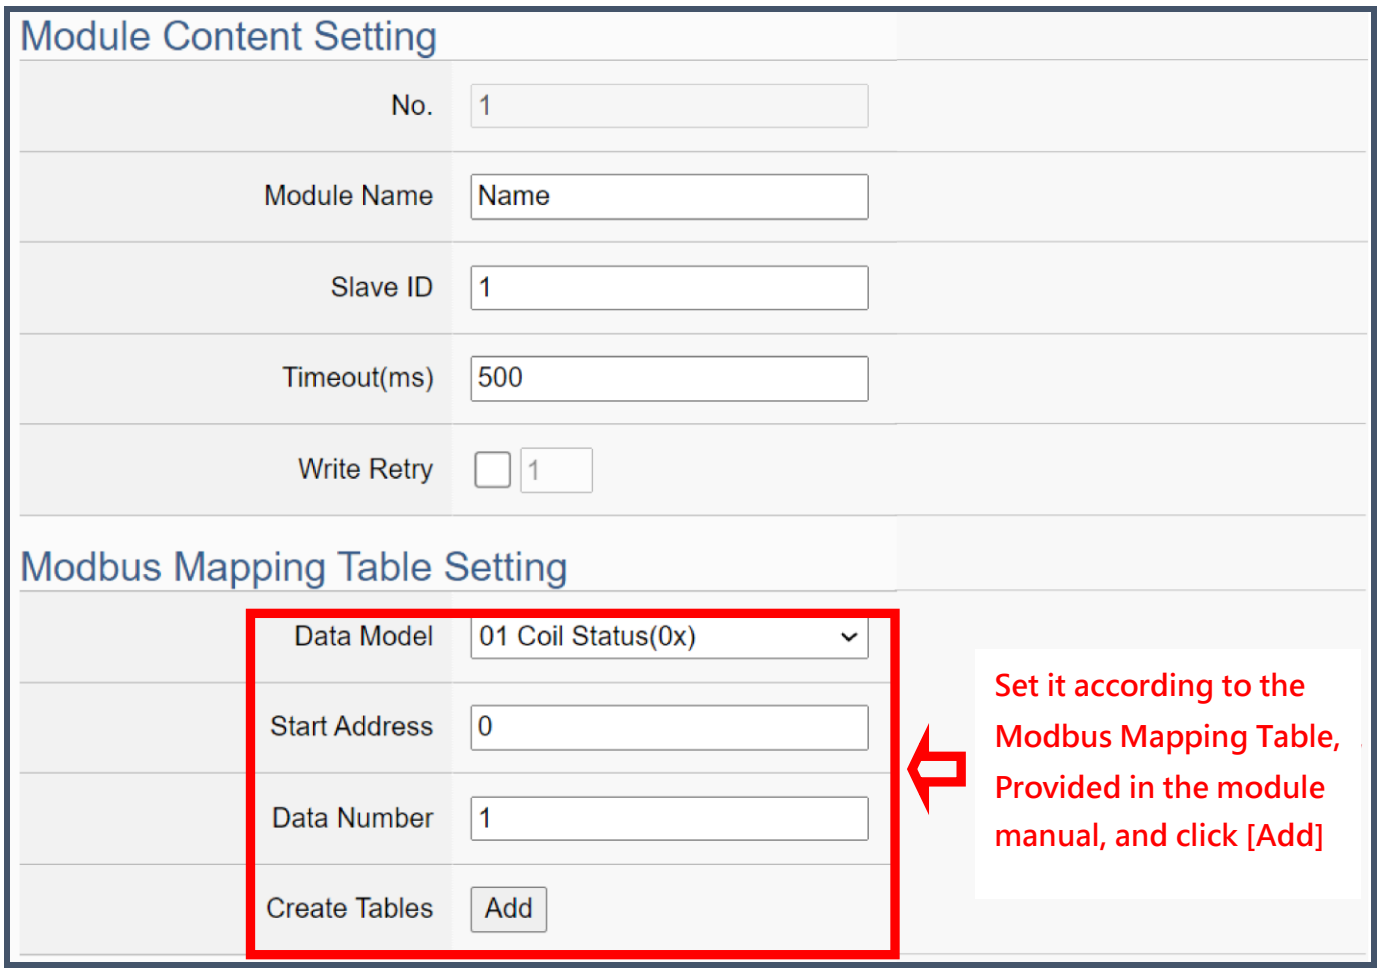

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
Slave ID	Set the module Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI)
Start Address	The start address of the Modbus command. **Note:** the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

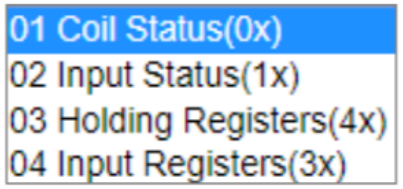


DL-302 Modbus Address Mappings (Base 1)


Address	Description	Attribute
30001 ~ 30006 40001 ~ 40006	Analog input value of channel 0 to 5. channel 0: CO_2 in 1ppm, channel 1: relative humidity in 0.01%, channel 2: temperature in 0.01°C, channel 3:temperature in 0.01°F, channel 4: dew point temperature in 0.01°C, channel 5: dew point temperature in 0.01°F	R

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Address Setting: Modbus Mapping Table Display and Edit

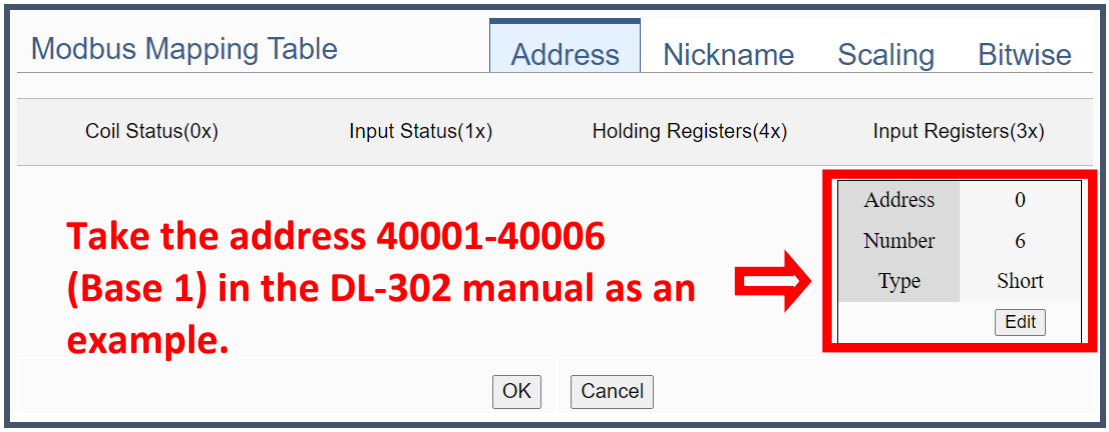


Nickname Setting: If you want to set the variable name or add a description, you can click [**Nickname Setting**] to add it.

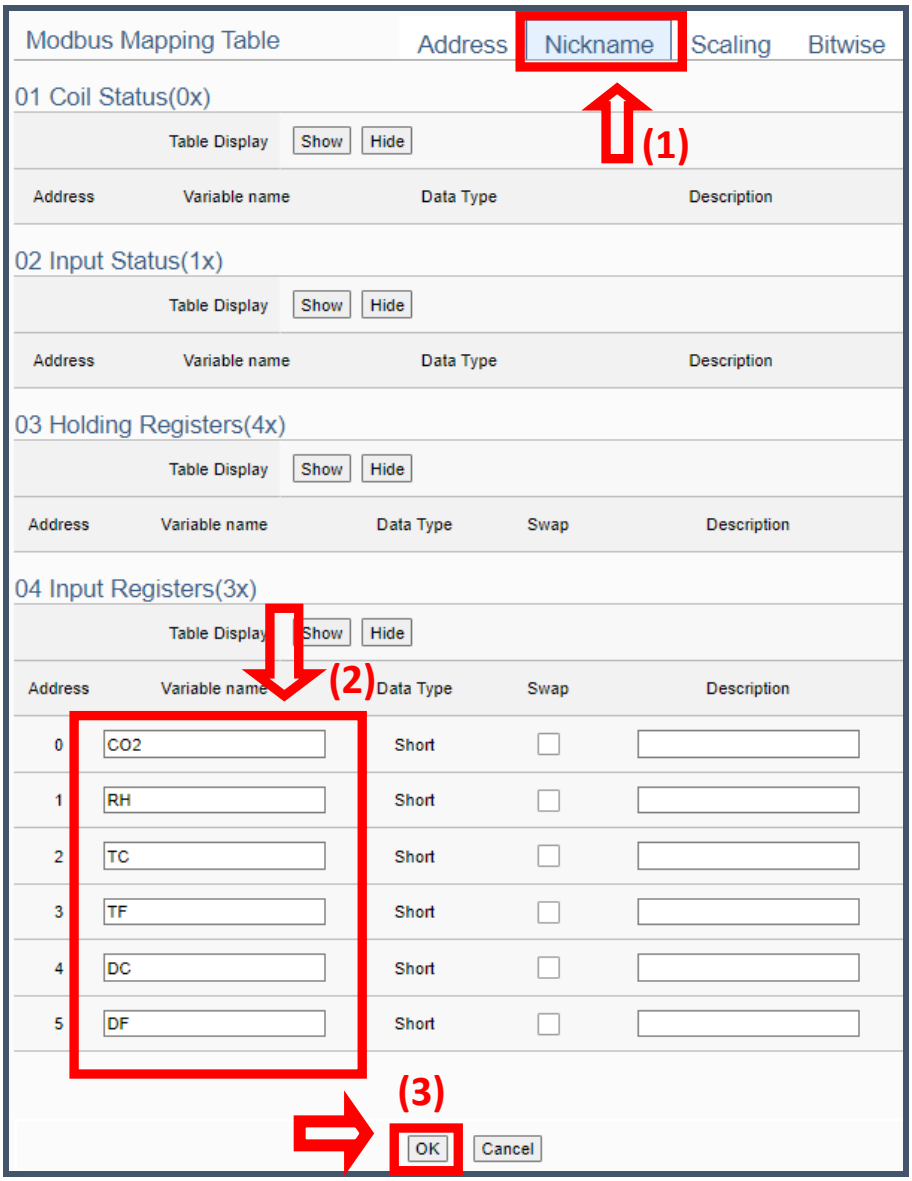


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

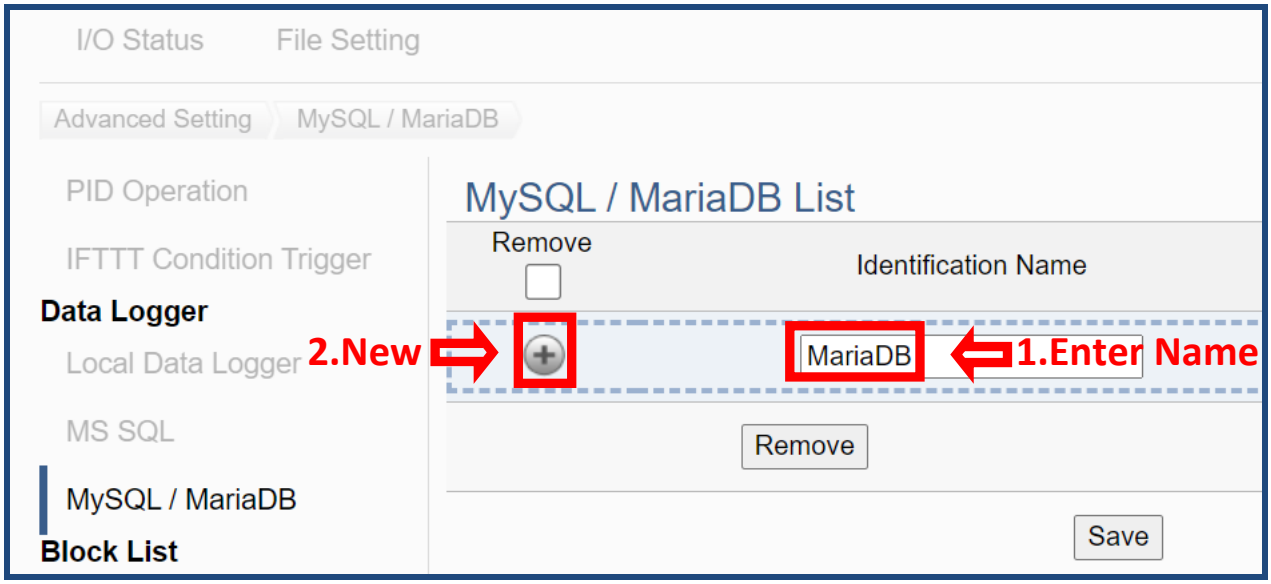


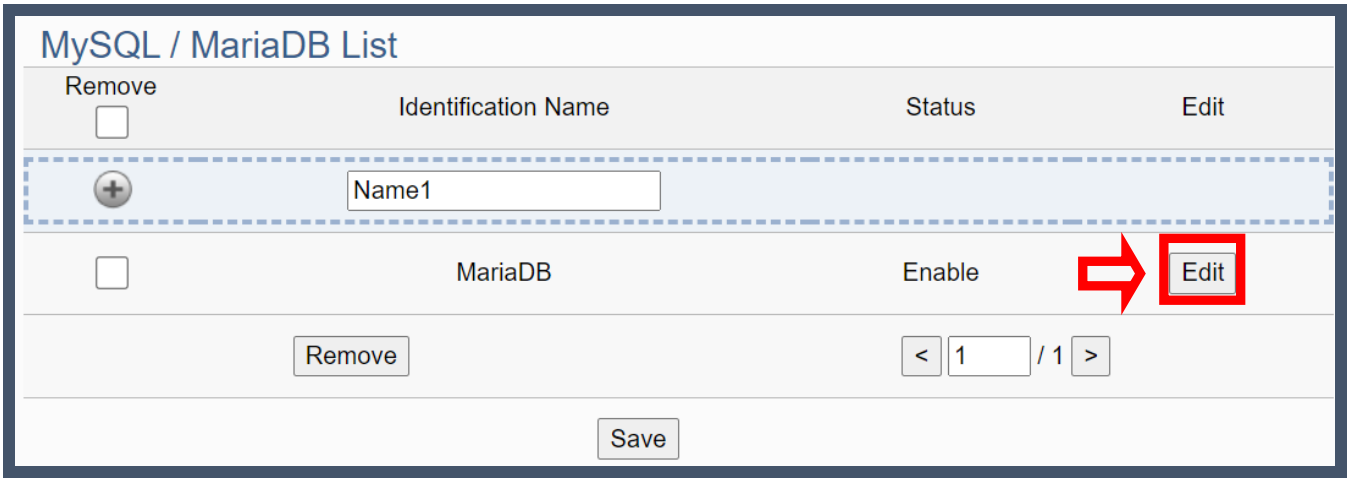


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Enter the name of the database and table, and click [OK].

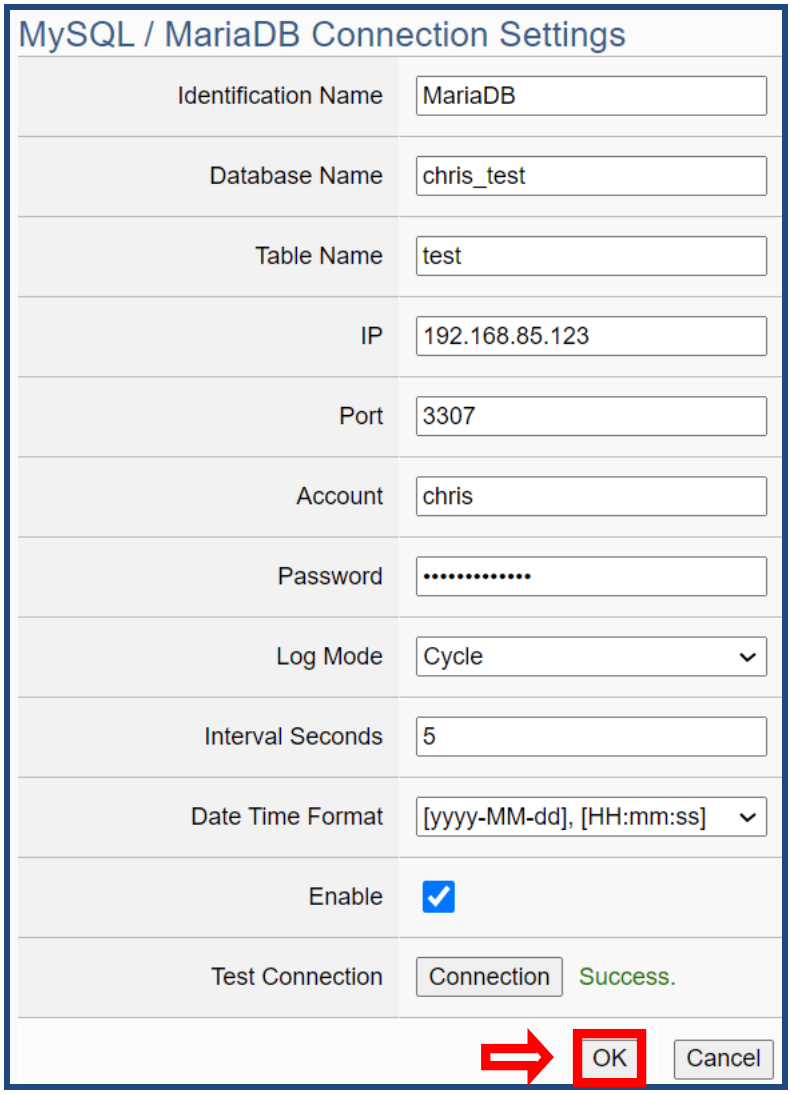

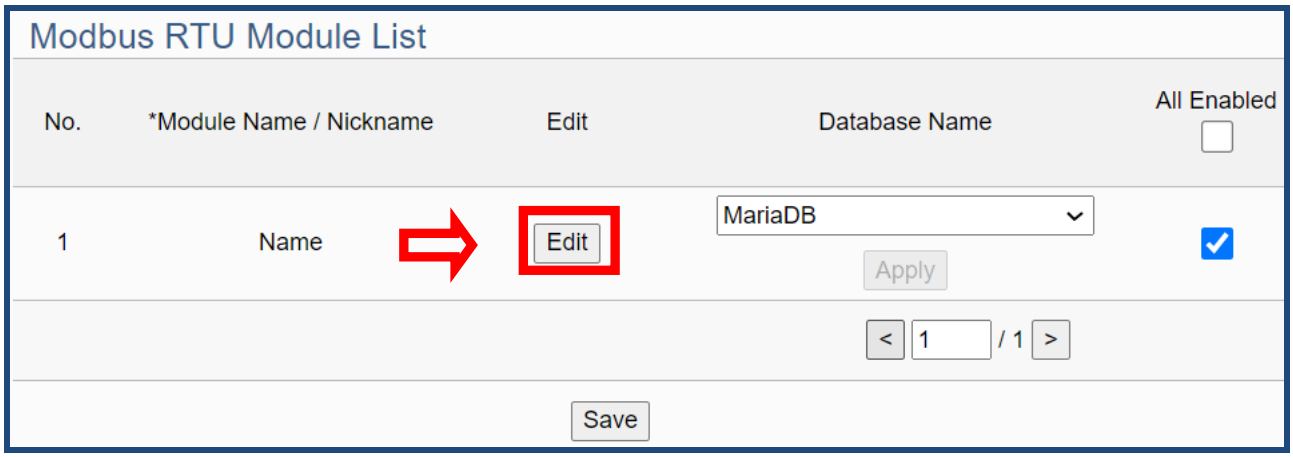

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

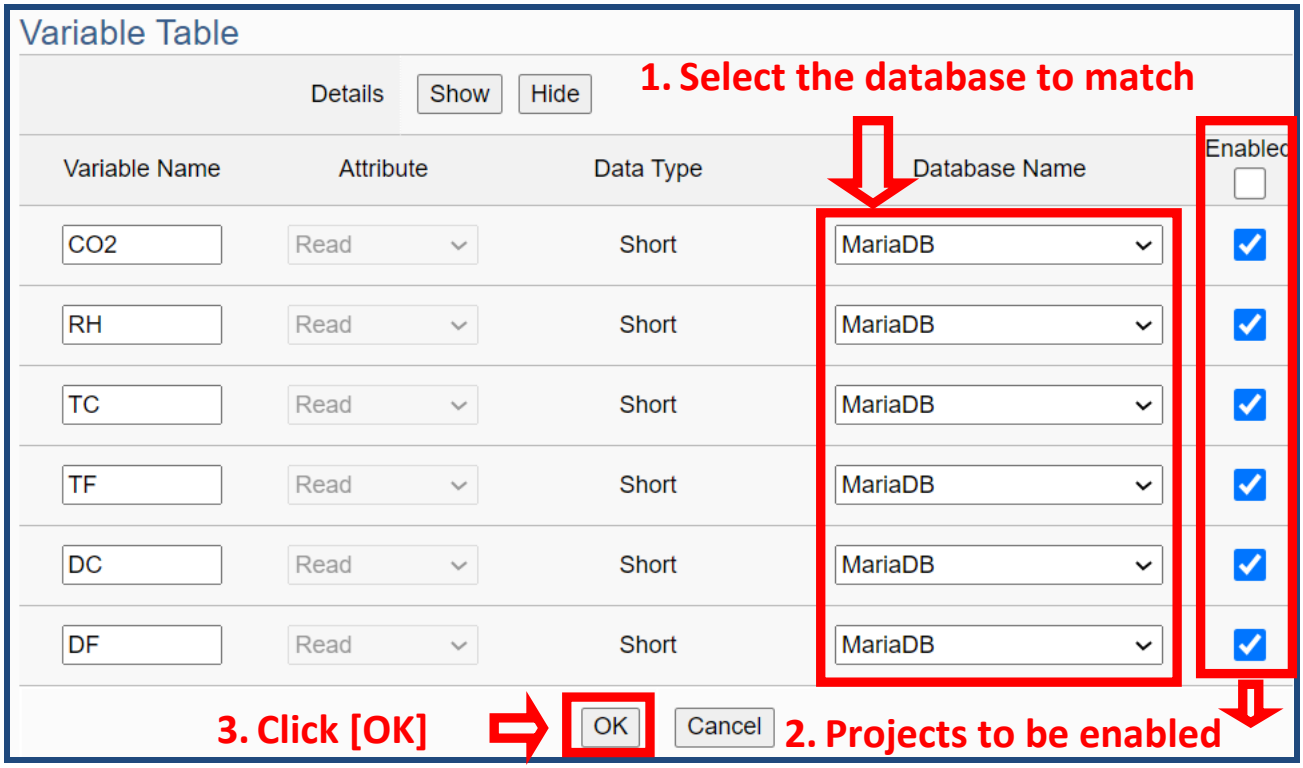

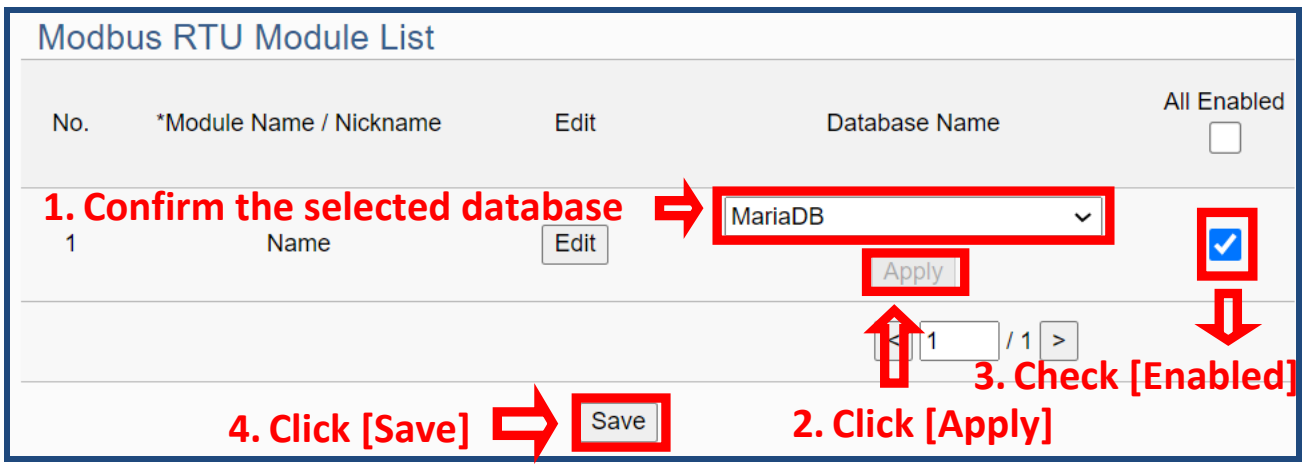


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Click the next step [**Save Project**], the Step Box will show an animation as in the below picture which means the project is saving. When the animation vanished, the project was saved completely.



After saving, the project needs to execute. Click the next step [**Run the Project**]. This step can also via the [**System Setting** > **Controller Service Setting** > **Run Project**] to Stop and Run the project.

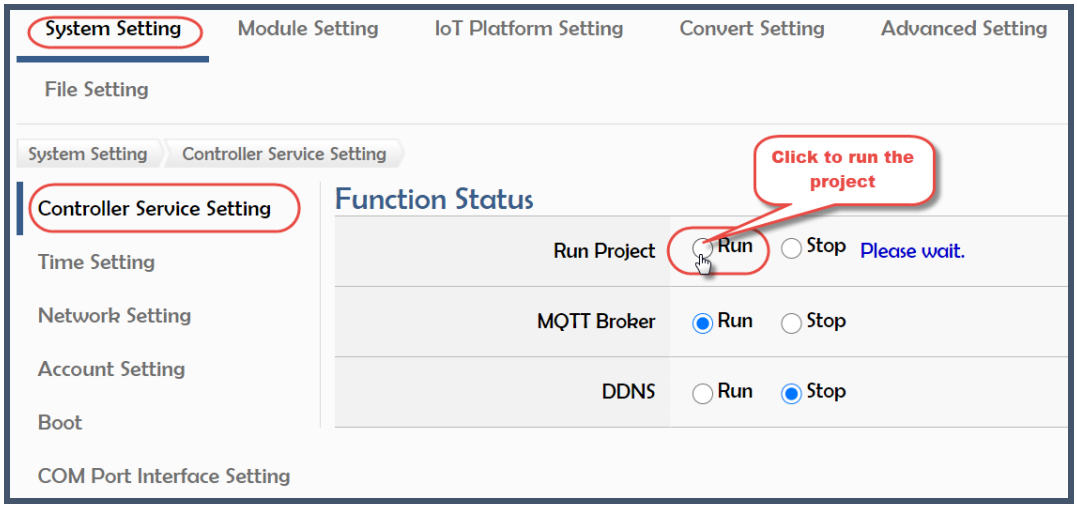

To check the I/O Status, click the [**I/O status**] and choose from the left-hand list. Confirm the connection value and status.

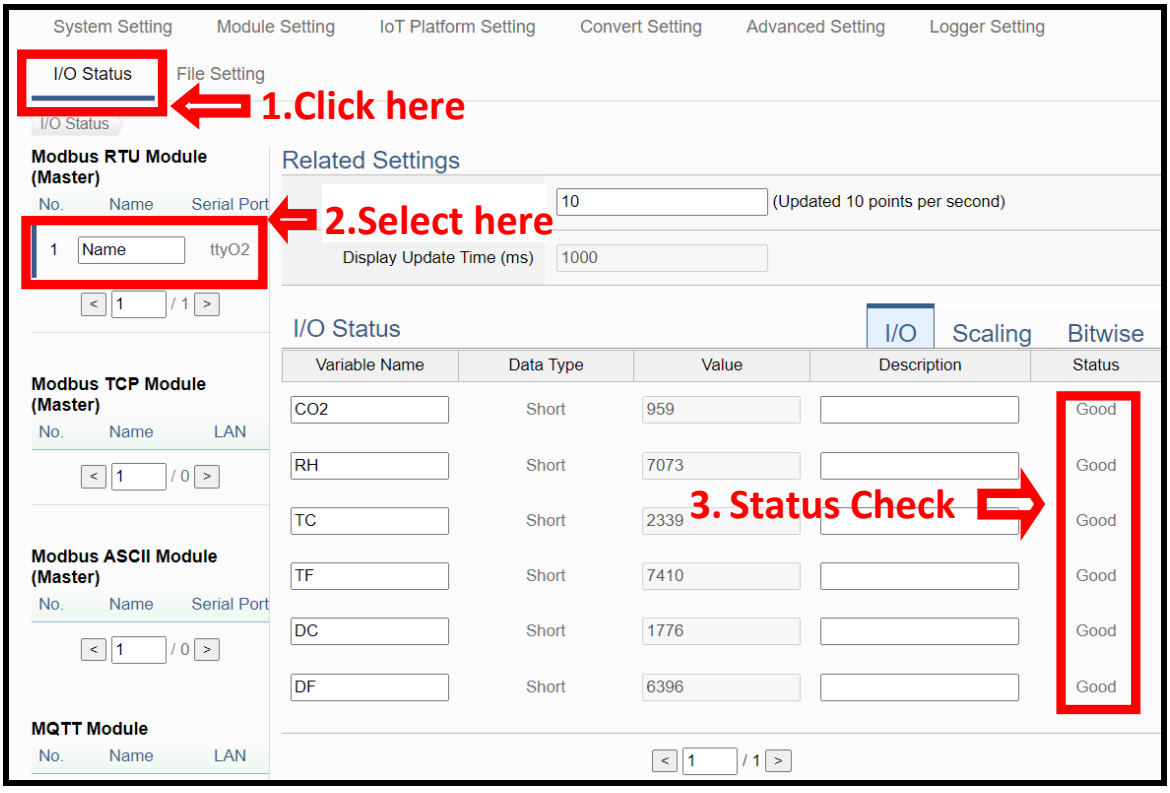


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. After transferring UA data into Database, how to combine the Date and Time columns?

Log in to phpMyAdmin, and enter your account and password.




Confirm the table and data written for the UA product and a warning message will appear at the top.

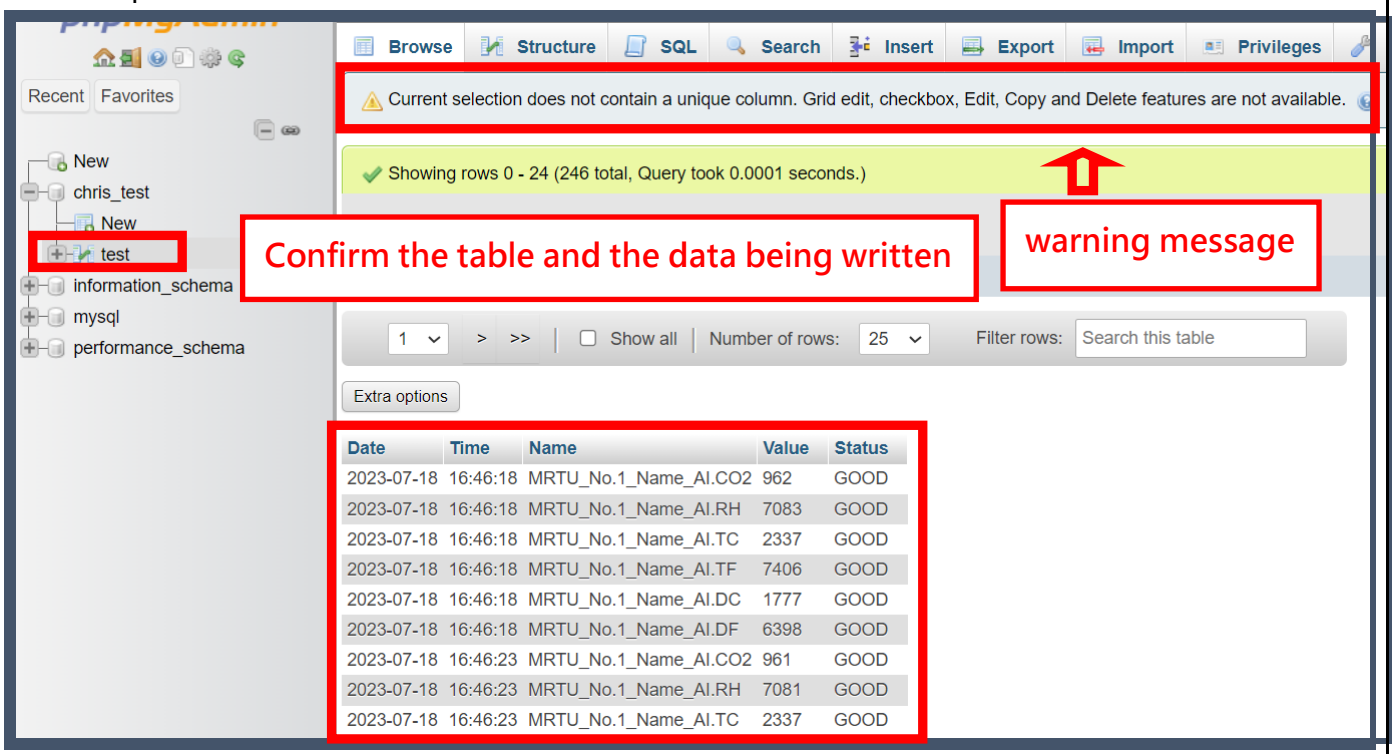


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

After setting the primary key, the warning message will disappear.

Expand the Table and click on the [**columns**], check Date/Time/Name, and press the [**Primary key**].

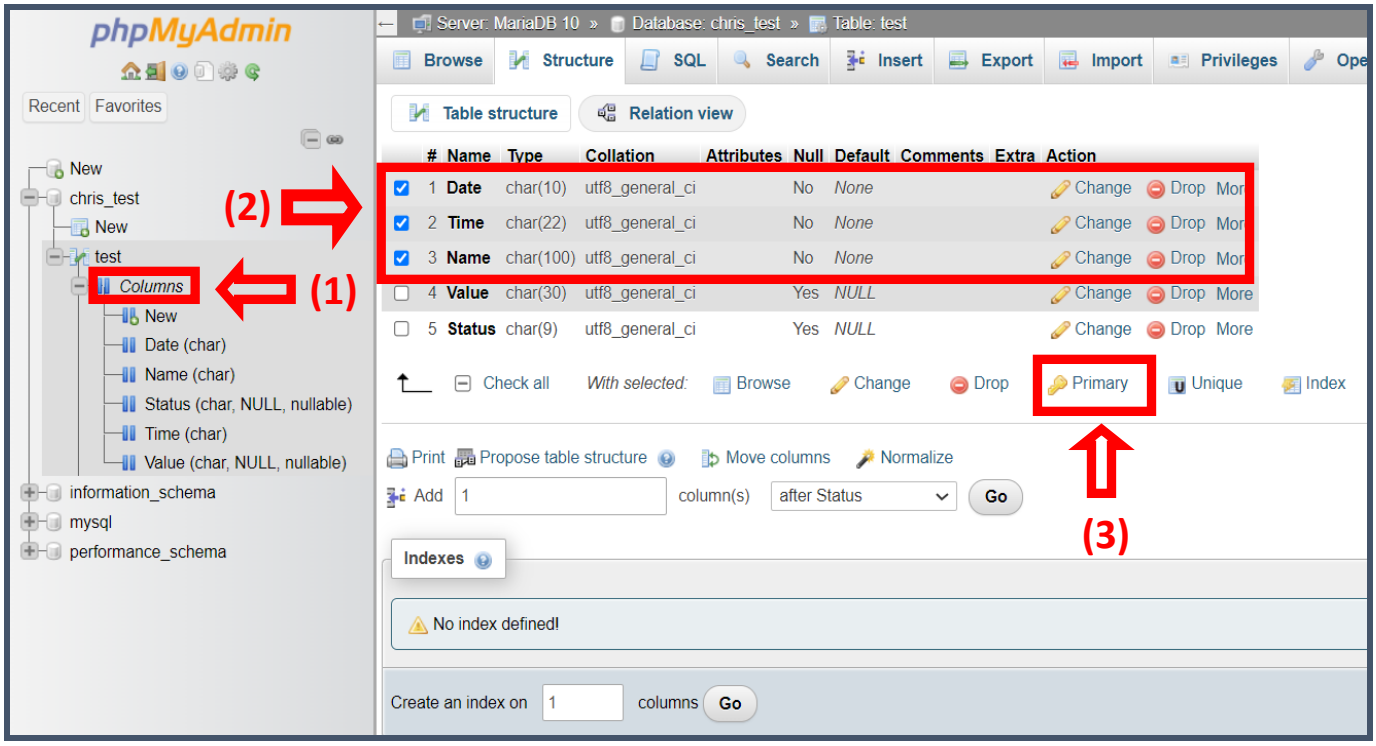


The following picture shows the settings.

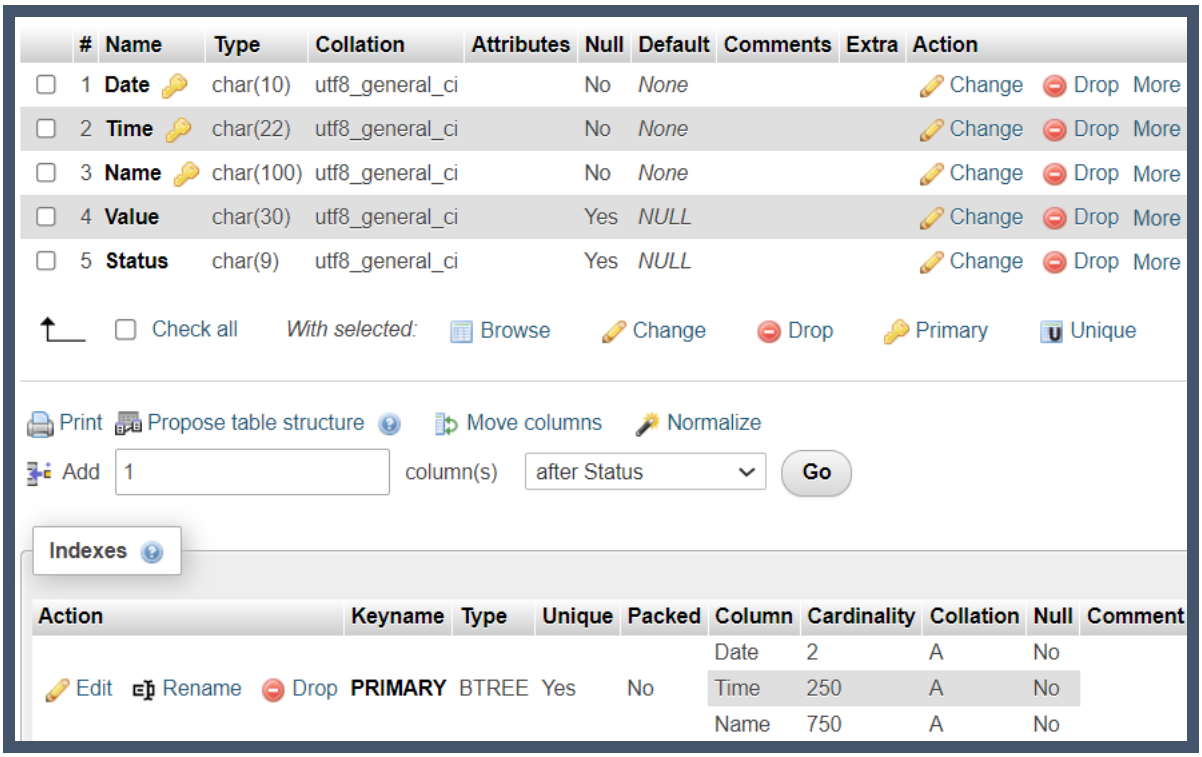


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This warning message will not display anymore.

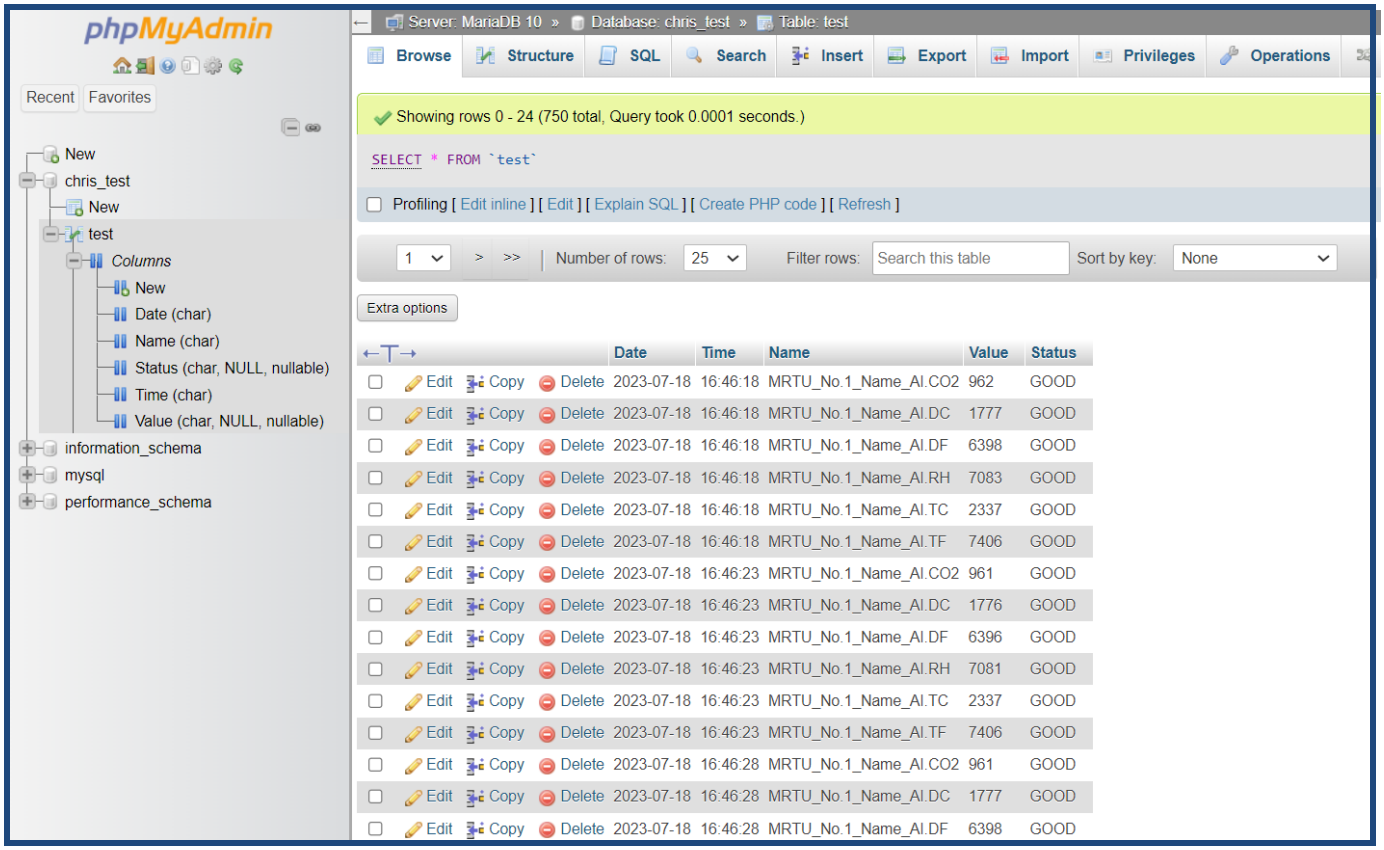


Click [**New**] below the database where UA sends data, fill in the table name, fill in the name/type/length/values of the columns, and click [**Save**], then the columns will be combined in the new table.

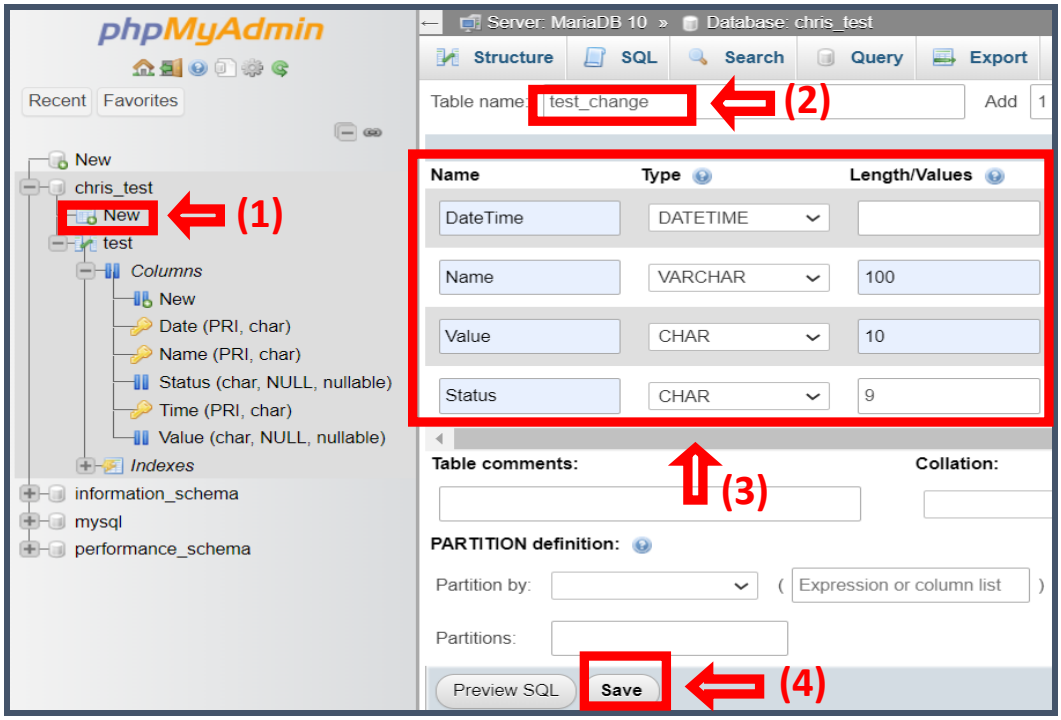


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Then set the primary key.

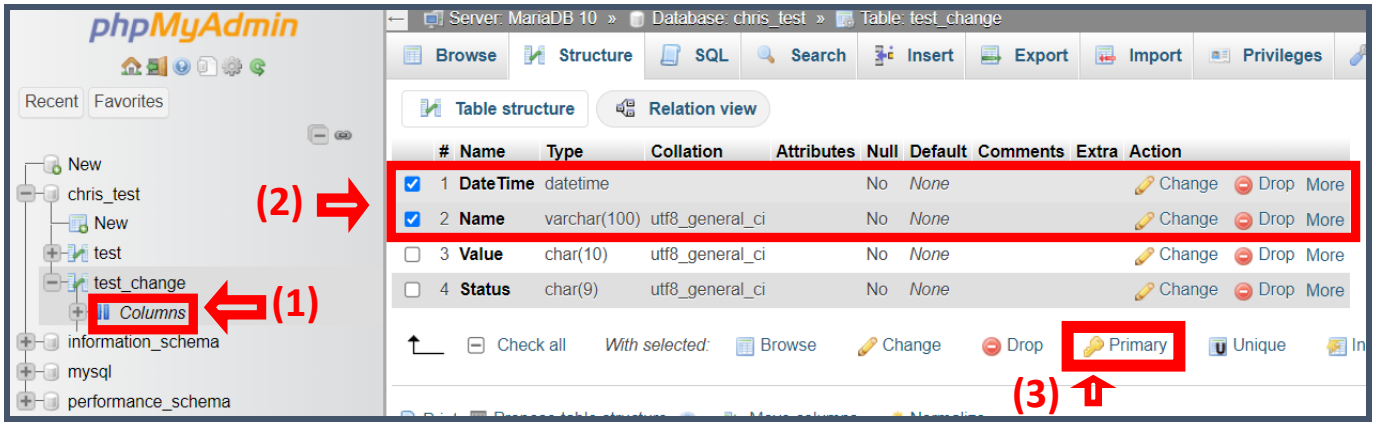

Click on the table where UA is transferred data, go to the upper right corner of [**Triggers**], and click on [**Create new trigger**]

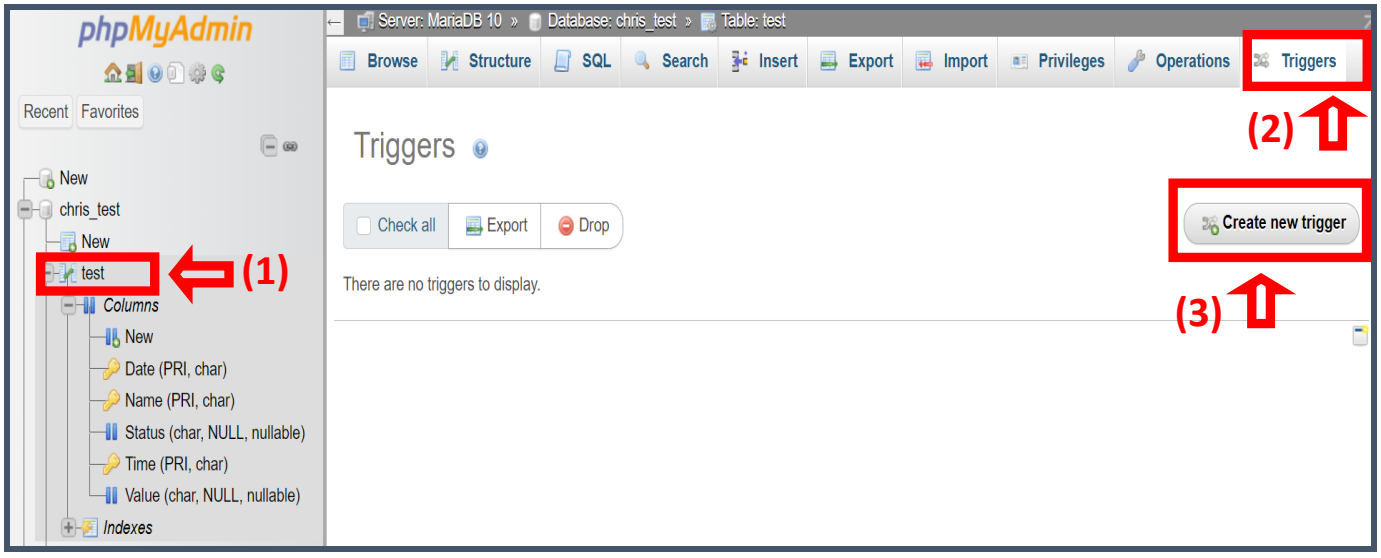

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Entry Trigger Name

TIME Select [**AFTER**]

Event Select [**INSERT**]


And paste the following code into the definition.

```
BEGIN
INSERT INTO chris_test.test_change(DateTime,Name,Value,Status)
VALUES (concat(new.Date,' ',new.Time) ,new.Name,new.Value,new.Status);
END
```

<Description>


In this program, chris_test.test_change, please follow the new database name and table name to modify.

When finished, as shown below, click [**Go**]

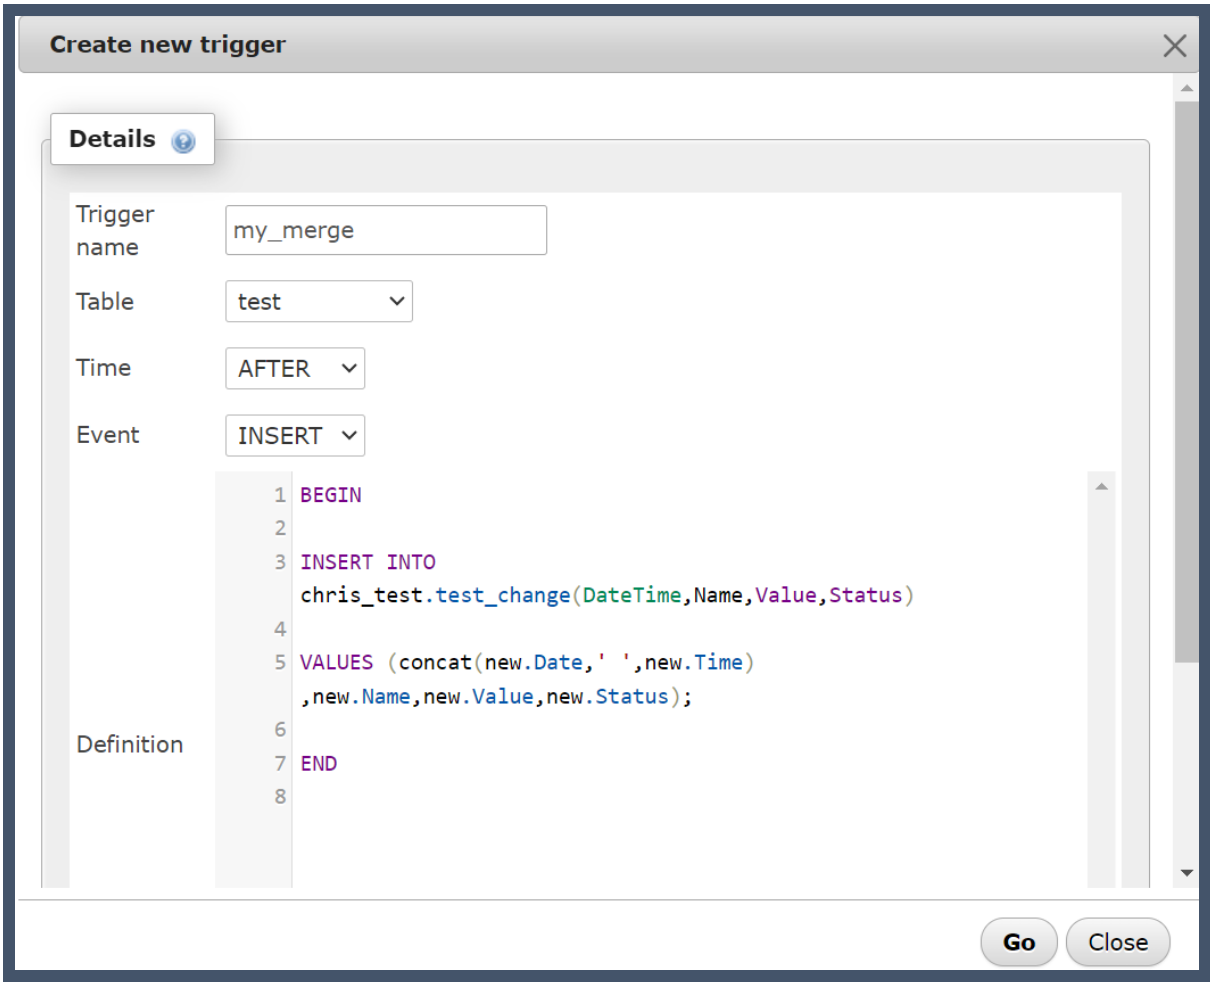

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Confirm the success of the Trigger.

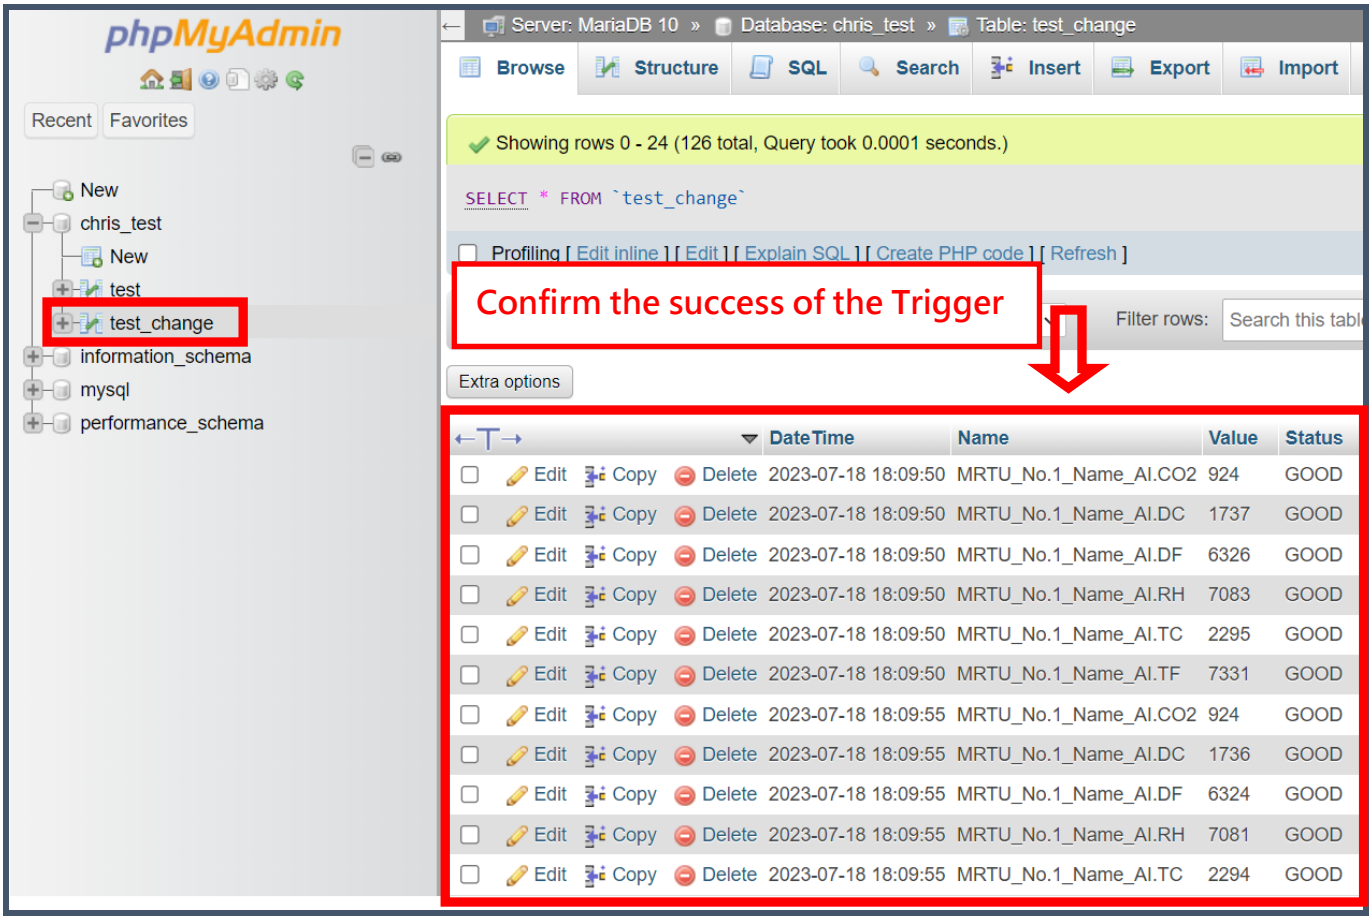


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4. How InduSoft read data in the Database?

Go to the Download Center of Microsoft to download the program

Select x86 : vc_redist.x86.exe to download and install

URL: https://support.microsoft.com/zh-tw/help/2977003/the-latest-supported-visual-c-downloads

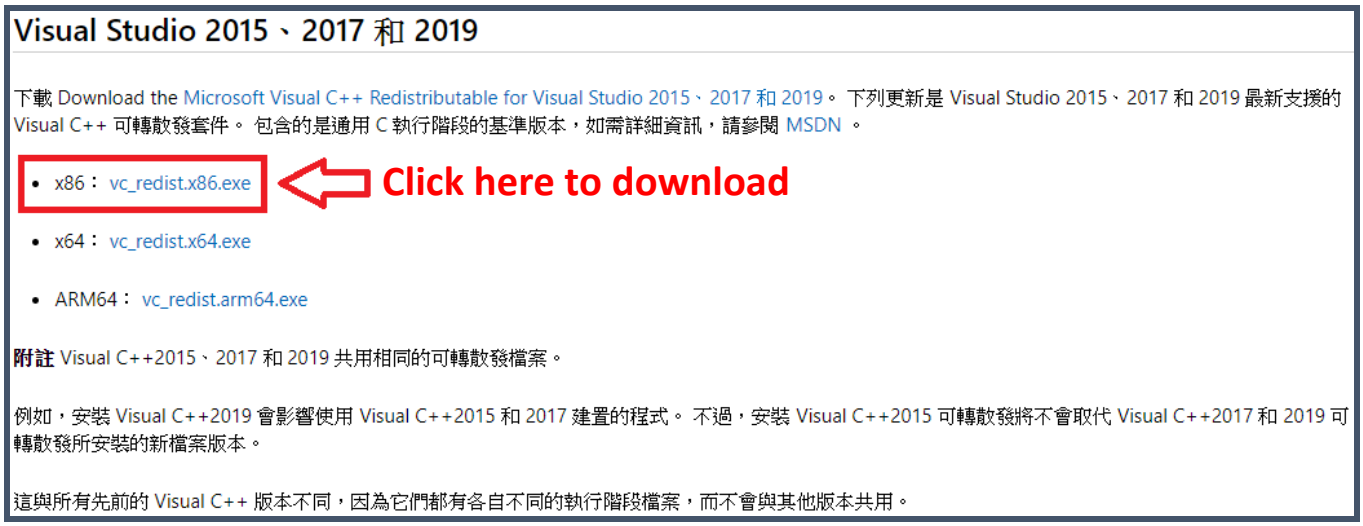


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Install MySQL ODBC

Go to the MySQL website to download the program

Select Windows(x86, 32-bit), MSI Installer to download and install

URL: https://dev.mysql.com/downloads/connector/odbc/

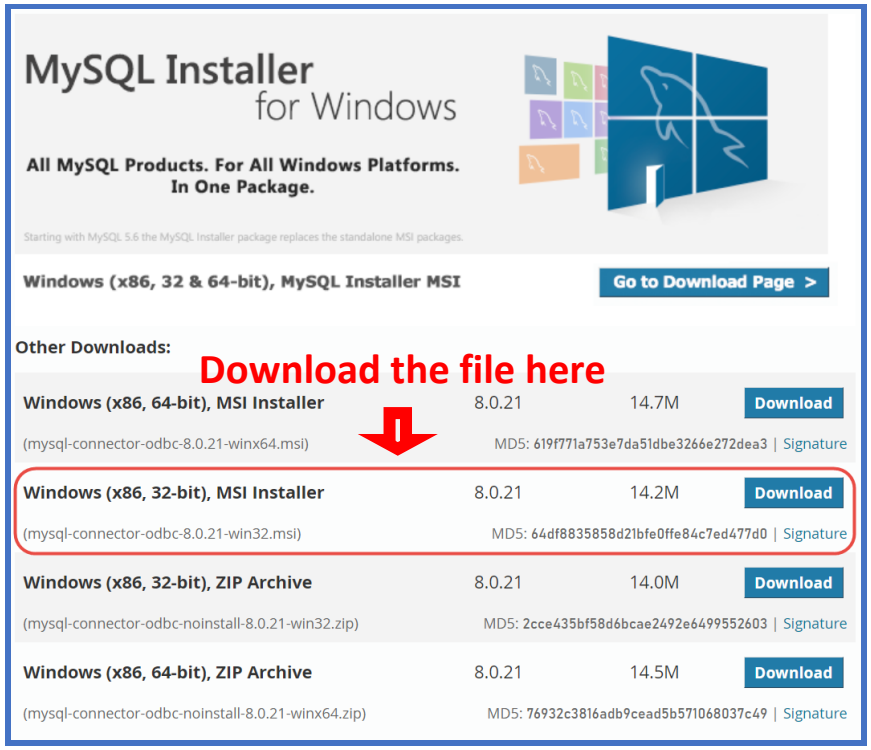



LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


ODBC Settings

Before setting up InduSoft to read the database in this section, please make sure that the InduSoft (IWS) remote MariaDB database access function has been set up, if not, please complete it first, you can refer to the MySQL ODBC settings in the following appendix to set up.


5. Appendix: How IWS Accesses Remote MySQL Database via ODBC

<Note> MariaDB 10 default port is 3307.

After completing the ODBC settings, enter InduSoft and click on the image of the trend chart in Graphics.

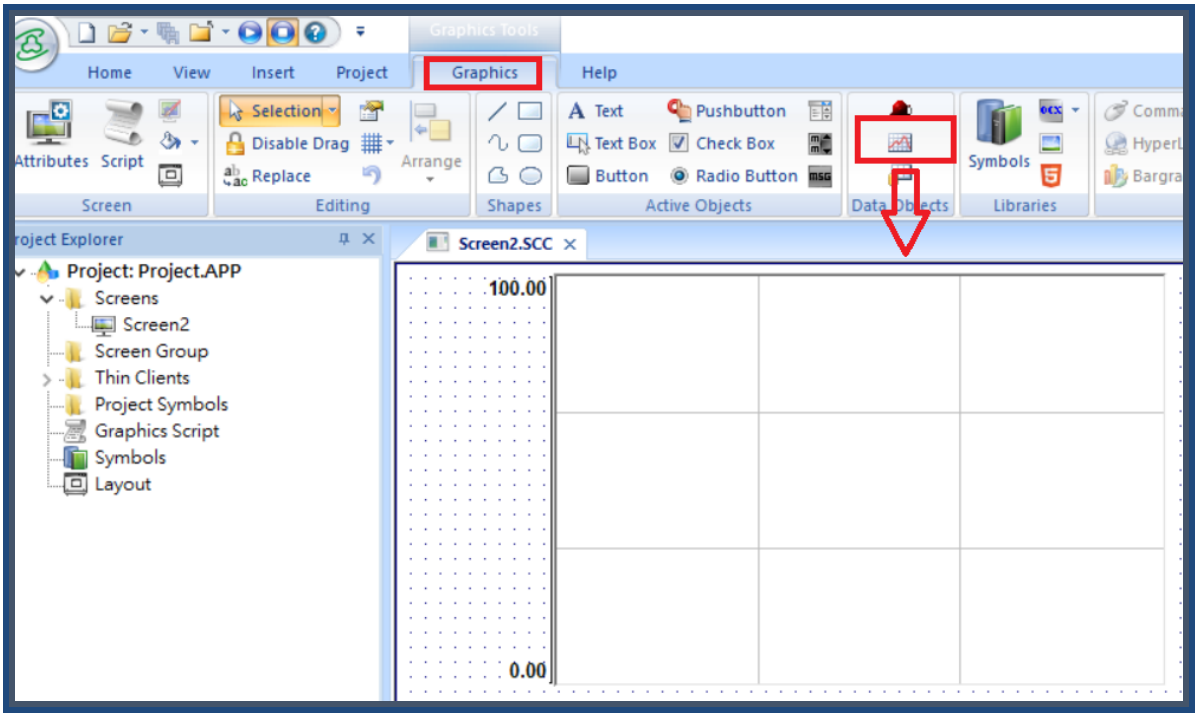


2. Double-click the trend chart to open the object properties window

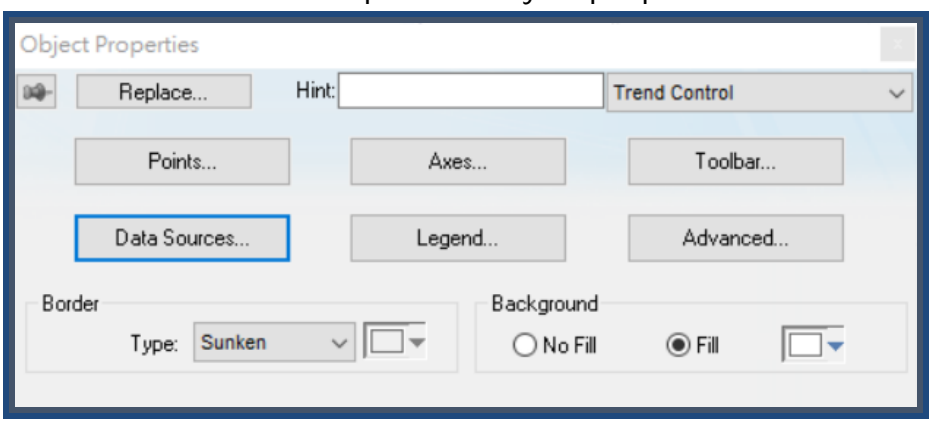


Click [**Data Sources**], click [New], enter a name, and then click the [**Create**] button.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

X Axis field is the name of the column in which the time record in the database is entered.

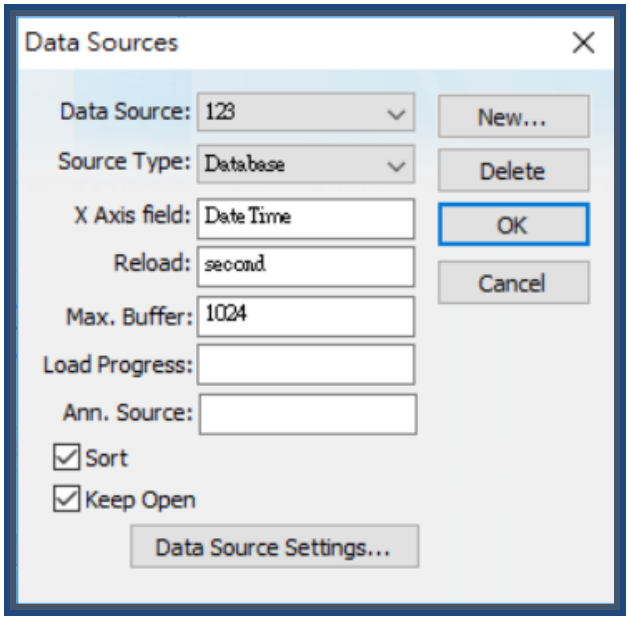


Click [**Data Source Settings**], cancel the checkbox of [Use project default] and [Use default name], and click the ... button.

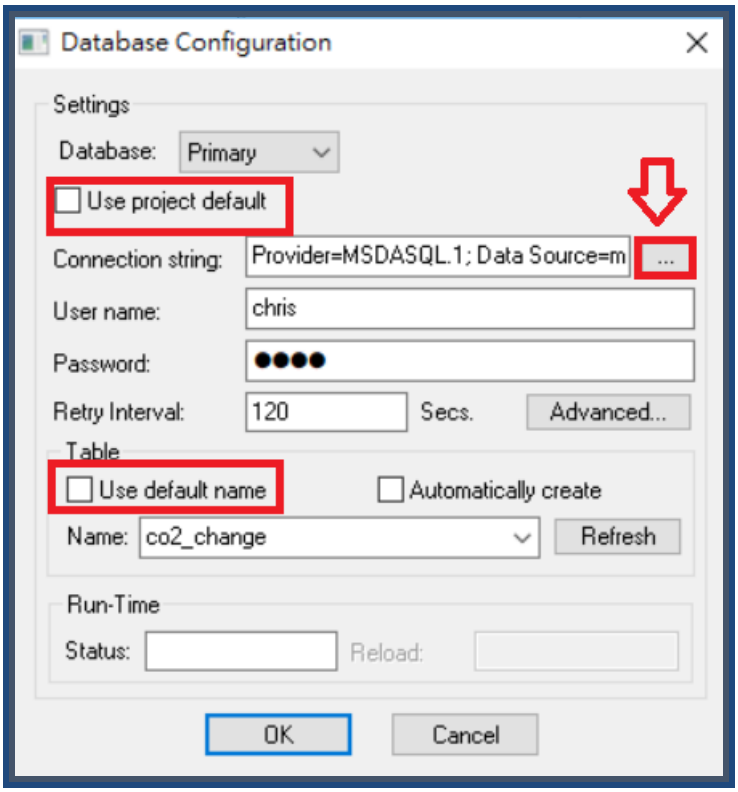


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

After clicking [**Microsoft OLE DB Provider for ODBC Drivers**], click [**Next**].

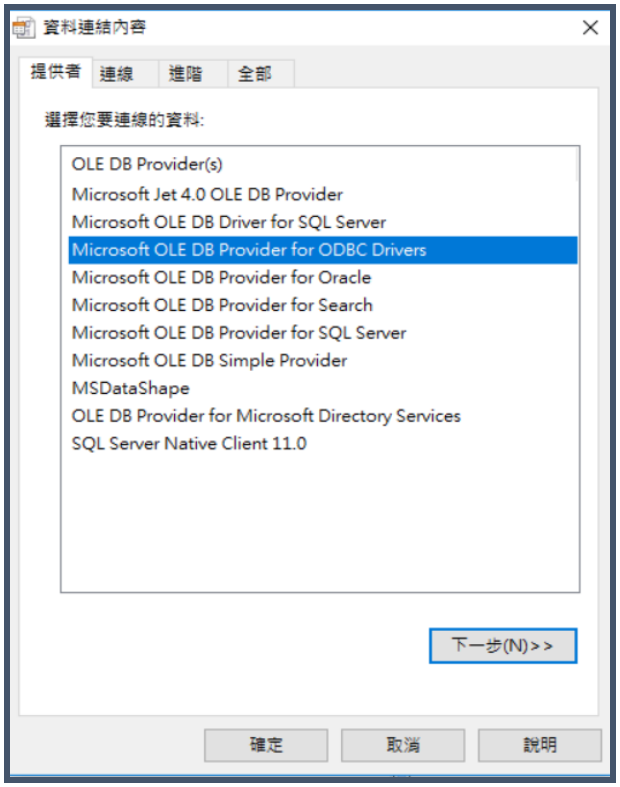


Fill in the content of [Connect], after the test connection is successful, click [**OK**]

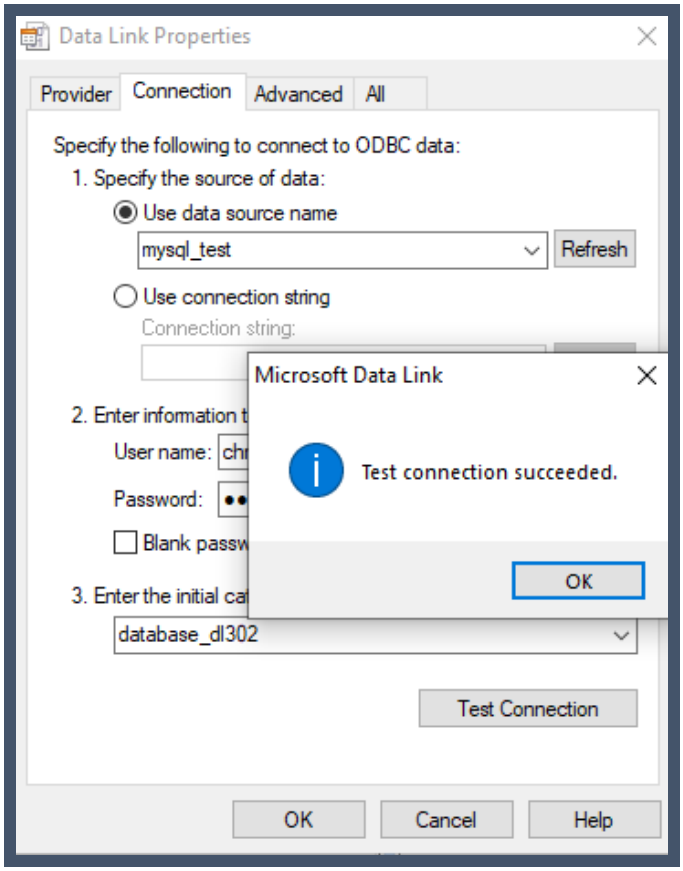


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Click [**Advanced**]

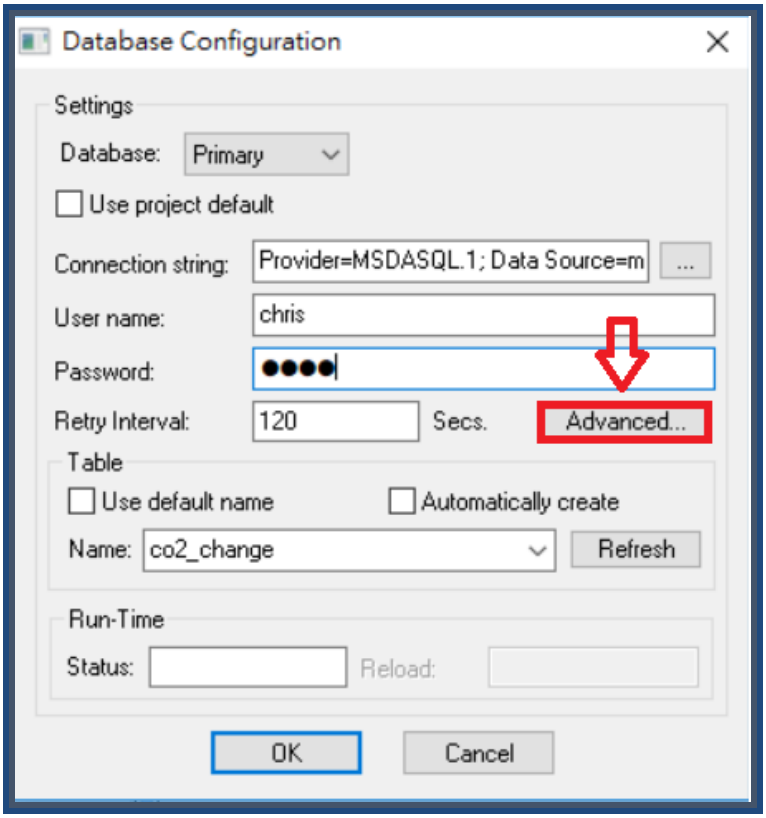


Select [**Time Zone**]option as [**Local Time**] (Depending on your needs)

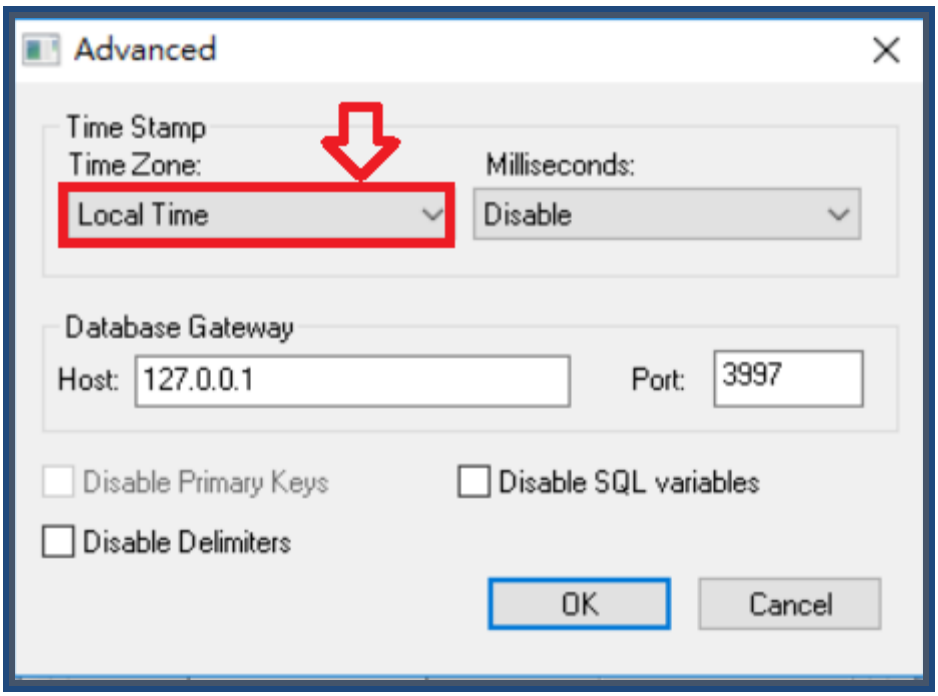


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

After selecting the table for reading, click [**OK**].

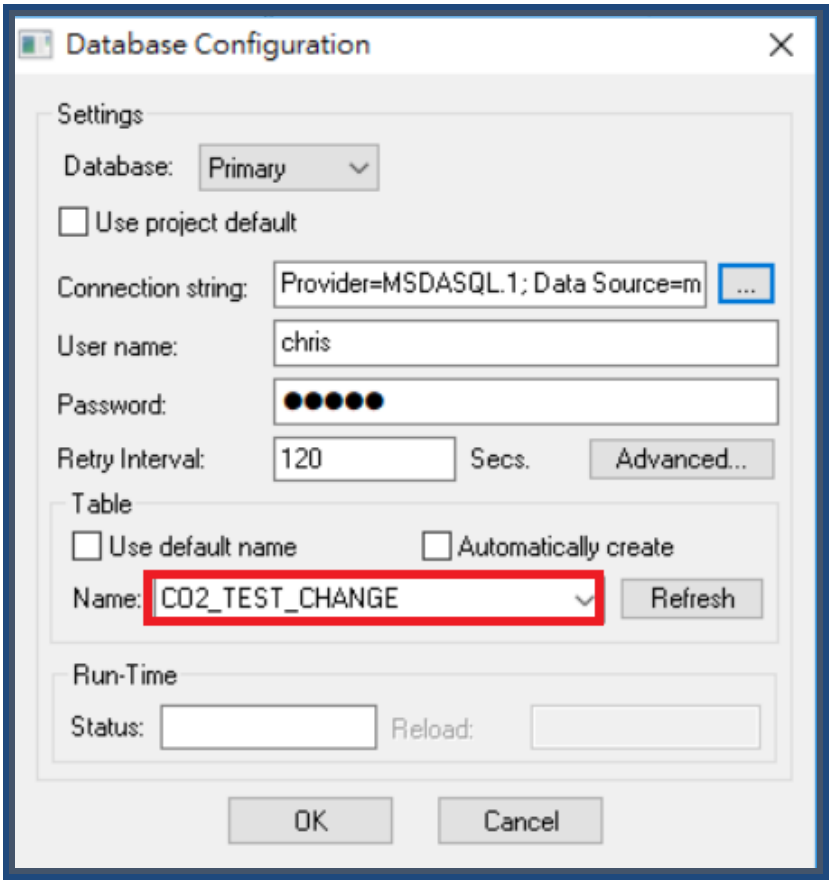


Double-click the trend chart to open the object properties window, and click [**Points**]

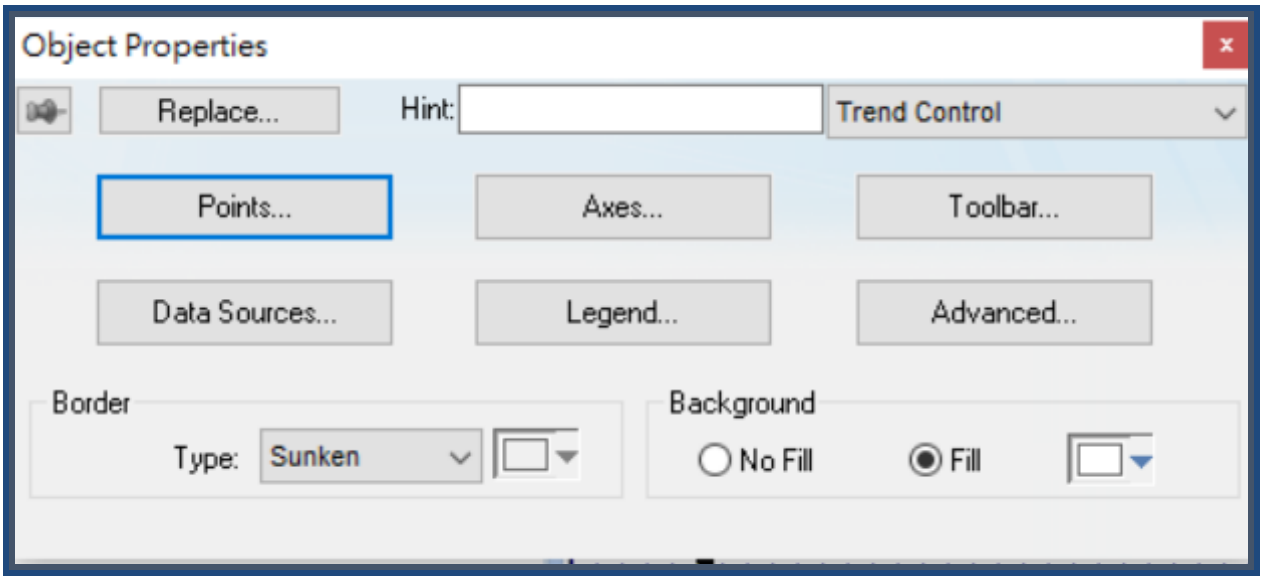


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

After selecting and filling in the Data Source and Tag/Field to be used click [OK].

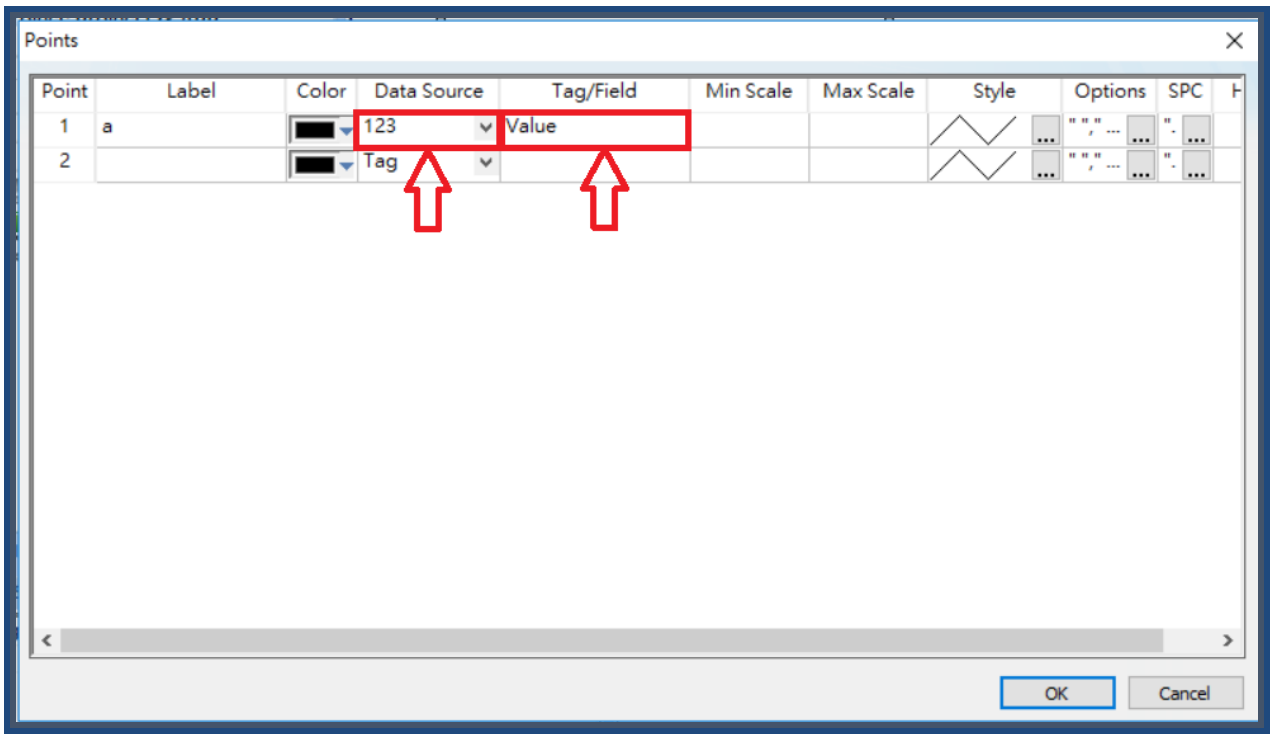

Finished.

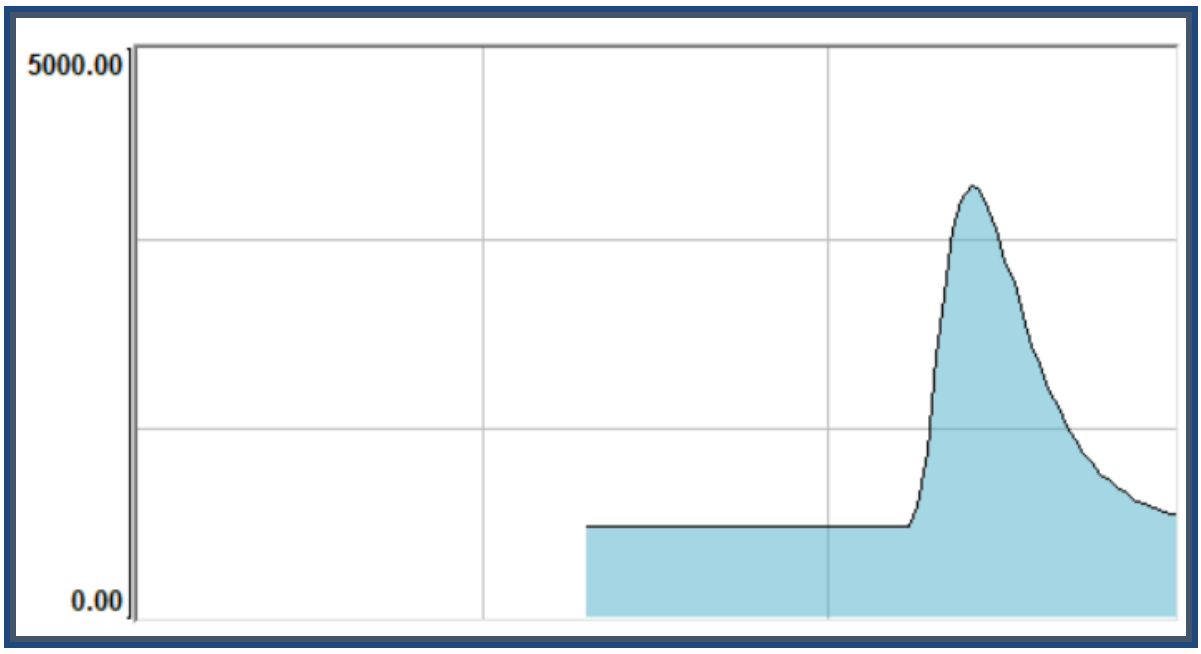

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5. Appendix: How IWS accesses remote MySQL database through ODBC

Step 1：Installation Environment (This example uses the following PC Environment)

(1) Server: Install MySQL Workbench

(2) Client: Install ODBC for MySQL

	Server Side	Client Side
OS Version	Windows 8.1 Professional	Windows 7 Professional
MySQL Workbench Version	v6.3.9 (MySQL Installer 5.7.18, x86 32bit) https://dev.mysql.com/downloads/file/?id=470091	N/A
InduSoft Version	N/A	v8.0.2.0
ODBC for MySQL	N/A	V5.3.8 (win32) https://dev.mysql.com/downloads/file/?id=470365


Step 2：Open MySQL Server Remote connection Permission (Server Side)

(1) Execute as Administrator: C:\Windows\system32\cmd.exe

(2) Switch the document to where “MySQL.exe” located

```
>cd C:\Program Files\MySQL\MySQL Server version\bin
```

Note: version is the installed version. This example is 5.7

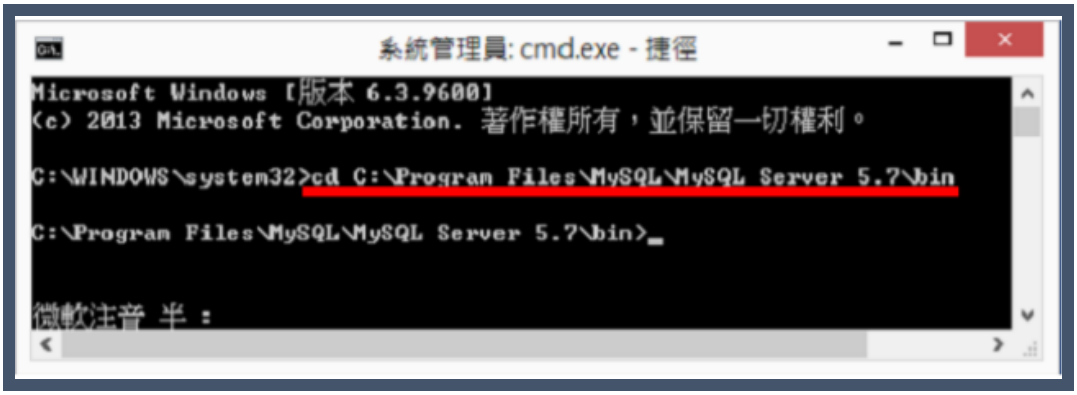


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

(3) Login MySQL server (The account / password is set during installation)

>mysql -uroot –proot

Remarks: -u account -p password (-u -p followed by account password directly without spaces). After successful login, you will see mysql>

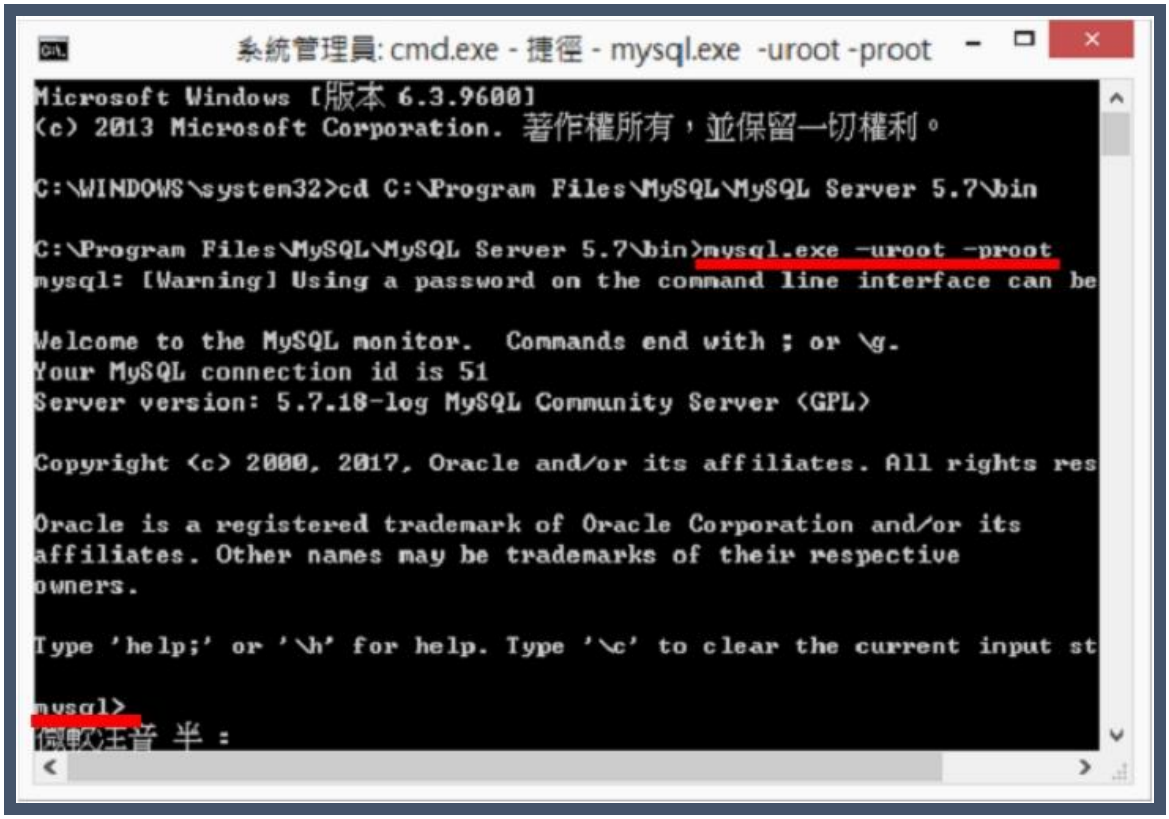

(4) Enter the command to set permissions

> GRANT ALL PRIVILEGES ON *.* TO USERNAME@IP IDENTIFIED BY PASSWORD;

Remarks: USERNAME is generally the default root; if the IP set to '%', all computers can connect; PASSWORD is the connection password

範例：


mysql>GRANT ALL PRIVILEGES ON *.* TO root@172.17.20.176 IDENTIFIED BY root;

Allow 172.17.20.176 to log in using account root and password root

mysql>GRANT ALL PRIVILEGES ON *.* TO root@'%' IDENTIFIED BY root;

Allow all computers to log in with account root and password root

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

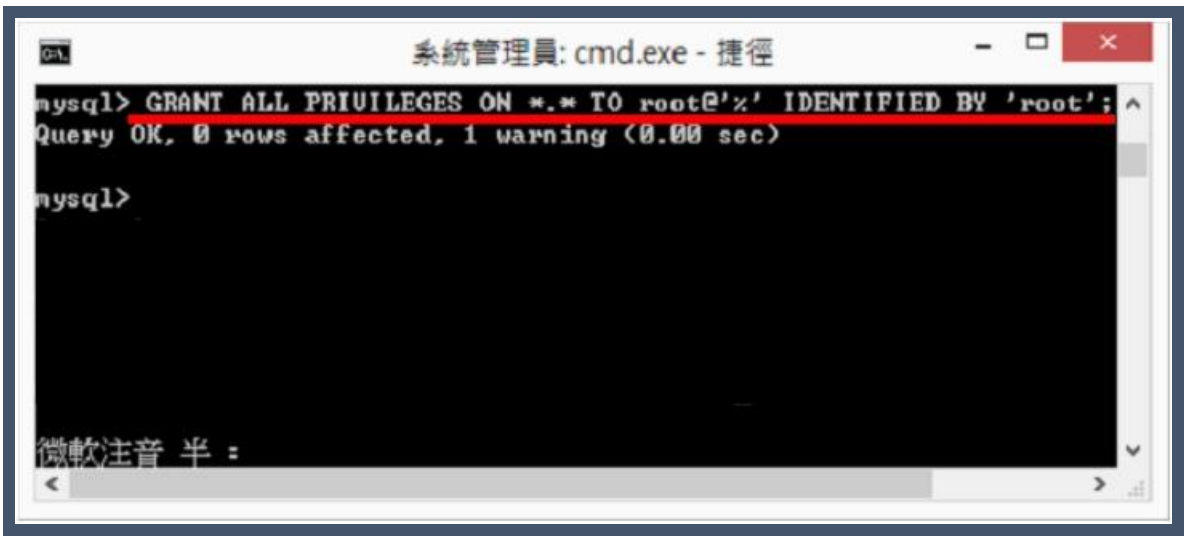

(5) Update permission settings and leave MySQL

```
mysql>FLUSH PRIVILEGES;
mysql>quit;
```




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 3：Add 〃Inbound Rules〃 in the Windows Defender Firewall (Server)


Allow MySQL pass through the firewall Port 3306, so that the remote device can access the MySQL services


(1) Open 〃Control Panel〃→ Windows Defender Firewall→ Advanced Settings→ Inbound Rules→ New Rule

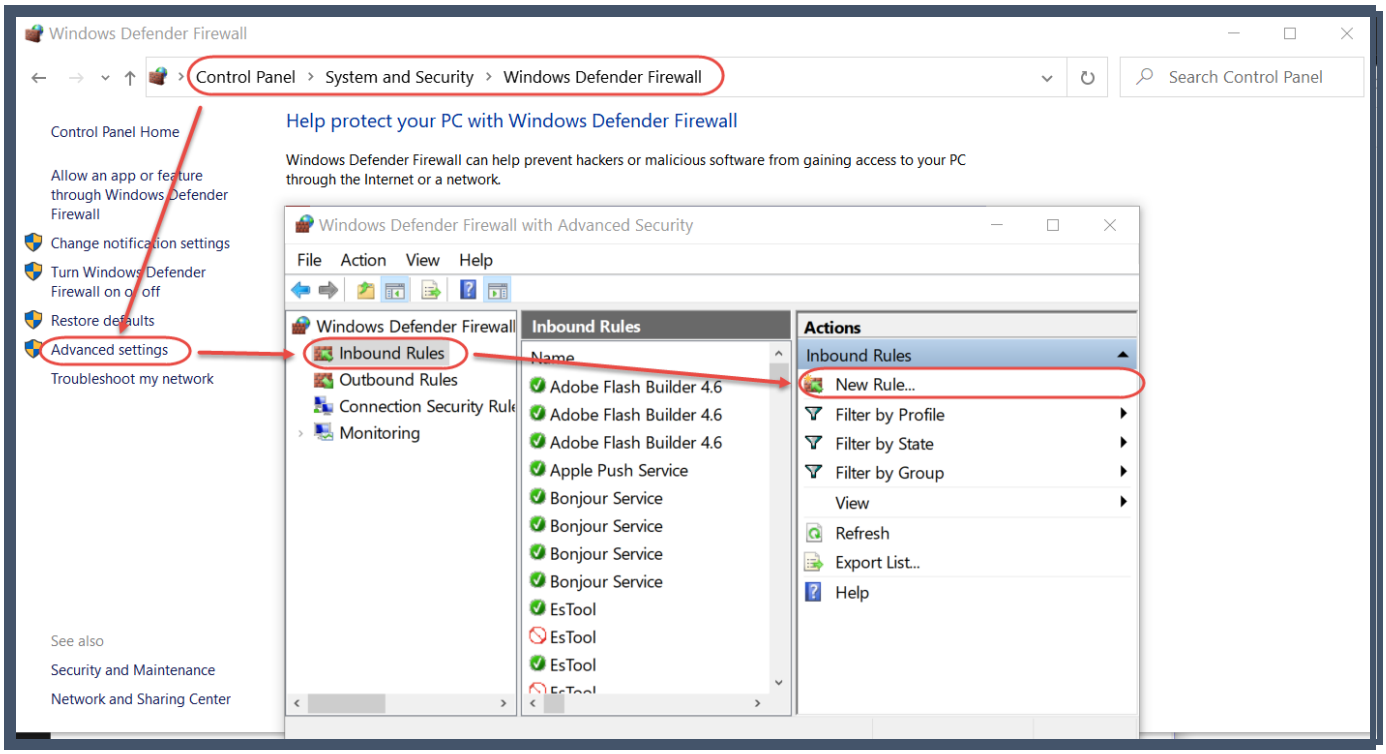


(2) Refer to following settings (Captures)


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

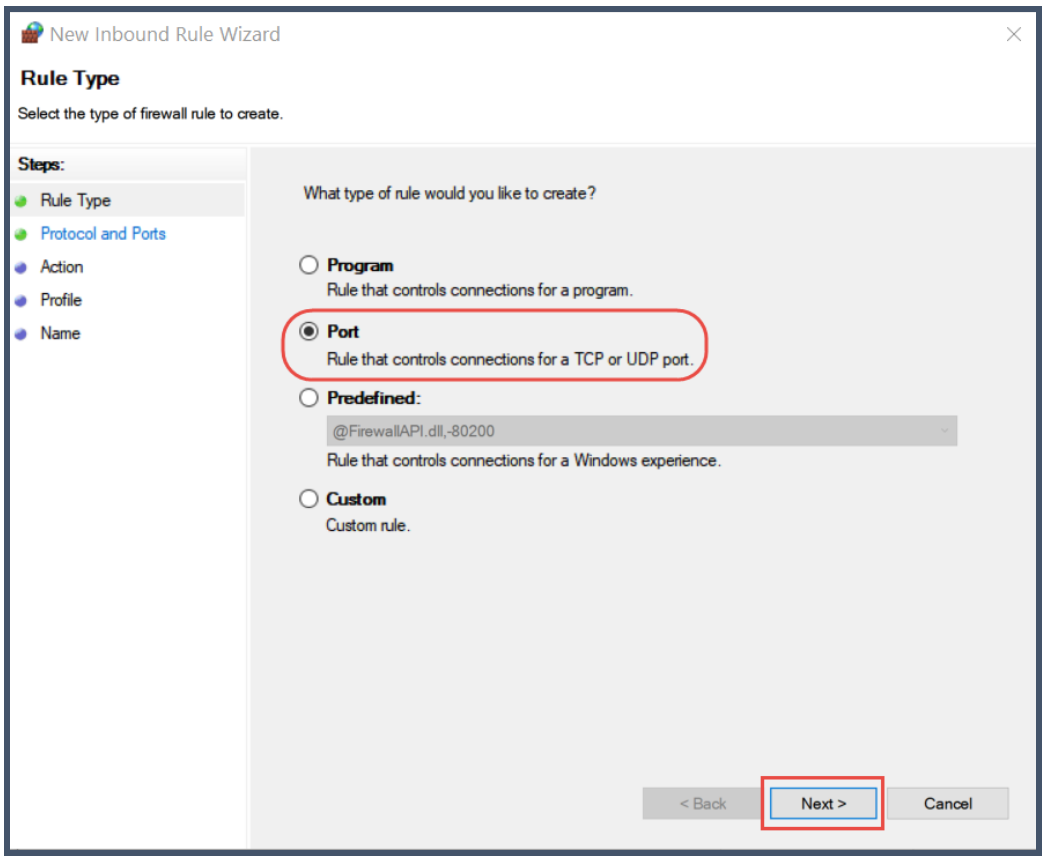

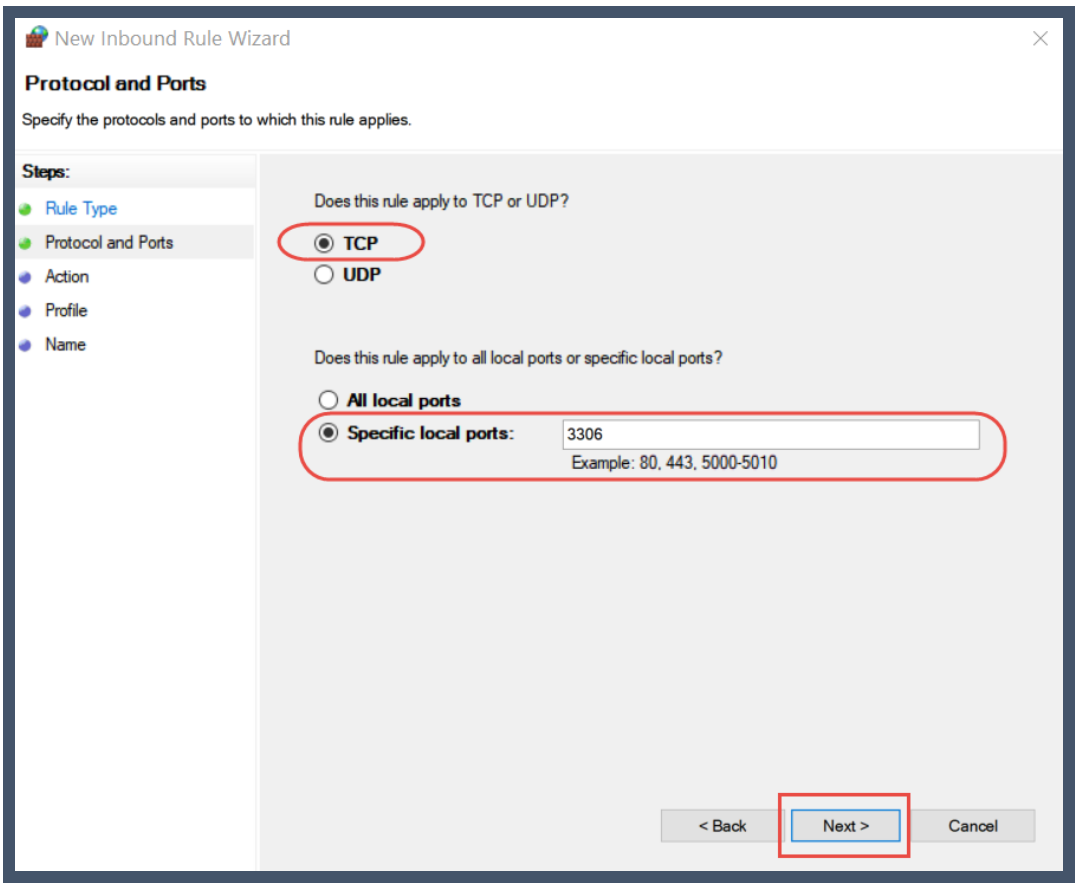



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

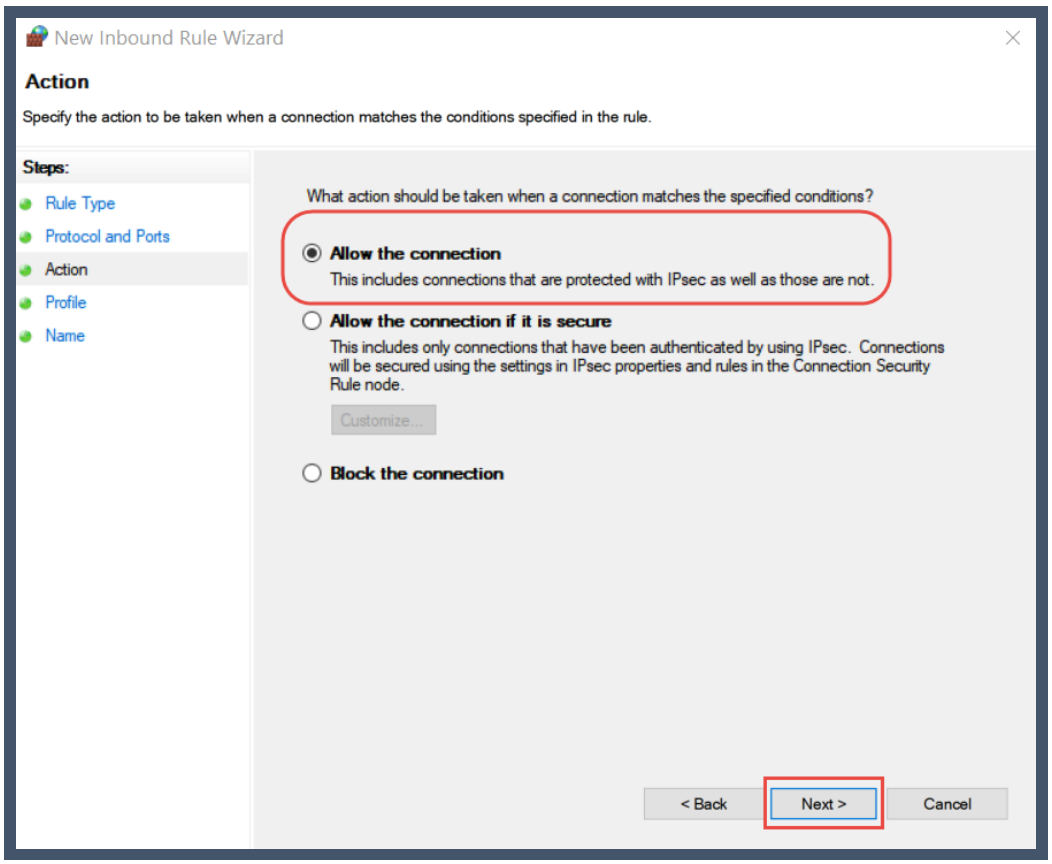

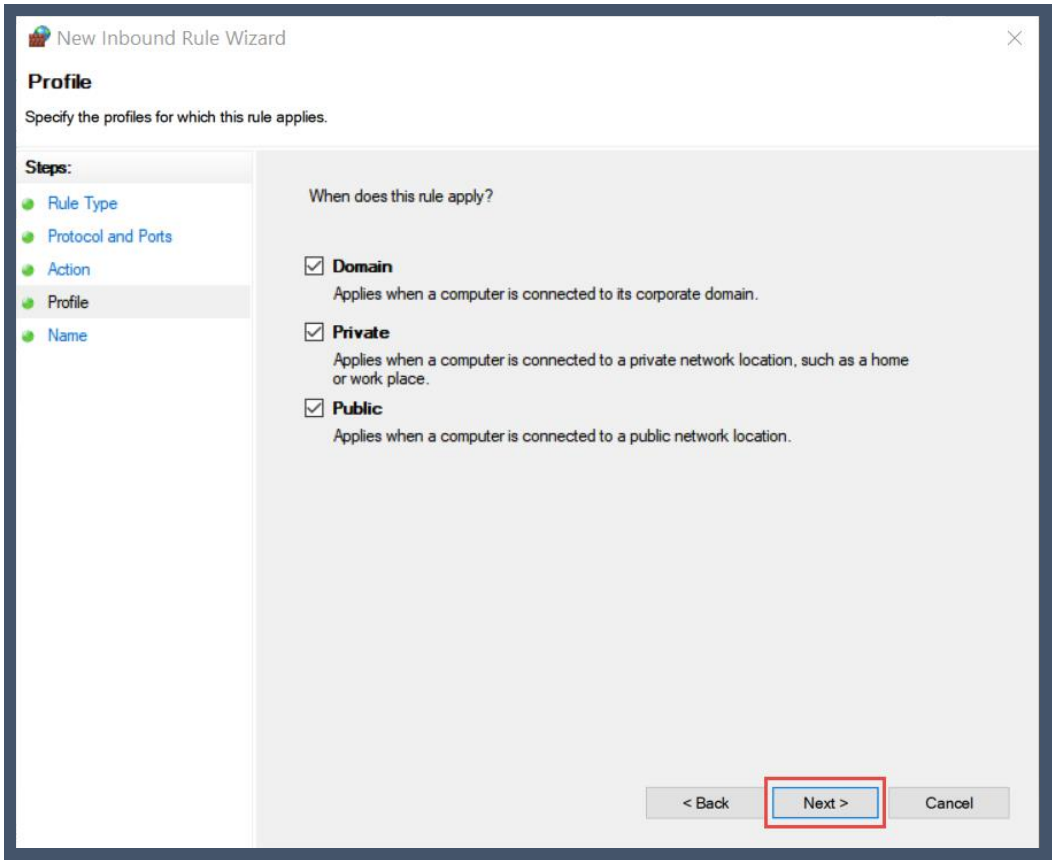

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

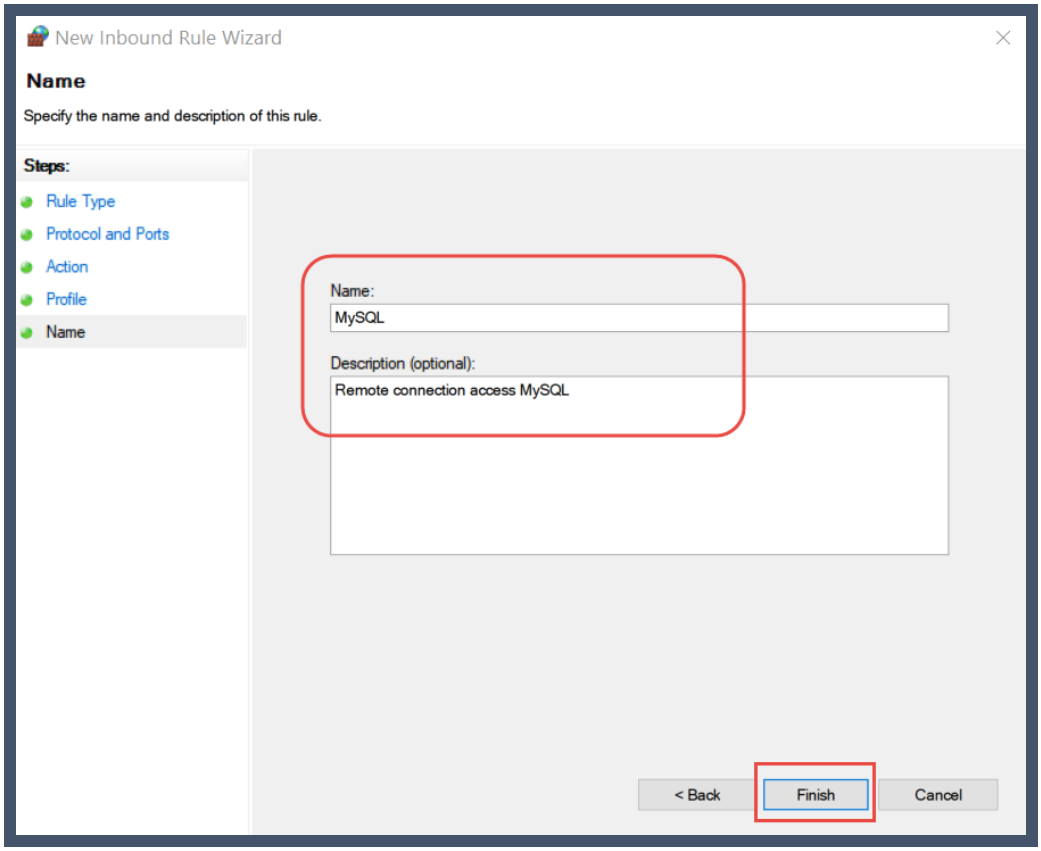

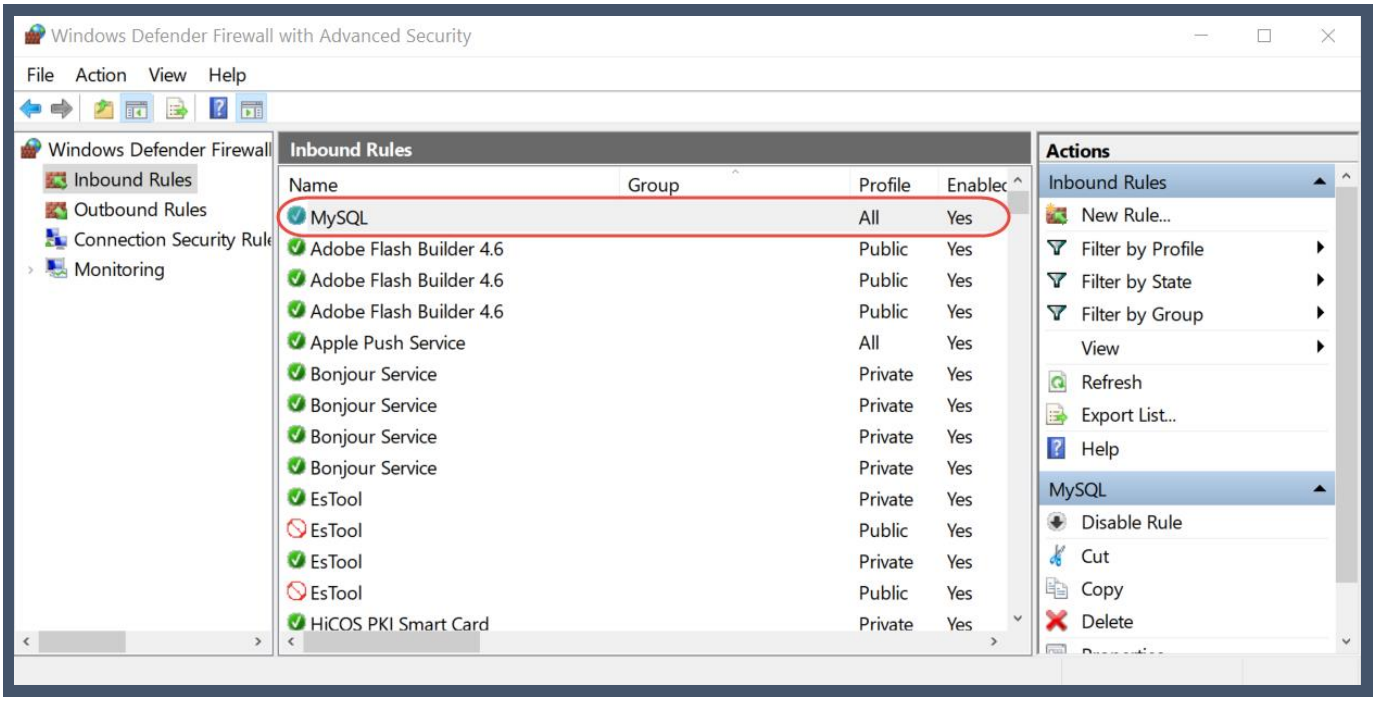


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 4：Set up ODBC Connections (Client)

(1) Execute as Administrator: C:\Windows\SysWOW64\odbcad32.exe➔ Add




選擇資料來源

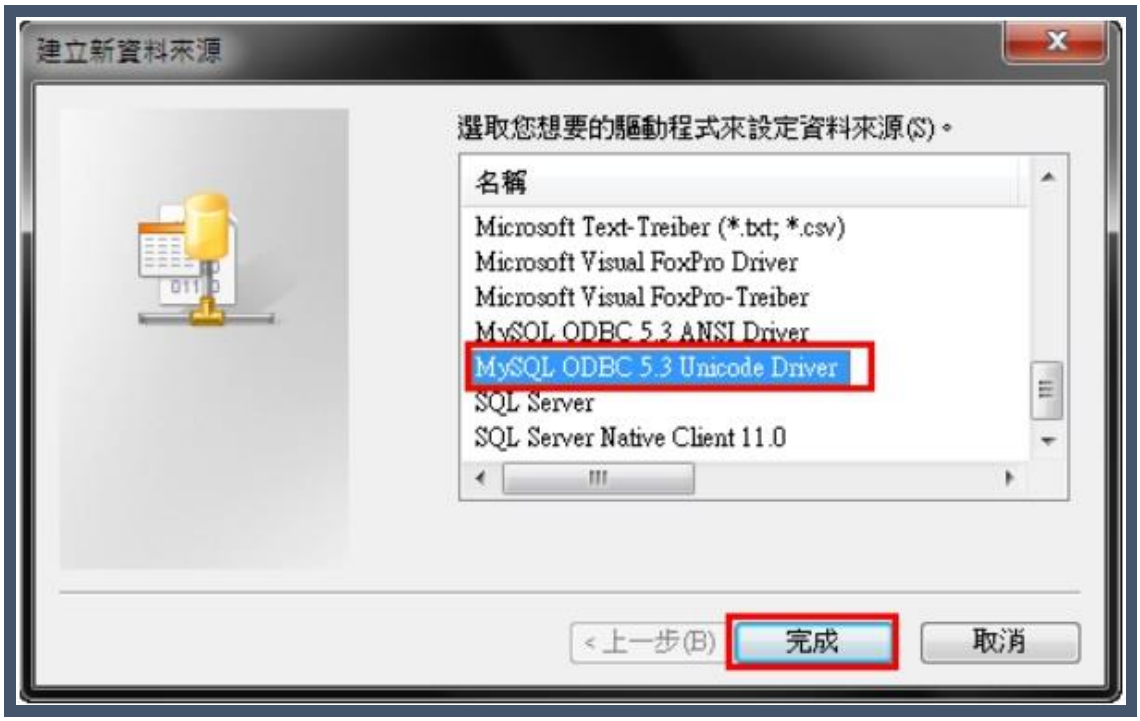

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

(2) Set the connection name (used by IWS) / server IP, Port / login account password/database. Press OK to close when finished

Note: The database (Schema) has to create in advance and can add using the MySQL Workbench management tool.

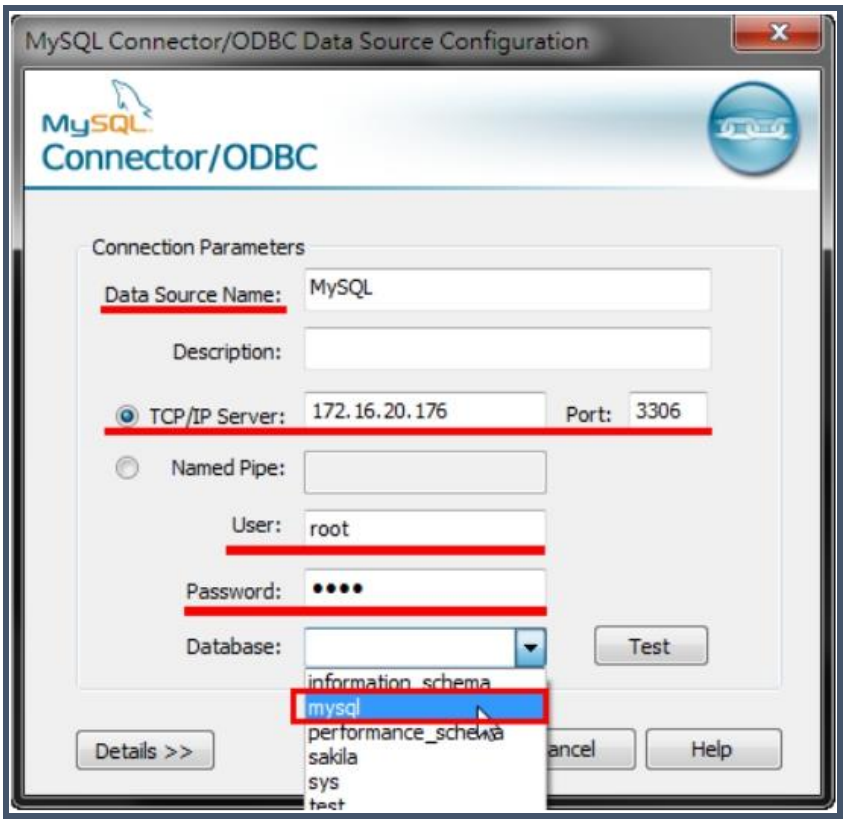


(3) Make sure the ODBC connection is established successfully



LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 5：Set up InduSoft database connection (Client)

(1) Take the trend chart form as an example. Under “Provide” Tag, chooses Microsoft OLE DB Provider for ODBC Drivers

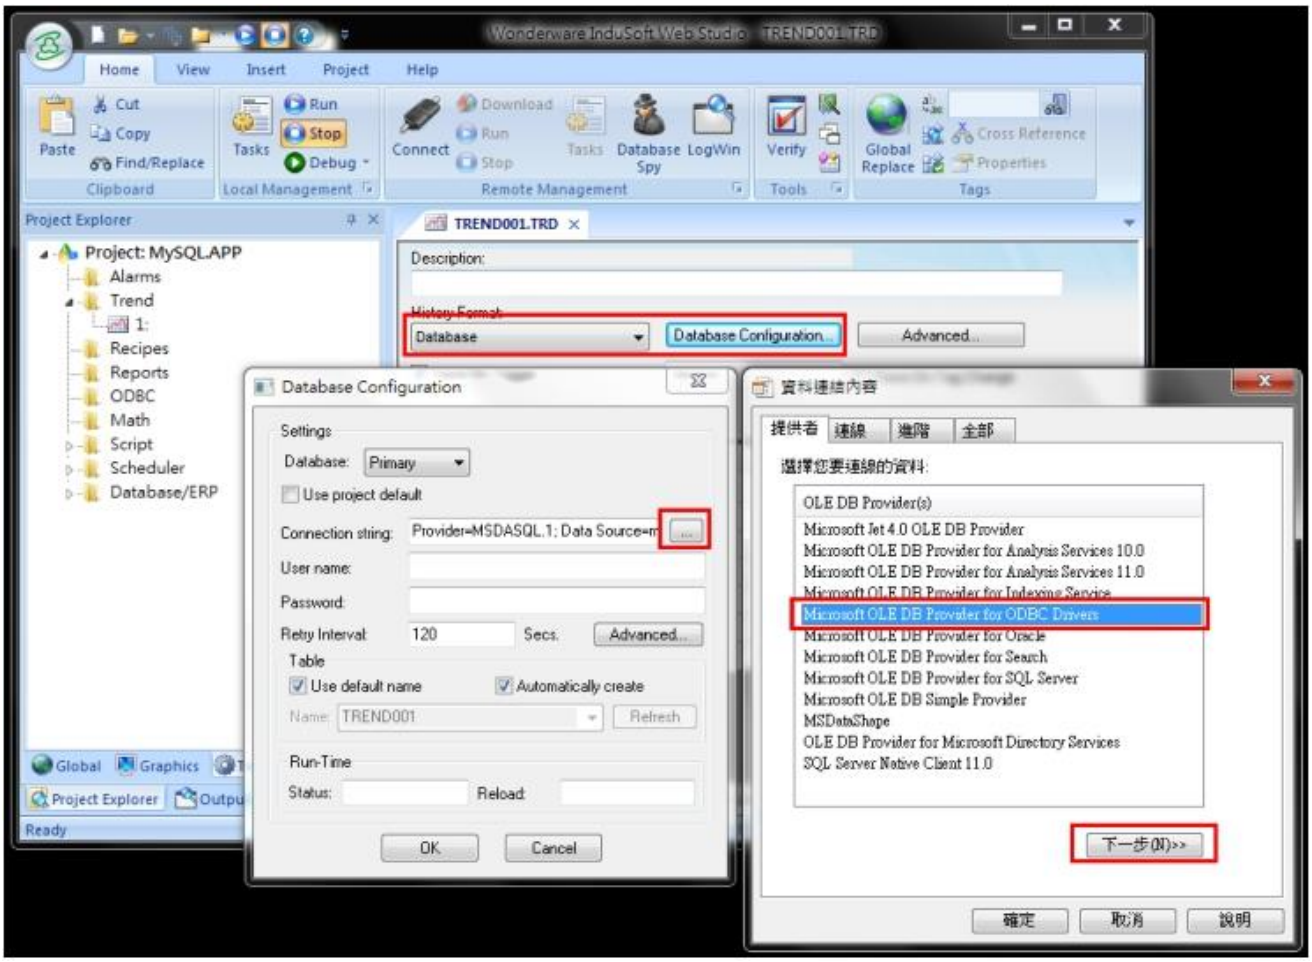

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

(2) Set the data source name (mySQL) → the database to be used (test) →test connection

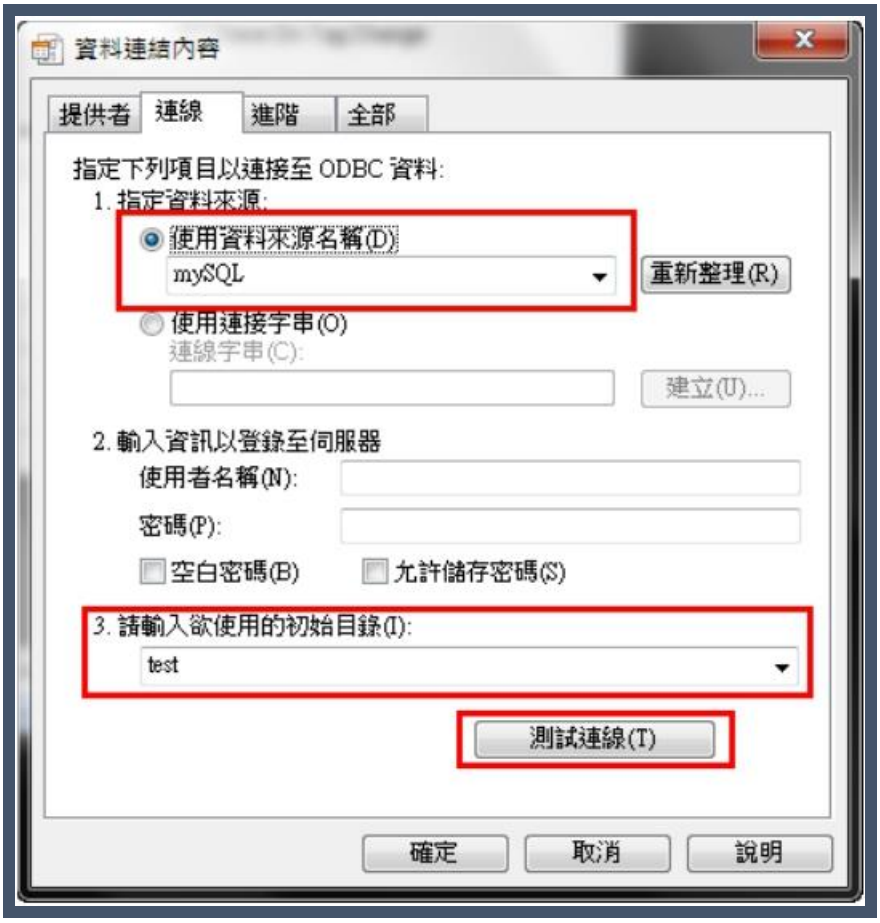

(3) Successfully connected means to complete the setting.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000