I/O Expansion board Release Note


Please download Demo program from our FTP site.
X116 for 7188EX :
http://ftp.icpdas.com/pub/cd/8000cd/napdos/7188e/demo/bc_tc/xboard/

DiVal = **inportb(BASE);** **/* for all 8 channels */**
Note: The default value of BASE is 0.
For **NPN** mode:
DiVal=0x0 → all 4-channel are Low
DiVal=0x1 → Chennel_0 is High, the other channels areLow
DiVal=0xF → all 4-channel are High

For **PNP** mode:
DiVal=0x0 → all 4-channel are High
DiVal=0x1 → Chennel_0 is Low, the other channels are High
DiVal=0xF → all 4-channel are Low

DoVal =**outportb(BASE, DoVal);** **/* for all 6 channels */**
Note: The default value of BASE is 0.
DoVal=0x00 → turn all 6-channel OFF
DoVal=0x01 → turn chennel_0 ON, the other channels OFF
DoVal=0x3F → turn all 6-channel ON

Pin Assignment :

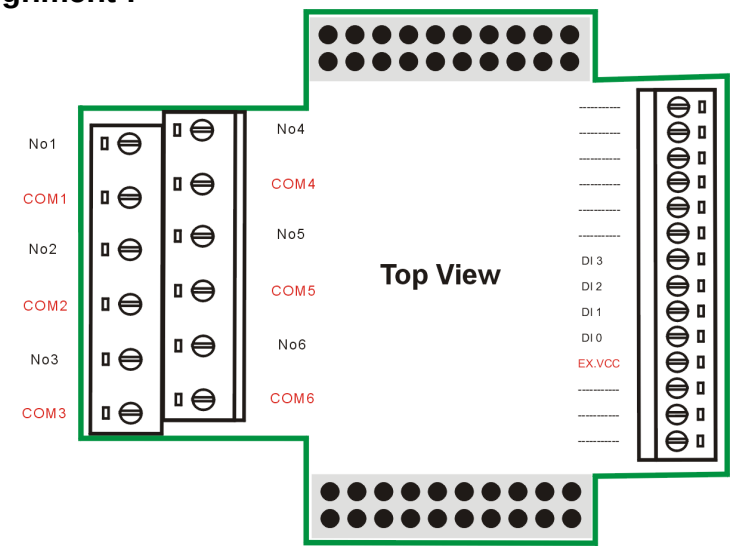

Technical Service:
Email problem-report to service@icpdas.com if you have any questions.

Rev.3.0 Feb/18/2004

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000