CAN-2018C/S、CAN-2018D/S Quick Start

V3.0, Jan 2025

Packing List

In addition to this guide, the package includes the following items:

CAN-2018C/S(or CAN-2018D/S) = CAN-2018C/D + CN-1824



CAN-2018C/D



CN-1824



Screw Driver

Technical Support


service@icpdas.com

www.icpdas.com


Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

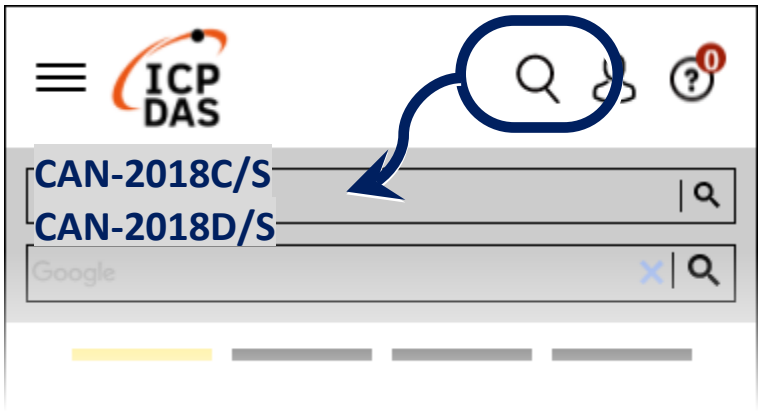


- For Desktop Web

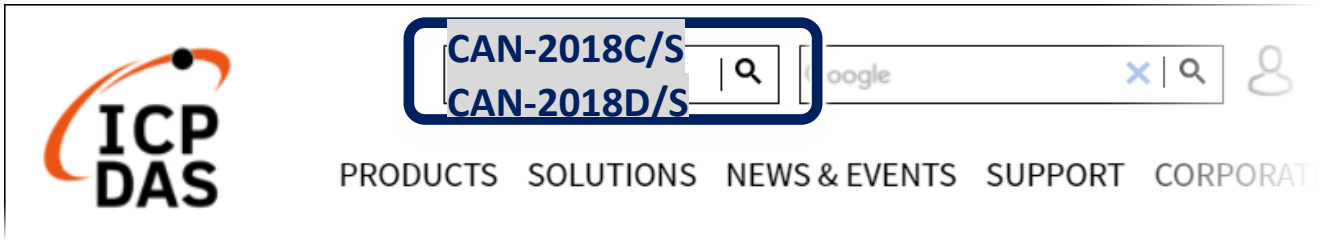

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Node ID, baud rate and terminal resistance

According to the user's requirements for CANopen/DeviceNet network, set the node ID and CAN baud rate of this module on the CANopen/DeviceNet network. If the module is located at the terminal of the network, according to the standard CANopen/DeviceNet network specification, this module must enable the terminator resistance.

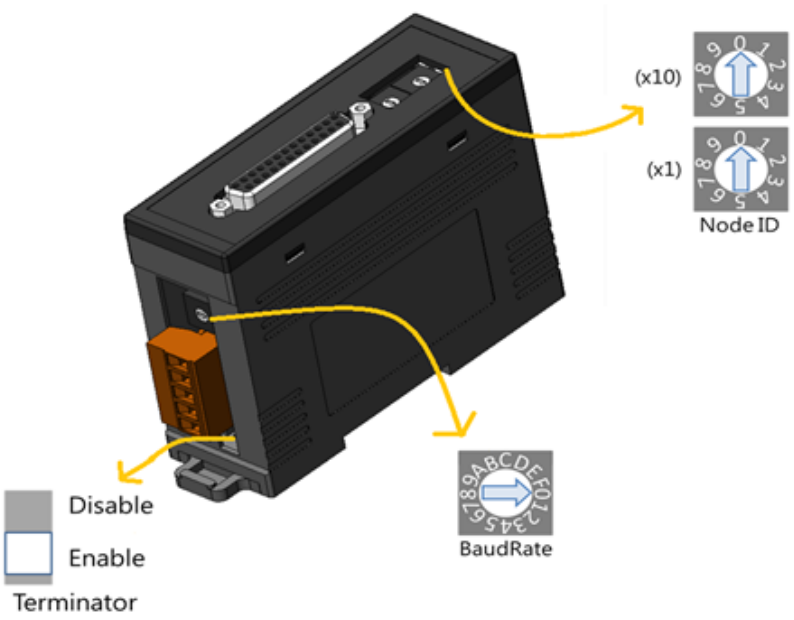

CAN-2018C/S


BaudRate Rotary Switch	BaudRate (k bps)
0	10
1	20
2	50
3	125
4	250
5	500
6	800
7	1000

CAN-2018D/S

BaudRate Rotary Switch	BaudRate (k bps)
0	125
1	250
2	500


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 I/O channel connection

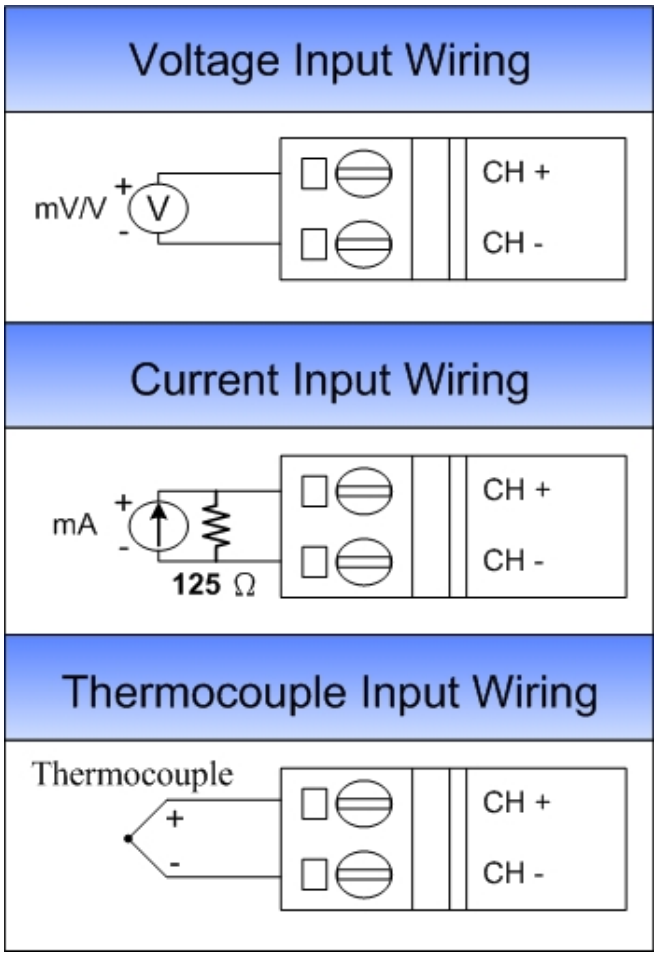


3 CAN port connection

2-wire Connection

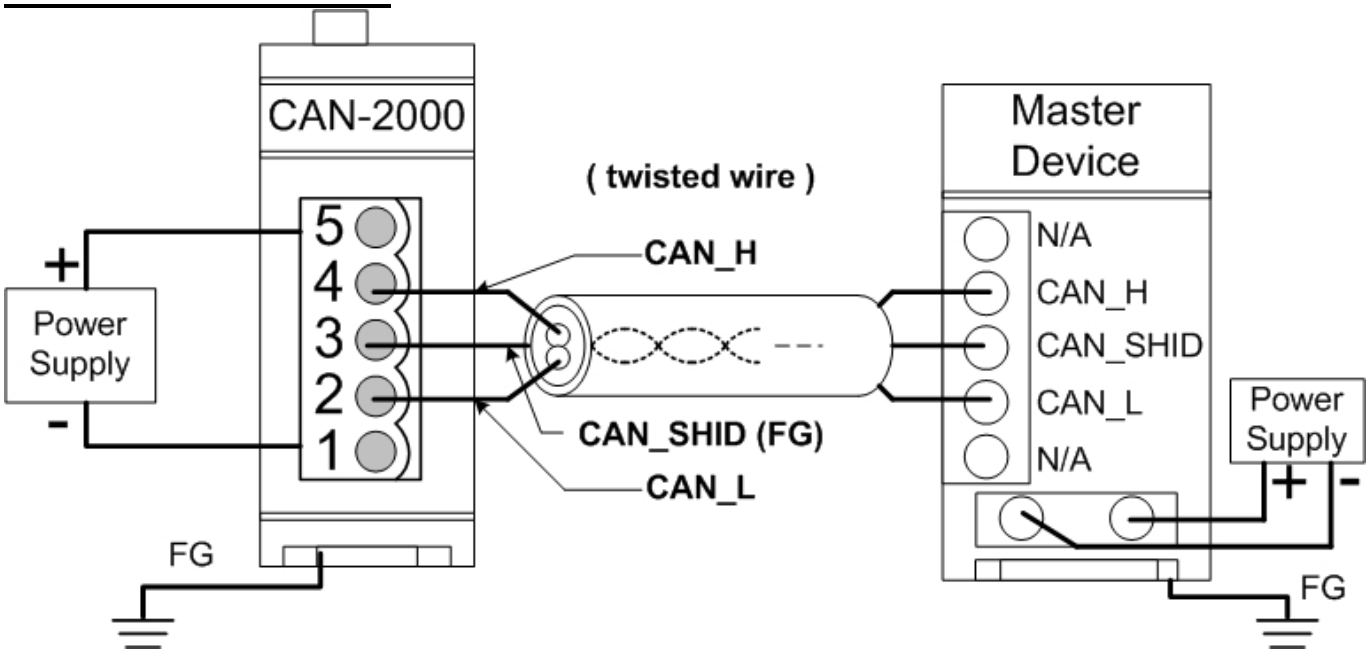


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3-wire Connection

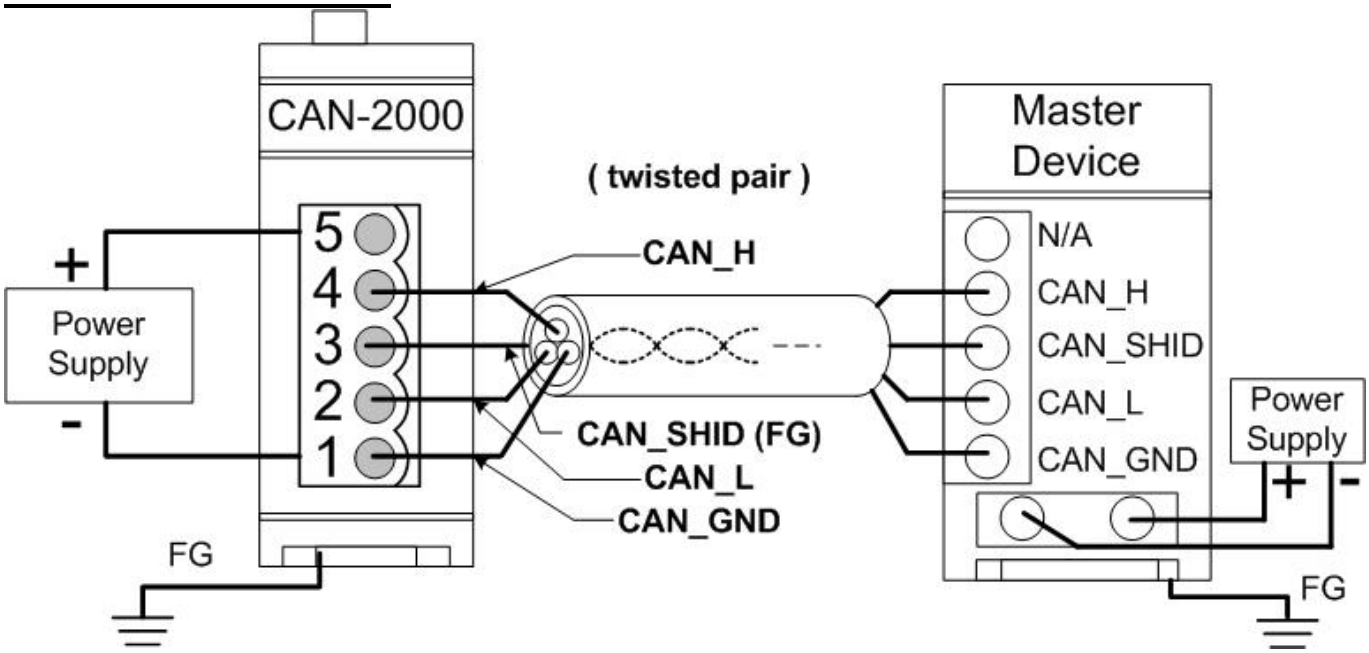

4-wire Connection

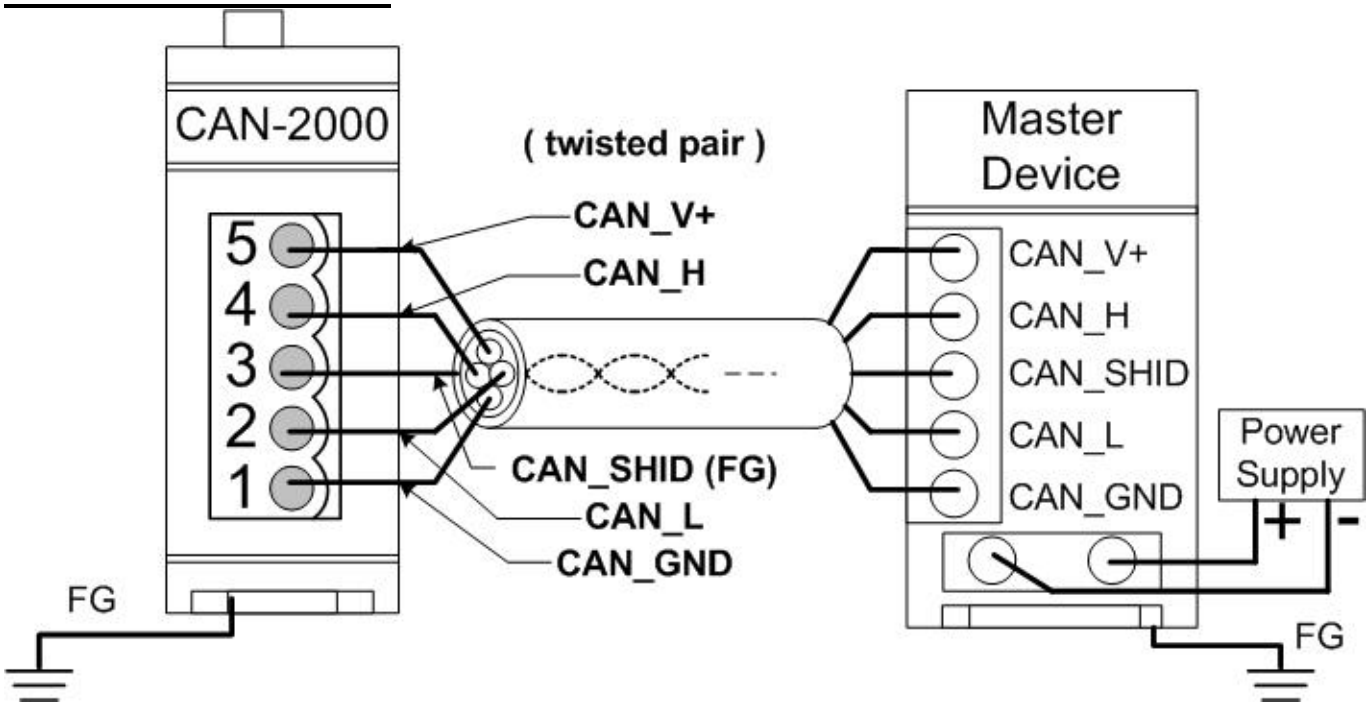

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000