# CAN-2019C/S2、CAN-2019D/S2 Quick Start

V3.0, Jan 2025

## Packing List

In addition to this guide, the package includes the following items:

**CAN-2019C/S2(or CAN-2019D/S2) = CAN-2019C/D+DN-1822**



CAN-2019C/D



DN-1822



CA-252518D-1



Screw Driver

## Technical Support


service@icpdas.com

www.icpdas.com


## Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

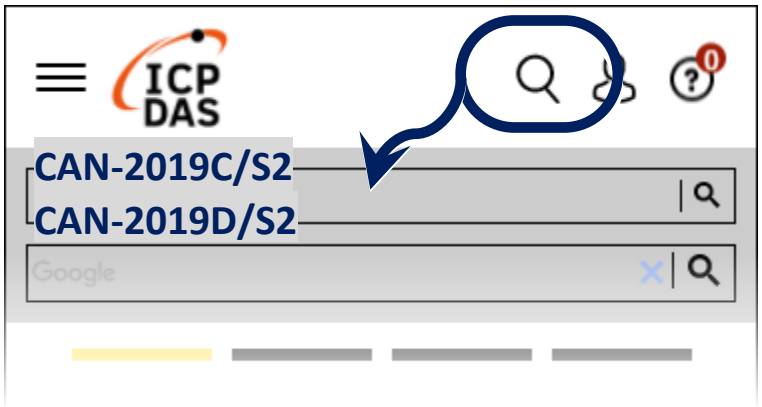


- For Desktop Web

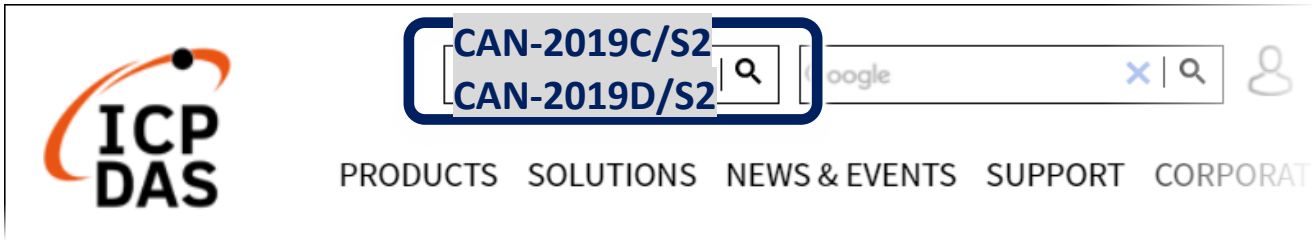





Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

# 1 Node ID, baud rate and terminal resistance

According to the user's requirements for CANopen/DeviceNet network, set the node ID and CAN baud rate of this module on the CANopen/DeviceNet network. If the module is located at the terminal of the network, according to the standard CANopen/DeviceNet network specification, this module must enable the terminator resistance.

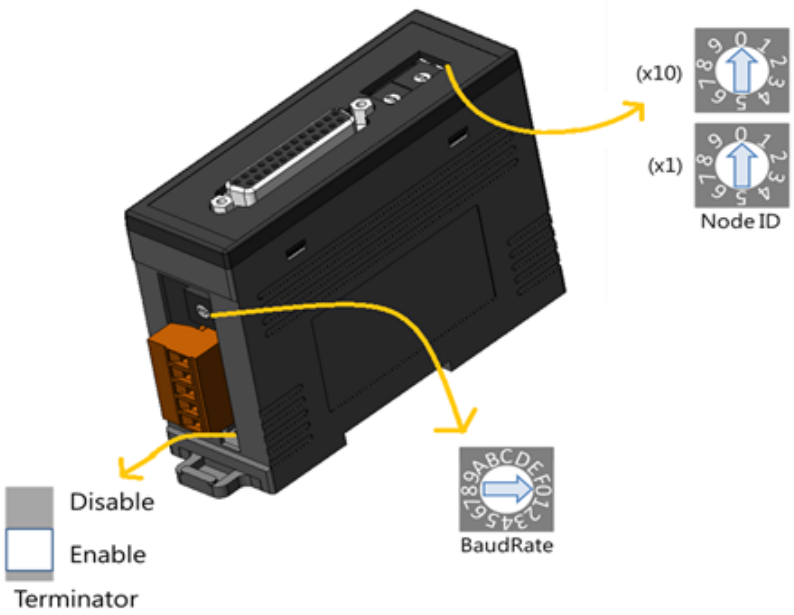


**CAN-2019C/S2**

| BaudRate Rotary Switch | BaudRate (k bps) |
|---|---|
| 0 | 10 |
| 1 | 20 |
| 2 | 50 |
| 3 | 125 |
| 4 | 250 |
| 5 | 500 |
| 6 | 800 |
| 7 | 1000 |


**CAN-2019D/S2**

| BaudRate Rotary Switch | BaudRate (k bps) |
|---|---|
| 0 | 125 |
| 1 | 250 |
| 2 | 500 |




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

# 2 I/O channel connection

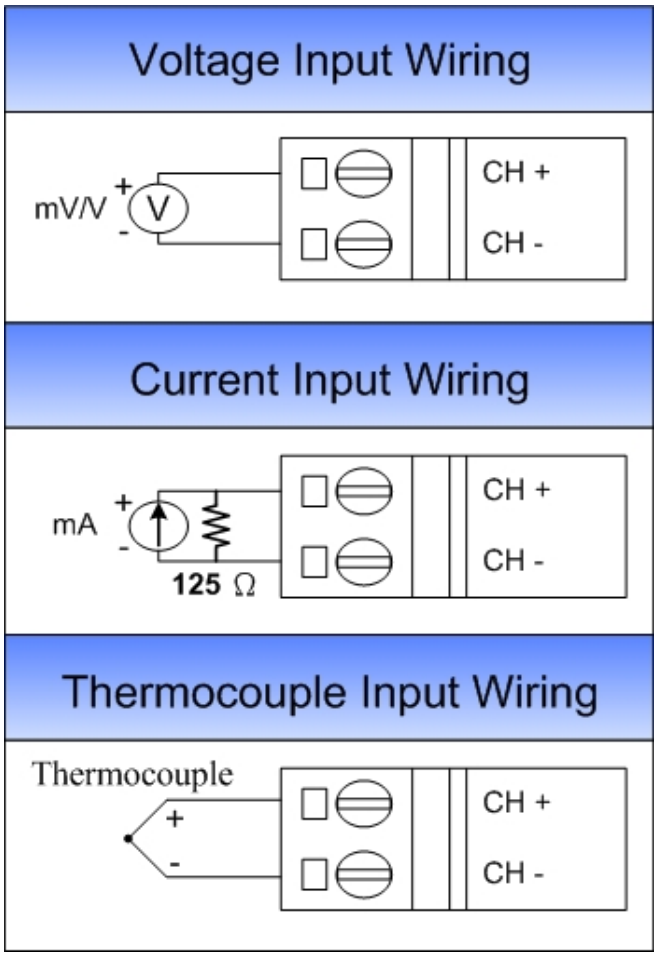


# 3 CAN port connection


## 2-wire Connection

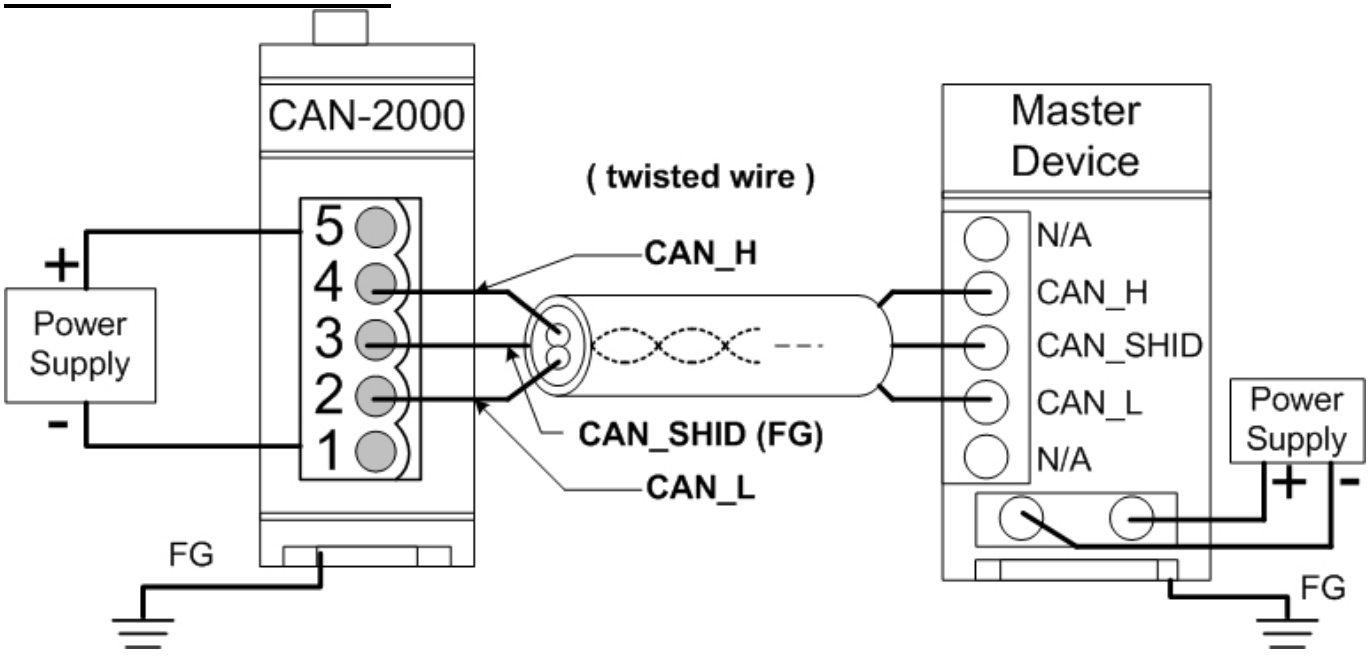





Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

## 3-wire Connection

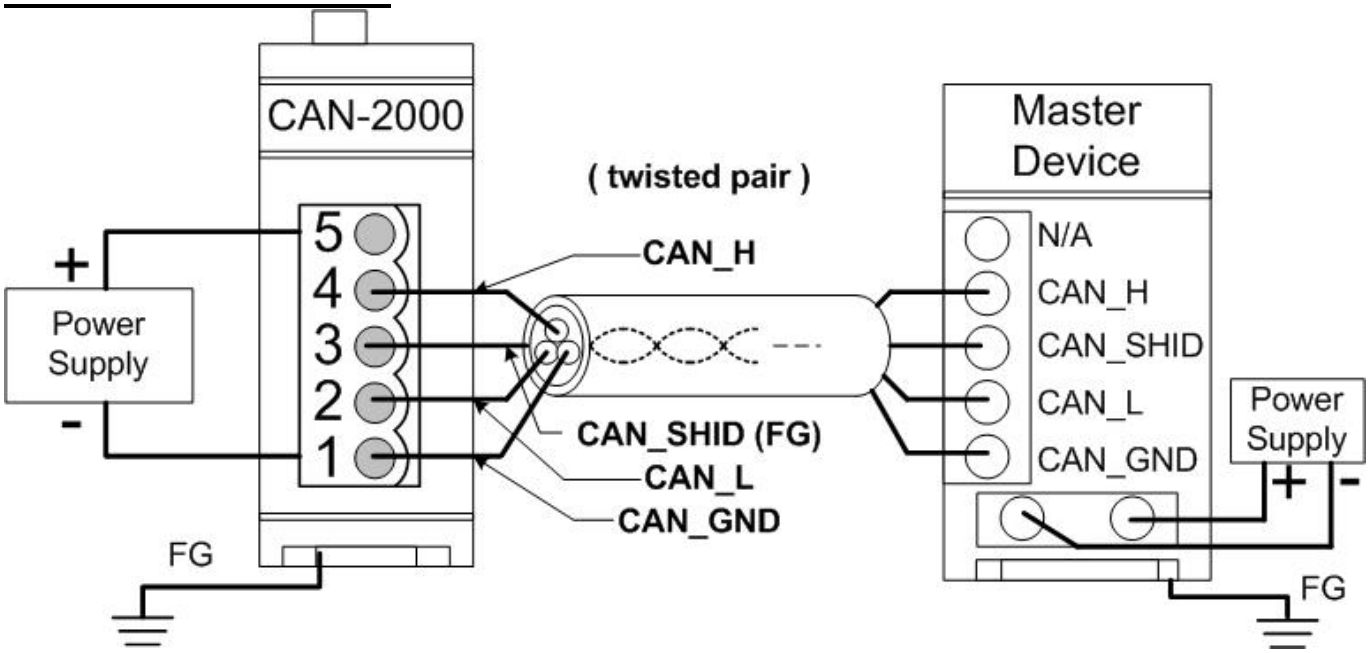


## 4-wire Connection

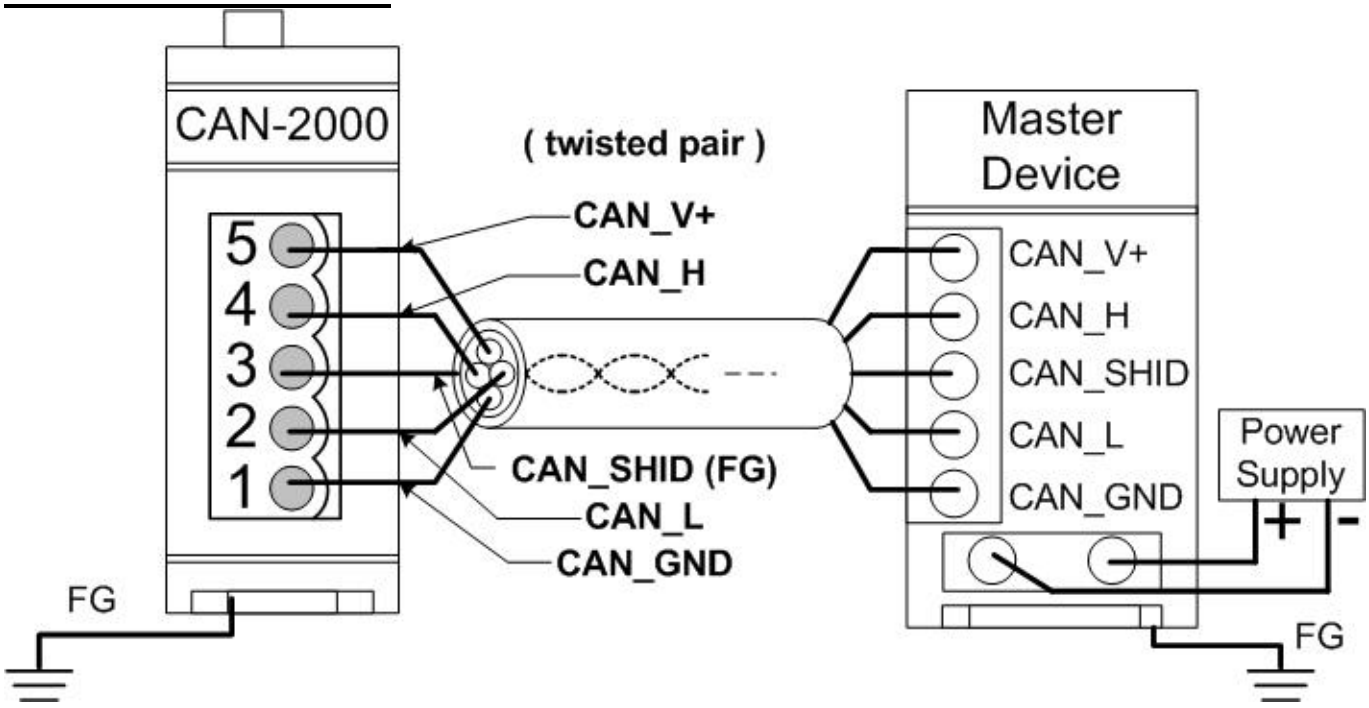




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000