

Quick Start
for ECAT-2051

English / July.2016/ Ver 1.0

1 Shipping Package

This shipping package contains the following items


1 x ECAT-2000 module



1 x Quick Start Guide (This Document)


2 Connecting the Power and Host device

Switch on module and connect it to an EtherCAT network

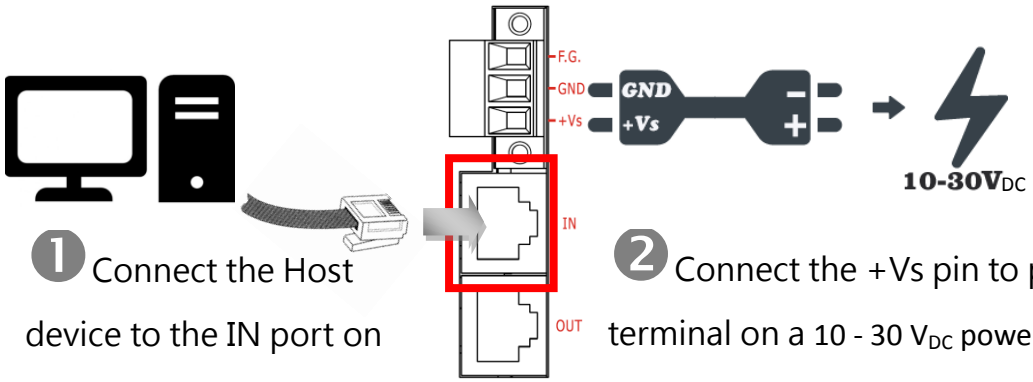

❶ Connect the Host device to the IN port on ECAT-2000 module.

❷ Connect the +Vs pin to positive terminal on a 10 - 30 V_{DC} power supply, and connect the GND pin to the negative terminal.

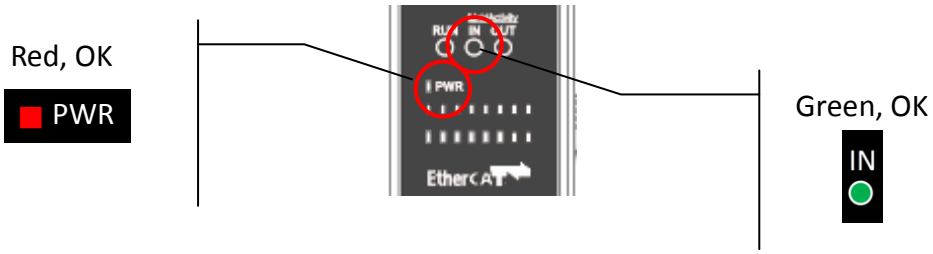

Copyright © 2016 ICP DAS Co., Ltd. All Rights Reserved. ✉ E-mail: service@icpdas.com

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Search Modules

ESI file

The latest ESI file (ICPDAS ECAT-2000.xml) can be downloaded from ICP DAS website at


http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethercat/slave/ecat-2000/software/

Install the ESI file


Copy the “ICPDAS ECAT-2000.xml” file to the Master Tools installation folder, as indicated in the table below.

Software	Default Path
Beckhoff EtherCAT Configuration	C:\EtherCAT Configurator\EtherCAT
Beckhoff TwinCAT 3.X	C:\TwinCAT\3.x\Config\Io\EtherCAT
Beckhoff TwinCAT 2.X	C:\TwinCAT\Io\EtherCAT


Run the EtherCAT Master software (Beckhoff TwinCAT 2.X)

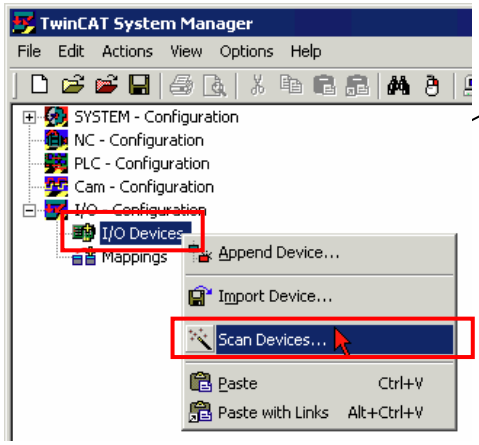


Switch on power
Execute the TwinCAT System Manager(Config mode)
I/O Devices-> Right click-> Scan Devices…

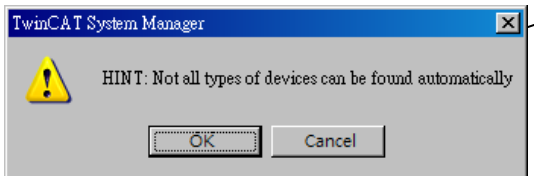

Click OK

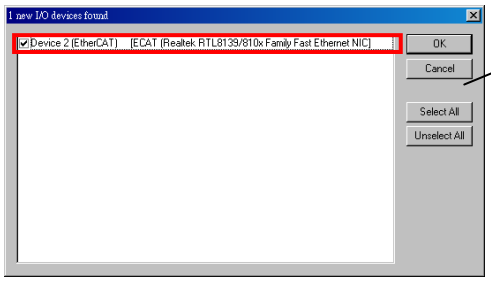


Choose the correct network device which is connected to ECAT-2000

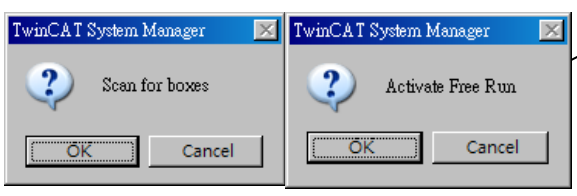

Click Yes to start scanning and click Yes to activate the free run mode for TwinCAT system manager

Copyright © 2016 ICP DAS Co., Ltd. All Rights Reserved.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

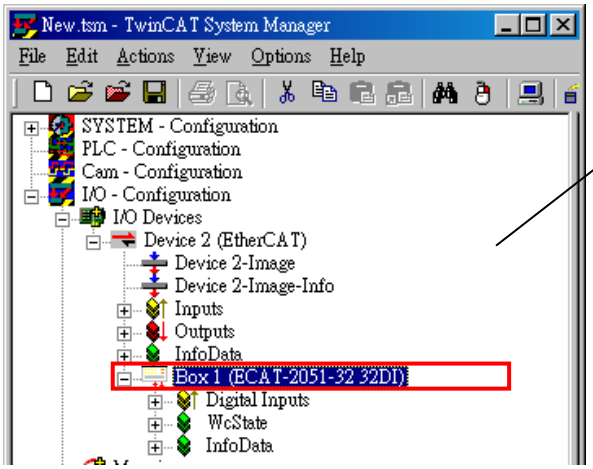


ECAT-2000 is now shown in the TwinCAT system Manager


4 Wiring to the connector

Wiring Tip







Connection the Wire

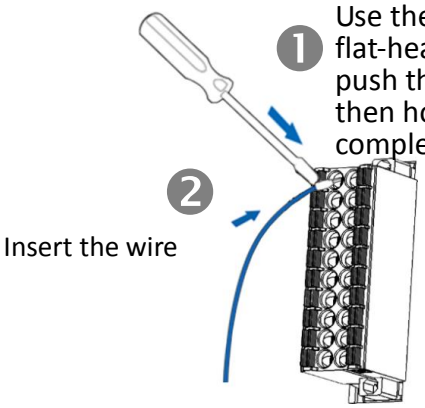

Removing the wire

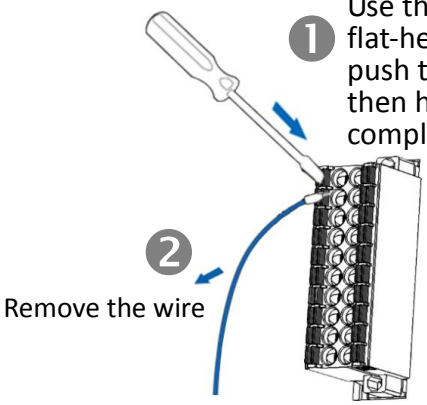

Wire Diagrams

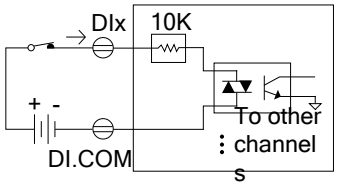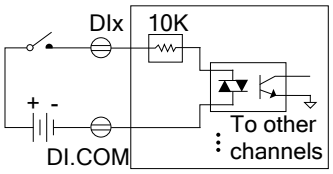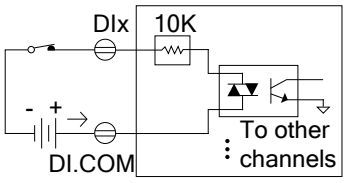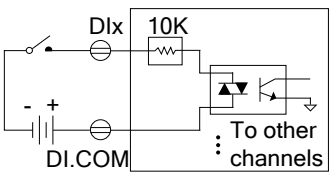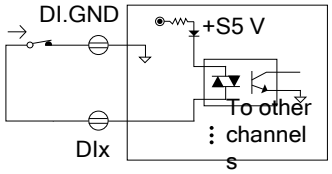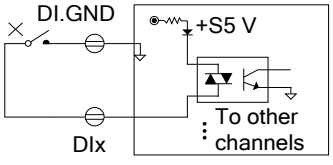Digital Input/Counter	Readback as 1 (+10 ~ +50 VDC)	Readback as 0 (Open or < 4VDC)
Sink		
Source		
Digital Input/Counter	**Readback as 1 (Close to GND)**	**Readback as 0 (Open)**
Dry		

Copyright © 2016 ICP DAS Co., Ltd. All Rights Reserved. E-mail: service@icpdas.com


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Wiring the DI0 Pins

Connect the **DI0**(Pin3) to **GND** (Pin1)

Terminal No.	Pin Assignment	Pin Assignment	Terminal No.
1	GND	GND	2
3	DI0	DI8	4
5	DI1	DI9	6
7	DI2	DI10	8
9	DI3	DI11	10
11	DI4	DI12	12
13	DI5	DI13	14
15	DI6	DI14	16
17	DI7	DI15	18
19	DI.COM	DI.COM	20

Verifying the DI functionality

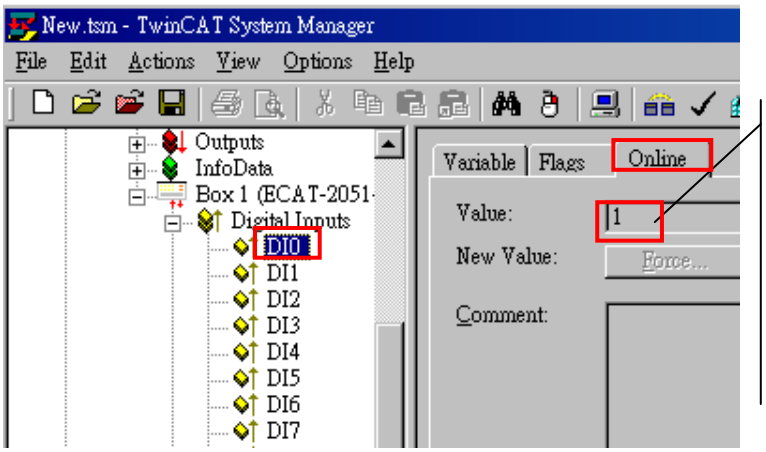

In the left-hand of the window, click DI0.
In the right-hand of the windows, click the online.
Check Value is 1.



Related Information

Product Page:
http://www.icpdas.com/root/product/solutions/industrial_communication/fieldbus/ethercat/io_module/ecat-2051.html
Documentation:
ftp://ftp.icpdas.com/pub/cd/fieldbus_cd/ethercat/slave/ecat-2000/
ESI file:
http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethercat/slave/ecat-2000/software/
DP-665(Optional) Product Page:
http://www.icpdas.com/products/Accessories/power_supply/dp-665.htm

Copyright © 2016 ICP DAS Co., Ltd. All Rights Reserved.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000