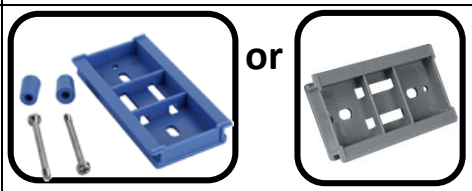
I-7000/M-7000 Quick Start

v1.50, Dec. 2025

■ Packing List

In addition to this Quick Start, the package includes the following items:

I-7000/M-7000		Plastic Rail		CA-5810/CA-3813 (10 or 13-pin)	DB-1820
		 (For I-7000/M-7000)			
DN-1822	CA-252518D-1	DN-1823	CA-2525015D	DN-8P8C	CA-090910-A
					

CA-5810 is for I-7017R-A5-G and M-7017R-A5-G
DB-1820 is for I-7018Z-G/S, M-7018Z-G/S and M-7019Z-G/S
DN-1822 and CA-252518D-1 are for I-7018Z-G/S2, M-7018Z-G/S2, and M-7019Z-G/S2
DN-1823 and CA-2525015D are for I-7018Z-G/S3, M-7018Z-G/S3, and M-7019Z-G/S3
DN-8P8C, CA-090910-A, and CA-3813 are for I-7088(D)-G/S, M-7088(D)-G/S, and M-7088M/S

Technical Support

service@icpdas.com
www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web




- For Desktop Web



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Switch to Init Mode


Before configuring the module, make sure the switch is set to **Init** (or the INIT* and GND pins are connected), then power on to enter configuration mode.

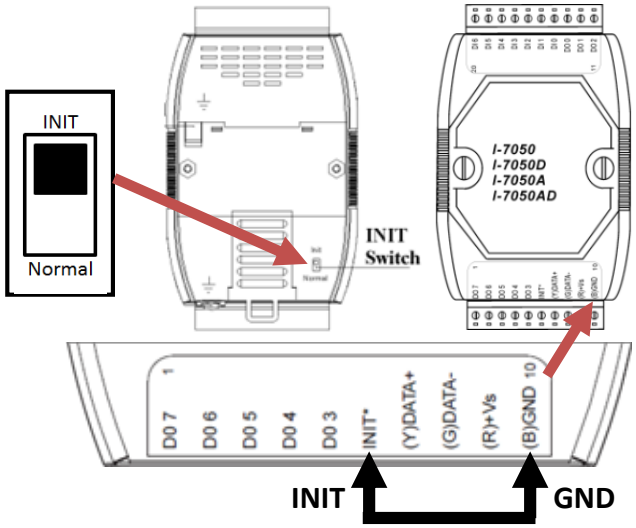


2 Connect to the PC and the Power Supply

Note: Only **one I-7000/M-7000 module** shall be connected to the **RS-485 bus** during configuration.

1) Using an RS-232 to RS-485 Converter

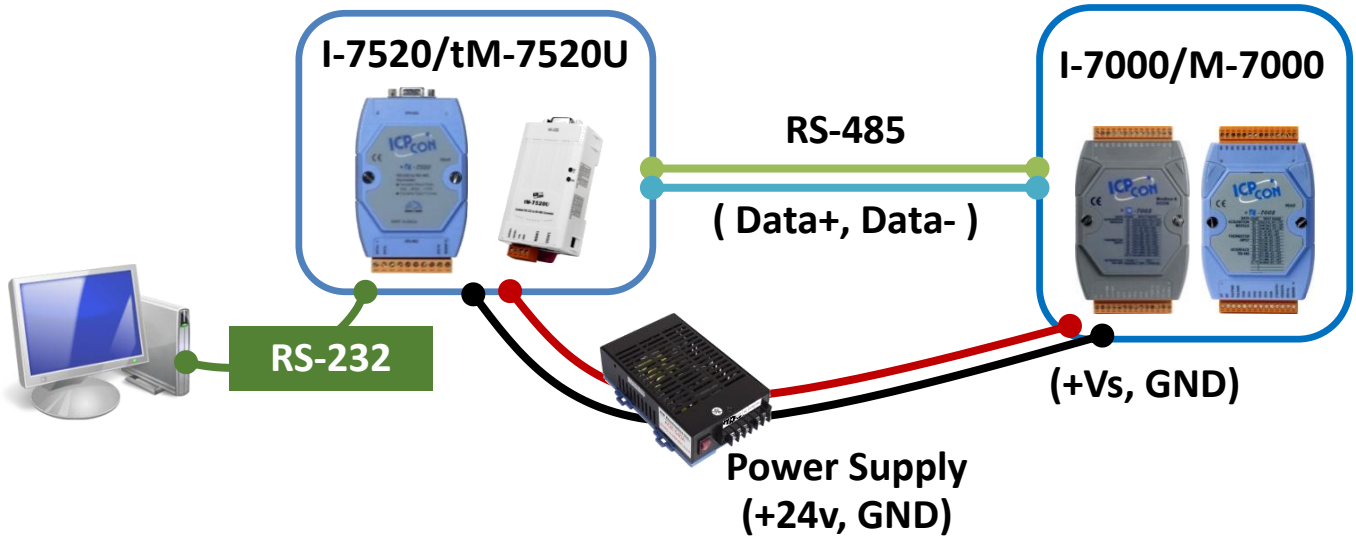

2) Using a USB to RS-485 Converter

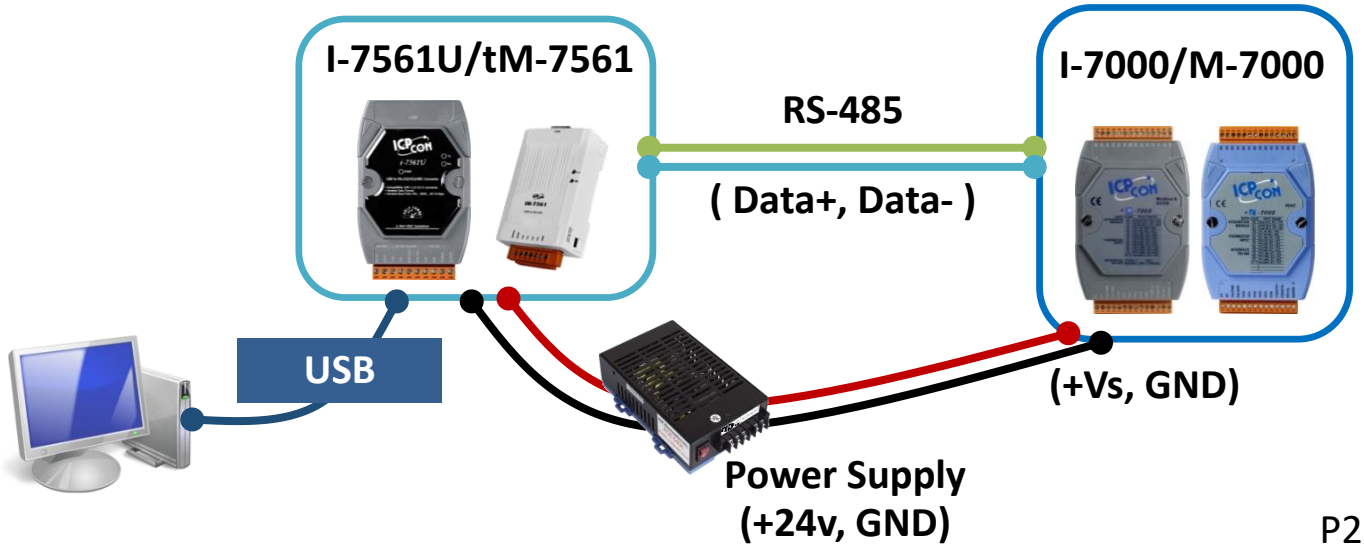


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Install the DCON Utility Pro




Scan the QR code or use the link below to download the DCON Utility Pro:
https://www.icpdas.com/tw/download/show.php?num=4056

4 Set the Communication Parameters

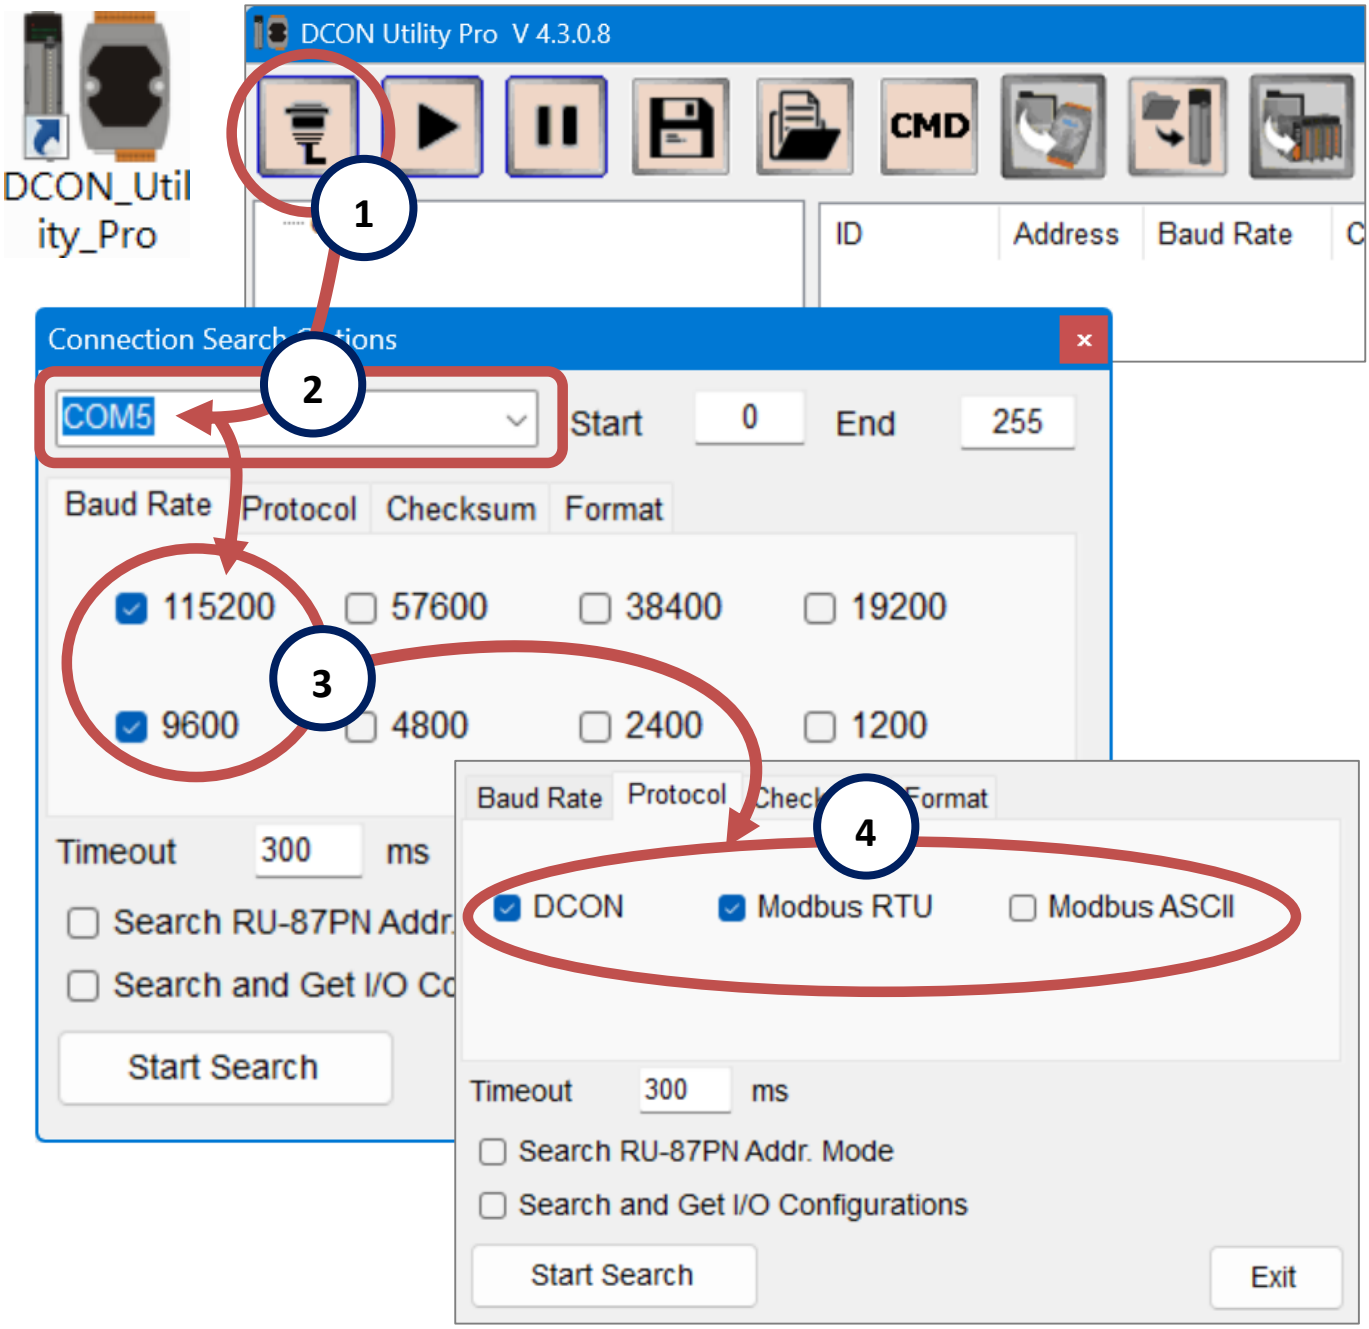


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5 Search for and Configure the Module

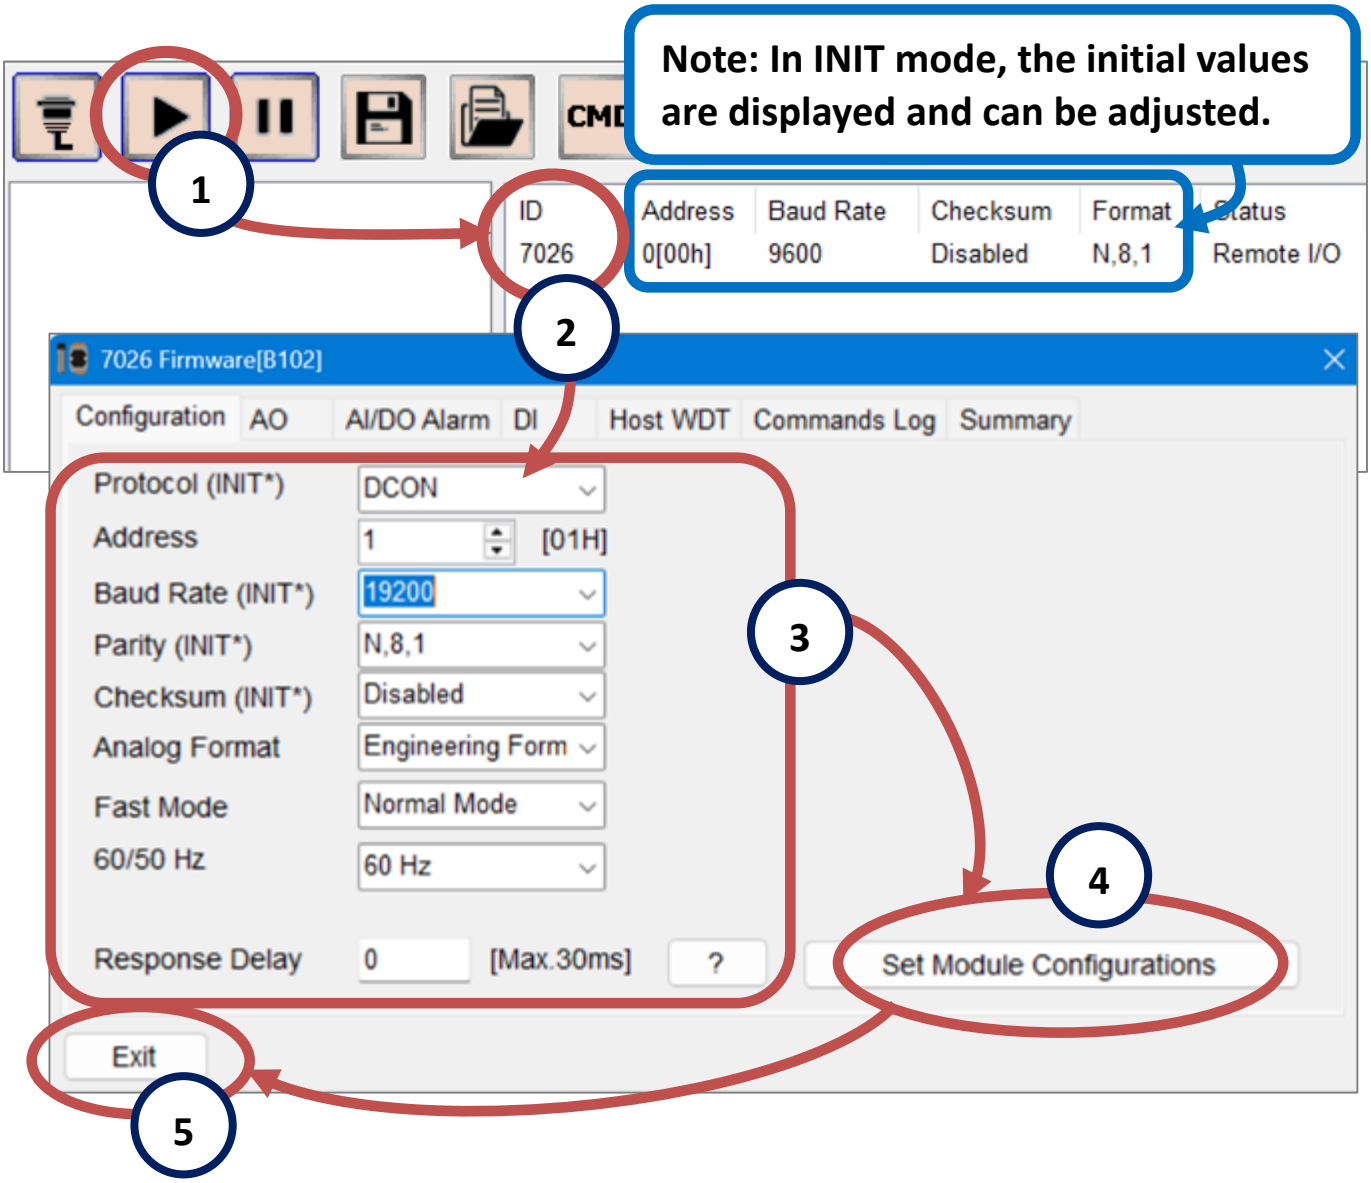

6 Reboot the Module in “Normal” Mode

Switch back to **Normal** mode (or disconnect the INIT* and GND pins), then reboot the module to apply the settings. After that, search for the module again to confirm that the new settings have taken effect.

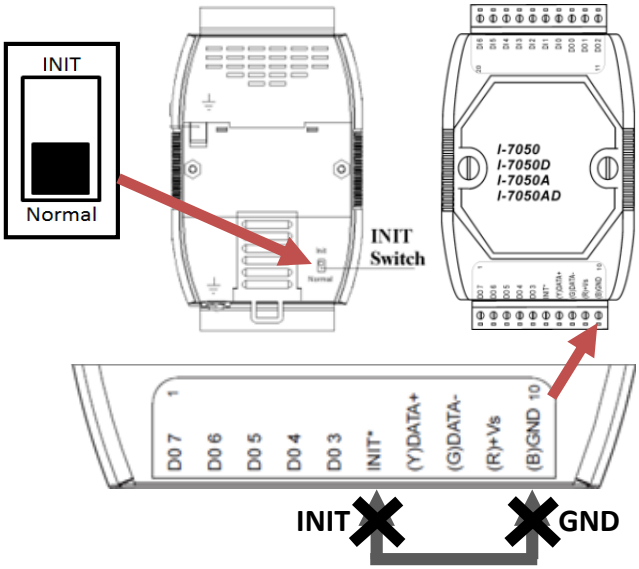

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000