# iNS-316 Quick Start

**v1.0, June 2023**

## Packing List

In addition to this guide, the package includes the following items:



iNS-316

## Technical Support


service@icpdas.com

www.icpdas.com

## Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

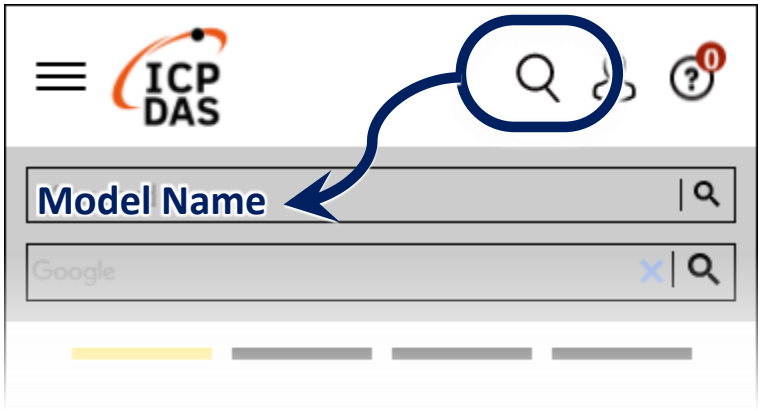


- For Desktop Web







Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

# 1 Connecting the Power and Host PC

**1)** Make sure your PC has workable network settings.
Disable or well configure your Windows firewall and Anti-Virus firewall first, else the **Search Server** in section 3 may not work. (Please contact with your system Administrator)

**2)** Connect the iNS-316 to your PC or to the same sub network of PC.

**3)** Supply power (+48 ~ +57 VDC) to the iNS-316.

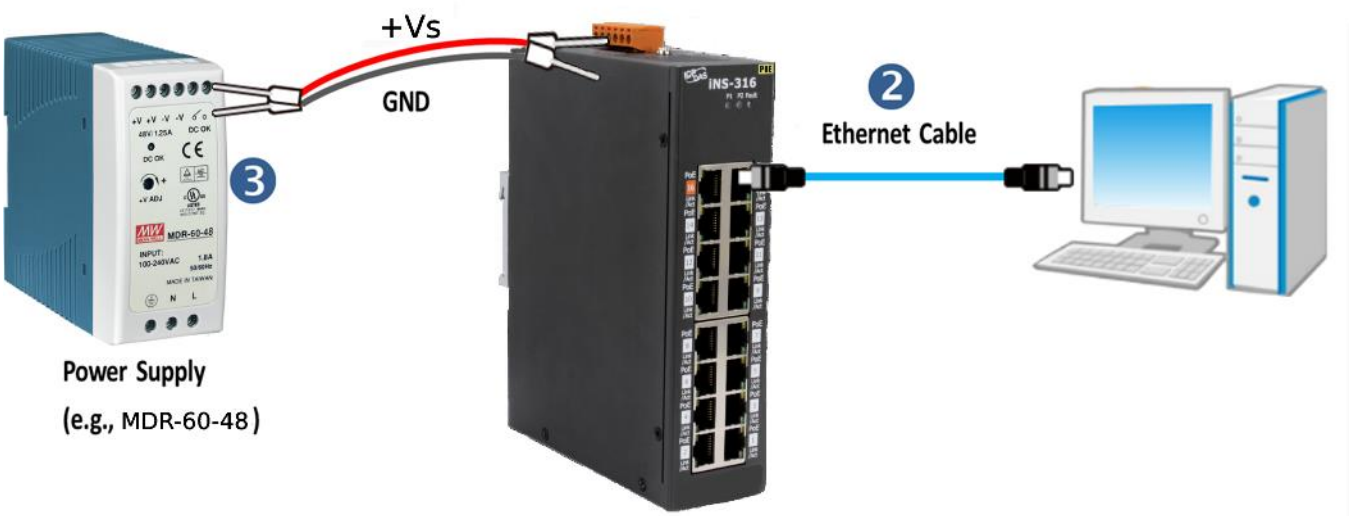


# 2 Installing Software on Your PC

Install eSearch Utility, which can be obtained from the web site:

https://www.icpdas.com/en/product/guide+Software+Utility_Driver+eSearch__Utility




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

# 3 Configuring Network Settings

**1)** Double-click the eSearch Utility shortcut on the desktop.

**2)** Click **Search Server** to search your iNS-316.


**3)** Double-click the name of iNS-316 to open the **Configure Server (UDP)** dialog box.

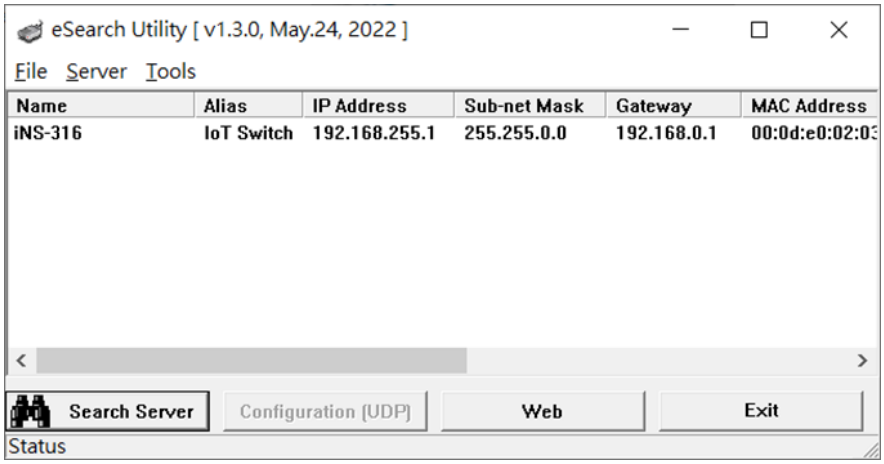


## Factory default network settings

| | |
|---|---|
| IP | 192.168.255.1 |
| Gateway | 192.168.0.1 |
| Mask | 255.255.0.0 |

**4)** Contact your network administrator to obtain a correct network configuration (such as IP/Mask/Gateway). Enter the new network settings and click **OK**.

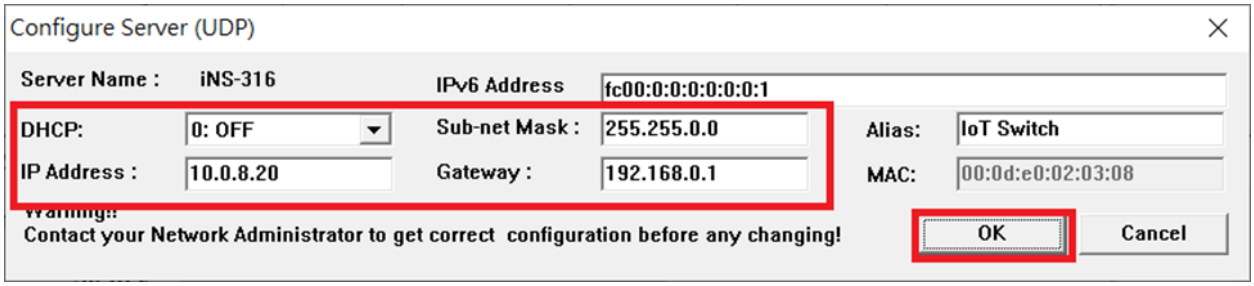


**Note: The iNS-316 will use the new settings 2 seconds later.**




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


**5)** Wait 2 seconds and click **Search Server** again to ensure the iNS-316 is working well with new configuration.

**6)** Click the name of iNS-316 to select it.

**7)** Click the **Web** button to open the iNS-316 web interface.

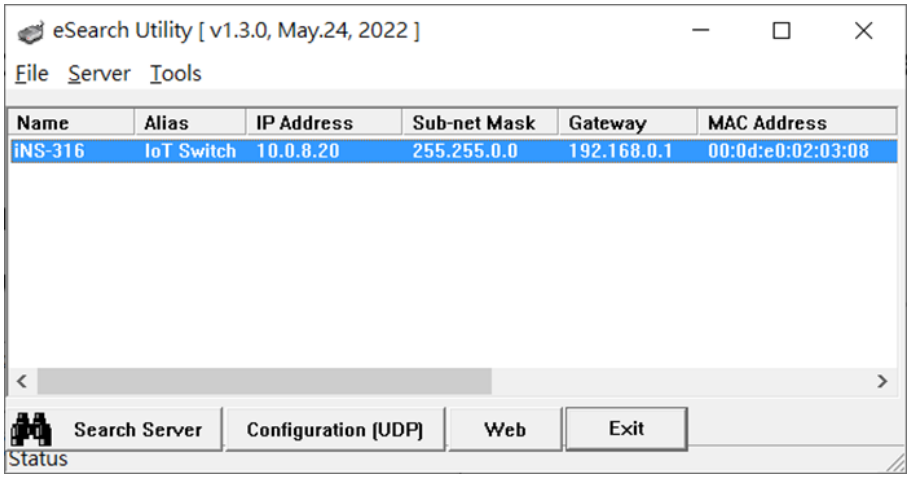



**8)** Enter default password (**Admin**) in the **Current password** and setting your password.

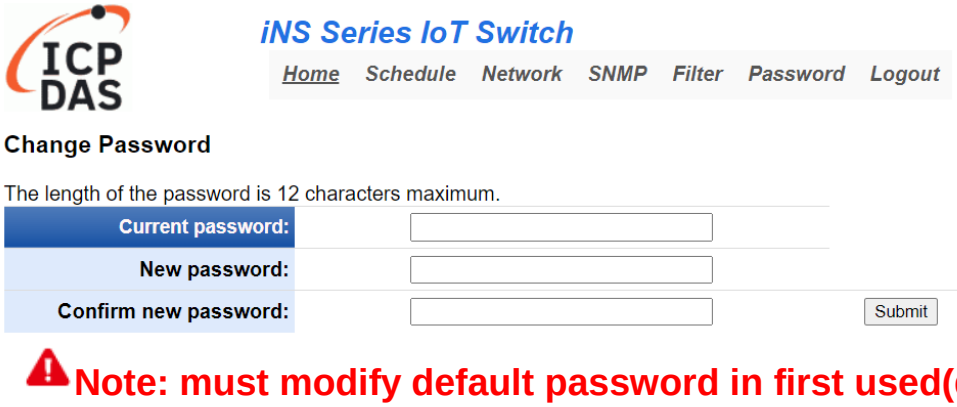


**Note: must modify default password in first used(default Admin)**

**9)** Enter password in the **Login password** input field and click **Submit** to log in to the iNS-316.

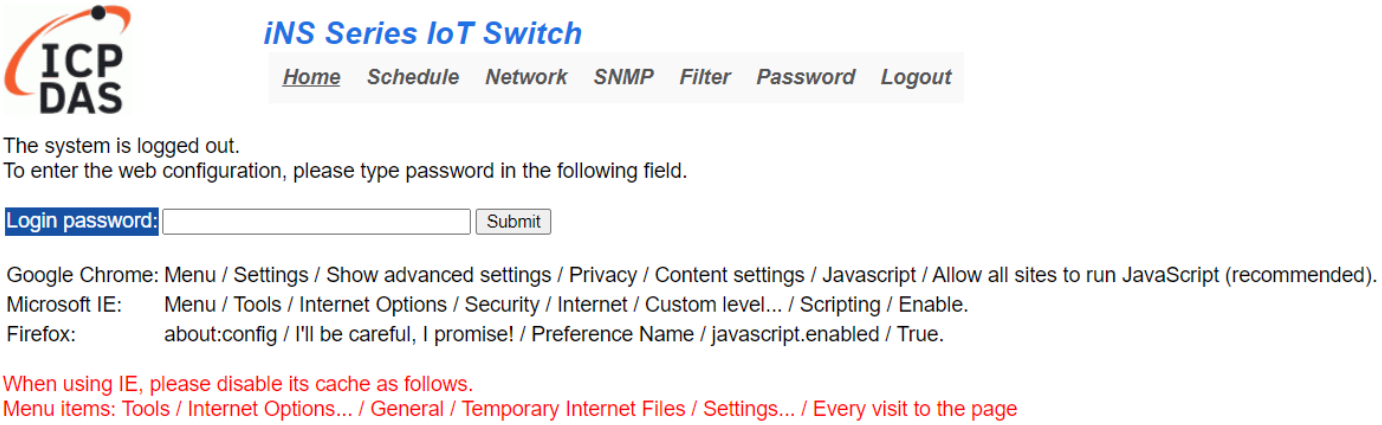




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000