iNS-3224-SFP Quick Start

v1.0, January 2024

Packing List

In addition to this guide, the package includes the following items:



iNS-3224-SFP

Technical Support


service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

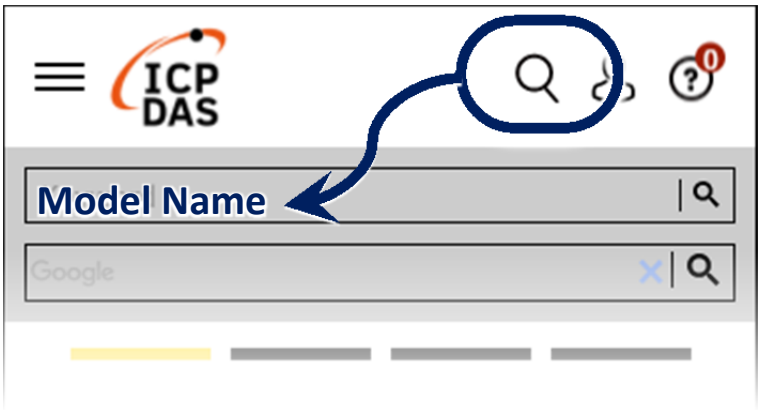

- For Desktop Web




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Connecting the Power and Host PC

1) Make sure your PC has workable network settings.
Disable or well configure your Windows firewall and Anti-Virus firewall first, else the **Search Server** in section 3 may not work. (Please contact with your system Administrator)

2) Connect the iNS-3224-SFP to your PC or to the same sub network of PC.

3) Supply power (+48 ~ +57 VDC) to the iNS-324.

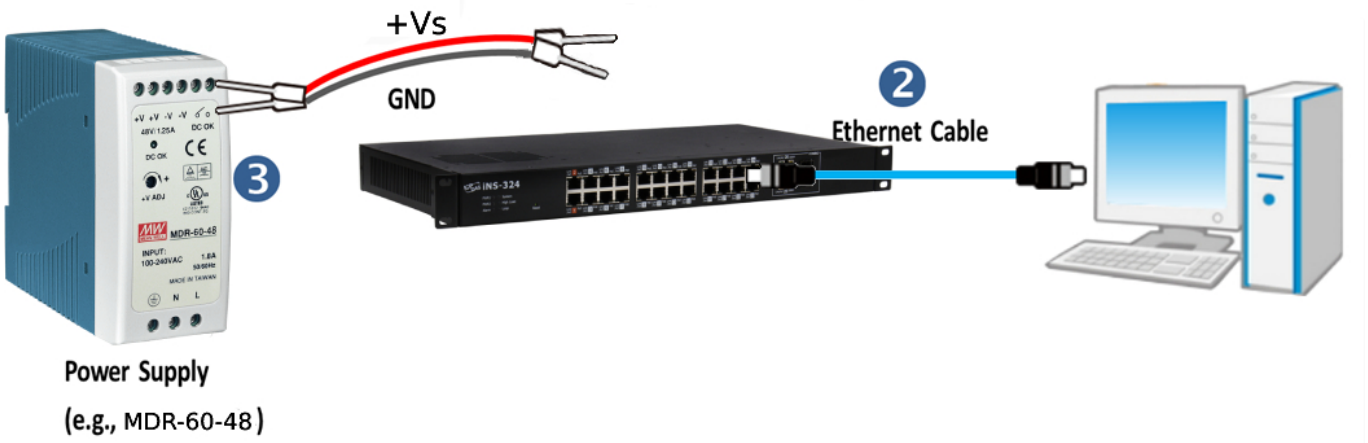

2 Installing Software on Your PC

Install eSearch Utility, which can be obtained from the web site:

https://www.icpdas.com/en/product/guide+Software+Utility_Driver+eSearch__Utility

3


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Configuring Network Settings

1) Double-click the eSearch Utility shortcut on the desktop.

2) Click **Search Server** to search your iNS-3224-SFP.


3) Double-click the name of iNS-3224-SFP to open the **Configure Server (UDP)** dialog box.

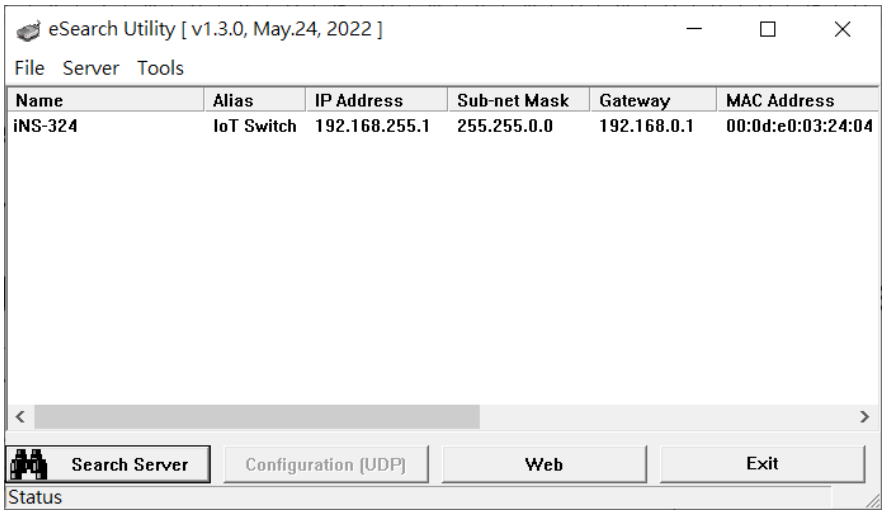

Factory default network settings

IP	192.168.255.1
Gateway	192.168.0.1
Mask	255.255.0.0

4) Contact your network administrator to obtain a correct network configuration (such as IP/Mask/Gateway). Enter the new network settings and click **OK**.

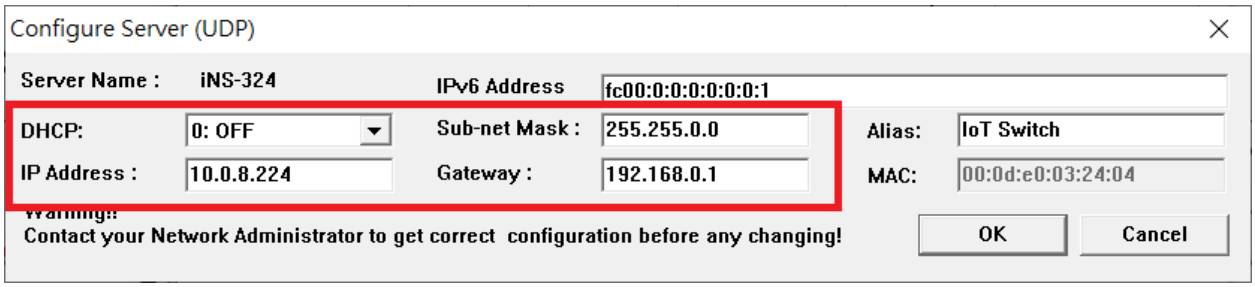


Note: The iNS-3224-SFP will use the new settings 2 seconds later.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5) Wait 2 seconds and click **Search Server** again to ensure the iNS-3224-SFP is working well with new configuration.

6) Click the name of iNS-3224-SFP to select it.

7) Click the **Web** button to open the iNS-3224-SFP web interface.

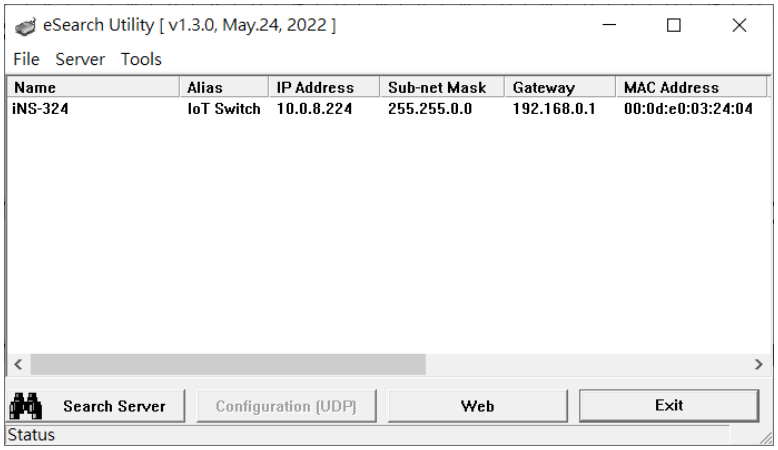


8) Enter default password (**Admin**) in the **Current password** and setting your password.



Note: must modify default password in first used(default Admin)

9) Enter password in the **Login password** input field and click **Submit** to log in to the iNS-3224-SFP.

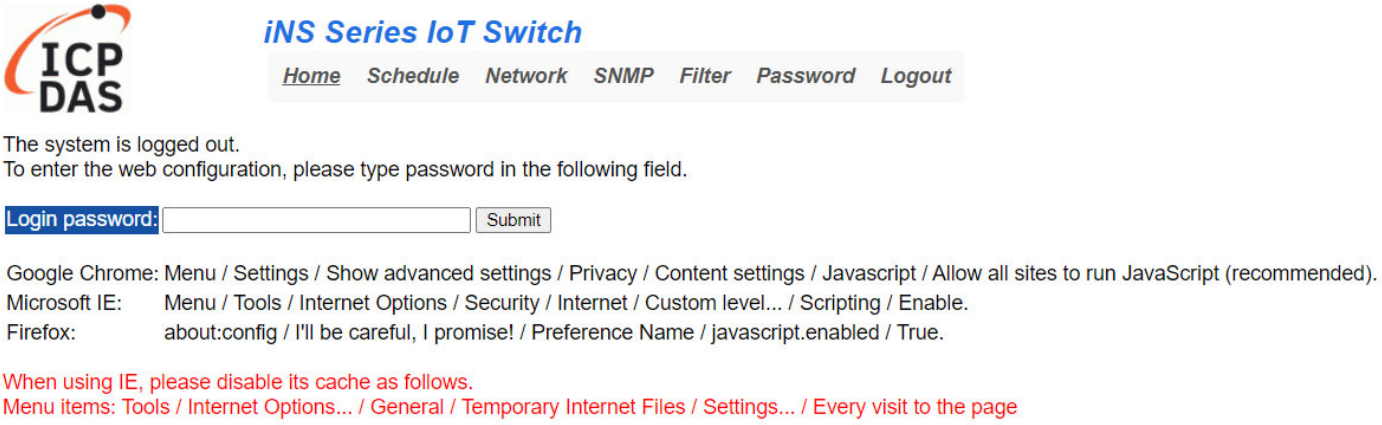

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000