iWSN-110X-RCT Series Quick Start

v1.0, February 2022

Packing List

In addition to this guide, the package includes the following items:



iWSN-110X-RCT Series Module



Split-core CT



Rogowski Coil (RCT)



Screw Driver (1C016)

Module Name	Split-core CT	Rogowski Coil (RCT)
iWSN-110X-RCT1000P-CT	8m, Φ24mm (200A), 1 pcs	4m, Φ80mm (1000A), 1 pcs
iWSN-110X-RCT1000PL-CT	8m, Φ36mm (400A), 1 pcs	

Technical Support


service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

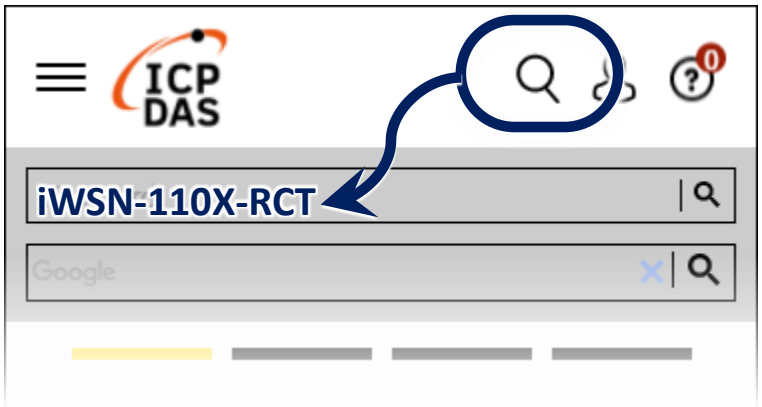

- For Desktop Web



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Warning

ICP DAS assumes no liability for any damage resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, not for any infringements of patents or other rights of third parties resulting from its use.


Limitation of Warranty

This warranty does not apply to defects resulting from unauthorized modification, misuse, or use for reason other than electrical power monitoring.

Product Warranty & Customer Support

ICP DAS warrants all products free from defects in material and workmanship for a period of one year from the date of shipping. During the warranty period, we will, at our position, either repair or replace any product that proves to be defective. To report any defect, please contact us. Please have the model, serial number and a detailed problem description available when you call. When returning any merchandise to ICP DAS, a return SN. Is required.


1 Appearance

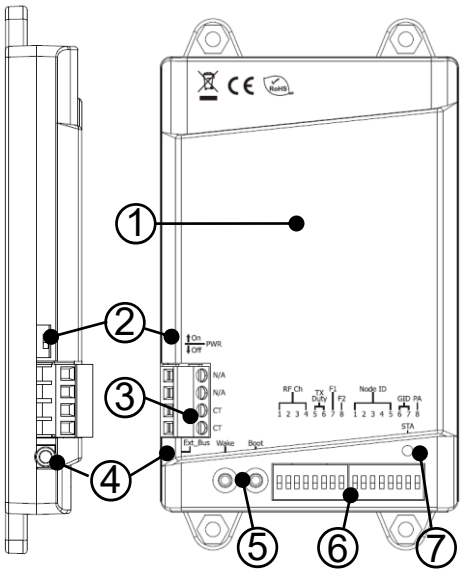

Number	Instructions
1	Build in PCB antenna
2	DIP switch of power
3	CT and RCT connection terminal
4	Extension port
5	Boot and wake button
6	DIP switch of parameter setting
7	LED indicator

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Wire and Buttons

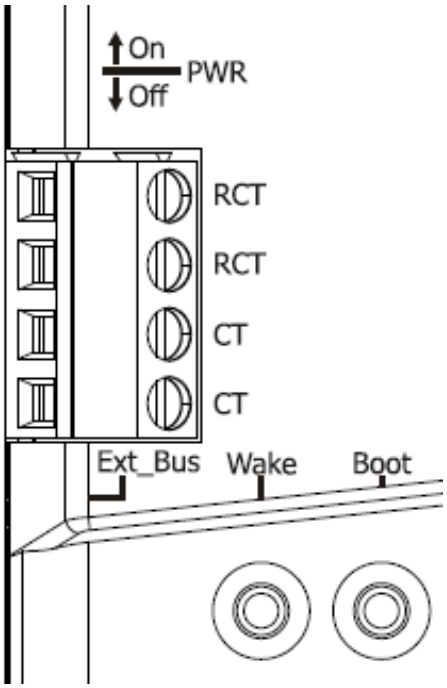

Switch	Instructions	
PWR	ON	Power on
	OFF	Power off


Pin	Name	Instructions
4	RCT	Rogowski Coil (RCT) pin, no directionality, support measuring function
3	RCT	
2	CT	Split-core CT pin, no directionality, support charging function
1	CT	

Extension bus	Instructions
Ext_Bus	Empty or connect extension module

Button	Instructions
Wake	Manual wake up
Boot	After pressing for 1~3 seconds, the LED light will be on for 1 second and then off. This mean boot complete.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Communication parameter

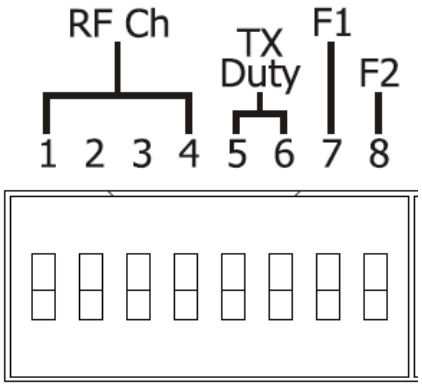


<table>
<tr><th>Name</th><th>Instructions</th></tr>
<tr><td>F2</td><td rowspan="2">Reserved</td></tr>
<tr><td>F1</td></tr>
<tr><td>TX Duty
(RF transmit duty)

■ : ON
□ : OFF</td><td>
<table>
<tr><th rowspan="2">Period</th><th colspan="2">Pin</th></tr>
<tr><th>5</th><th>6</th></tr>
<tr><td>1 sec</td><td>□</td><td>□</td></tr>
<tr><td>10 sec</td><td>■</td><td>□</td></tr>
<tr><td>30 sec</td><td>□</td><td>■</td></tr>
<tr><td>60 sec</td><td>■</td><td>■</td></tr>
</table>
</td></tr>
<tr><td>RF Ch
(RF Channel)

■ : ON
□ : OFF</td><td>
<table>
<tr><th rowspan="2">Ch</th><th colspan="4">Pin</th><th rowspan="2">Ch</th><th colspan="4">Pin</th></tr>
<tr><th>1</th><th>2</th><th>3</th><th>4</th><th>1</th><th>2</th><th>3</th><th>4</th></tr>
<tr><td>0</td><td>□</td><td>□</td><td>□</td><td>□</td><td>8</td><td>□</td><td>□</td><td>□</td><td>■</td></tr>
<tr><td>1</td><td>■</td><td>□</td><td>□</td><td>□</td><td>9</td><td>■</td><td>□</td><td>□</td><td>■</td></tr>
<tr><td>2</td><td>□</td><td>■</td><td>□</td><td>□</td><td>A</td><td>□</td><td>■</td><td>□</td><td>■</td></tr>
<tr><td>3</td><td>■</td><td>■</td><td>□</td><td>□</td><td>B</td><td>■</td><td>■</td><td>□</td><td>■</td></tr>
<tr><td>4</td><td>□</td><td>□</td><td>■</td><td>□</td><td>C</td><td>□</td><td>□</td><td>■</td><td>■</td></tr>
<tr><td>5</td><td>■</td><td>□</td><td>■</td><td>□</td><td>D</td><td>■</td><td>□</td><td>■</td><td>■</td></tr>
<tr><td>6</td><td>□</td><td>■</td><td>■</td><td>□</td><td>E</td><td>□</td><td>■</td><td>■</td><td>■</td></tr>
<tr><td>7</td><td>■</td><td>■</td><td>■</td><td>□</td><td>F</td><td>■</td><td>■</td><td>■</td><td>■</td></tr>
</table>
</td></tr>
</table>

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

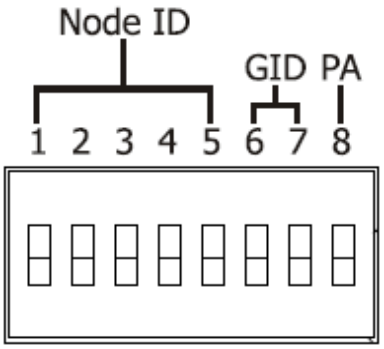

<table>
<tr><th>Name</th><th>Instructions</th></tr>
<tr><td>PA</td><td>Factory Only</td></tr>
<tr><td>GID
(Group ID)

■： ON
□： OFF</td><td>
<table>
<tr><th rowspan="2">Group</th><th colspan="2">Pin</th></tr>
<tr><th>6</th><th>7</th></tr>
<tr><td>0</td><td>□</td><td>□</td></tr>
<tr><td>1</td><td>■</td><td>□</td></tr>
<tr><td>2</td><td>□</td><td>■</td></tr>
<tr><td>3</td><td>■</td><td>■</td></tr>
</table>
</td></tr>
<tr><td>Node ID

■： ON
□： OFF</td><td>
<table>
<tr><th rowspan="2">Node</th><th colspan="5">Pin</th><th rowspan="2">Node</th><th colspan="5">Pin</th></tr>
<tr><th>1</th><th>2</th><th>3</th><th>4</th><th>5</th><th>1</th><th>2</th><th>3</th><th>4</th><th>5</th></tr>
<tr><td>0</td><td>□</td><td>□</td><td>□</td><td>□</td><td>□</td><td>16</td><td>□</td><td>□</td><td>□</td><td>□</td><td>■</td></tr>
<tr><td>1</td><td>■</td><td>□</td><td>□</td><td>□</td><td>□</td><td>17</td><td>■</td><td>□</td><td>□</td><td>□</td><td>■</td></tr>
<tr><td>2</td><td>□</td><td>■</td><td>□</td><td>□</td><td>□</td><td>18</td><td>□</td><td>■</td><td>□</td><td>□</td><td>■</td></tr>
<tr><td>3</td><td>■</td><td>■</td><td>□</td><td>□</td><td>□</td><td>19</td><td>■</td><td>■</td><td>□</td><td>□</td><td>■</td></tr>
<tr><td>4</td><td>□</td><td>□</td><td>■</td><td>□</td><td>□</td><td>20</td><td>□</td><td>□</td><td>■</td><td>□</td><td>■</td></tr>
<tr><td>5</td><td>■</td><td>□</td><td>■</td><td>□</td><td>□</td><td>21</td><td>■</td><td>□</td><td>■</td><td>□</td><td>■</td></tr>
<tr><td>6</td><td>□</td><td>■</td><td>■</td><td>□</td><td>□</td><td>22</td><td>□</td><td>■</td><td>■</td><td>□</td><td>■</td></tr>
<tr><td>7</td><td>■</td><td>■</td><td>■</td><td>□</td><td>□</td><td>23</td><td>■</td><td>■</td><td>■</td><td>□</td><td>■</td></tr>
<tr><td>8</td><td>□</td><td>□</td><td>□</td><td>■</td><td>□</td><td>24</td><td>□</td><td>□</td><td>□</td><td>■</td><td>■</td></tr>
<tr><td>9</td><td>■</td><td>□</td><td>□</td><td>■</td><td>□</td><td>25</td><td>■</td><td>□</td><td>□</td><td>■</td><td>■</td></tr>
<tr><td>10</td><td>□</td><td>■</td><td>□</td><td>■</td><td>□</td><td>26</td><td>□</td><td>■</td><td>□</td><td>■</td><td>■</td></tr>
<tr><td>11</td><td>■</td><td>■</td><td>□</td><td>■</td><td>□</td><td>27</td><td>■</td><td>■</td><td>□</td><td>■</td><td>■</td></tr>
<tr><td>12</td><td>□</td><td>□</td><td>■</td><td>■</td><td>□</td><td>28</td><td>□</td><td>□</td><td>■</td><td>■</td><td>■</td></tr>
<tr><td>13</td><td>■</td><td>□</td><td>■</td><td>■</td><td>□</td><td>29</td><td>■</td><td>□</td><td>■</td><td>■</td><td>■</td></tr>
<tr><td>14</td><td>□</td><td>■</td><td>■</td><td>■</td><td>□</td><td>30</td><td>□</td><td>■</td><td>■</td><td>■</td><td>■</td></tr>
<tr><td>15</td><td>■</td><td>■</td><td>■</td><td>■</td><td>□</td><td>31</td><td>■</td><td>■</td><td>■</td><td>■</td><td>■</td></tr>
</table>
</td></tr>
</table>

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


4 LED indicator

The module provides one LED indicator. The table below will show the LED status.

Indicators	Status	Instructions
STA	500ms Blink continuous	Illegal Node ID, please set the Node ID to 1~31, and then power on.
	Blink once	Low battery power. 1. Please confirm whether the CT is lock into the “CT” pin of the module and bucked to the wire for charging. 2. If have any questions, please contact technology support.
	Blink twice	Component status is abnormal. 1. Please confirm whether the audio line of “Ext_Bus” is fully inserted and the module is power off. And power on after press “Wake” and “Boot” buttons for 5 seconds. 2. If have any questions, please contact technology support.
	Blink three times	Unable to confirm sensor type. 1. Please confirm whether the audio line of “Ext_Bus” is fully inserted and the module is power off. And power on after press “Wake” and “Boot” buttons for 5 seconds. 2. If have any questions, please contact technology support.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5 Boot Steps

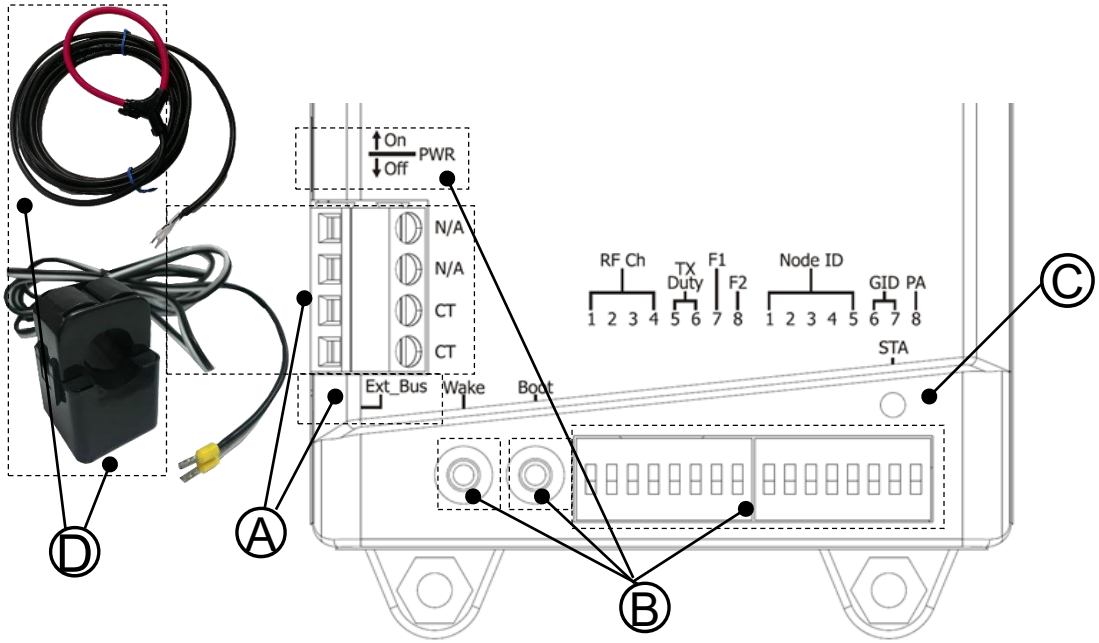


A. Please confirm the CT and Rogowski Coil (RCT) are locked into the module, and “Ext_Bus” is connected an extension module by audio line. (If there is no extension module, the “Ext_Bus” don’t be connected.)


B. Adjusting DIP switch and set the parameter of communication, and switch “PWR” to OFF. And then switch “PWR” to ON after press “Wake” and “Boot” buttons for 5 seconds.

C. When power on, if “STA” will light on for 1 second and off, this mean boot complete. If “STA” do not be lighted, please press “Boot” for 1~3 seconds, and confirm “STA” will light on for 1 second and off. Finally, press “Wake” once, confirm “STA” blink once to complete the boot.

D. Connect the CT to the cable to be measured. The buckle has no directionality, but after the buckle, you must confirm that the opening is completely closed.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

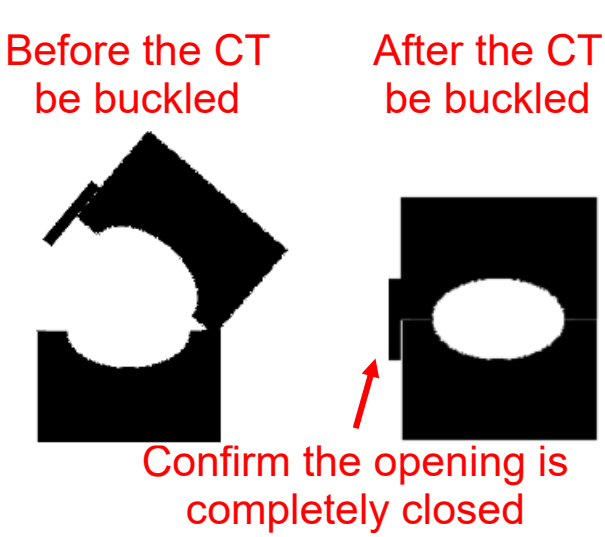

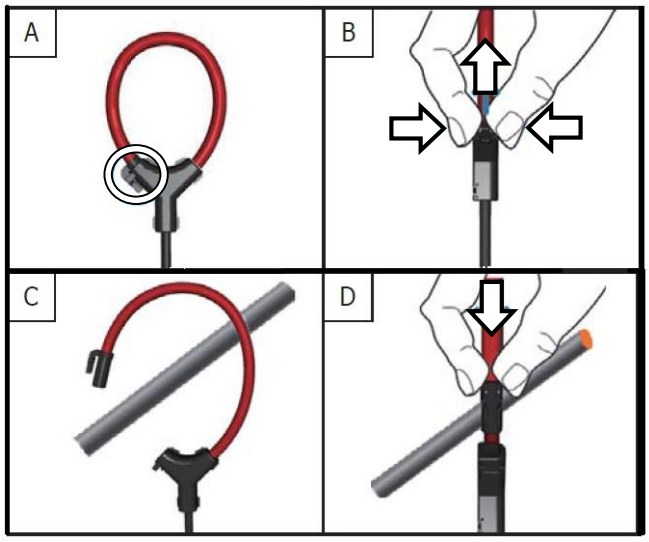

Note：

1. If you need to remove the terminal lines, always detach the CT before removing the CT terminal lines. Otherwise the CT may develop open-circuit secondary voltages which may be hazardous to personnel or damaging to the CT or equipment connected in the secondary circuit.
2. The external CT's are fragile, please handle with care.
3. The current input of the iWSN-110X-RCT series only supports the factory-attached CT.
4. To install CT's correctly, please ensure the CT lines sequences is right before clip the CT's onto the power cable of the monitoring equipment.
5. Please select the appropriate size CT for different size monitoring equipment cables: power line diameter <Φ24 using 200A CT, Φ36 using 400A CT.
6. The maximum current value cannot exceed the CT rating.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000