# LP-5231 Series Quick Start


**v1.6, August 2018**

## What's in the box?

The package includes the following items:



**LP-5231 module**

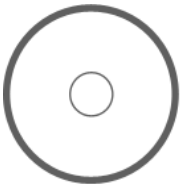

**CD**



**CA-0910 Cable**




**Quick start**



**Pin Terminal * 16**



**Screw Driver**

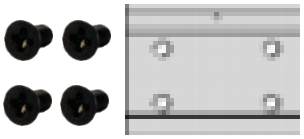

**M3x6L Screw * 4**
**44 mm DIN-Rail Clip * 1**
(LP-5231PM-3GWA)
(LP-5231M-4GE/4GC)
(LP-5231M)



**GSM/GPRS External Antenna(ANT-421-04)**
(LP-5231PM-3GWA)
(LP-5231PM-4GE/4GC)



**GPS Active External Antenna(ANT-115-03)**
(LP-5231PM-3GWA)
(LP-5231PM-4GE/4GC)

## Technical Support

If you are new to LP-5231 Series, please read the "Chapter 5. System Settings" of the User Manual for detailed information.

CD:\LinPAC\Napdos\lp-5000\lp-52xx\lp-5231\User_Manual

ftp://ftp.icpdas.com/pub/cd/linpac/napdos/lp-5000/lp-52xx/lp-5231/user_manual



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

# LP-5231 系列快速上手指南


**v1.6, August 2018**

## 產品內容?

產品包含以下配件:



**LP-5231 系列模組**

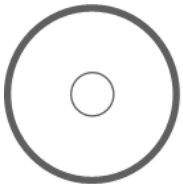

**軟體光碟**



**CA-0910 纜線**




**快速上手指南**



**歐式壓著端子 * 16**



**螺絲起子**

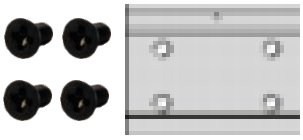

**M3x6L 螺絲 * 4**

**DIN-Rail 固定架 * 1**

(LP-5231PM-3GWA)
(LP-5231M-4GE/4GC)
(LP-5231M)



**GSM/GPRS 外部天線**

**(ANT-421-04)**

(LP-5231PM-3GWA)
(LP-5231PM-4GE/4GC)



**GPS Active 外部天線**

**(ANT-115-03)**

(LP-5231PM-3GWA)
(LP-5231PM-4GE/4GC)

## Technical Support

請參閱 LP-5231 系列使用手冊第 5 章「System Settings」了解入門資訊。

CD:\LinPAC\Napdos\lp-5000\lp-52xx\lp-5231\User_Manual

ftp://ftp.icpdas.com/pub/cd/linpac/napdos/lp-5000/lp-52xx/lp-5231/user_manual



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000