MDCL-705i Quick Start

v1.0, Sep. 2021

Packing List

In addition to this guide, the package includes the following items:




MDCL-705i



RS-232 Cable (CA-0910)



Screw Driver 2.4 mm

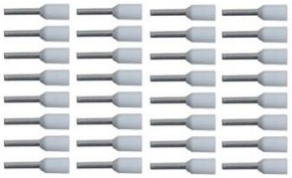

Wire Terminal x 32

Technical Support


service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

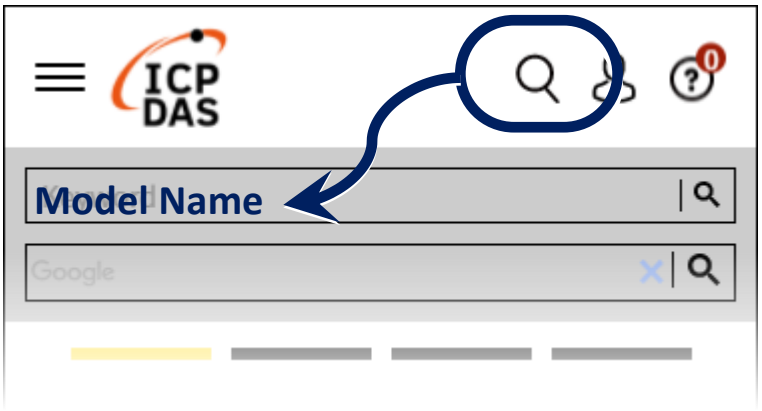

- For Desktop Web




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Connecting to PC, Network and Power

Step1. Connect the power supply. (+10 ~ +48 VDC).

Step2. Connect the MDCL-705i and PC to the same switch in the LAN

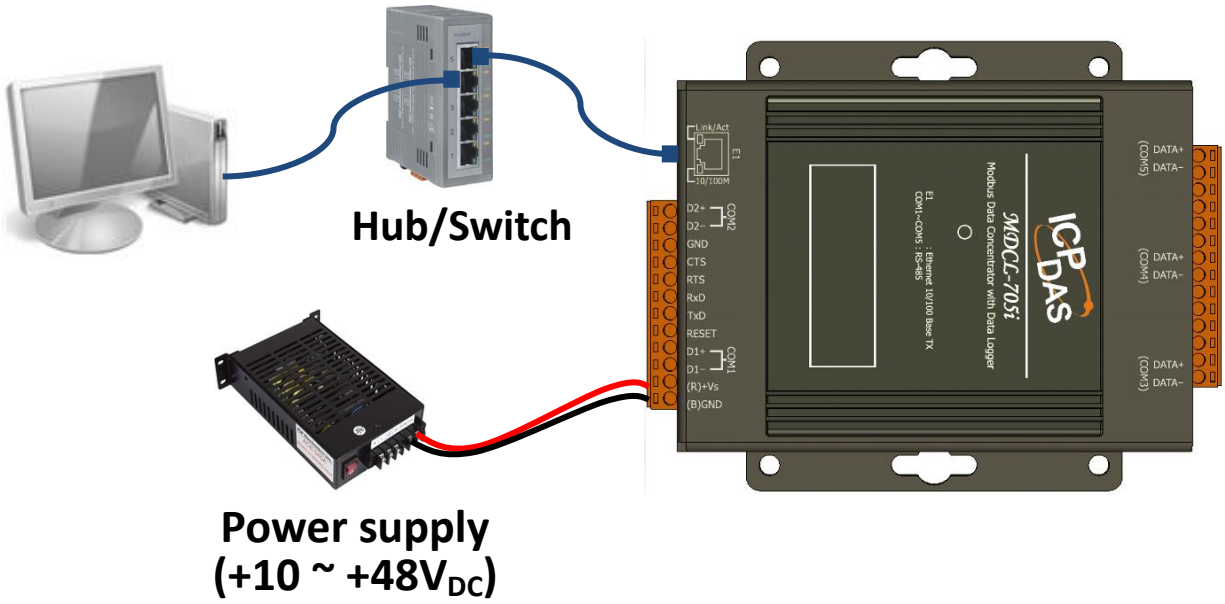

2 Creating User Account

Before starting this configuration, the MDCL-705i needs be connected to your network and powered on. Note down the IP address of your computer for restoring it later.

The factory default settings:

Item	Default
IP Address	192.168.255.1
Subnet Mask	255.255.0.0
Gateway	192.168.0.1


Step1. Assign an IP address in the range of 192.168.255.2 to 192.168.255.253 to your computer.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


NOTE: Details on how to change the IP address on your computer depend upon the type architecture and operating system you are using. Use the computer Help and Support functionality to search for “IP Addressing”.

Step2. Enter the default IP address of the MDCL-705i (http://192.168.255.1) into your browser's address bar and press ”Enter”.

Step3. Create your account (for the first time login)
User name and password must be at least four characters. (A-Z, a-z, 0-9, case-sensitive and “.”, “-“, “_”, “@”symbols)

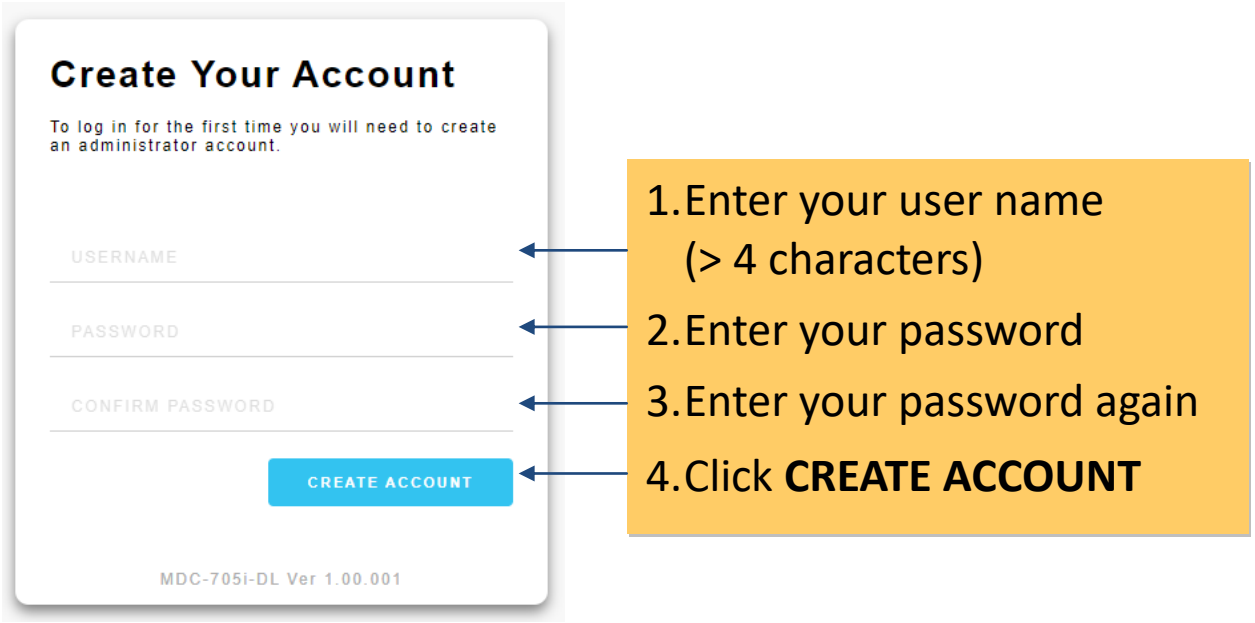


Step4. Log in to the MDCL-705i

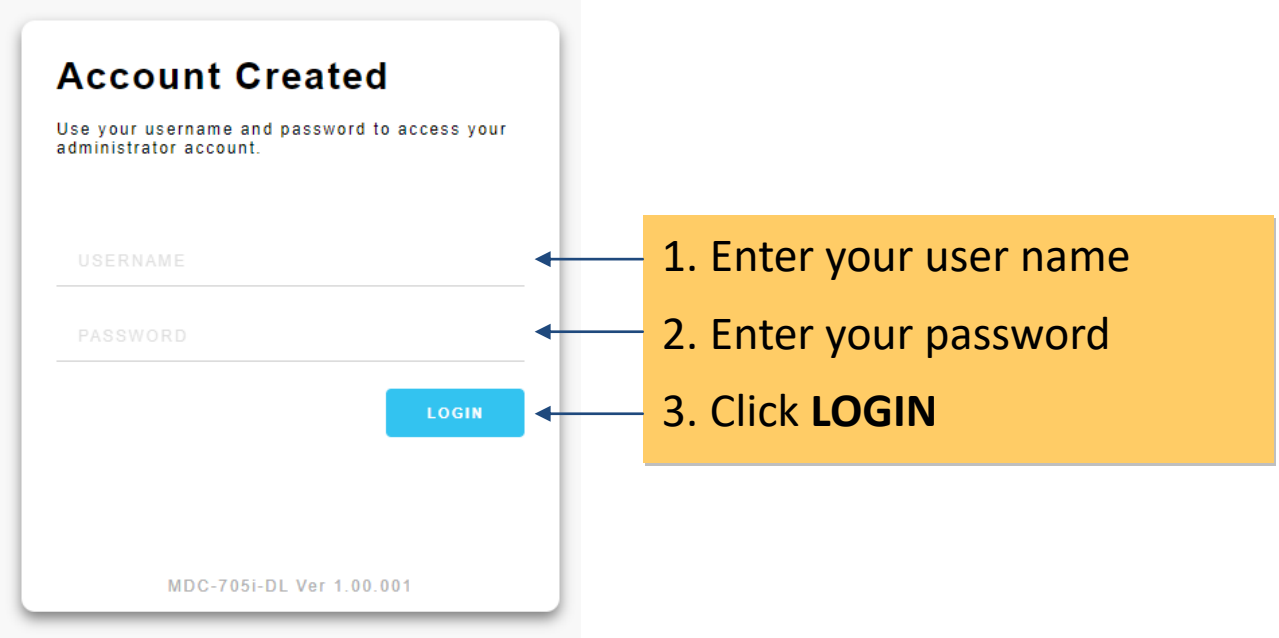


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Assigning an IP Address

Step1. Select the “NETWORK SETTINGS” tab on the “GENERAL SETTINGS” page, enter valid IP, Subnet Mask and Gateway addresses, and then click the “**SAVE”** button.

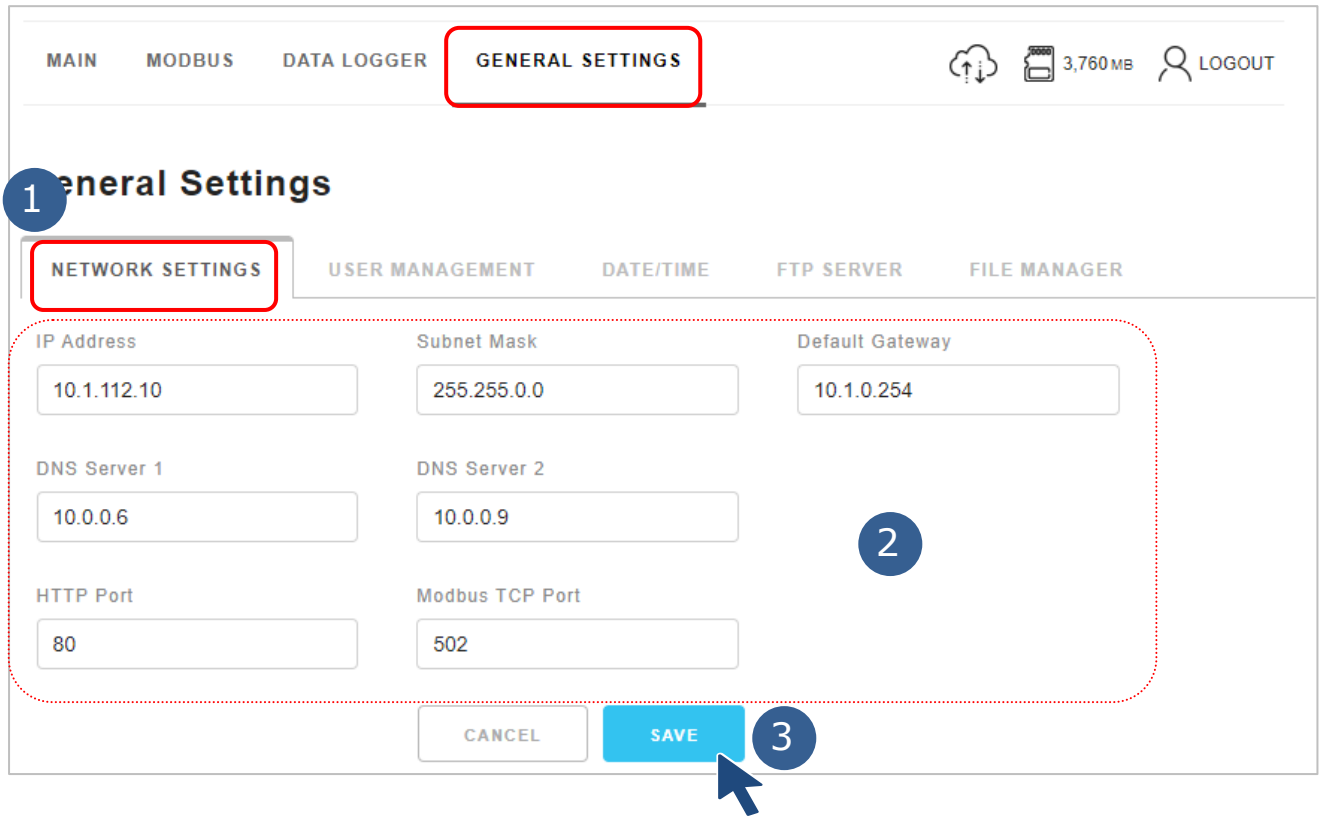

Step2. Click “Restart Now”.

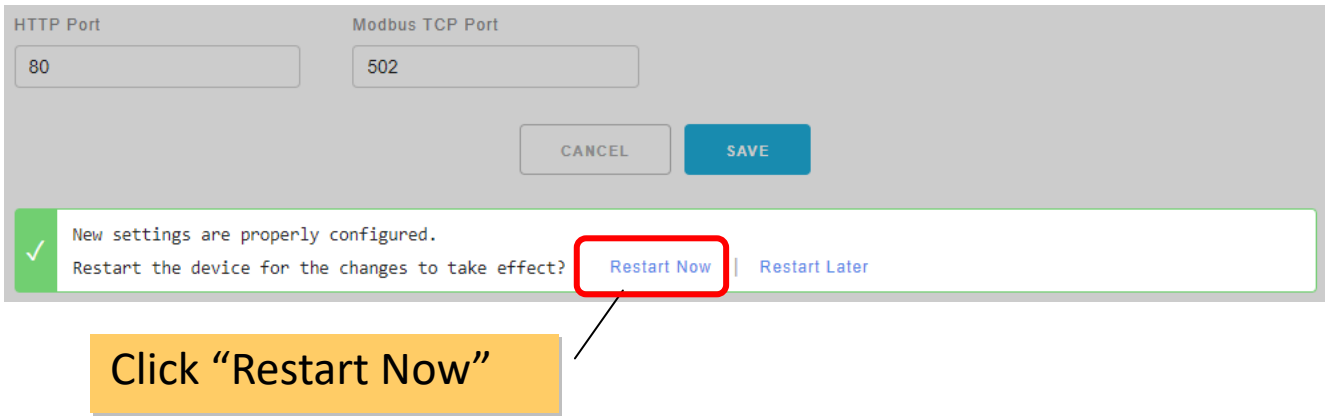

Step3. Restore the IP of the computer, enter new IP address of the MDCL-705i into the browser and press “Enter”. Now you can start to configure more basic settings on the web interface.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000