MSM-508 Series Quick Start

v1.1, December 2020

Packing List

In addition to this guide, the package includes the following items:



MSM-508



CA-090510



Wall mount



Wall mount



M3 x 6L Screw * 2



Screw Driver

Technical Support


service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

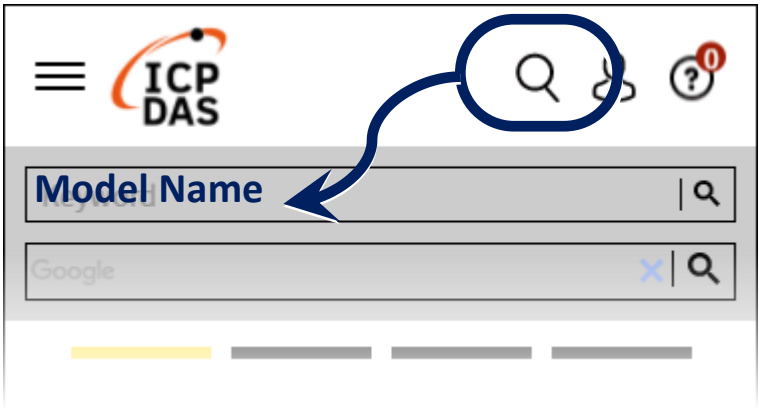

- For Desktop Web



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Connecting to Network, Computer and Power

1. Make sure your PC has workable network settings.
2. Connect both the MSM-508 and your computer to the same sub network or the same Ethernet switch, and power the MSM-508 on.

2 Factory Default Settings

Network Connection	Default		Authentication	Default
IP Address	192.168.255.1		User name	Admin
Subnet Mask	255.255.0.0		Password	Admin
Gateway	192.168.0.1			

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000