NMC-9181 Quick Start

v1.0, Dec 2021

Packing List

In addition to this guide, the package includes the following items:




NMC-9181



CF slot with
a CF card



Screw
Driver

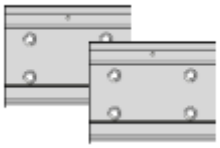

60 mm DIN-Rail
Clip x 2



RJ-45 Waterproof
Assembly



M3x6L
Screw x 8

Technical Support


service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

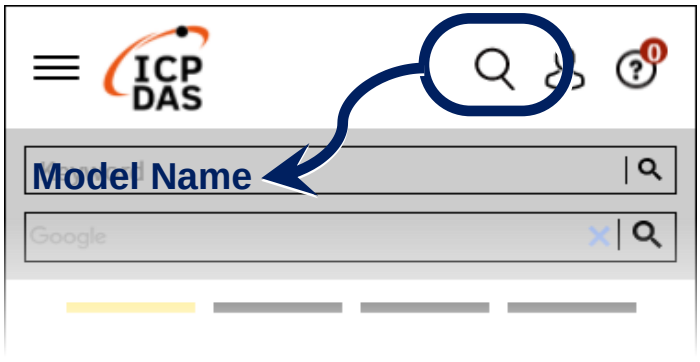

- For Desktop Web




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1. Connecting to PC and Power Supply

1) Connect PC to the LAN2 through an Ethernet switch.

2) Connect the power supply (+10 to +30 VDC) to PWR and P.GND terminals.

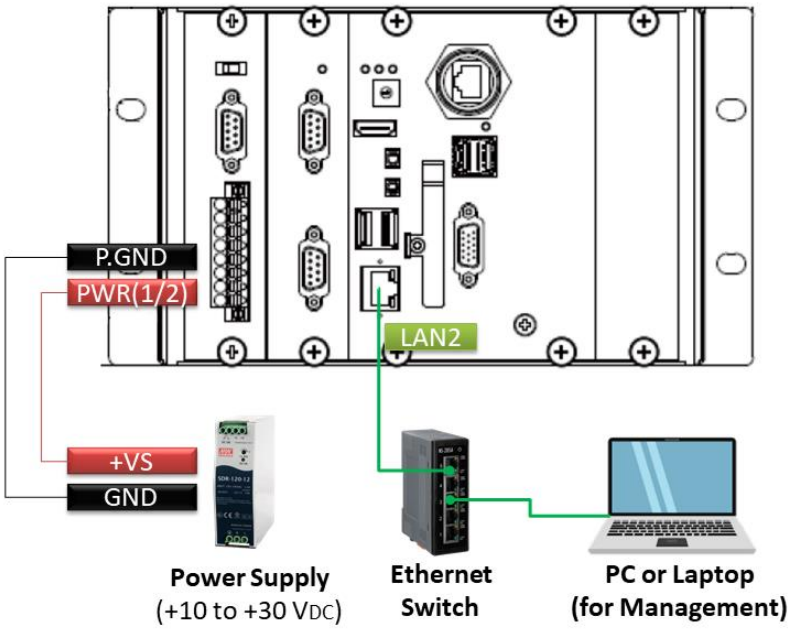

2. Using eSearch Utility to Connect the PAC


eSearch Utility Website

http://www.icpdas.com/en/product/guide+Software+Utility_Driver+eSearch_Utility

1) Searching the ethernet device connected on the network

2) Select NMC-9181 (The default IP of LAN2 is: 192.168.255.1/255.255.0.0)

3) Connect to the web pages (The default login name is “librenms”, password is “D32fwefwef”).

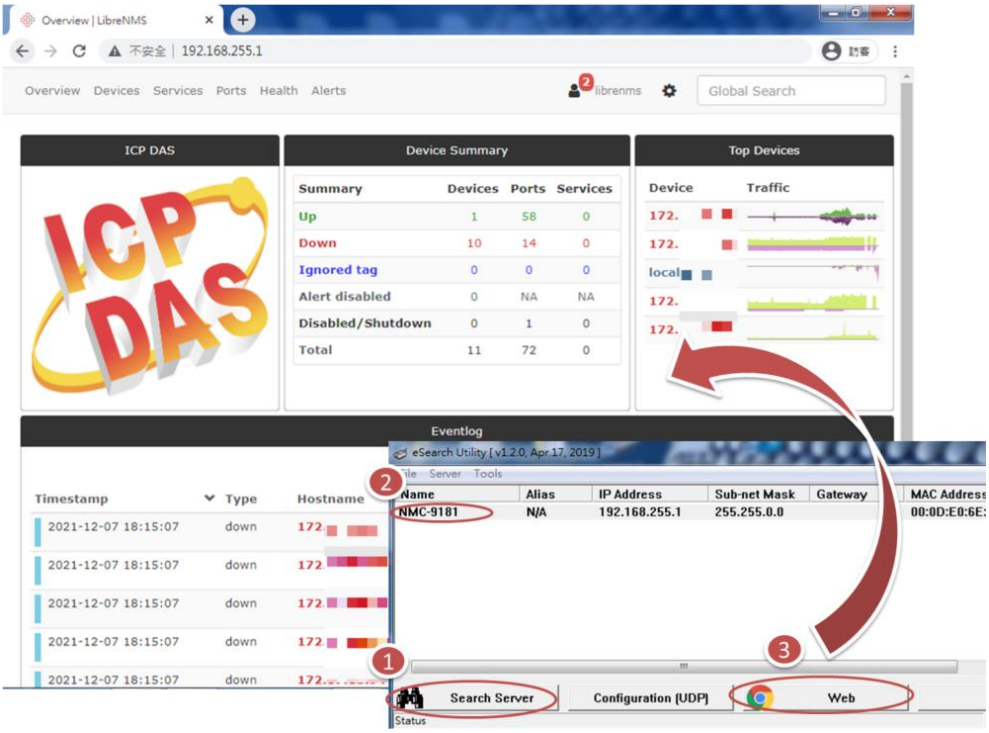

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000