


PDS-700 Series Quick Start

v1.3, Aug. 2018

What's in the box?

In addition to this guide, the package includes the following items:

PDS-700 PDSM-700

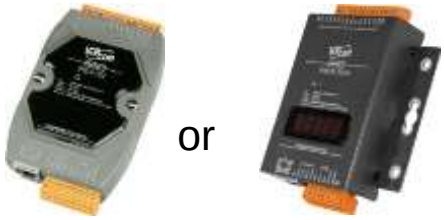

PDS(M)-700 Series x 1



Quick Start x 1
(This Document)

For PDS-700 Only




Plastic Rack x1



CA-0910 Cable x1



Screw Driver x1



PDS(M)-720 : 16 pcs

Other PDS(M)-700: 32 pcs

Pin Terminal

Preparations for Devices

- An External Power supply device, such as the MDR-20-24 (Optional).
  http://www.icpdas.com/products/Accessories/power_supply/power_list.htm
- An Ethernet Hub, such as the NS-205 (Optional).
  http://www.icpdas.com/products/Switch/industrial/industrial_list.htm
- Make sure your PC has workable network settings.
  Disable or well configure your Windows firewall and Anti-Virus firewall first, else the **"Search Servers" on Chapter 3** may not work. (Please contact with your system Administrator)


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Connecting the Power and Host PC

1) Connect both the PDS-700 and your PC to the same sub network or the same Ethernet switch.

2) Short the RxD and TxD pins of the PDS-700 for self-test.

3) Supply power (+10 VDC ~ +30 VDC) to the PDS-700.

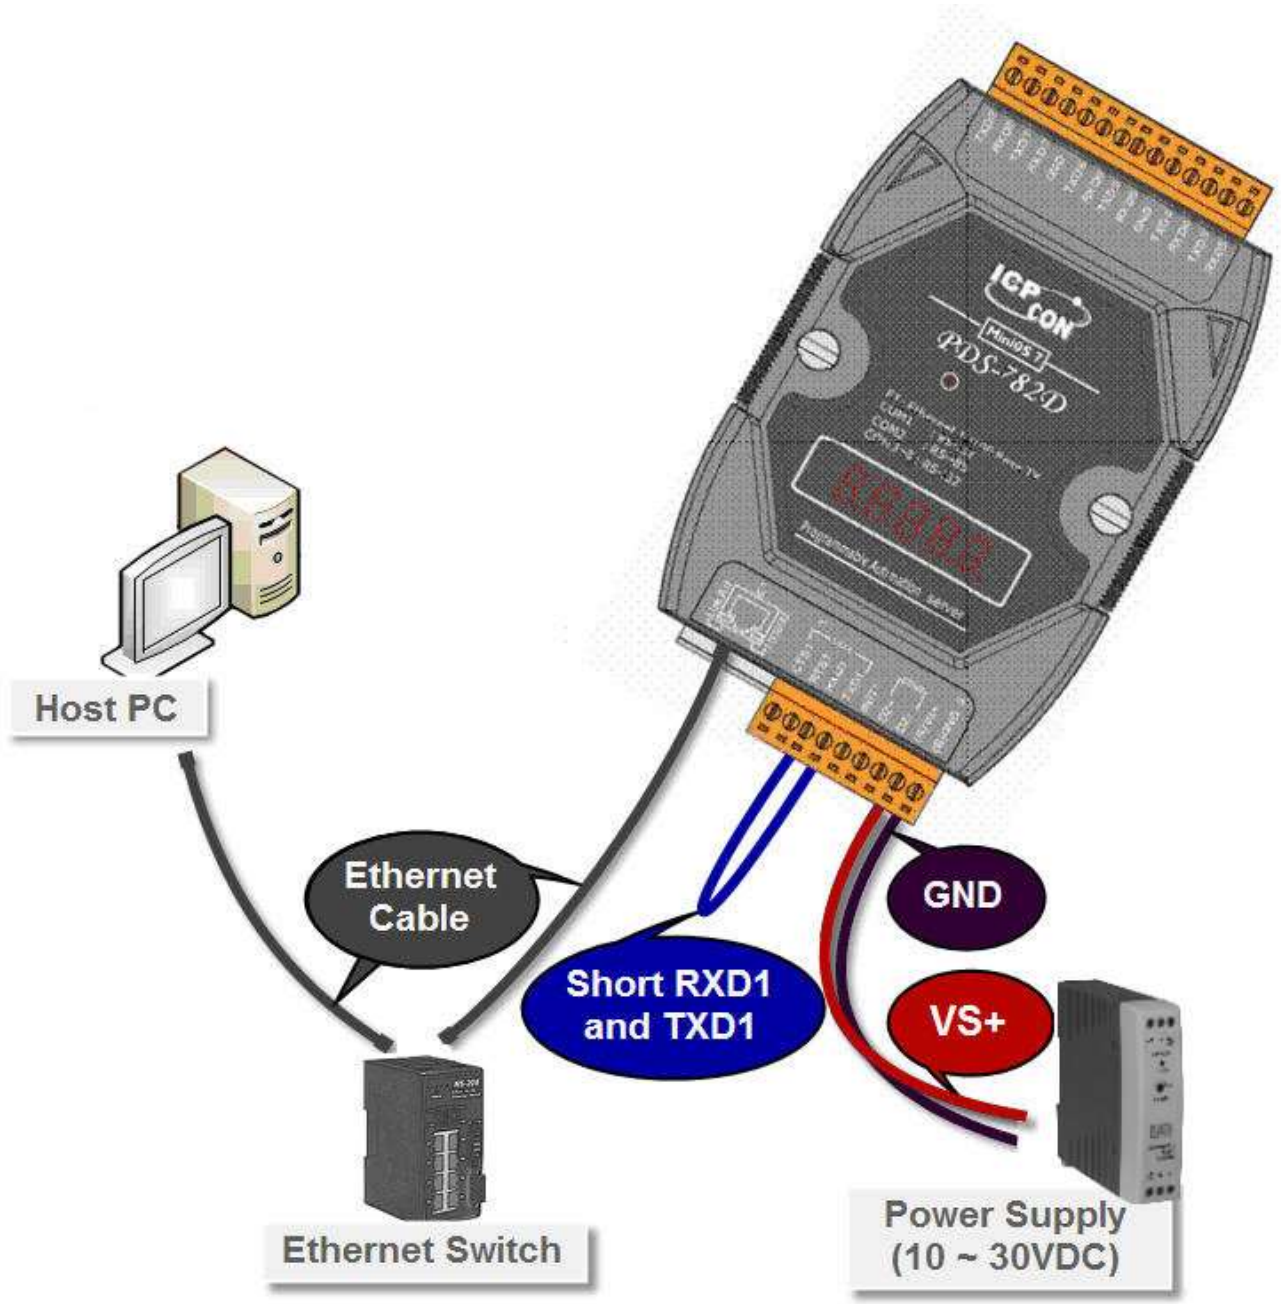

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Install the VxComm Utility

The VxComm Utility can be obtained from the ICP DAS FTP site or the ICP DAS web site. The location of the download addresses are shown below:




http://ftp.icpdas.com/pub/cd/8000cd/napdos/driver/vxcomm_driver/windows/

ftp://ftp.icpdas.com/pub/cd/8000cd/napdos/driver/vxcomm_driver/windows/

3 Configuring Network Settings

1) Double click the VxComm Utility shortcut on the desktop.
2) Click the **"Search Servers"** to search your PDS-700.
3) Double click the **name of PDS-700** to open the "Configure Server (UDP)" dialog box.

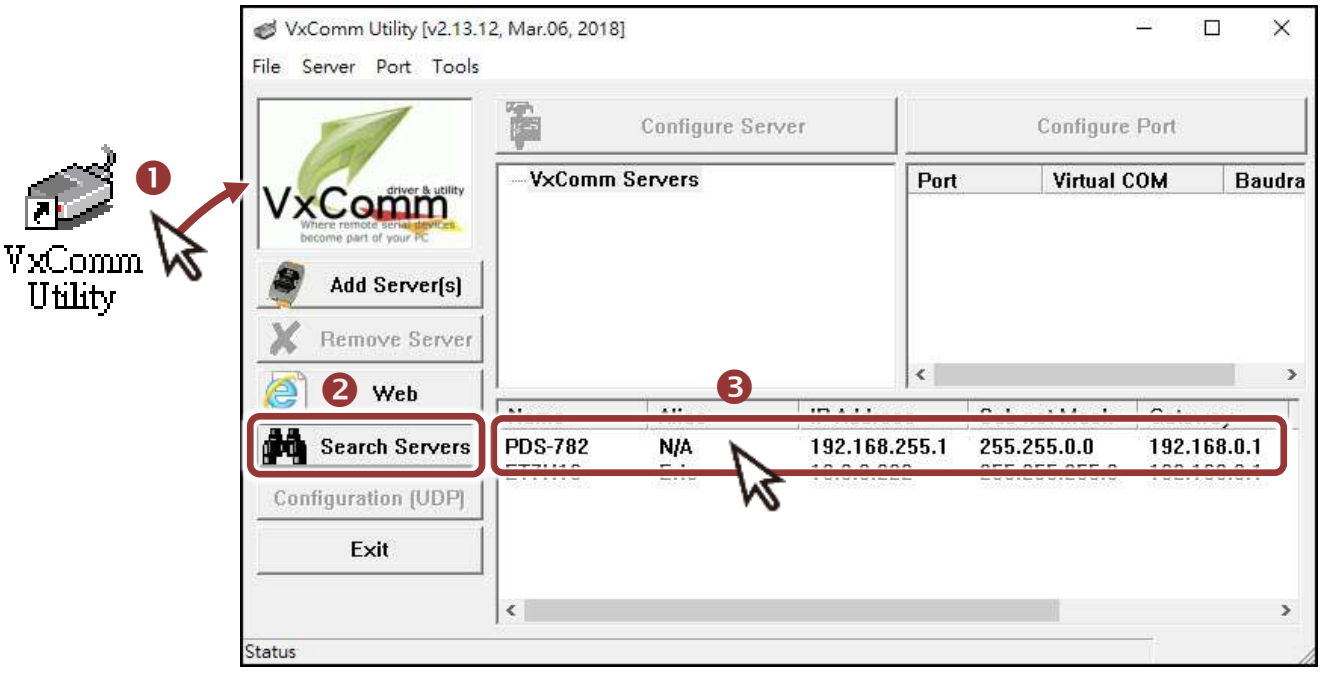


Factory Default Settings of PDS-700:

IP Address	192.168.255.1
Subnet Mask	255.255.0.0
Gateway	192.168.0.1

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


4) Contact your Network Administrator to obtain a **correct network configuration (such as IP/Mask/Gateway)**. Enter the network settings and click **"OK"**. ⚠ **Note: The PDS-700 will use the new settings 2 seconds later.**

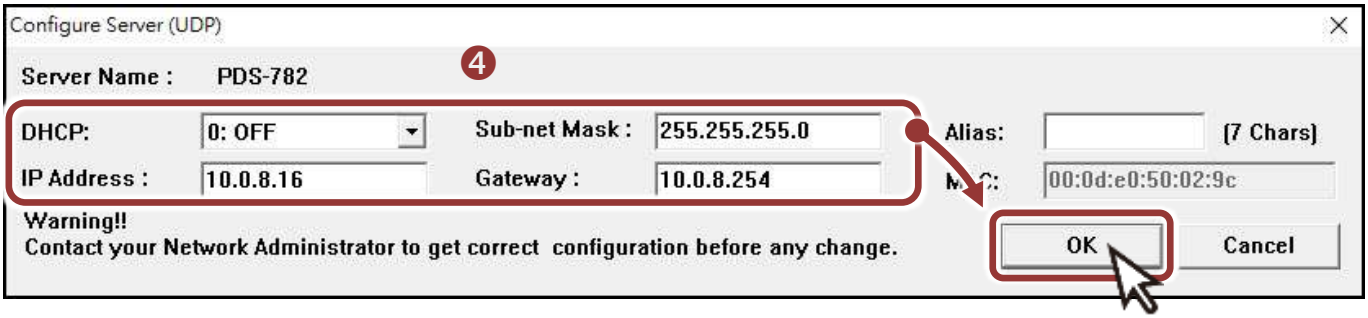

4 Configuring Virtual COM Ports

1) Wait 2 seconds and click **"Search Servers"** button again to ensure the PDS-700 is working well with new configuration.


2) Click the name of PDS-700 to select it.

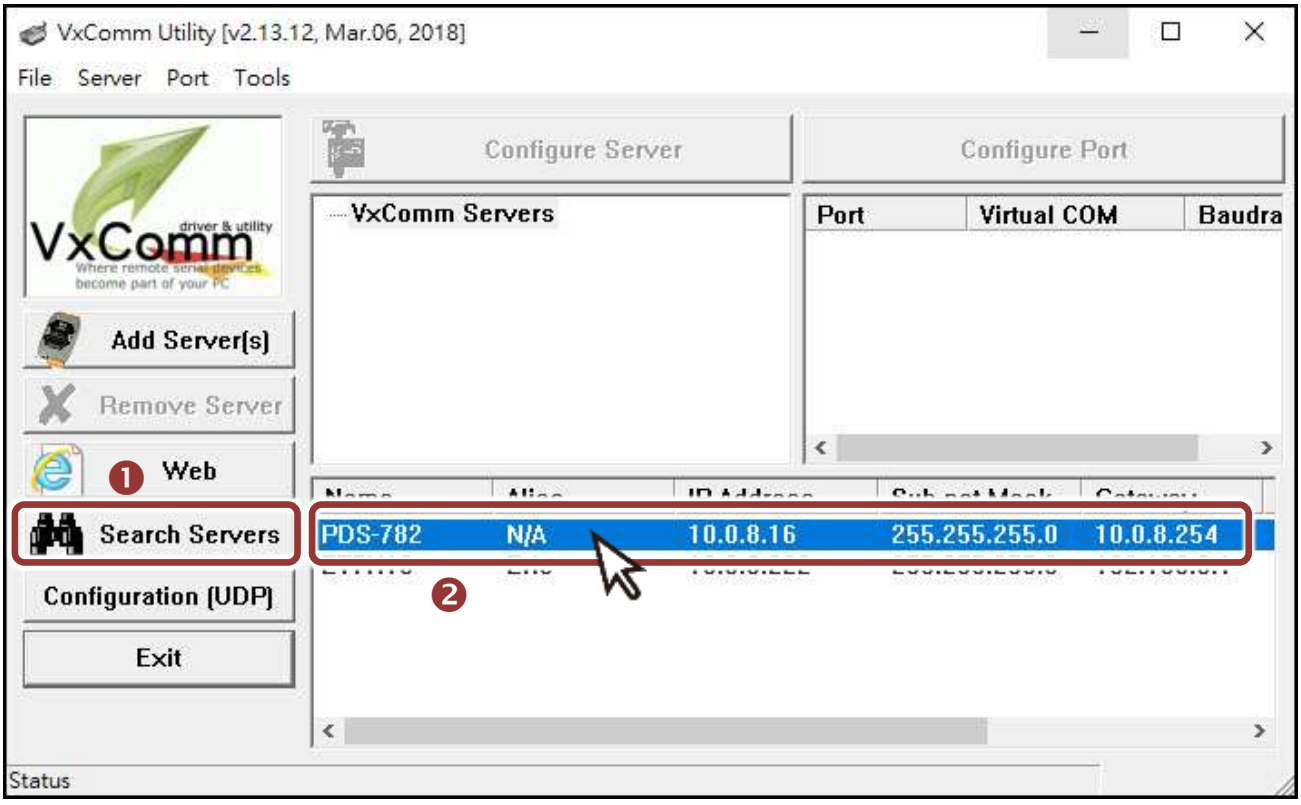


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3) Click the **"Add Server[S]"** button.

4) Assign a COM Port number and click **"OK"** to save your settings.

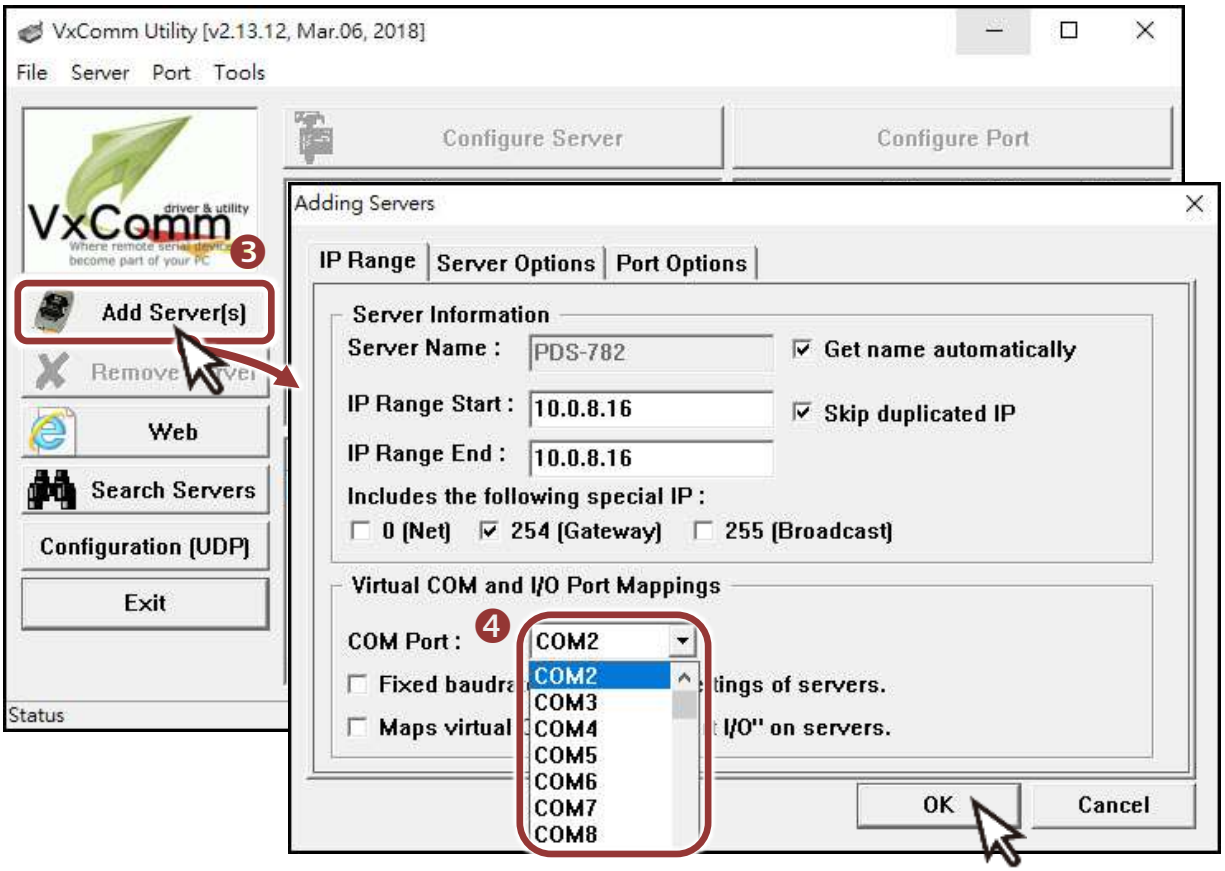


5) Click on PDS-700 name and check the virtual COM Port mappings on the PC.

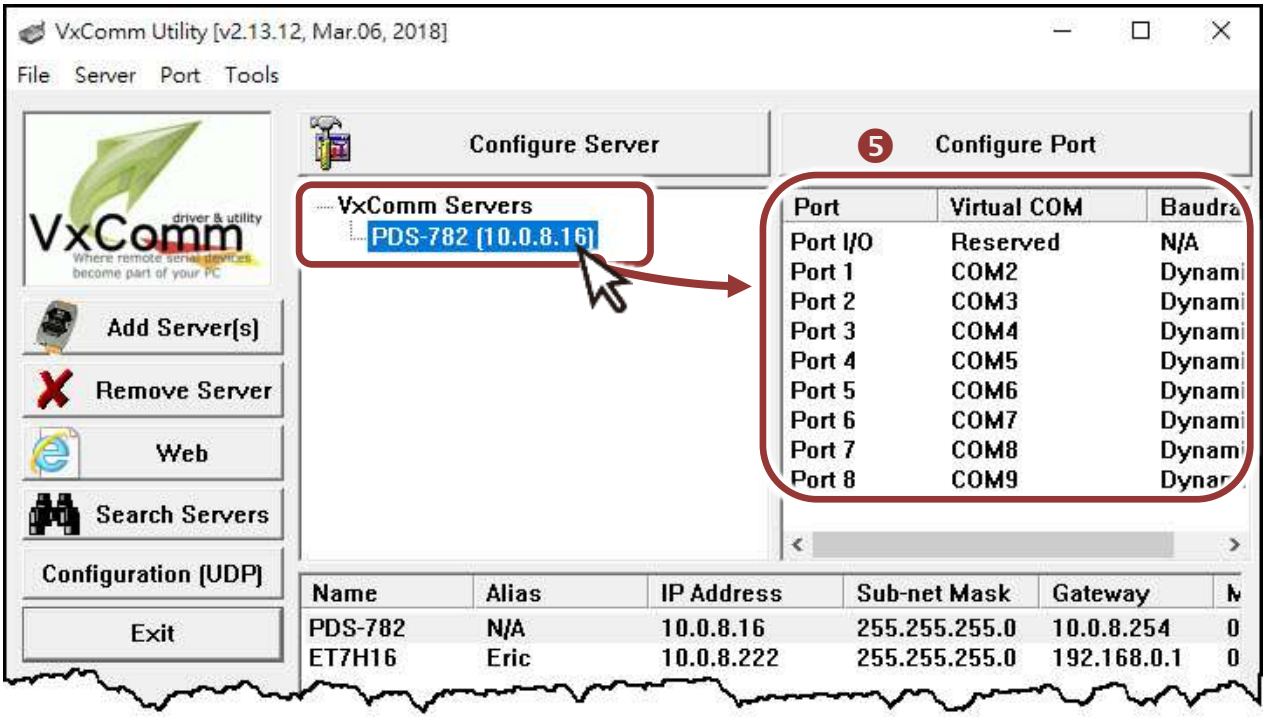

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6) Click the **“Restart Driver”** item in the **“Tools”** menu to display the “VxComm Utility: Restarting Driver” dialog box.


7) Click the **“Restart Driver”** button.

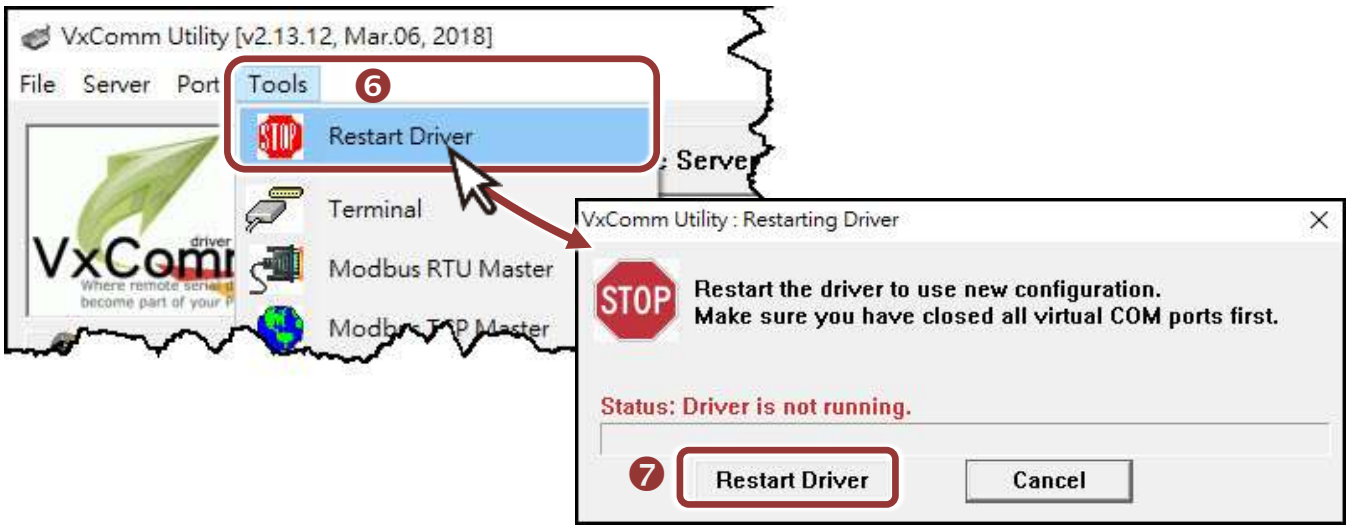

5 Self-Test


1) Right click Port1 and choose the **“Open COM Port”** item.

2) Check that the configuration of the COM Port is correct and then click the **“Open COM”** button.

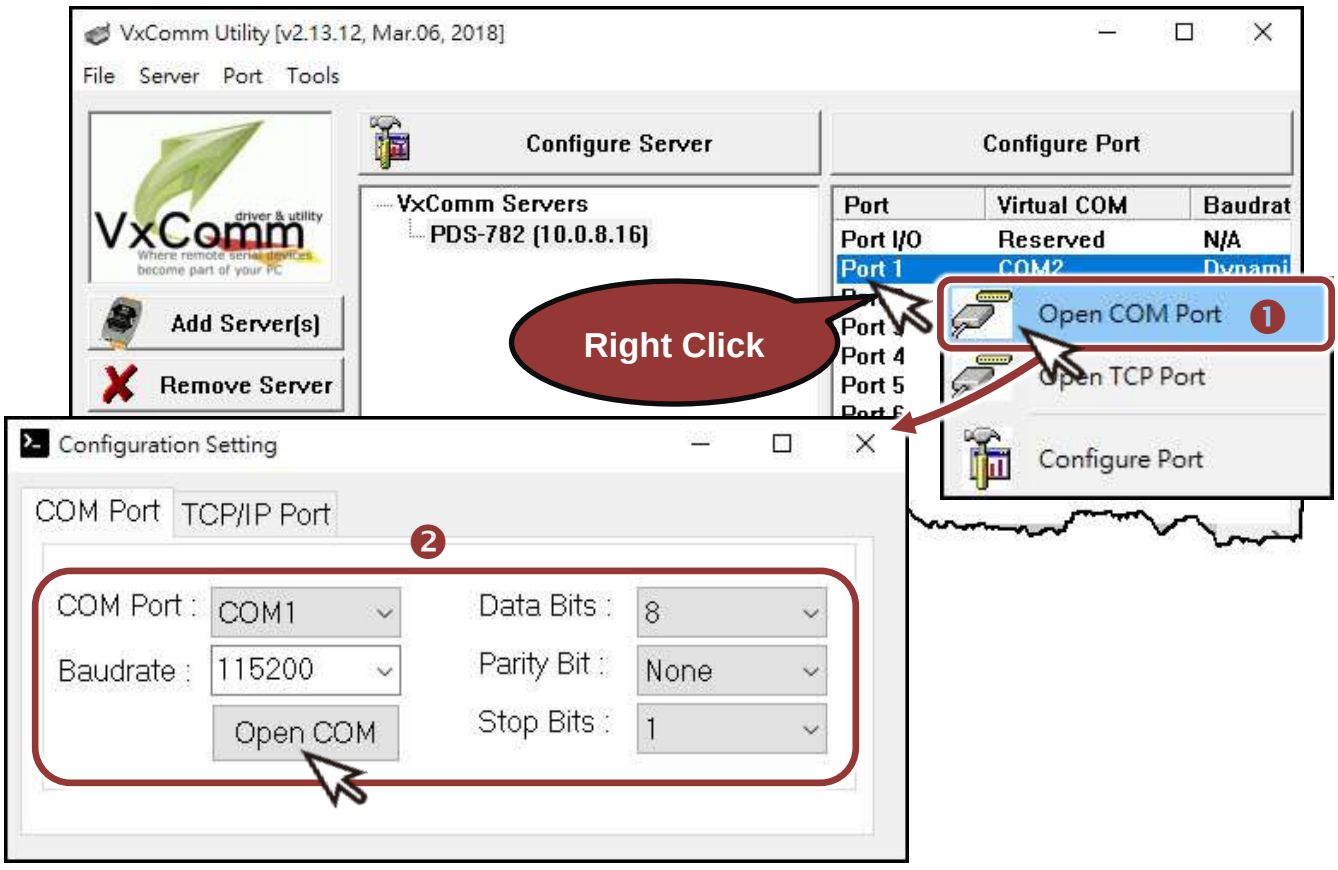


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3) Type a string (e.g., $01M) in the **“Send”** field.
4) Click the **“Hex/Text”** option in the **“Display”** section.
5) Click the “**Send**” button to send the message.

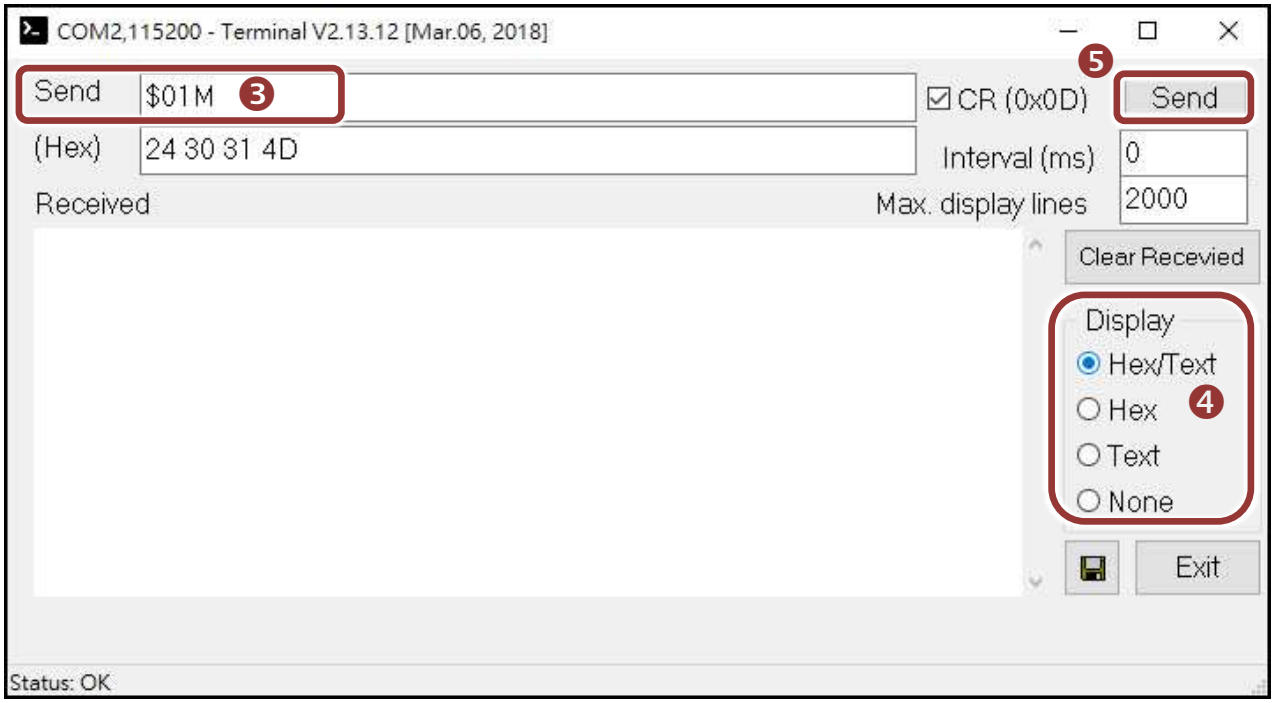

6) If a response is received, it will be displayed in the received field.

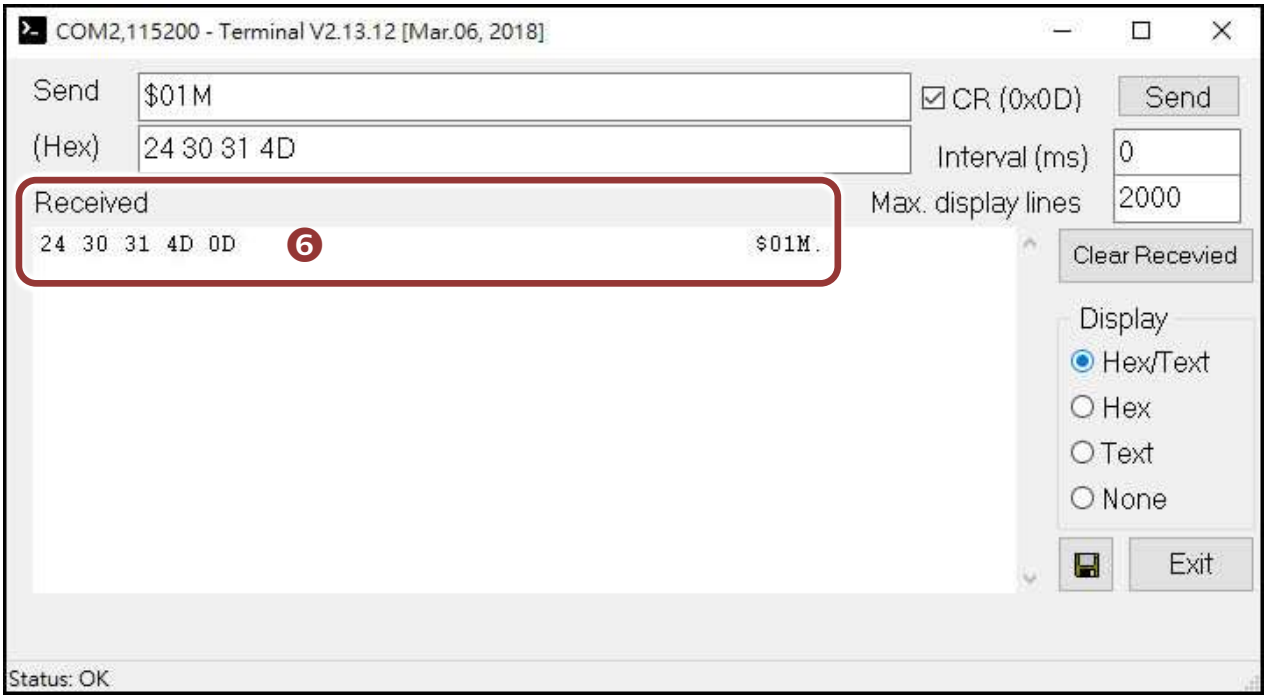

If the test is successful, then your COM port program should now be able to work with this Virtual COM Port.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Related Information

- PDS Series Product Page:

http://www.icpdas.com/products/Industrial/pds/PDS-700_Series.htm

- Documentation:

http://ftp.icpdas.com/pub/cd/8000cd/napdos/pds/ds_pds-700/document/

- Firmware:

http://ftp.icpdas.com/pub/cd/8000cd/napdos/pds/ds_pds-700/firmware/

- MDR-20-24, NS-205 Product Page (optional):

http://www.icpdas.com/root/product/solutions/industrial_ethernet_switch/ns-205.html

http://www.icpdas.com/root/product/solutions/accessories/power_supply/mdr-20-24.html

NOTE

The flash protection function is disabled for factory default settings.

User can modify the program or update the firmware. If you want to enable flash protection function, refer to **Section 2.10 Flash Protection Function** of PDS-700 user manual.

The location of the download addresses are shown below:

http://ftp.icpdas.com/pub/cd/8000cd/napdos/pds/pds-700/document/

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000