PMC-2841M-4GE / PMC-2841M-4GC
Quick Start

v1.0, June 2026

Packing List

In addition to this guide, the package includes the following items:



PMC-2841M-4GE
PMC-2841M-4GC



Antenna
(ANT-421-04)



MicroSD card and Micro SD/SD adapter



Screw Driver
2.4mm
(1C016)



Pin Terminal
x 16


Technical Support

service@icpdas.com
www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

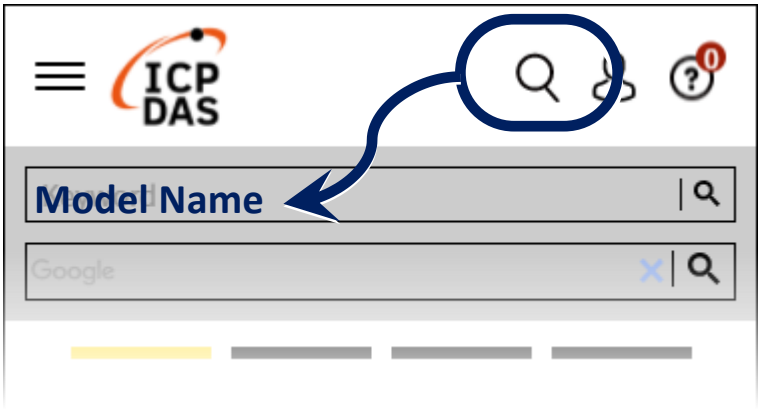


- For Desktop Web



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


1. Configuring the boot mode

Before starting PMC-2841M-4GE/4GC at the first time, be sure that the switch is placed in the “0” position.

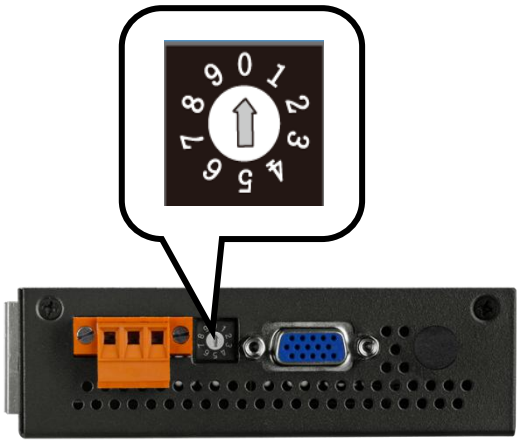

2. Checking the network setting


The PMC-2841M-4GE/4GC comes with the default IP setting:

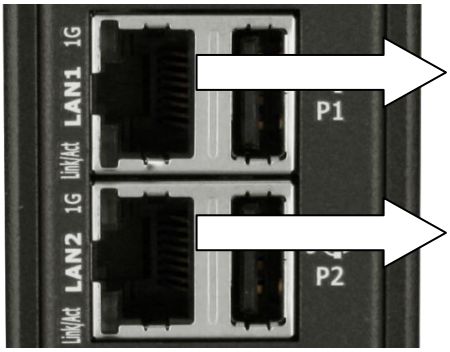


LAN1	Default
Network Setting	DHCP
LAN2	**Default**
IP	192.168.255.1
Mask	255.255.0.0
Gateway	192.168.0.1

3. Go to PMC-2841M-4GE/4GC's web site

- Open a browser, and type in the URL address of the PMC-2841M-4GE/4GC.

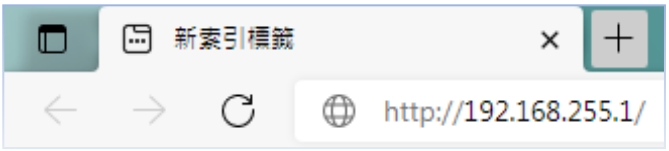

- You have to set the password before the first time to login.

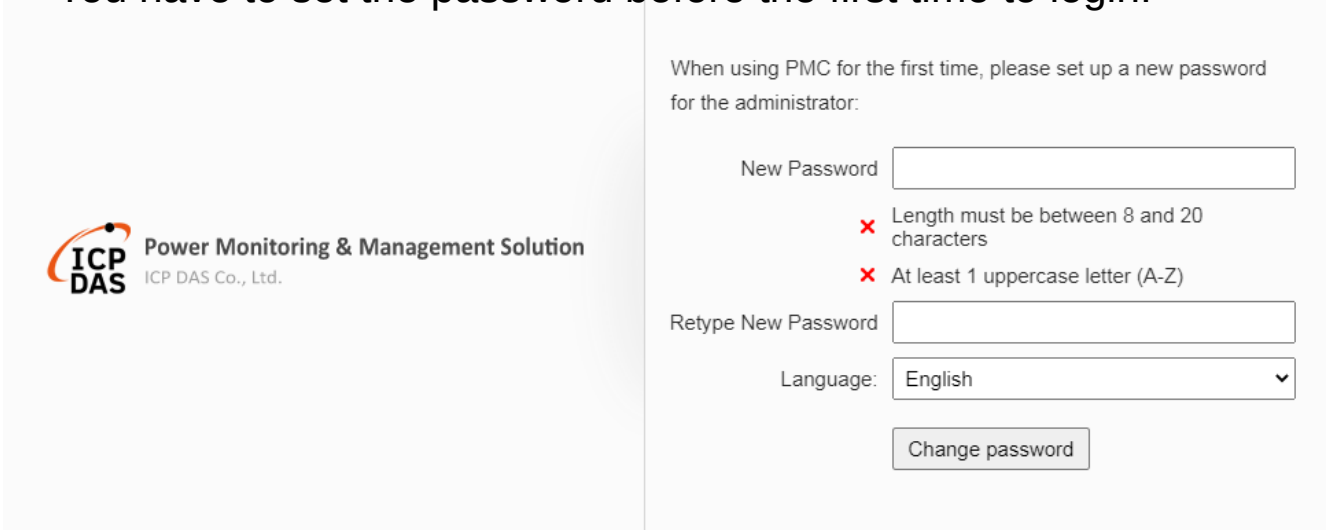

- For more detail information, please refer to PMC-2841M-4GE/4GC's User Manual.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000