SG-3227

Quick Start

What's In the Box!

In addition to this guide, the package includes the following items:



SG-3227



BNC adaptor x 2




Quick Start



Screw driver


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

➢ Appearance and Pin Assignments

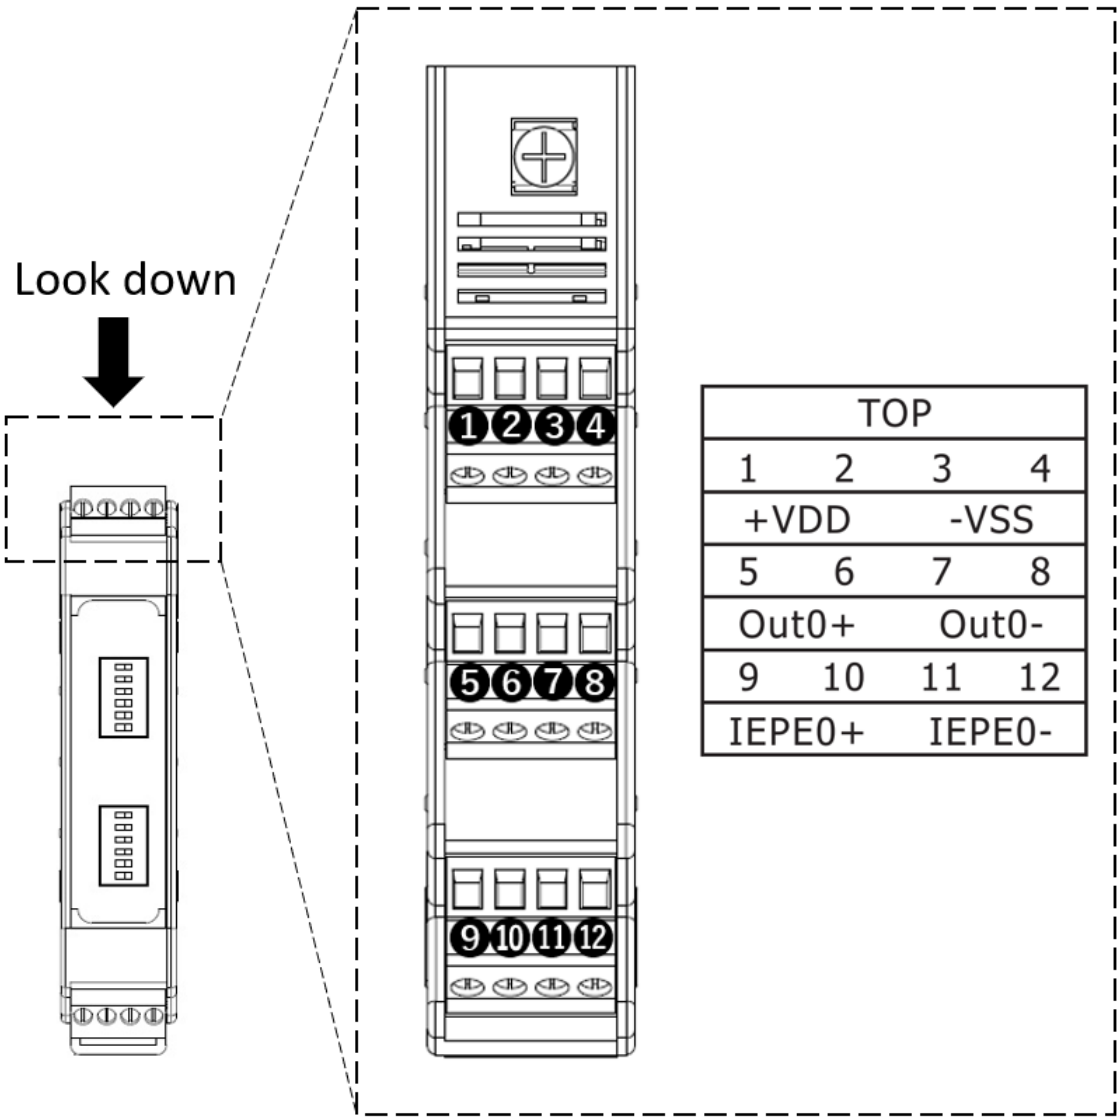


TOP			
1	2	3	4
+VDD		-VSS	
5	6	7	8
Out0+		Out0-	
9	10	11	12
IEPE0+		IEPE0-	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

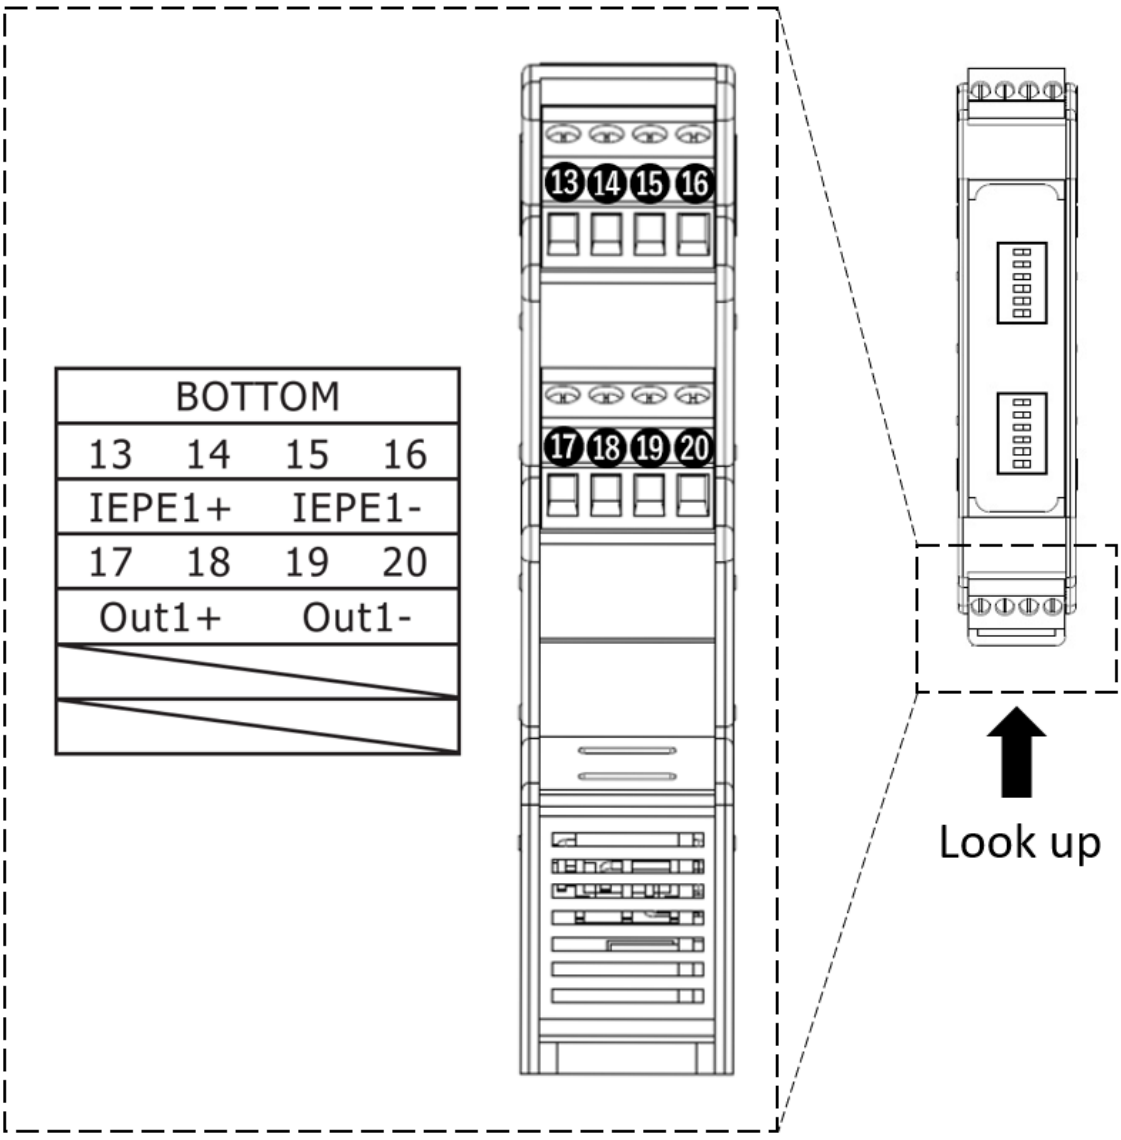


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

➢ Wiring

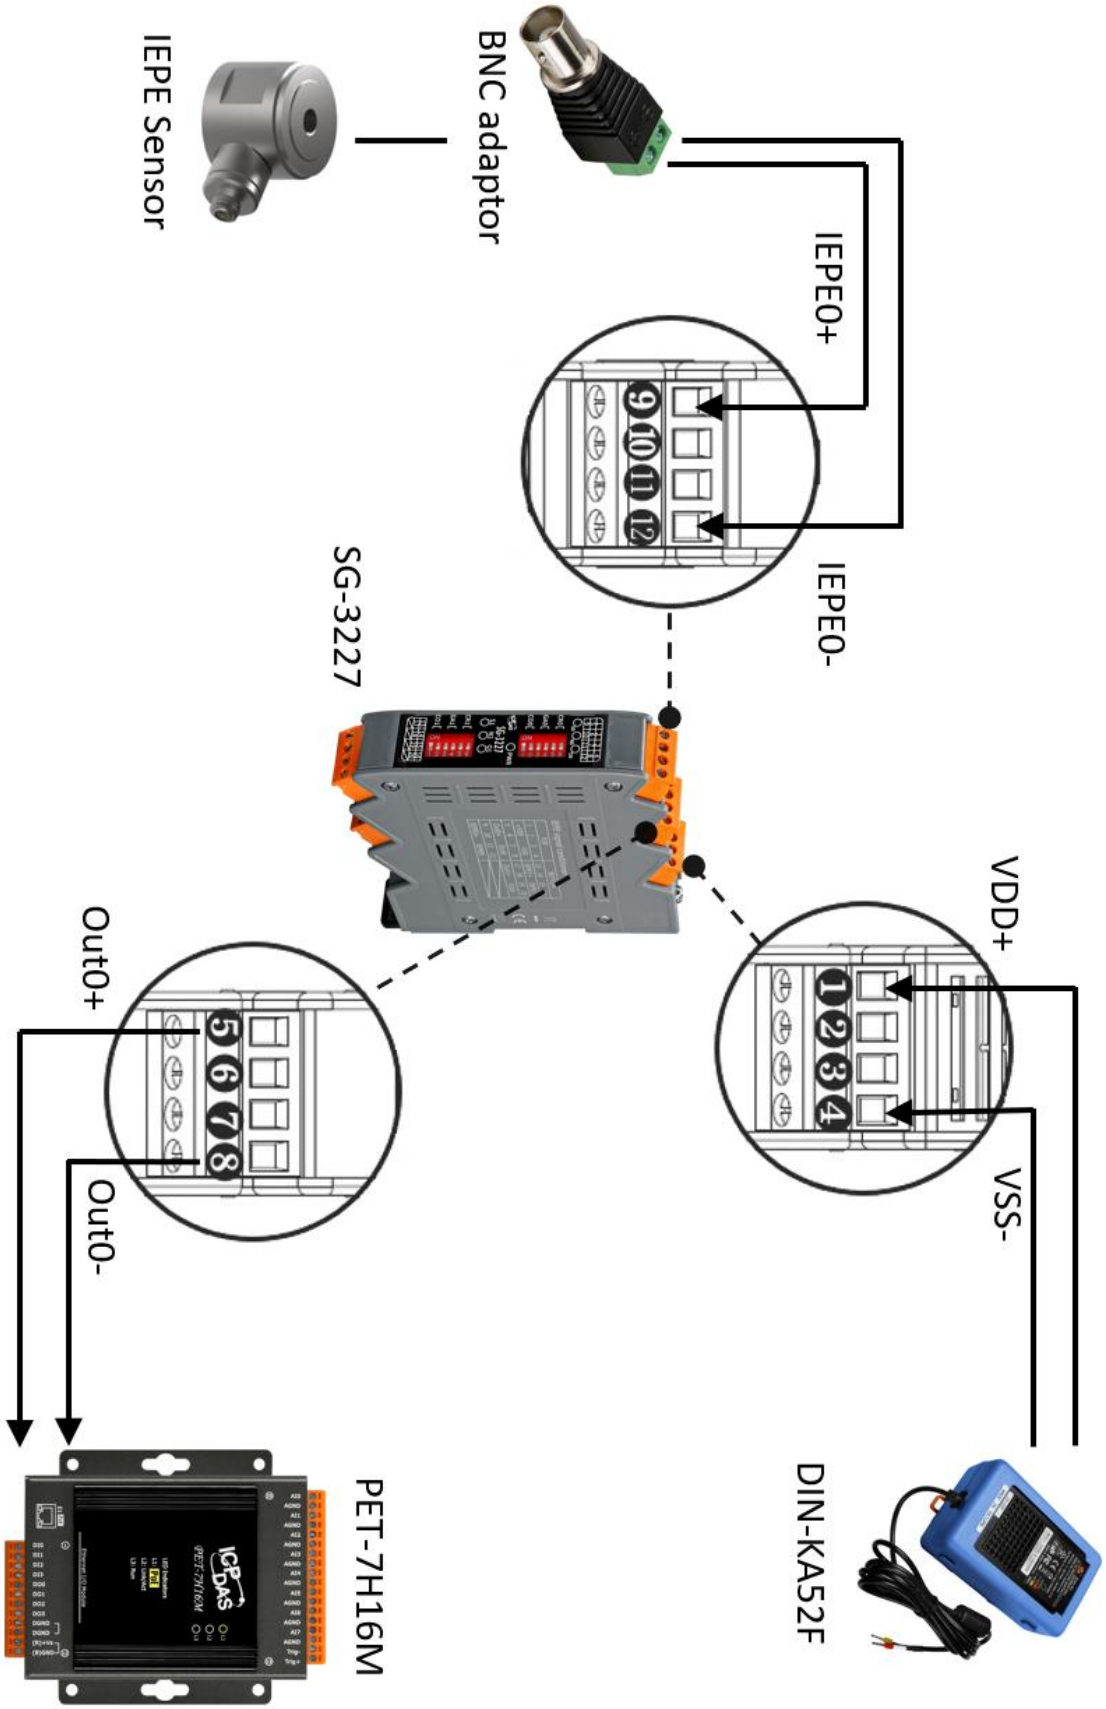

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


➢ LED indicators

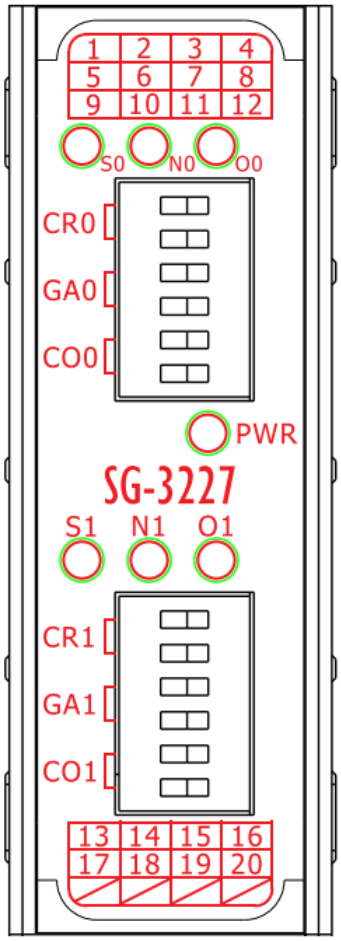

LED	LED Status	LED Description
PWR	Bright	Power supply
O0, O1	Bright	Yellow : Sensor Open
N0, N1	Bright	Green : Normal Operation
S0, S1	Bright	Red : Sensor Short

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

➢ Switch Setting

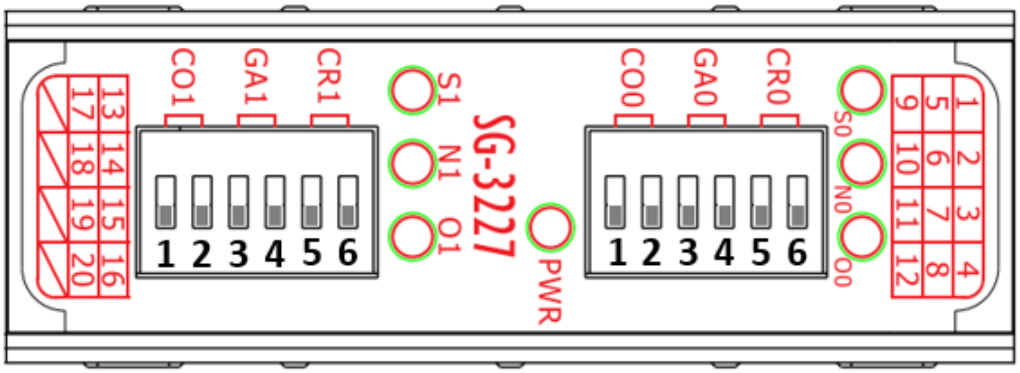

Coupling Setting	1	2
DC	OFF	OFF
AC (0.1uF)	ON	OFF
AC (1 uF)	OFF	ON

Gain Setting*	3	4
X1	OFF	OFF
X10	ON	OFF
X100	OFF	ON

*DC-coupled does not support amplifier function

Excitation Current Setting	5	6
2 mA	OFF	OFF
4 mA	ON	OFF
6 mA	OFF	ON
10 mA	ON	ON

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

➢ Technical Support

1. ICP DAS Service : **service@icpdas.com**

2. Product Website:

http://www.icpdas.com/root/product/solutions/signal_conditioning_modules/sg-3000/sg-3227.html

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000