How to edit the registry

Applies to:

Platform	***OS version***	***XPAC utility version***
XPAC series	*All versions (WinCE6)*	*All versions*

Tips & Warnings

⚠ Editing the registry may result in unexpected errors.

To edit the registry, perform the following steps:


Step 1: Find the regedit.exe files
The “regedit.exe” file is located at
1. The “\System_Disk\Tools\ReEdit” folder on the XPAC device.
2. ftp://ftp.icpdas.com/pub/cd/xp-8000-ce6/system_disk/tools/regedit/ (XP-8000-CE6)
   ftp://ftp.icpdas.com/pub/cd/xpac-atom-ce6/system_disk/tools/regedit/ (XP-8000-Atom-CE6)

Step 2: Edit the registry.
2.1. Double click the Regedit.exe icon.




2.2. Select the key or value you want to edit.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

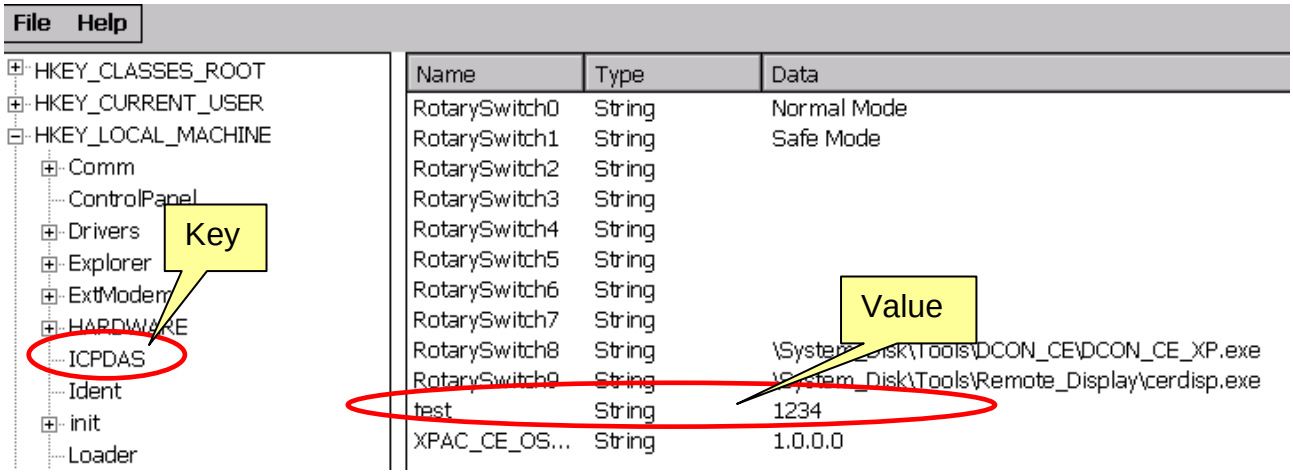


2.3. Edit the value you want.

2.3.1. Double click the value you want to edit.
Enter the value and then click the “OK” button.

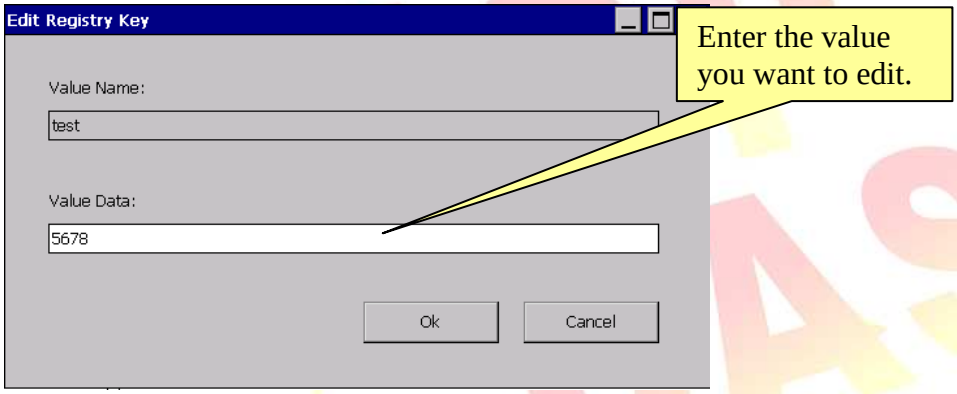


2.4. Add a new sub key or value.

2.4.1. Go to the “Path” where you want to add a new sub key or value.

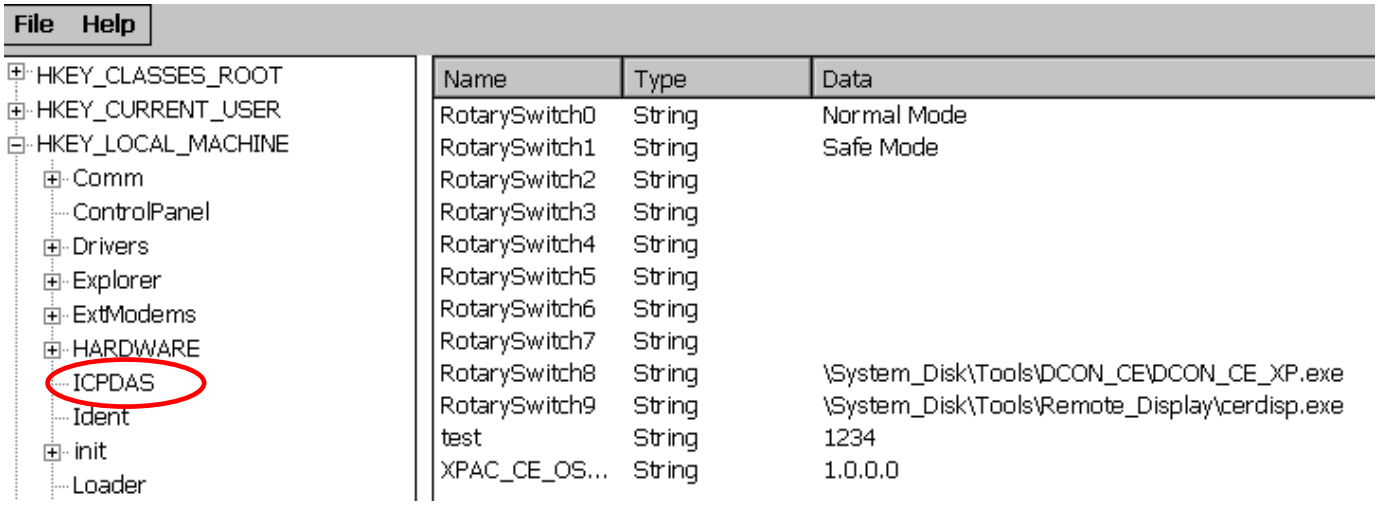


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.4.2. Move mouse to right space, and then click mouse-right. Select menu option “Add” to add key or value.

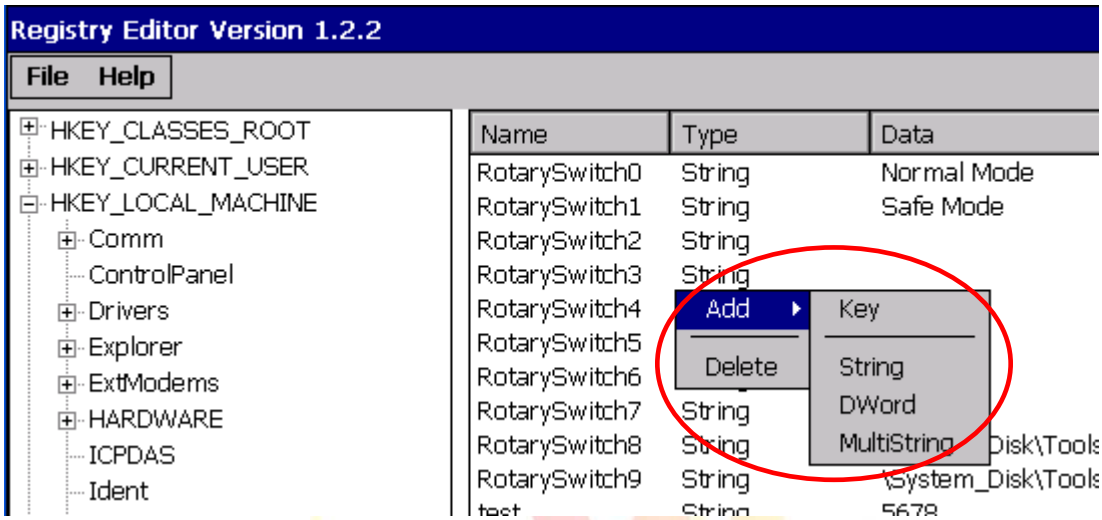


2.4.2.1. Add a new key.
Select “key” and then click mouse-left button. Key in the key name and then click “ok” button.

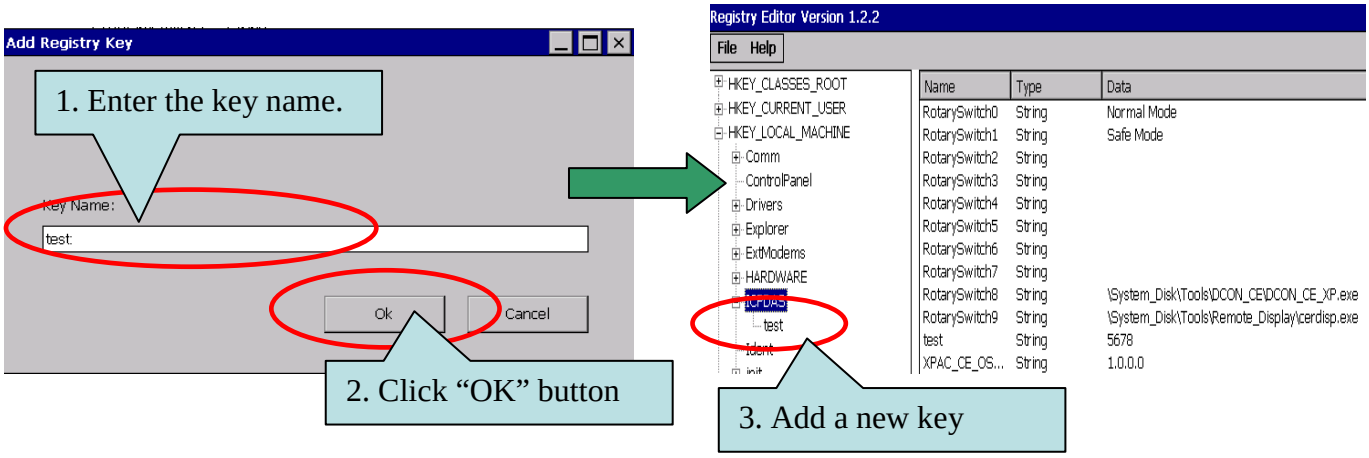

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.4.2.2 Select new Value type


Select in the value type and then click mouse-left button to show menu option.

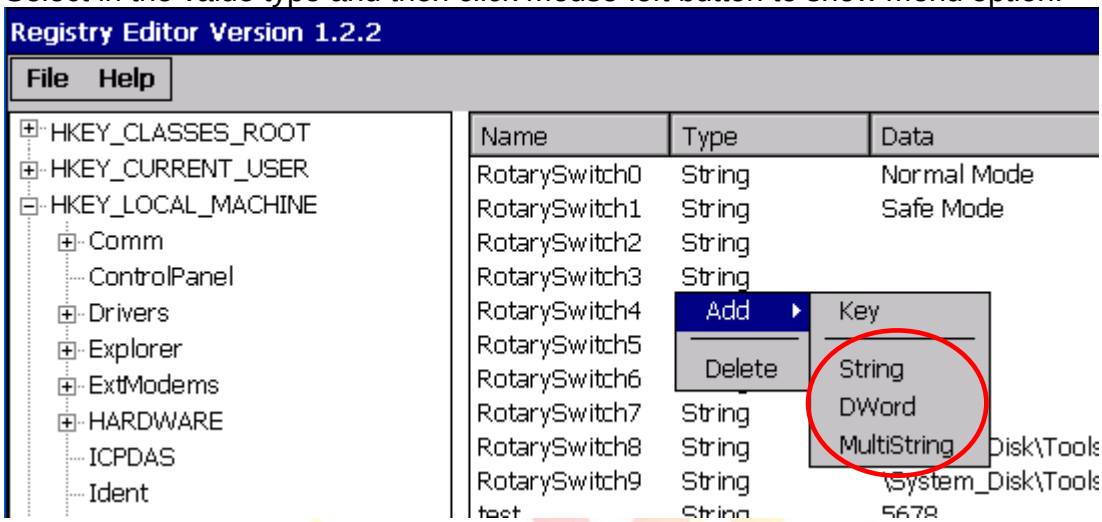


2.4.2.3. Add a new Value.


Key in the value name and value, and then click “ok” button.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

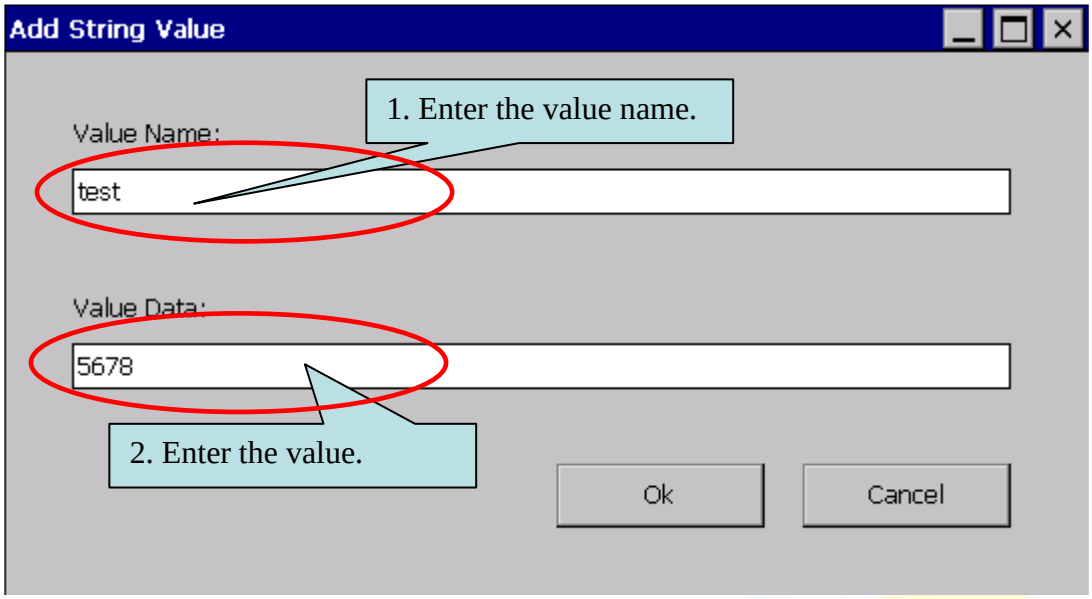


2.5. Delete a key or value.
Click the key or value you want to delete, and then click mouse-right button to show menu option.

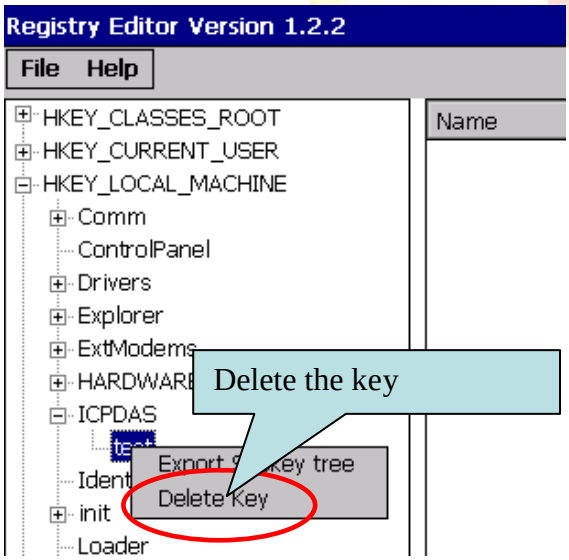

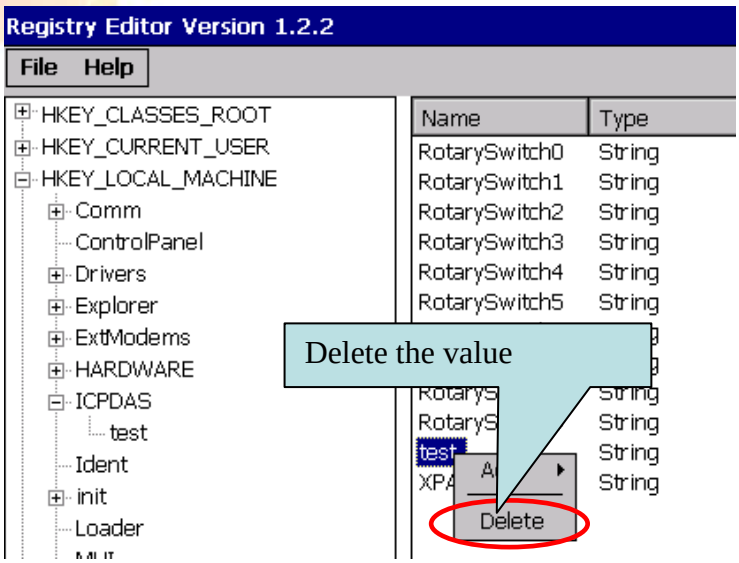


(Status of delete Sub key)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

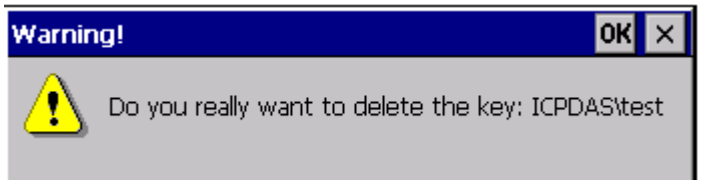

(Status of delete value)

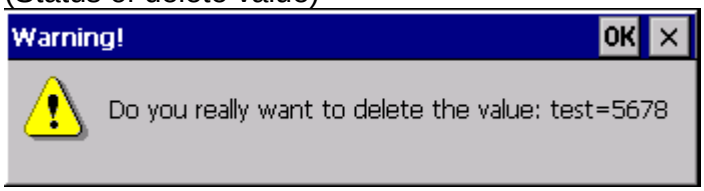

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000