How to write a MFC application with XPAC SDK in visual studio 2008


Applies to:

Platform	*OS version*	*XPAC utility version*
XPAC series	*All versions (WinCE6)*	*All versions*

The XPAC SDKs provides a complete solution to integrate with XPAC and compatible with Visual C#, Visual Basic .net and C++. In order to use a component in your application, you must first add a reference to it.

Step 1 Create a new project


Click the File → New → Project in order as following.

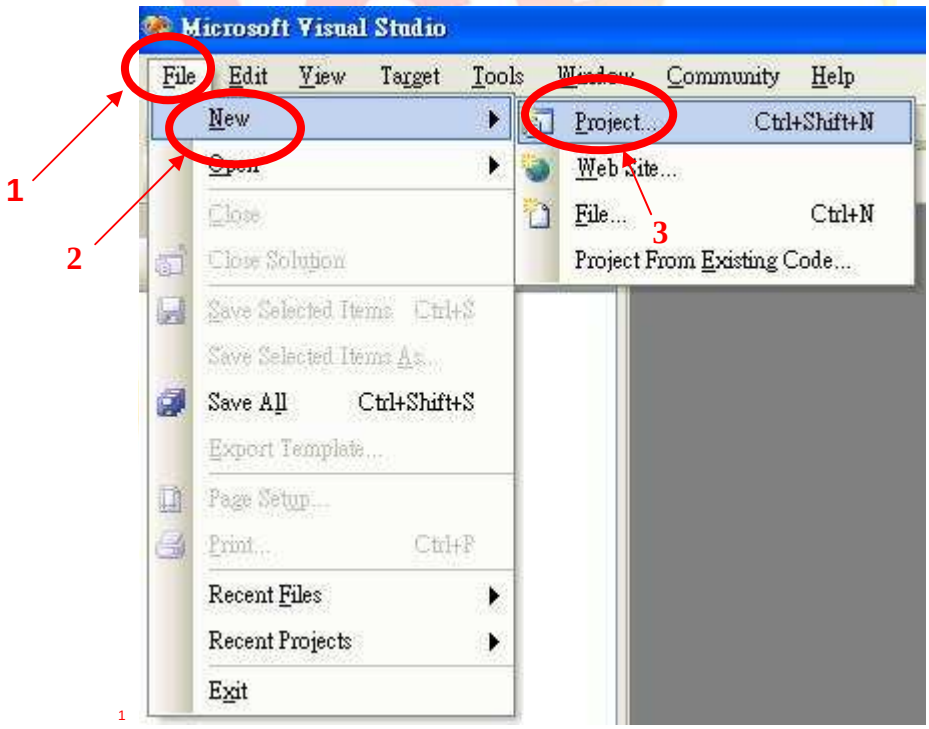

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2 Perform the following steps in order


Select "Visual C++" → "Smart Device"→ "MFC Smart Device Application" and input your program name.

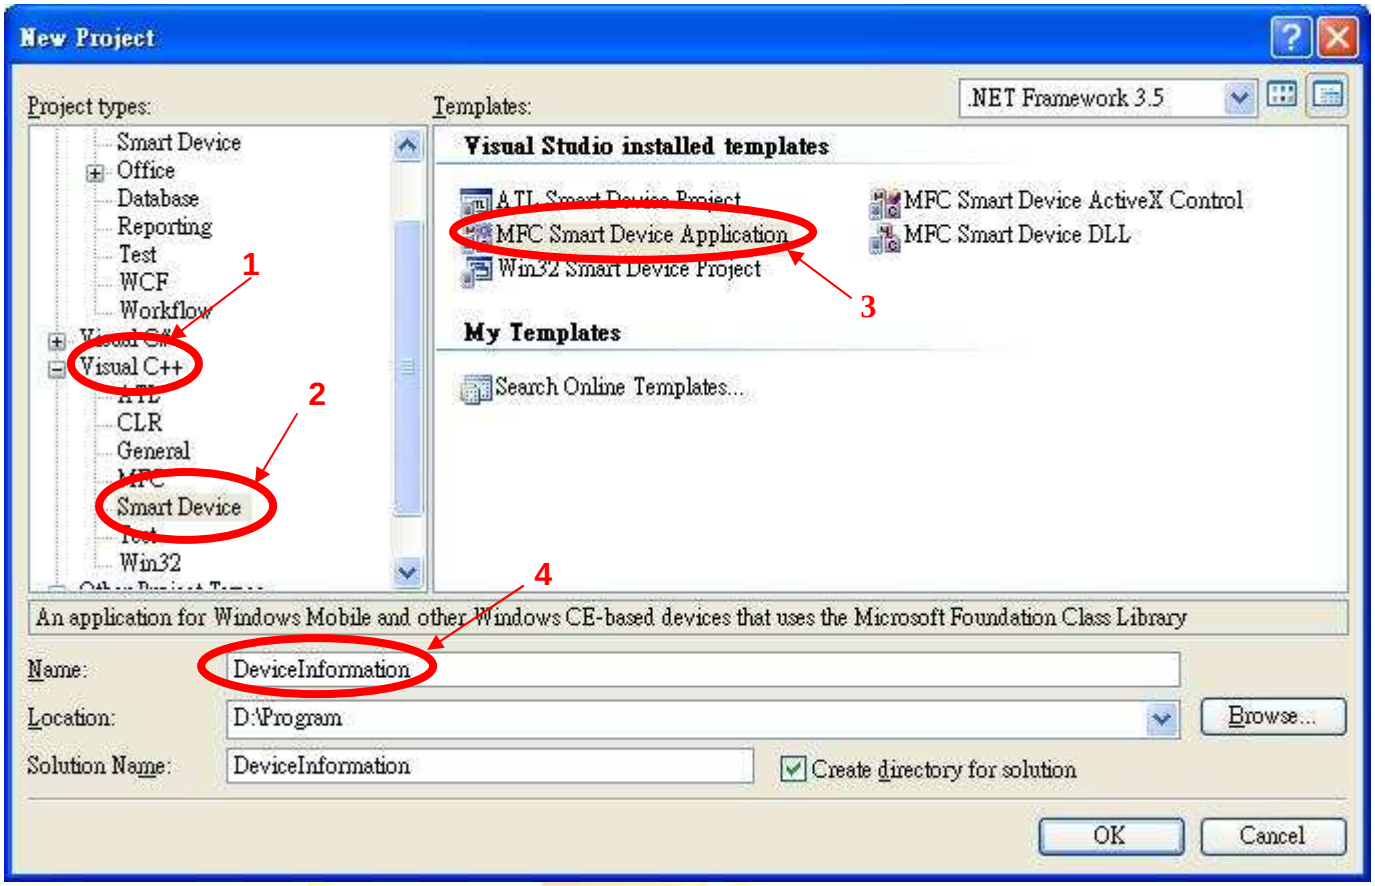

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 3 Program Setting


Click “Next”

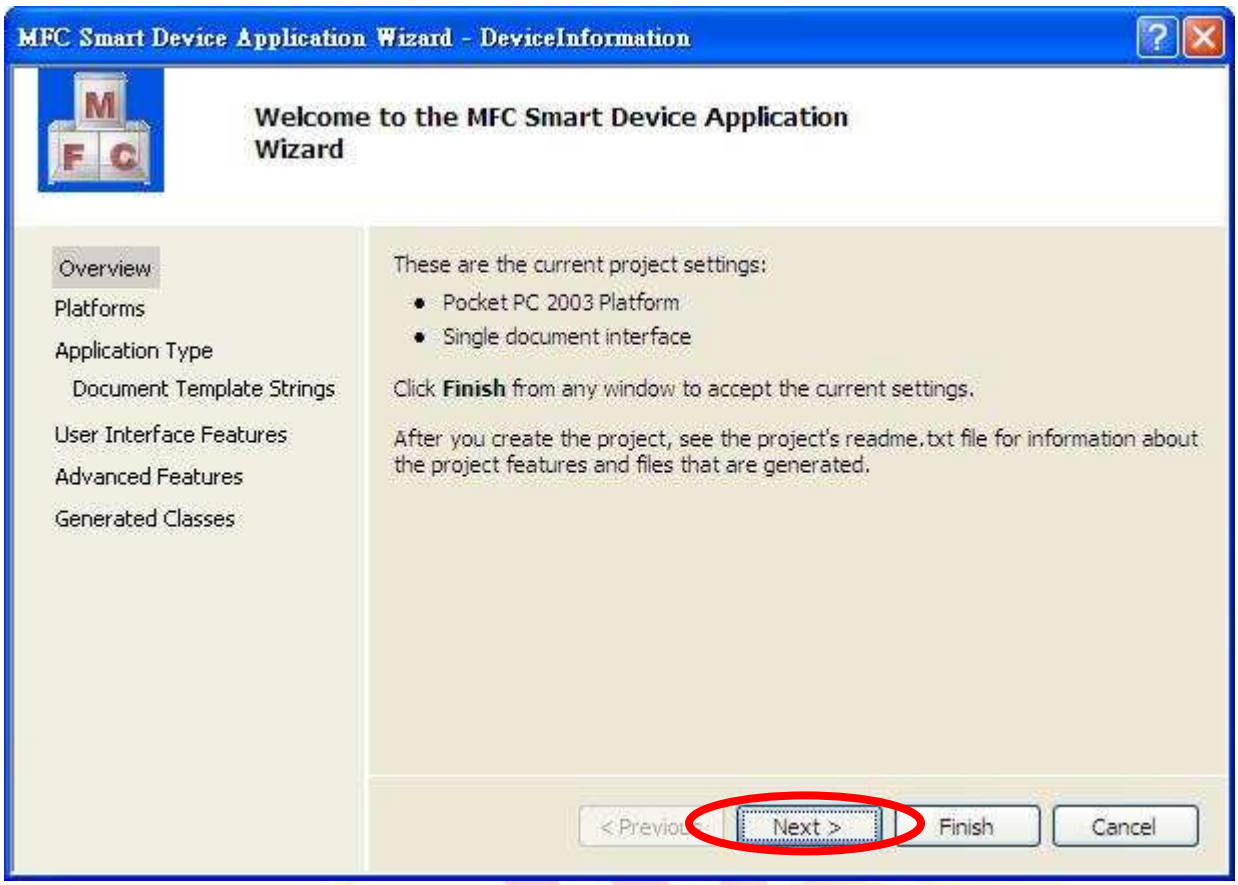

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 4 Select SDK


Select "XPacSDK_CE" → Click ">" → Click "Next"

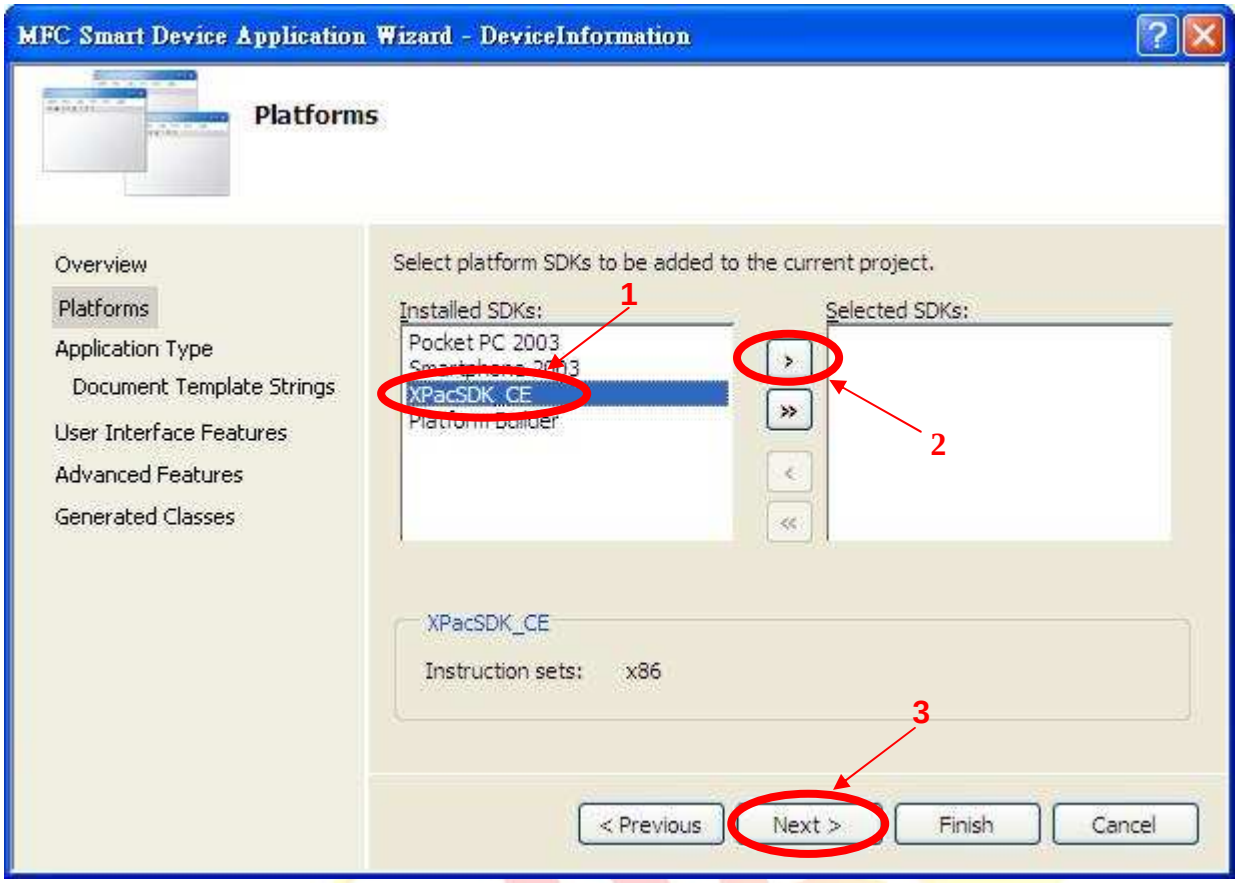

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 5 Select Type


Select “Dialog based” → “Next”

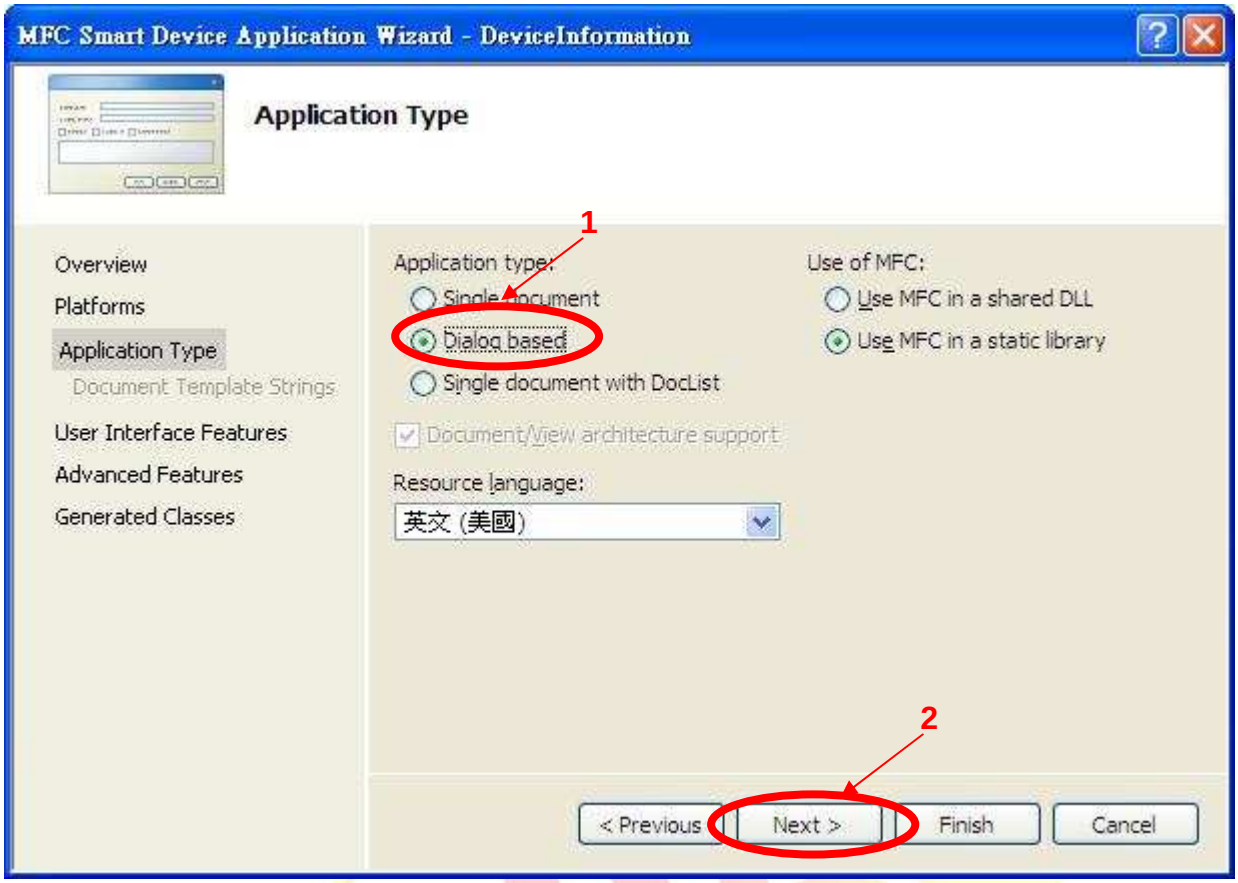

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 6 Application interface


Click “Next”

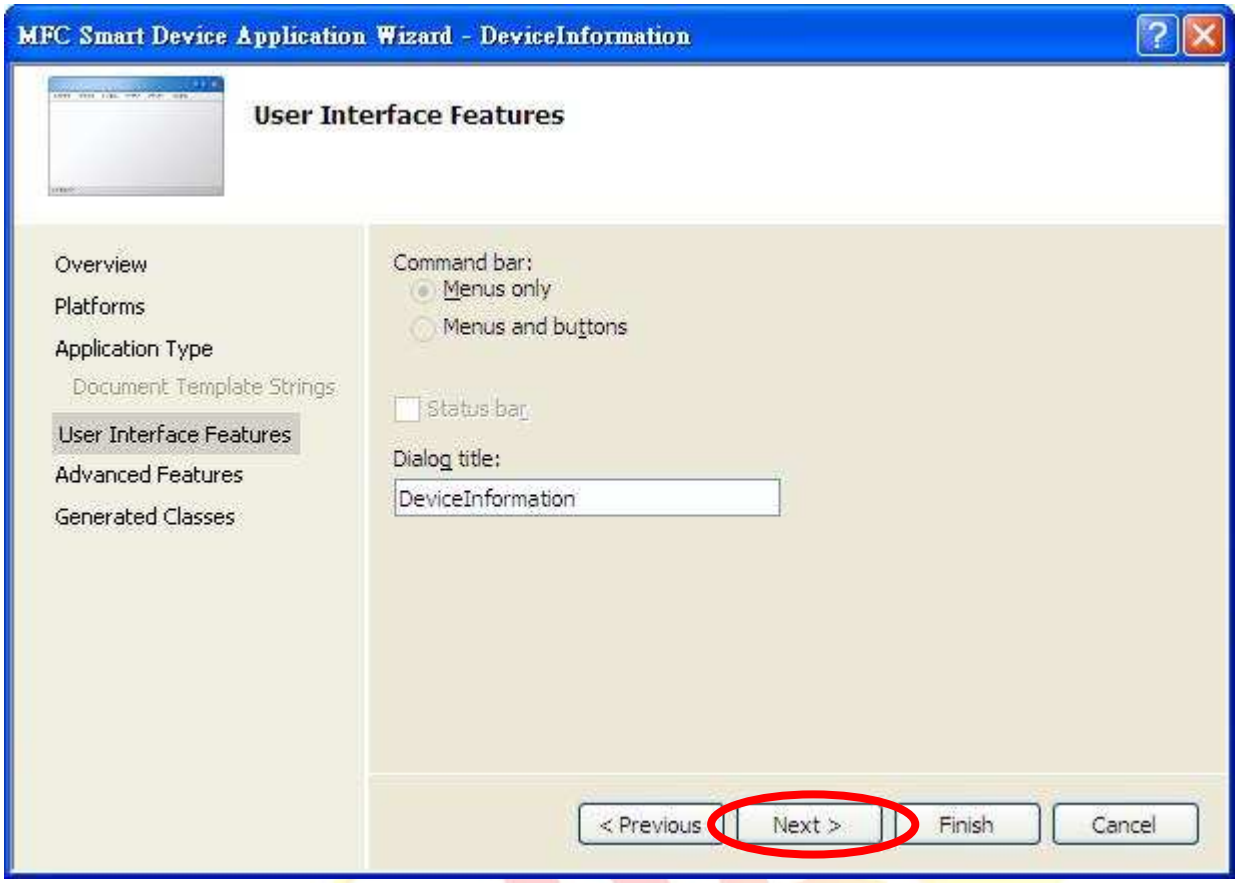

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 7 Application Features


Click “Next”, If your program have using network. You must select “Windows sockets”.

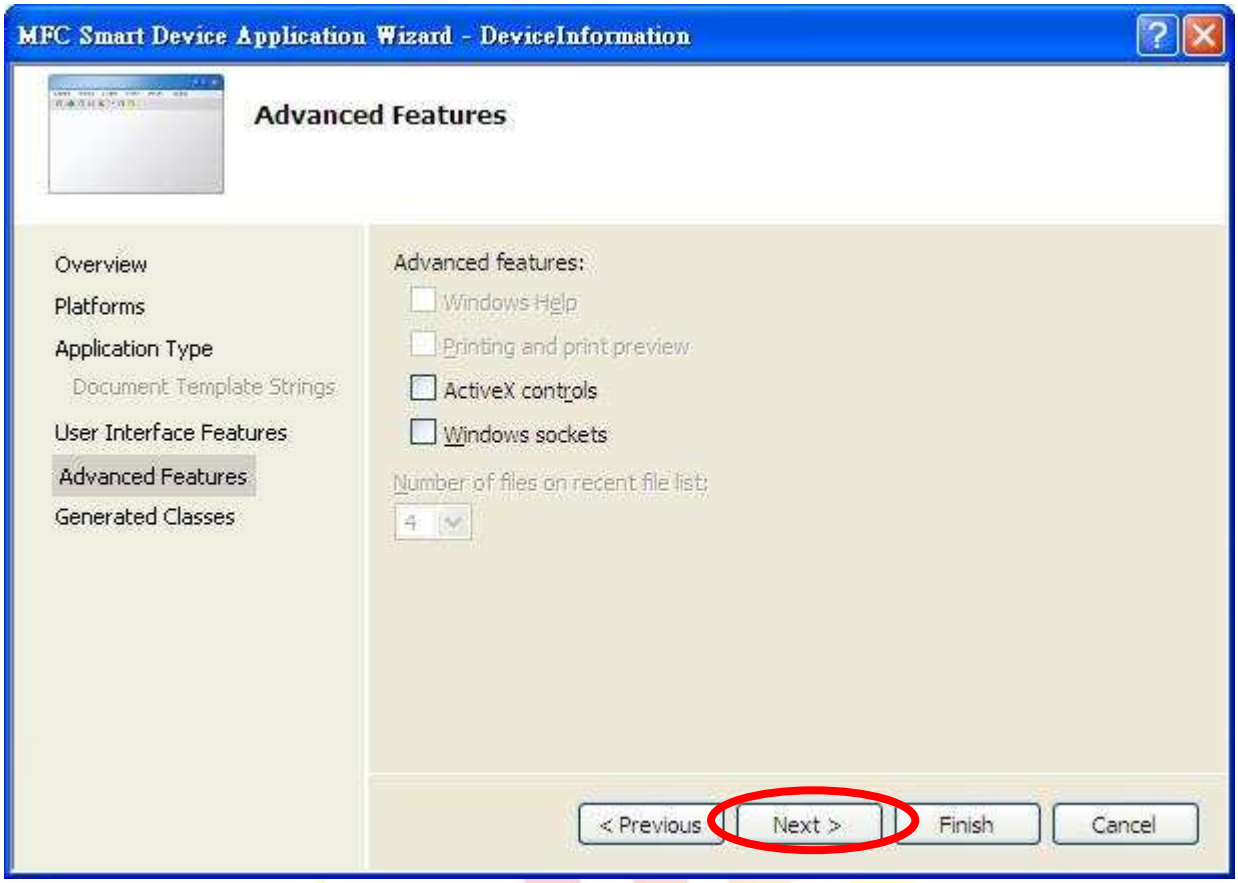

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 8 Generated Classes


Click “Finish”

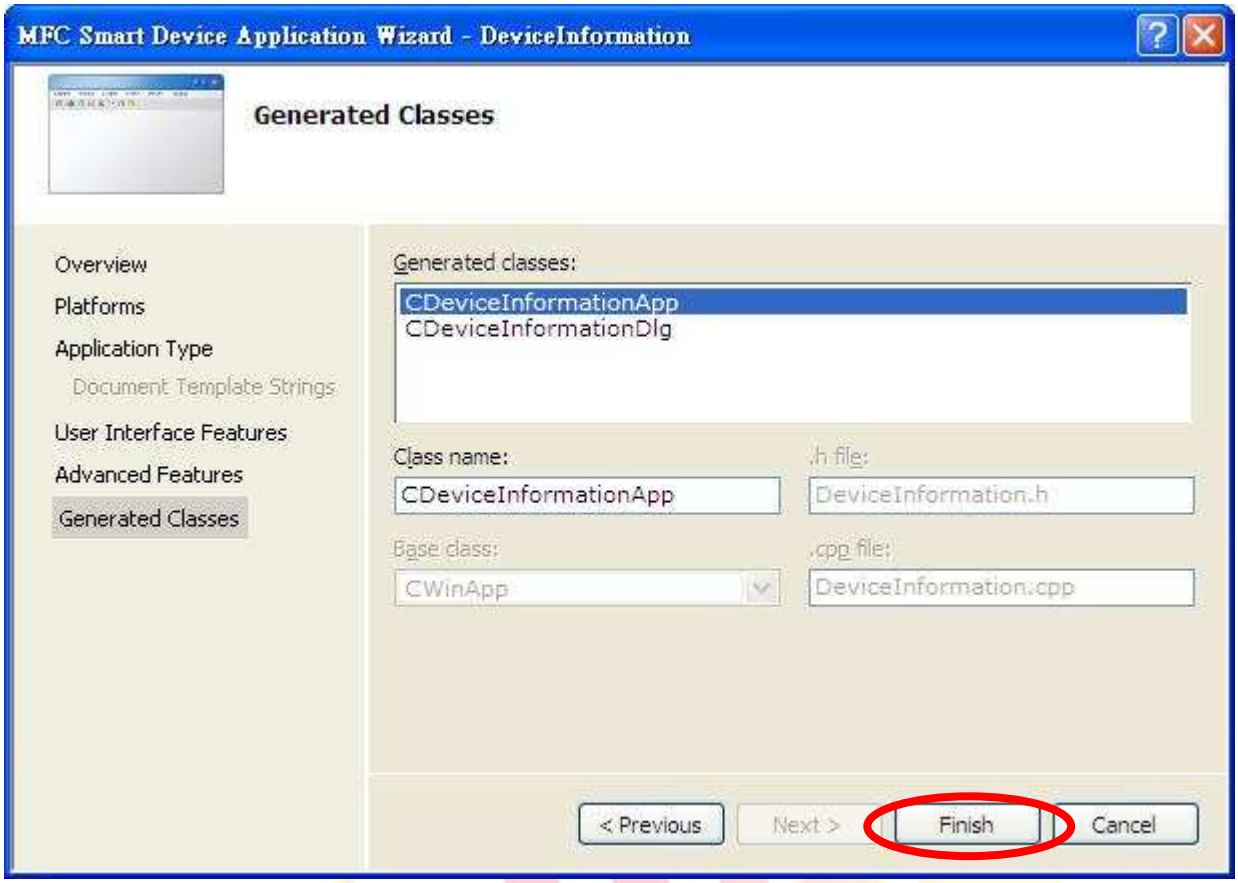

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 9 Add “XPacSDK_ce.h”

Select “DeviceInformationDlg.cpp”, and then add #include “XPacSDK_ce.h”

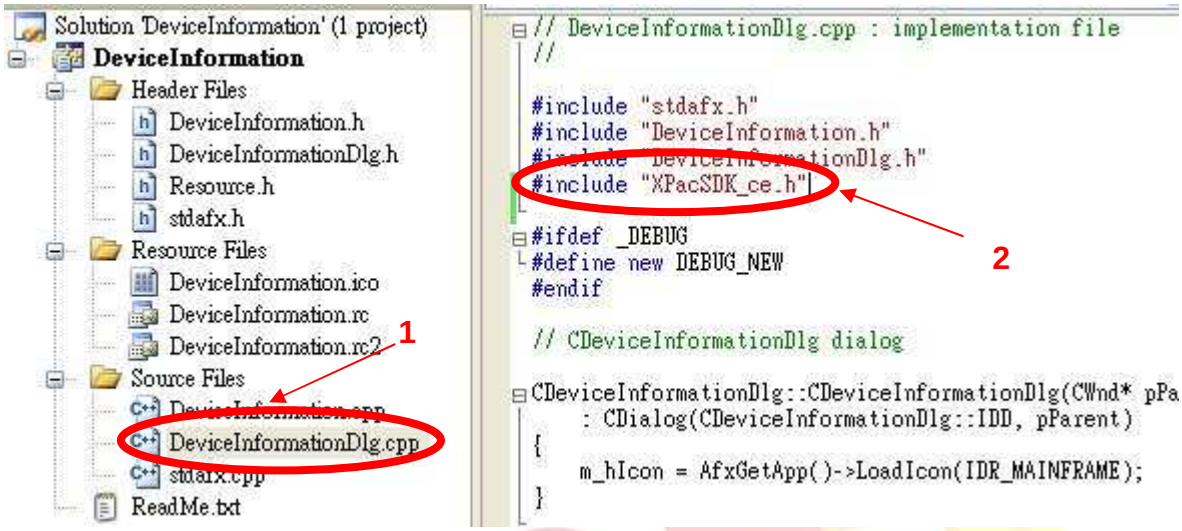

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Adding the Control to the Form

You can drag various controls from the Toolbox onto the dialog. These controls are not really "live"; they are just images that are convenient to move around on the form into a precise location.


After you add a control to your form, you can use the Properties window to set its properties, such as background color and default text. The values that you specify in the Properties window are the initial values that will be assigned to that property when the control is created at run time.

Step 1 Open Dialog

Click “Resource View” → “Dialog” → “IDD_DEVICEINFORMATION_DIALOG”

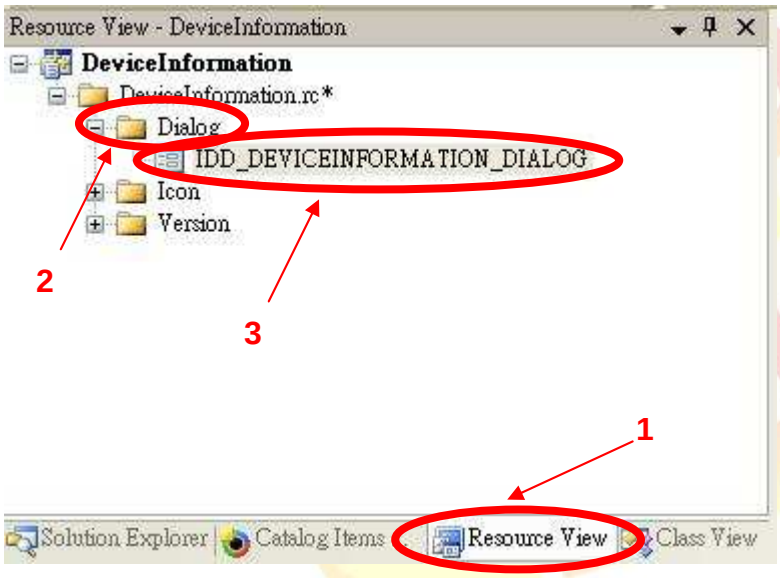


Step 2 From the Toolbox, drag a Button control onto the Dialog

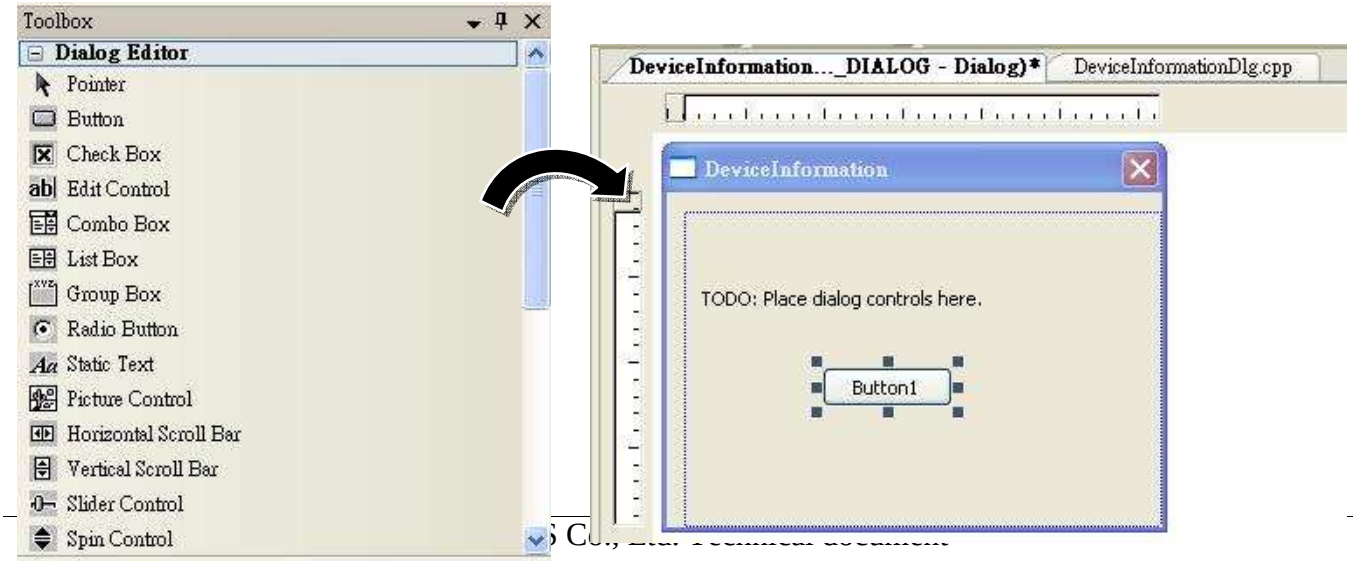


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 3 Right-click the Button control, and then click Properties

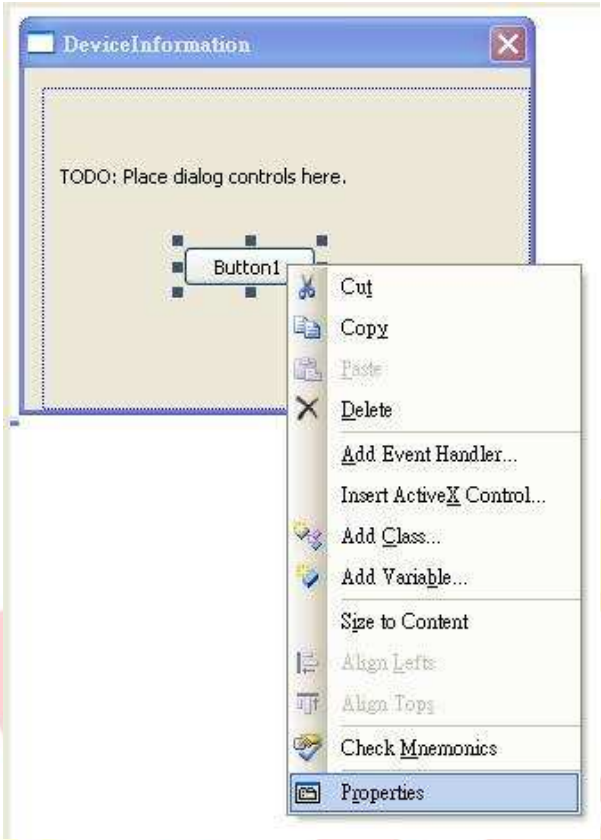

Step 4 In the Properties window, type Check the SDK version, and press ENTER to set the Caption property

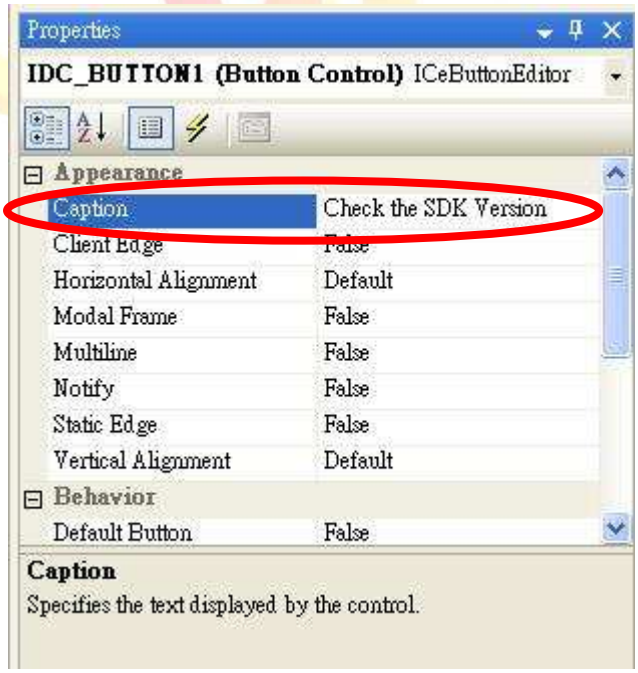

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Adding the Event Handling to the Control

You have finished the design stage of your application and are at the point when you can start adding some code to provide the program's functionality.

Step 5 Double-click the button on the Dialog



Step 6 Inserting the following code

```
char temp[100];
TCHAR SDK[100];
pac_GetSDKVersion(temp);
wsprintf(SDK,L"%S",temp);
::MessageBox(NULL,SDK,NULL,MB_OK);
```


```
void CDeviceInformationDlg::OnBnClickedButton1()
{
    // TODO: Add your control notification handler code here
    char temp[100];
    TCHAR SDK[100];
    pac_GetSDKVersion(temp);
    wsprintf(SDK,L"%S",temp);
    ::MessageBox(NULL,SDK,NULL,MB_OK);

}
```



LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Uploading the Application to XPAC

XPAC series provide FTP server service and you can upload files to XPAC or download files from a public FTP server.

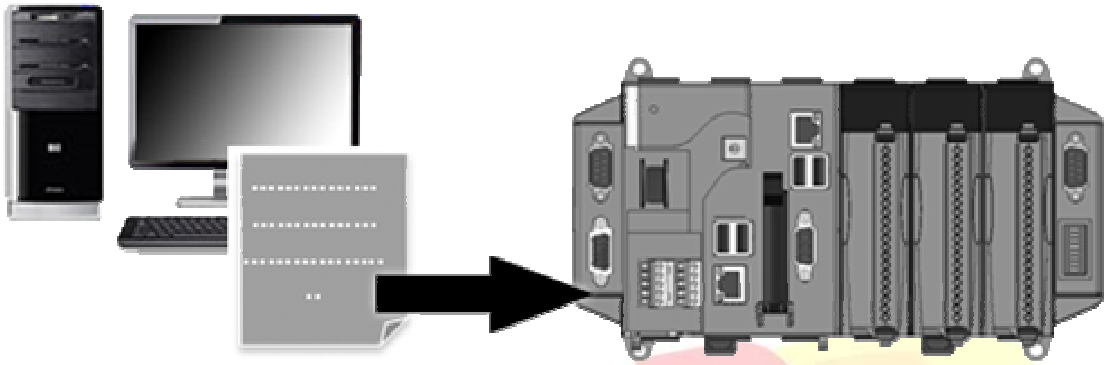

Step 7 On the Build menu, click Build DeviceInformation

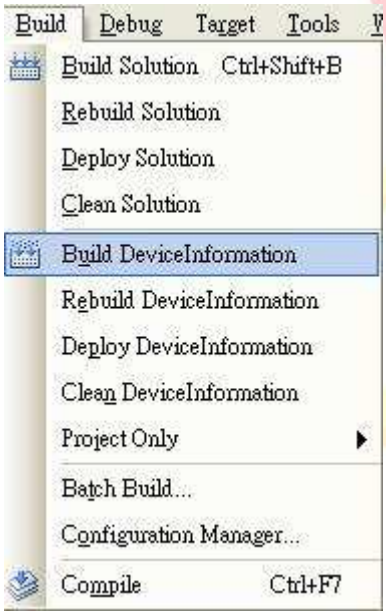

Step 8 Open your ftp software and type the IP address of XPAC.

Step 9 Upload the SDKInformation.exe application and the corresponding XPacSDK_CE.dll file to the XPAC

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000