How to recover the default factory settings

Applied to:

Platform	***OS version***	***XPAC utility version***
XPAC series	*All versions (WinCE6)*	*All versions*

Tips & Warnings


Remember your settings before recover the default factory settings.

Default factory settings:

System Settings->Display resolution: 1024*768(XP-8x4x)
Ethernet Settings->LAN1 and LAN2: DHCP enabled
FTP Settings->Access->Allow Anonymous: Enabled
FTP Settings->Access->Allow Anonymous Upload: Enabled
Auto Execution: empty
Touch Panel Drivers: uninstalled
Control Panel->Power->Schemes->Switch state to User Idle: Never
Control Panel->Power->Schemes->Switch state to System Idle: Never


If an unexpected problem occurs, you can recover the default factory settings by performing the following steps:

Step 1: Reboot in Safe mode.
Turn the rotary switch on the device to “1”, and then restart the XPAC

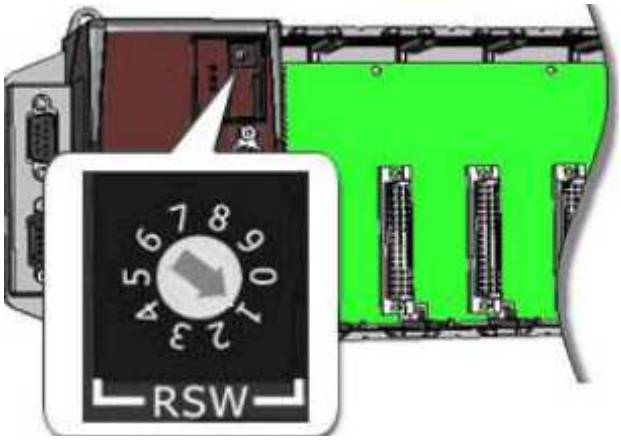


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2: After rebooting, Show the message and do following step.

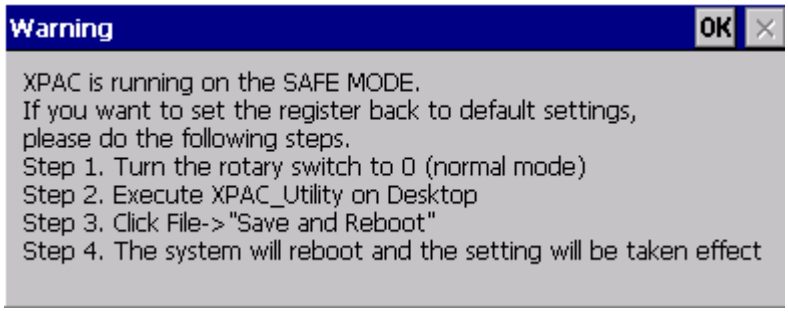


Step 3: Turn the rotary switch on the device to “0” and reboot.

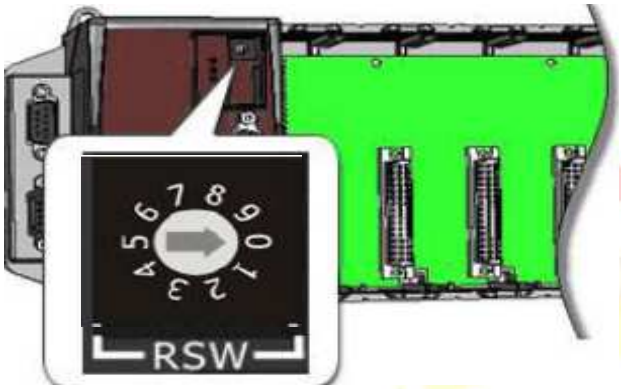

Step 4: Execute XPAC_Utility on Desktop.



Step 5: Click File→Save and Reboot on XPAC_Utility.

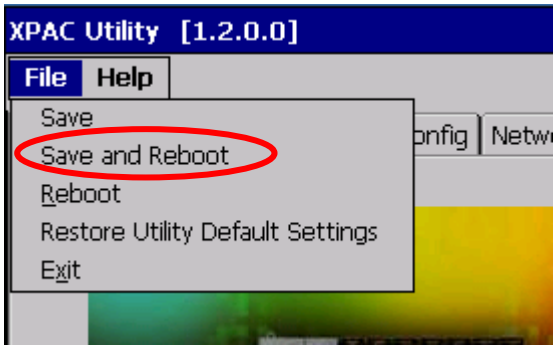

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000