I-7580 Quick Start

This Quick Start will provide information needed to get started with I-7580. Please also consult the User Manual for detailed information on the setup and use of I-7580.

What's In the Box ?

In addition to this guide, the package includes the following item:



I-7580 Module


Product CD


Screw driver

Technical Support

- **I-7580 User Manual**
  CD: \fieldbus_cd\profinet\converter\i-7580\manual\
  ftp://ftp.icpdas.com/pub/cd/fieldbus_cd/profinet/converter/i-7580/manual/

- **PROFINET Website**


http://www.icpdas.com/products/Industrial/profibus/profinet_intro.htm

Let's Start

In the following examples the S7-1200 PLC from Siemens is used. The configuration and communication is done by the program ''Step 7 V11 (TIA PORTAL)'' provided by Siemens. We will establish a PROFINET IO network.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Connecting to Network, PC, PLC and Power

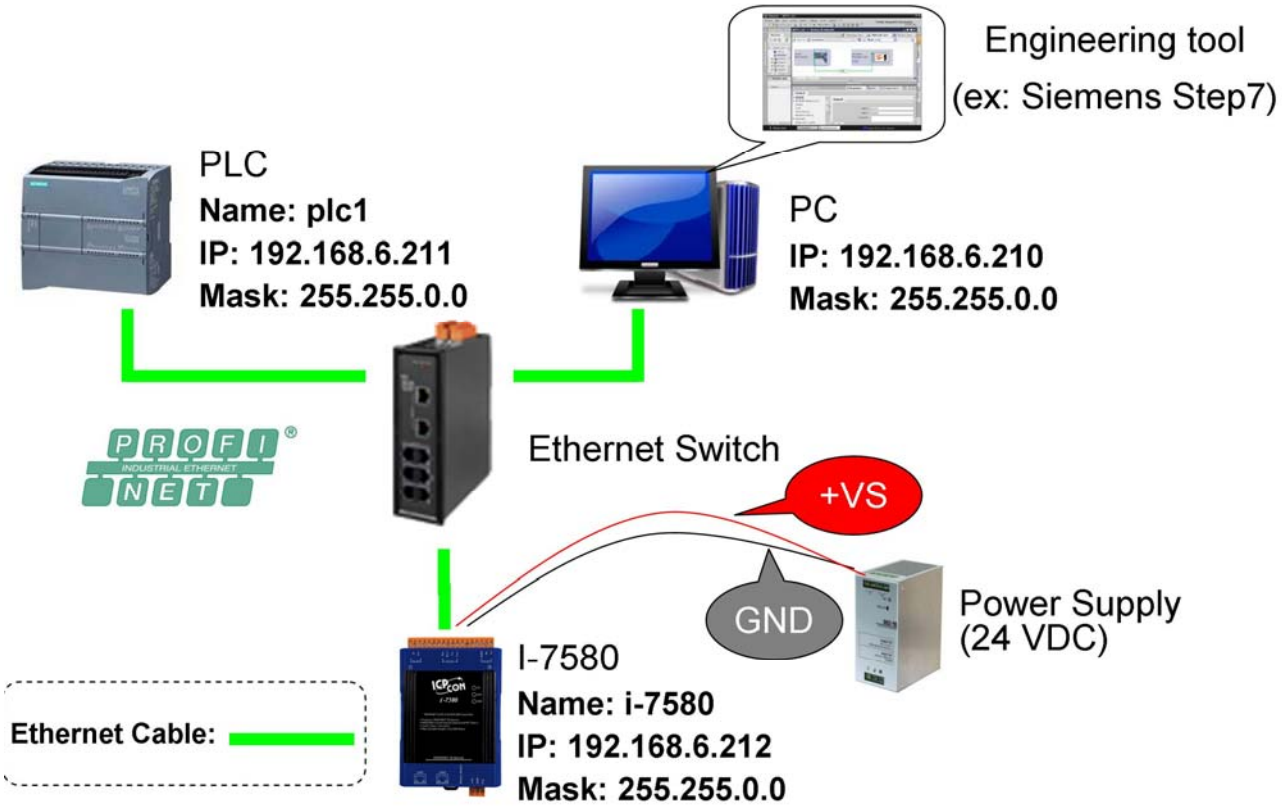

2 Network Configuration


In this example, please follow the below configuration to configure the network.

PC=>	PLC=>	I-7580=>
IP: 192.168.6.210	Device name: plc1	Device name: i-7580
Mask: 255.255.0.0	IP: 192.168.6.211	IP: 192.168.6.212
	Mask: 255.255.0.0	Mask: 255.255.0.0

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 1: Set PC's IP & Mask (IP=192.168.6.210, Mask=255.255.0.0)


1. Click "start->Settings->Network Connections"

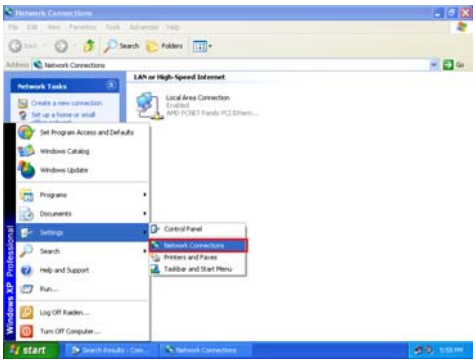


2. Double click "Local Area Connection" icon




3. Click "Properties" button

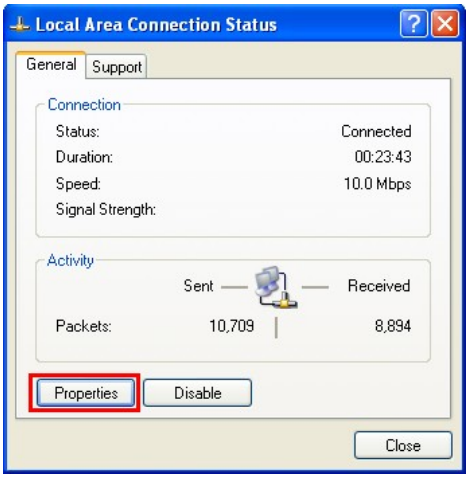

4. Select "Internet Protocol(TCP/IP)" and click "Properties" button

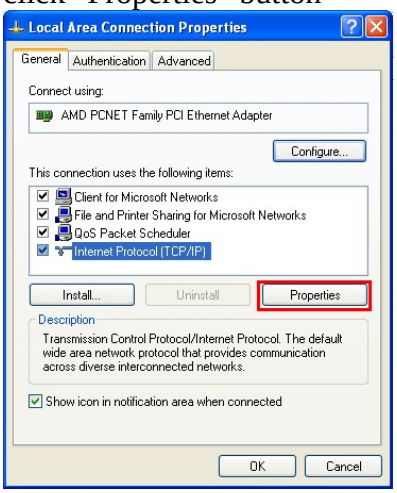

5. Set "Internet Protocol Properties" and then click "OK" button.

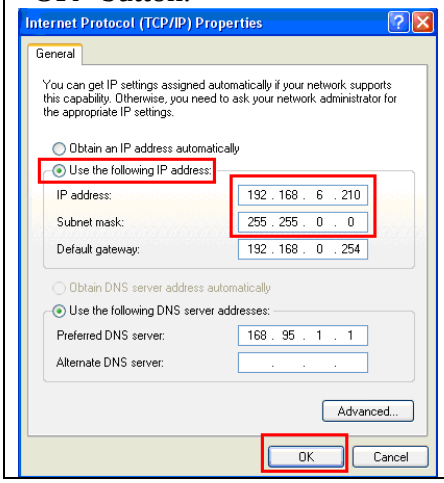

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 GSD Import

In this example, please follow the step to import GSD file.

Step 1: Get GSD file

The GSD file can be obtained from companion CD or our FTP site:


CD: \fieldbus_cd\profinet\remote io\I-7580\gsd\
ftp://ftp.icpdas.com/pub/cd/fieldbus_cd/profinet/converter/i-7580/gsd/

Step 2: Import GSD file


1. Double Click TIA icon to start Step 7 V11




2. Click “Project view”

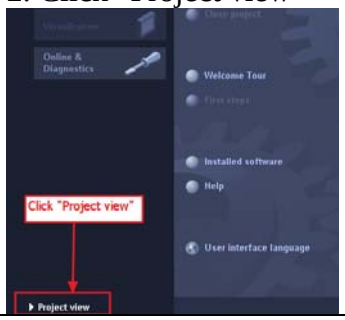

3. Select “Menu->Options->Install general station description file (GSD)”

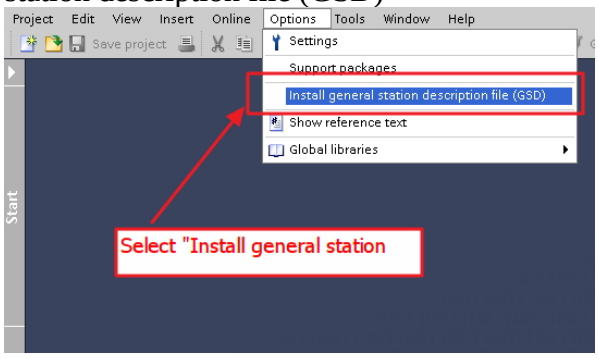

4. Select and install GSD file

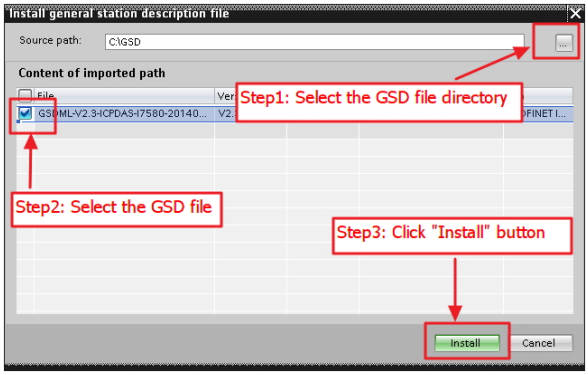

Note: Select the GSD file directory=>Select GSD file of I-7580=>Click “Install” button

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4 Project Setup


In this example, please follow the step to setup project.

Step 1: Create the project

1. Double Click TIA icon to start Step 7 V11




2. Create the Project

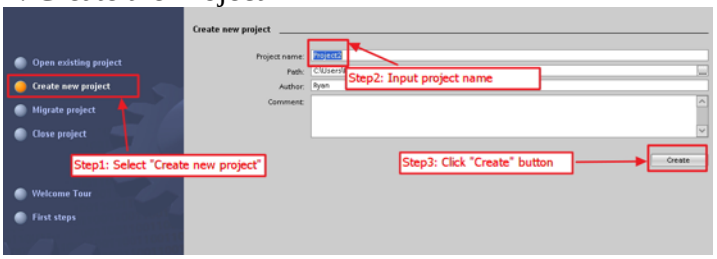


Note: Select ”Create new project” => Click “Create” button

Step 2: Project configuration

1. Select ”Configure a device”

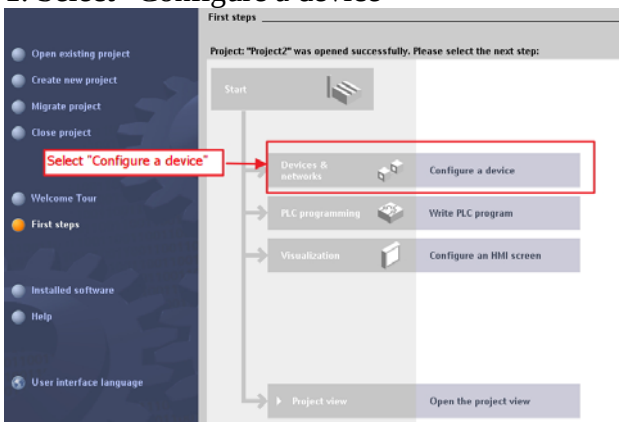

2. Select ”Add new device”

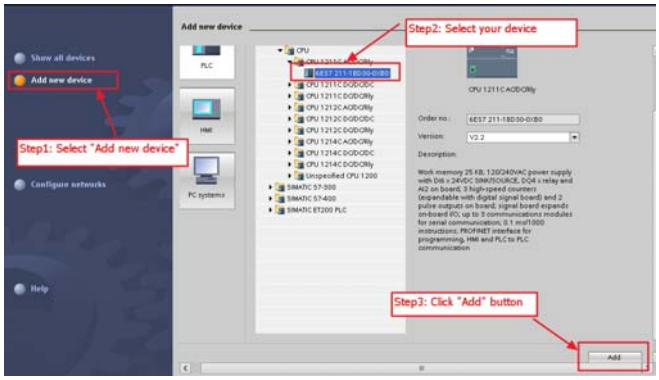


Note: Select “Add new device” => Select your PLC module => Click “Add” button


3. Set the device name of PLC to “plc1”

4. Set the IP and mask of PLC and add a new subnet

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

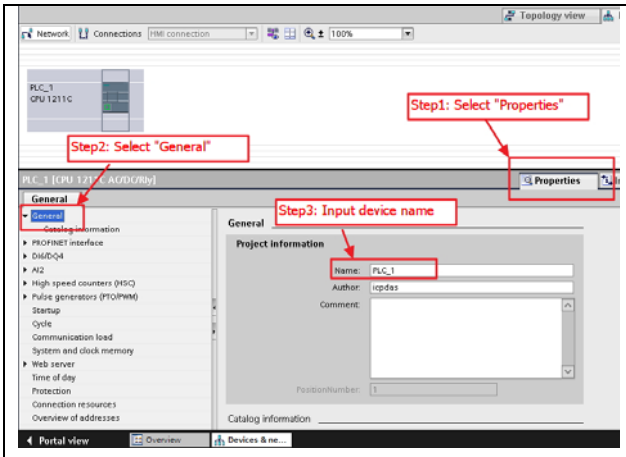


Note: Select ”Properties” windows => Select ”General” => Input device name = plc1 at “Project Information”

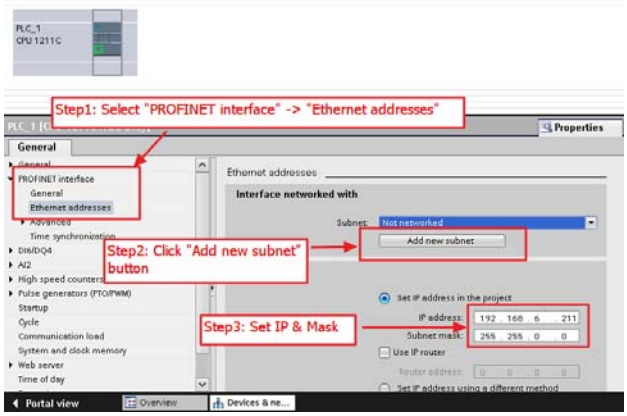


Note: Select ”PROFINET Interface” => Click ”Add new subnet” button at ”Ethernet addresses” => Input IP=192.168.6.211, mask=255.255.0.0

5. Add I-7580 module

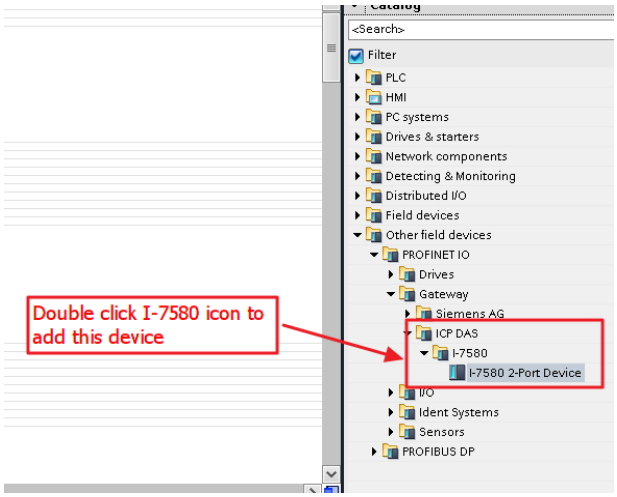


Note: Add I-7580 device by Hardware catalog (Other field devices->PROFINET IO->Gateway->ICP DAS->I-7580)

6. Select PROFINET interface

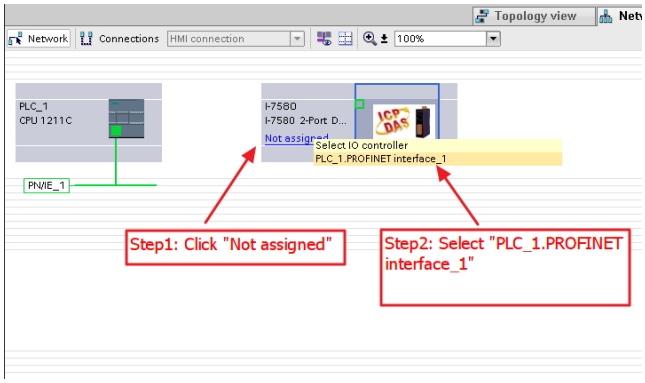


Note: Click ”Not assigned” text => Select plc1.PROFINET Interface_1

7. Set device name to “I-7580”

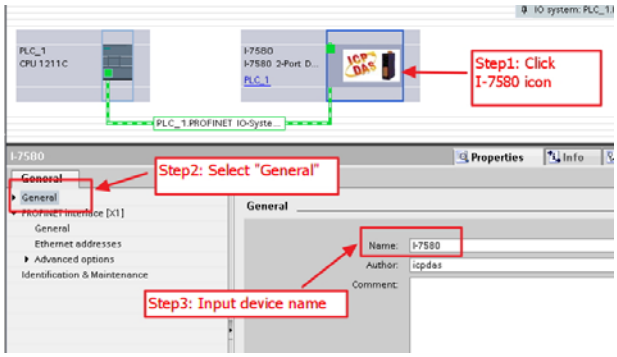

Note: Select I-7580 icon => Select ”Properties” => Select ”General” => Input name = I-7580 at ”Project Information”

8. Set the IP of I-7580 module

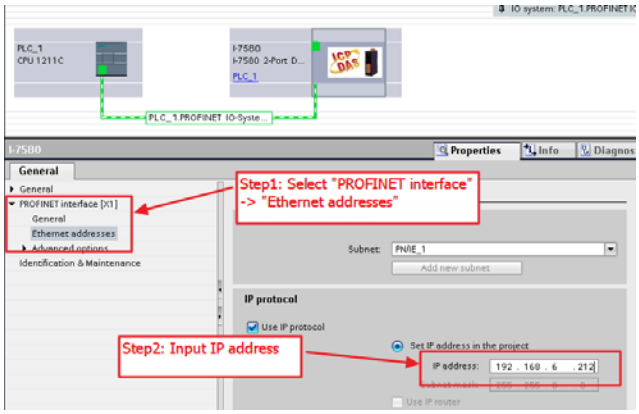


Note: Select ”PROFINET Interface [X1]” => Input IP=192.168.6.212 at ”IP addresses”


9. Select module type of I-7580 module

10. Set module parameters of I-7580

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

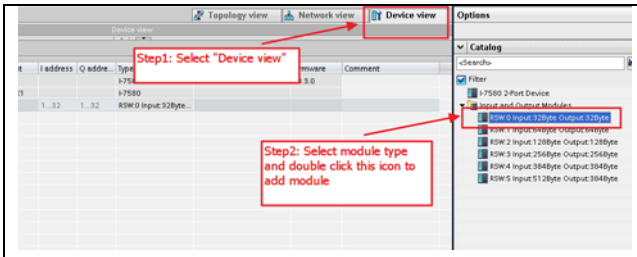


Note: Select ”Device view” windows => Select “RSW:0 Input:32Byte Output:32Byte” module at “Hardware catalog” and double click the icon to add this module

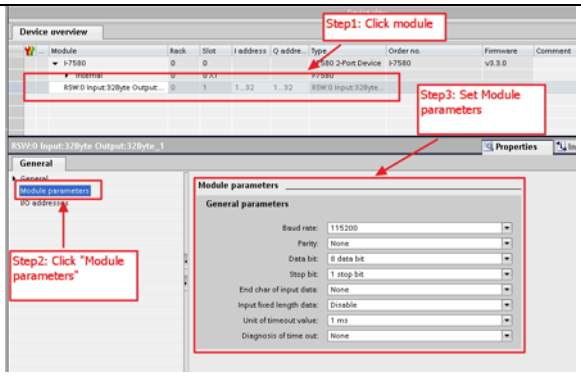


Note: Use default values(COM port:115200, n, 8, 1)

11. Compile and download to device

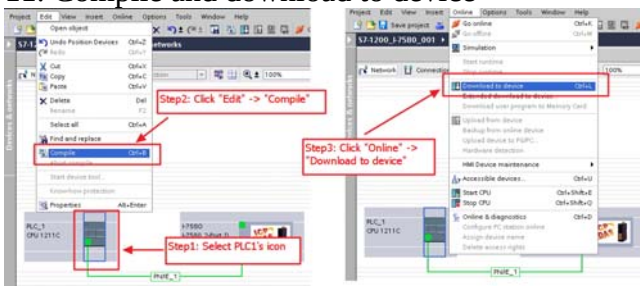


Note: Select ”Network view” windows => Select PLC icon => Click compile icon => Click download icon

12. Select network interface and PLC

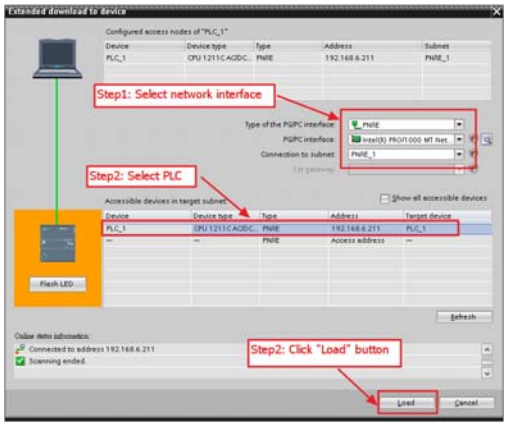

Note: Select network interface => Select PLC => Click “Load” button

13. Load completed

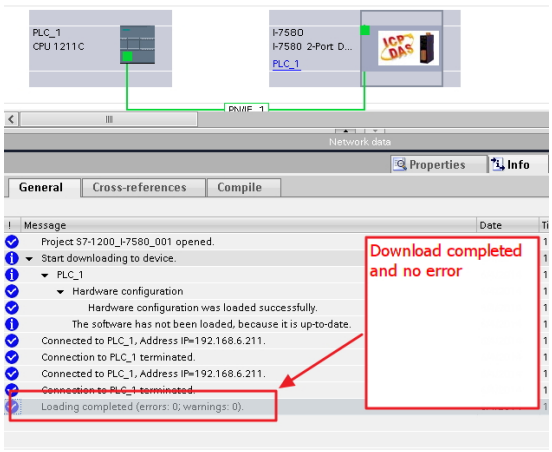

Note: Select “Info” windows, it will show “Load completed (errors: 0, warnings: 0)” message, it means download completed and no error.


At this time, the AP LED should turn on, BOOT LED and ERR LED should turn off, it means the connection between PLC and I-7580 module is established.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


5 Communication test

we use “Send232” to test PROFINET communication and serial communication. This utility simulates a serial device and can be obtained from our FTP site.
ftp://ftp.icpdas.com/pub/cd/8000cd/napdos/7188e/tcp/pcdiag/source/send232.vb6_2.0.1


1. Open COM port

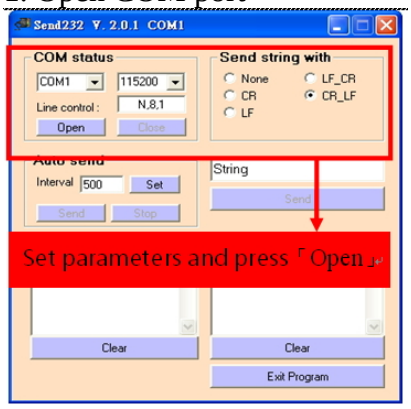


2. Input data string “sendtoi7580”

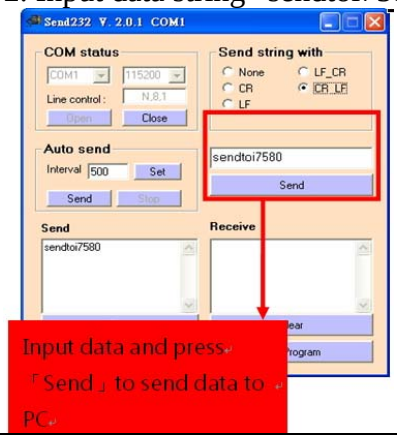

3. Receive data string from PROFINET input data area

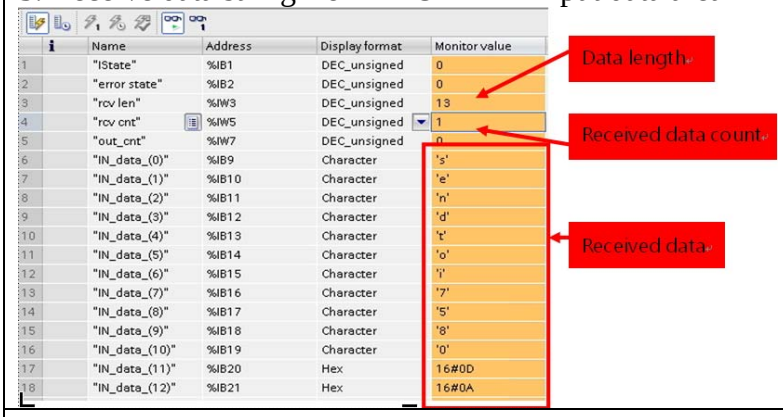

4. Transmit data string ”sendtoPC” from PROFINET output data area to Send232

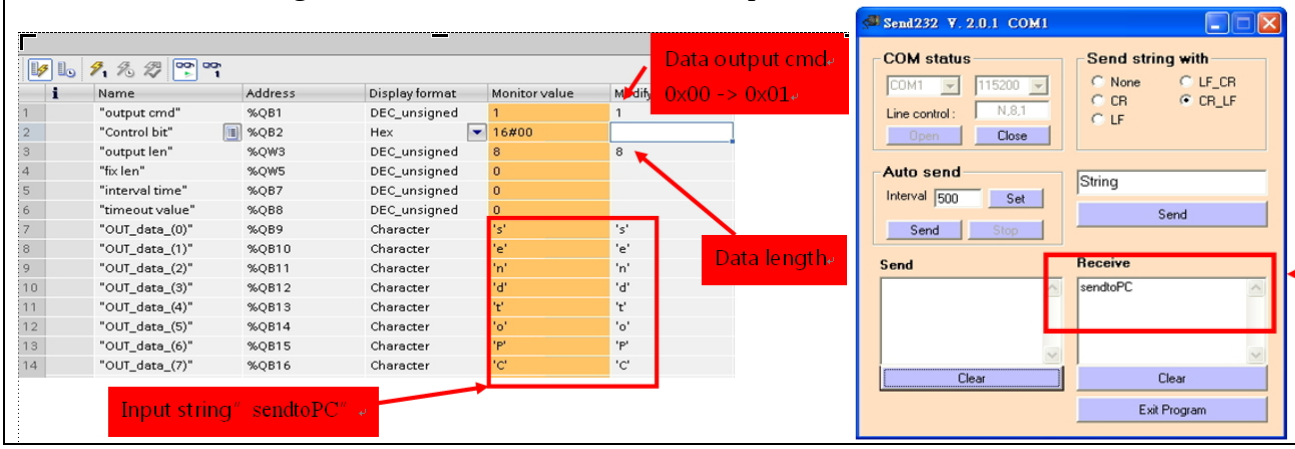

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000