

tET-P2C2/tPET-P2C2

Quick Start

v1.1, Mar. 2018

What's in the box?

The package includes the following items:



tET/tPET-P2C2 Module x 1



Quick Start x1 (This Document)

Related Information

- tET-P2C2/tPET-P2C2 Series Product Page:

http://www.icpdas.com/root/product/solutions/remote_io/ethernet_io/petl-7000_tpet_tet/tet-p2c2.html

- Documentation & Firmware:

http://ftp.icpdas.com/pub/cd/tinymodules/napdos/tpet/

- NS-205/NS-205PSE/DP-665 Product Page (optional):

http://www.icpdas.com/root/product/solutions/industrial_ethernet_switch/ns-205.html

http://www.icpdas.com/root/product/solutions/industrial_ethernet_switch/ns-105pse.html

http://www.icpdas.com/root/product/solutions/accessories/power_supply/dp-665.html

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


1 Connecting the Power and Host PC


1) Make sure your PC has workable network settings.

Disable or well configure your Windows firewall and Anti-Virus firewall first, else the **"Search Servers"** on Chapter 6 may not work. (Please contact with your system Administrator)

2) Connect both the tET/tPET-P2C2 and your PC to the same sub network or the same Ethernet switch.

3) Supply power **(PoE or +12~+48 VDC)** to the tET/tPET- P2C2.

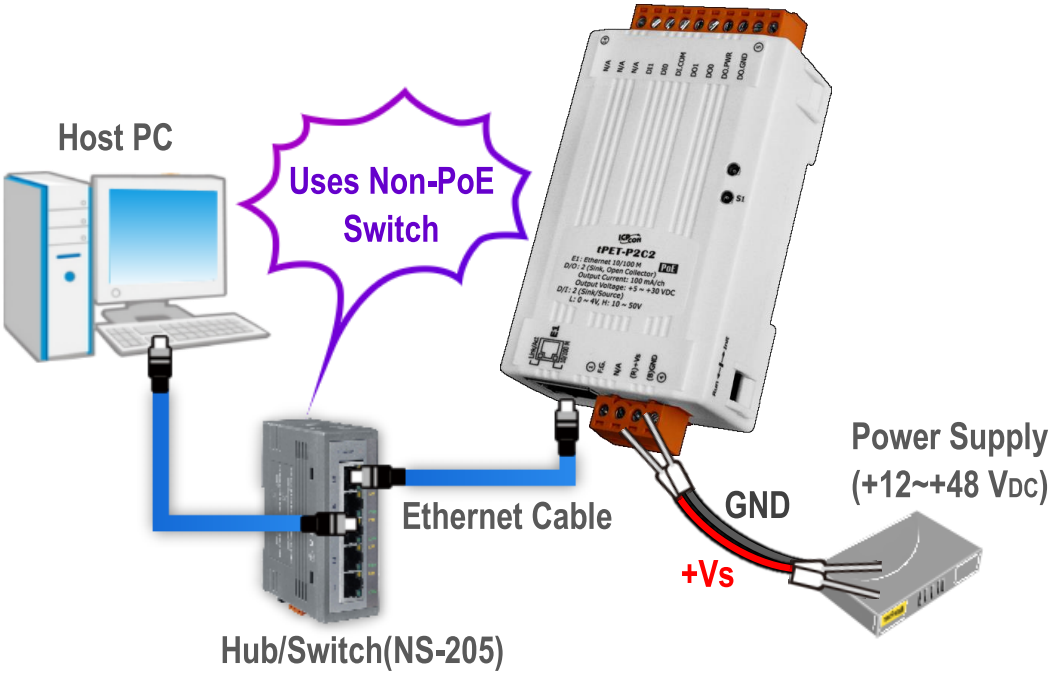

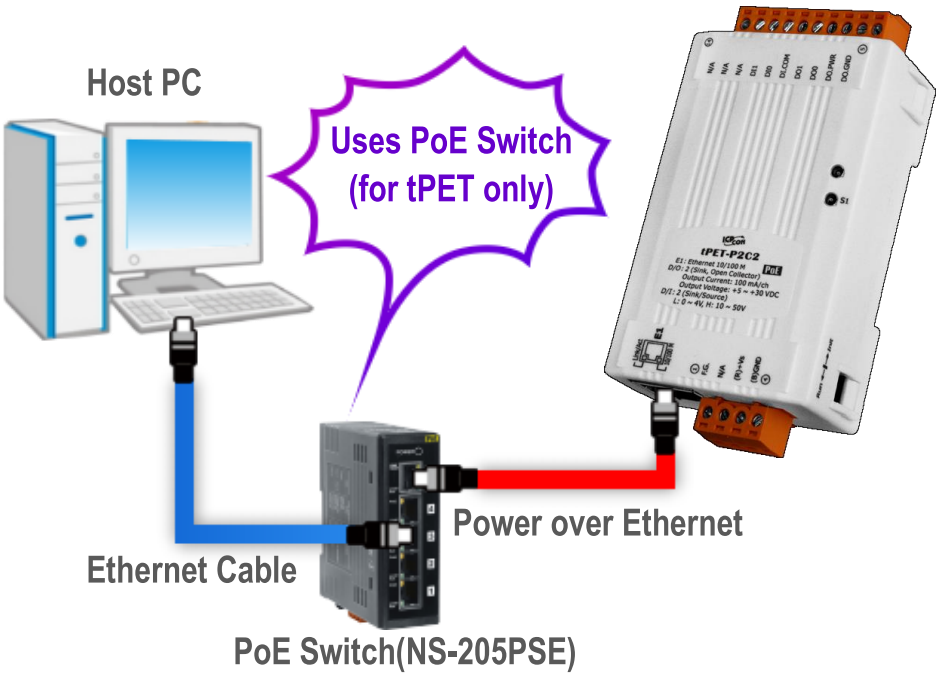


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Pin Assignments & Wiring Note





- Pin Assignments:





Terminal No.	Pin Assignment
E1	
01	F.G.
02	N/A
03	(R)+Vs
04	(B)GND

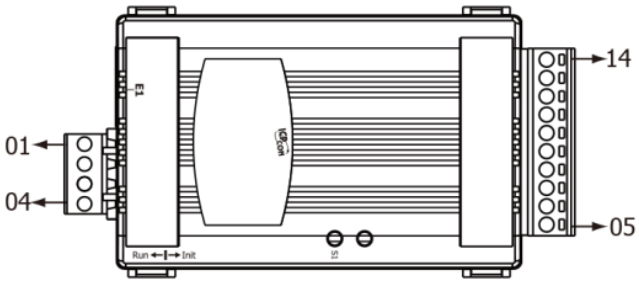

Terminal No.	Pin Assignment
14	N/A
13	N/A
12	N/A
11	DI1
10	DI0
09	DI.COM
08	DO1
07	DO0
06	DO.PWR
05	DO.GND

- Digital Input/Output Wiring:

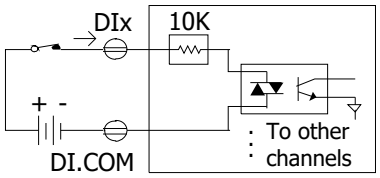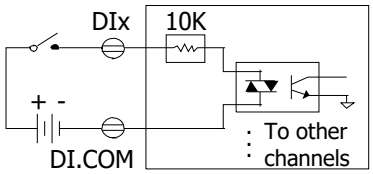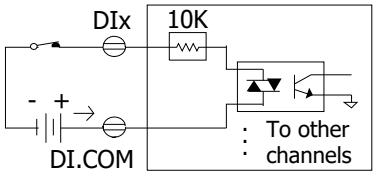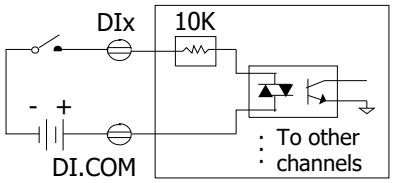Digital Input	Readback as 1	Readback as 0
Sink	+10 ~ +50 VDC	OPEN or <4 VDC
		
Source	+10 ~ +50 VDC	OPEN or <4 VDC
		

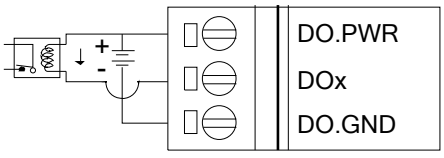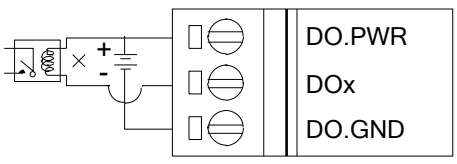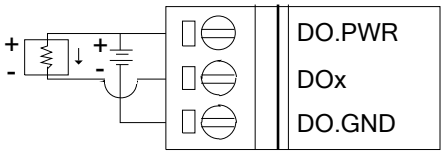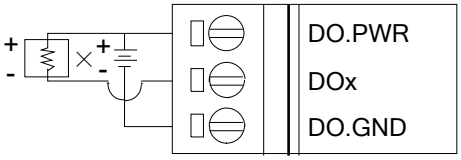Output Type	Readback as 1	Readback as 0
Drive Relay	Relay ON	Relay OFF
		
Resistance Load		

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Modbus Address

- (0xxxx) DO address:

Begin address	Points	Description	Bits Per Point	Range	Access Type
0 (0x0)	1~2	Digital Output Channels	1	0: OFF, 1: ON	R/W
32 (0x20)	1	Clears the status of all high latched DI channels	1	1: Clear	W
33 (0x21)	1	Clears the status of all low latched DI channels	1	1: Clear	W
⋮	⋮	⋮	⋮	⋮	⋮
235 (0xEB)	1~2	Sets the Power-on value for all DO Channels	1	0: OFF, 1: ON (Default: 0)	R/W/F
267 (0x10B)	1~2	Sets the Safe value for all DO Channels	1	0: OFF, 1: ON (Default: 0)	R/W/F

- (1xxxx) DI address:

Begin address	Points	Description	Bits Per Point	Range	Access Type
0 (0x0)	1~2	Digital Input	1	0:Off 1:On	R
32 (0x20)	1~2	Digital latched status (high)	1	0:no 1:latched	R
64 (0x40)	1~2	Digital latched status (low)	1	0:no 1:latched	R


Note

For detail “DI/DO Modbus Address” information, refer to Section 6.3 Modbus Register Table of user’s manual (http://ftp.icpdas.com/pub/cd/tinymodules/napdos/tpet/document/).

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4 Wire the DI and DO for Self-test

1) Connect the **DO0 pin (Pin07)** and **DI0 pin (Pin10)**.
2) Connect the **DO.PWR pin (Pin06)** and **DI.COM pin (Pin09)**.
3) Supply the **External Power +24V** to **DO.PWR pin (Pin06)**.
4) Supply the **External Power GND** to **DO.GND pin (Pin05)**.

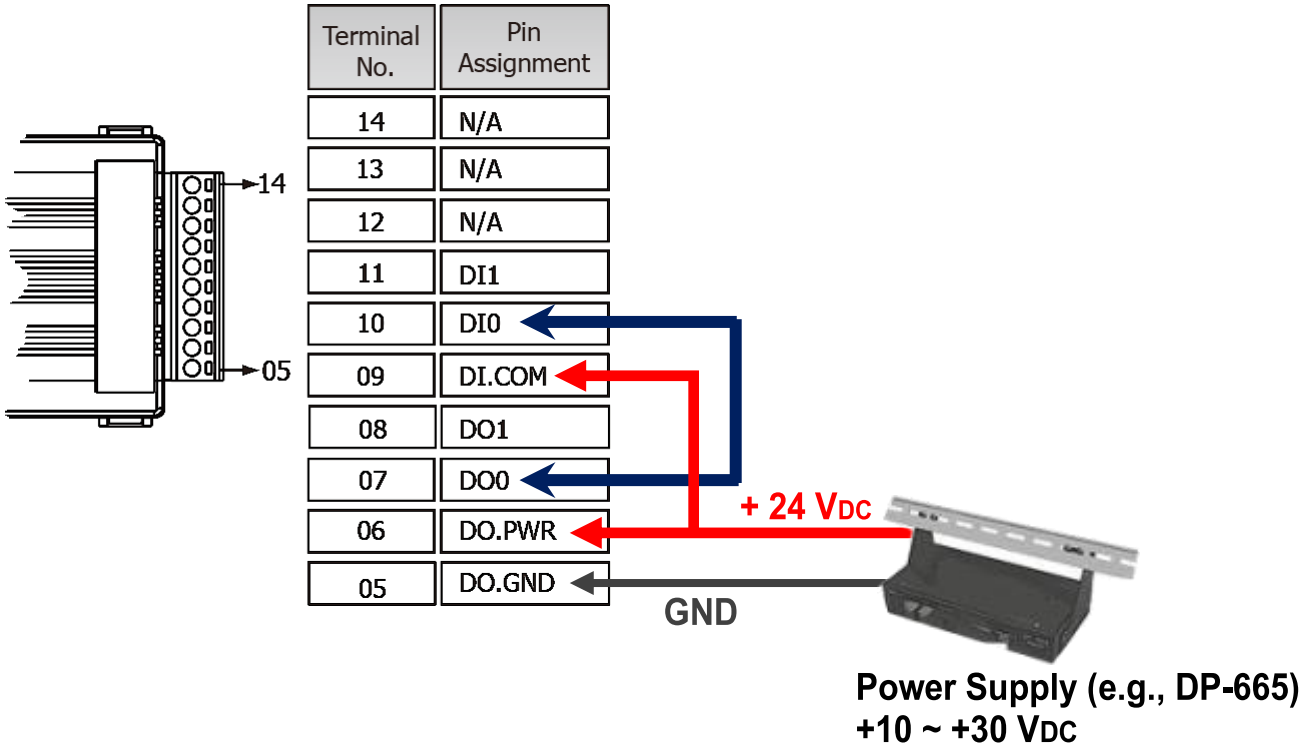

5 Installing Software on Your PC

Install eSearch Utility, which can be obtained from the ICPDAS web site:



http://ftp.icpdas.com/pub/cd/tinymodules/napdos/software/esearch/

ftp://ftp.icpdas.com/pub/cd/tinymodules/napdos/software/esearch/


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6 Configuring Network Settings

1) Double-click the **eSearch Utility** shortcut on the desktop.

2) Click the **"Search Servers"** to search your tET/tPET- P2C2.


3) Double-click your tET/tPET- P2C2 to configure the settings

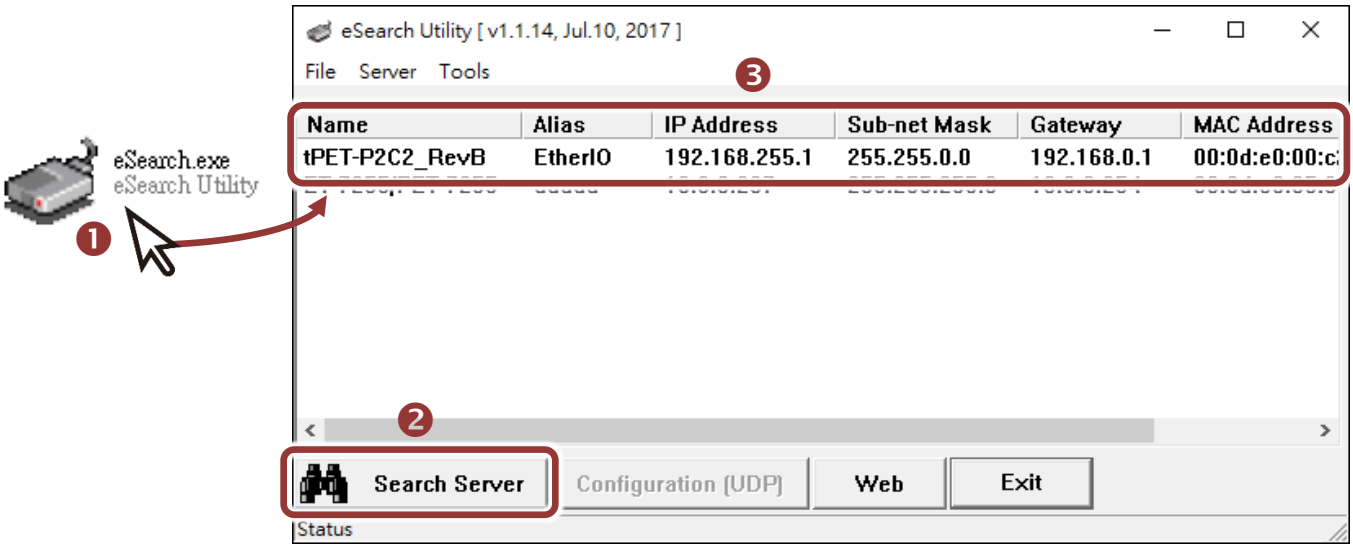

Factory Default Settings of tET/tPET-P2C2:

IP Address	192.168.255.1
Subnet Mask	255.255.0.0
Gateway	192.168.0.1

4) Contact your Network Administrator to obtain a correct network configuration (such as **IP/Mask/Gateway**). **Enter the network settings** and click **"OK"**. **Note: The tET/tPET-P2C2 will use the new settings 2 seconds later.**

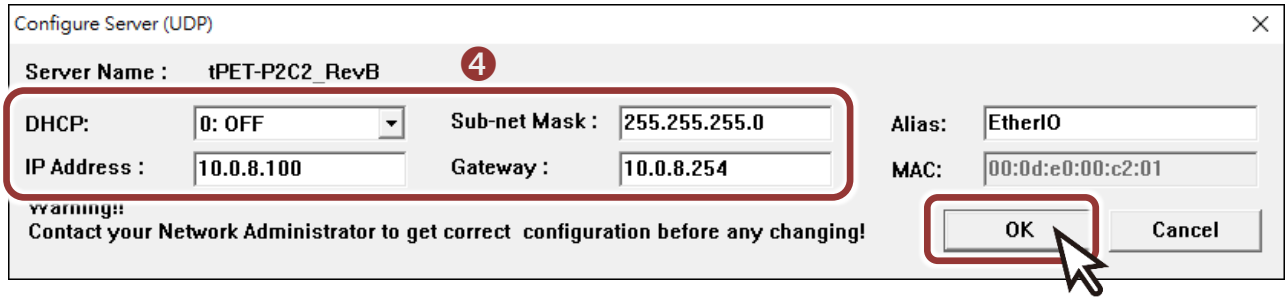


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7 Testing your tET/tPET Module

1) Wait 2 seconds and click **“Search Servers”** button again to ensure the tET/tPET- P2C2 is working well with new configuration.

2) Click the name of tET/tPET- P2C2 to select it.

3) Click the **“Web”** button to log in to the web configuration pages.
(Or enter the URL address of the tET/tPET- P2C2 in the address bar of the browser.)

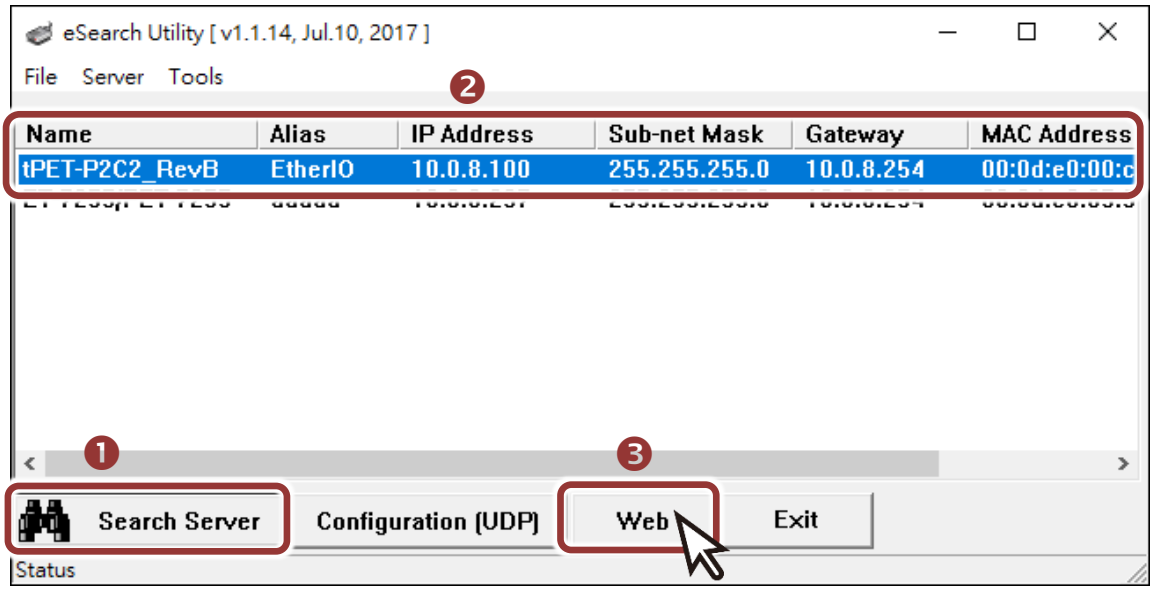

Note that if you intend to use Internet Explorer, ensure that the cache function is disabled in order to prevent browser access errors, please disable your Internet Explorer cache as follow: **(If you are not using IE browser, please skip this step.)**

Step1: Click **“Tools”** >> **“Internet Options…”** in the menu items.


Step 2: Click **“General”** tab and click the **“Settings…”** button in Temporary Internet files frame.

Step3: Click **“Every visit to the page”** and click the **“OK”** in Settings box and Internet Options box.


For more detail, refer to “FAQ: How to avoid a browser access error that causes a blank page to be displayed when using Internet Explorer”

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4) **Enter the password** in the “login password” field and click **“Submit”**.

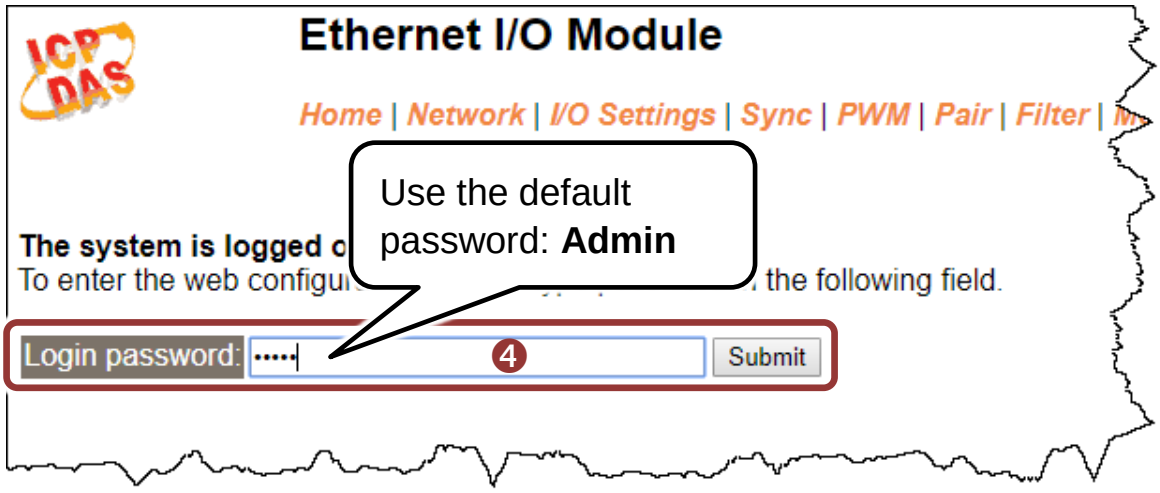

5) In the **“Home”** page allows a simple test to be performed to verify the Digital Input and Output functionality.
6) In the **“Digital I/O”** section, click the **“DO0”** button to **ON (Red)**.
7) The corresponding DI becomes **green** for **DI0 is ON**.

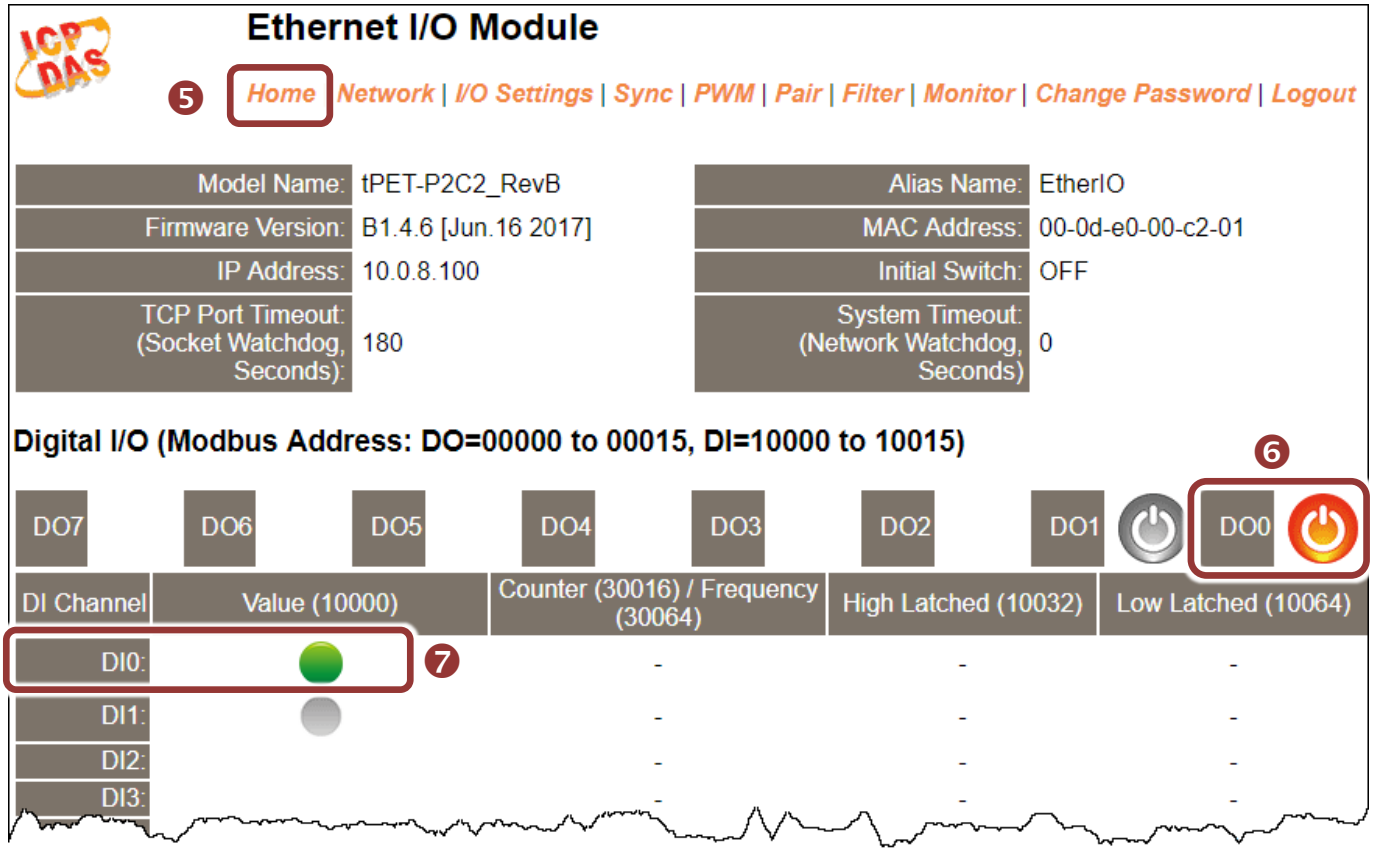

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000